

F I A T S E D I C I



O W N E R H A N D B O O K

## WHY CHOOSING GENUINE PARTS

We really know your car because we invented, designed and built it: we really know every single detail.

At **Fiat Service authorised workshops** you can find technicians directly trained by us, offering quality and professionalism for all service operations.

Fiat workshops are always close to you for the regular servicing operations, season checks and practical recommendations by our experts.

**With Fiat Genuine Parts you keep the reliability, comfort and performance features of your new car unchanged in time: that's why you bought it for.**

Always ask for Genuine Parts for the components used on our cars; we recommend them because they come from our steady commitment in research and development of highly innovative technologies.

For all these reasons: **rely on Genuine Parts, because they are the only ones designed by Fiat for your car.**

SAFETY:  
BRAKING SYSTEM

ENVIRONMENT: PARTICULATE FILTERS,  
CLIMATE CONTROL MAINTENANCE

COMFORT: SUSPENSION  
AND WINDSCREEN WIPERS

PERFORMANCE: SPARK PLUGS,  
INJECTORS AND BATTERIES

LINEACCESSORI  
ROOF RACK BARS, WHEEL RIMS

**CHOOSING GENUINE PARTS  
IS THE MOST NATURAL CHOICE**



**PERFORMANCE**



**GENUINE PARTS**

**COMFORT**



**GENUINE PARTS**

**SAFETY**



**GENUINE PARTS**

**AMBIENT**



**GENUINE PARTS**

**ACCESSORIES**



**GENUINE PARTS**

**VALUES**



**GENUINE PARTS**

## HOW TO RECOGNISE GENUINE PARTS


To recognise a **Genuine Part**, check **that the component bears our brands**, always clearly visible on Genuine Parts, from the braking system to windscreen wipers, from shock absorbers to air cleaner.

All **Genuine Parts** undergo **strict controls**, both during design and manufacturing stages, by specialists using **vanguard materials**, to **test the component reliability**.

This to guarantee **performance** and **safety** for you and your passengers on board, for a long time. Always ask for and make sure a **Genuine Part** has been used.



Air cleaner

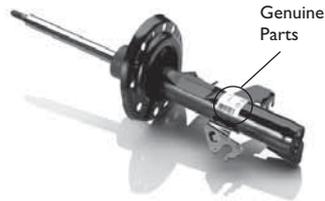

Shock absorber



Brake pads

**Dear Customer,**

Thank you for selecting Fiat and congratulations on your choice of a Fiat SEDICI.

We have written this handbook to help you get to know all your new vehicle features and use it in the best possible way.

You should read it right through before taking the road for the first time.

You will find information, tips and important warnings regarding the driving of your vehicle to help you derive the maximum from your Fiat SEDICI technological features.

What's more every single component of the Fiat SEDICI is fully recyclable. At the end of your vehicle's useful lifespan any Fiat Dealership will be pleased to make arrangements for your vehicle to be recycled and nature benefits in two ways: there's no pollution from waste disposal and the demand for raw materials is reduced.

The enclosed Warranty Booklet lists the services that Fiat offers to its Customers:

- the Warranty Certificate with terms and conditions for maintaining its validity
- the range of additional services available to Fiat Customers.

Best regards and good motoring!

**This Owner Handbook describes all Fiat SEDICI versions. As a consequence, you should consider only the information which is related to the engine and bodywork version of the vehicle you purchased.**

# FIAT ORIGINAL SPARE PARTS AND FIAT RE-CONDITIONED SPARE PARTS

## FIAT ORIGINAL SPARE PARTS

These spare parts ensure the reliability and technological quality needed to travel safely. Designed on the basis of the same project of the components fitted on the vehicle, the original spare parts undergo very harsh tests before being produced or re-conditioned, with the aim of being used to keep the vehicle performance unchanged in time.

Therefore, for an accurate and careful maintenance, choose Fiat original spare parts (re-conditioned and non re-conditioned), which can be identified by the features of their package and which are available only at the Fiat Dealership.

By choosing Fiat original spare parts (re-conditioned and non re-conditioned) you can rely on a rapid and efficient service provided by skilled operators, on good equipment and a wide range of parts.

The Fiat Dealership uses Fiat original spare parts and re-conditioned spare parts.

## FIAT RE-CONDITIONED SPARE PARTS

They are Fiat original spare parts/mechanical assemblies, already used but given back to Fiat, which renews them completely to meet the same qualitative and reliability requirements of the newly original spare parts.

Fiat re-conditioned spare parts:


- give the Customers the opportunity to buy spare mechanical assemblies (engines, transmissions, etc.) at particularly favourable prices;
- contribute to safeguard the environment by reducing scrapping operations and the disposal of removed materials.

# SERVICE STATION GUIDE

1. Fuel (see section 1)
2. Engine hood (see section 4)
3. Tire changing tools (see section 4)
4. Engine oil dipstick (Yellow) (see section 8)
5. Automatic transaxle fluid dipstick (Red or Orange) (see section 8)
6. Engine coolant (see section 8)
7. Windshield washer fluid (see section 8)
8. Battery (see section 8)
9. Tire pressure (see Tire Information Label on driver's door lock pillar)
10. Spare tire (see section 8)

LHD: Left Hand Drive

RHD: Right Hand Drive

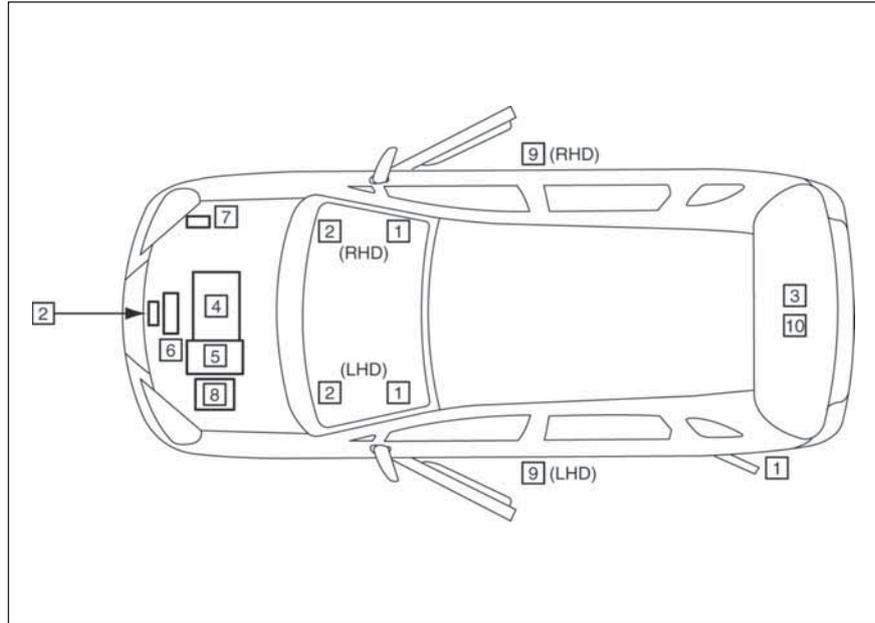

79JFE001

## BATTERY LABEL SYMBOL MEANINGS



No smoking, no naked flames,  
no sparks



Keep away from children



Note operating instructions




Shield eyes



Battery acid



Explosive gas

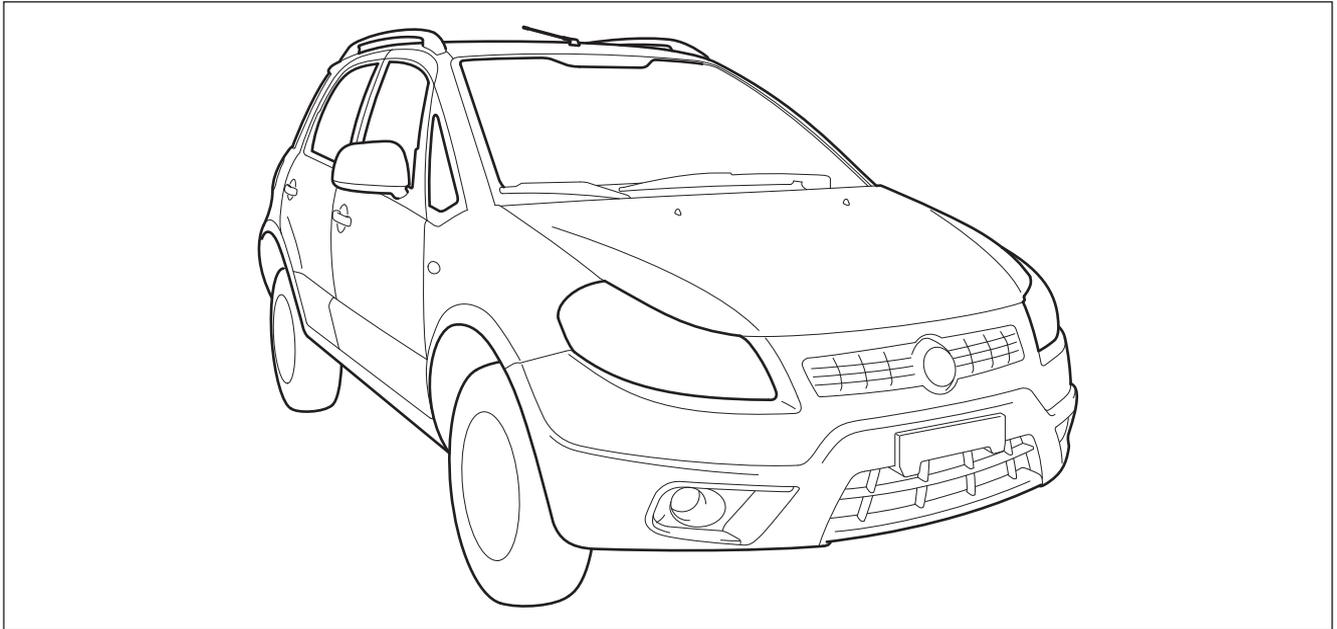

## FOREWORD

This manual should be considered a permanent part of the vehicle and should remain with the vehicle when resold or otherwise transferred to a new owner or operator. Please read this manual carefully before operating your new Fiat and review the manual from time to time. It contains important information on safety, operation and maintenance.

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. Fiat reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

## IMPORTANT

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol  and the words **WARNING**, **IMPORTANT** and **NOTE** have special meanings. These special meanings apply except when laws or regulations require that the signal words be used with a different meaning.

Pay special attention to the messages highlighted by these signal words:




### **WARNING**

***Indicates a potential hazard that could result in death or injury.***

**IMPORTANT** Indicates a potential hazard that could result in vehicle damage.

**NOTE** Indicates special information to make maintenance easier or instructions clearer.

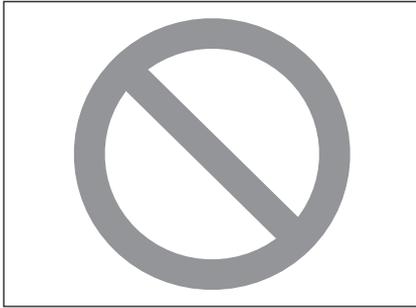

75F135

The circle with a slash in this manual means “Don’t do this” or “Don’t let this happen”.

## MODIFICATION WARNING



### WARNING

***Do not modify this vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification may not be covered under warranty.***

**IMPORTANT** Improper installation of mobile communication equipment such as cellular telephones or CB (Citizen’s Band) radios may cause electronic interference with your vehicle’s ignition system, resulting in vehicle performance problems. Consult your Fiat Dealership or qualified service technician for advice on installing such mobile communication equipment.

# TABLE OF CONTENTS

BEFORE DRIVING	1
STEERING COLUMN CONTROLS	2
INSTRUMENT PANEL	3
OTHER CONTROLS AND EQUIPMENT	4
OPERATING YOUR VEHICLE	5
DRIVING TIPS	6
VEHICLE LOADING AND TOWING	7
INSPECTION AND MAINTENANCE	8
EMERGENCY SERVICE	9
BODY WORK CARE	10
GENERAL INFORMATION	11
TECHNICAL SPECIFICATIONS	12
SUPPLEMENT	13
INDEX	14

Page left blank voluntarily.



60G404

FUEL RECOMMENDATION.....	12
KEYS.....	13
DOOR LOCKS.....	14
WINDOWS.....	23
MIRRORS.....	26
SEAT ADJUSTMENT.....	27
HEAD RESTRAINTS .....	29
SEAT BELTS AND CHILD RESTRAINT SYSTEMS.....	30
CHILD RESTRAINT SYSTEM FOR EU COUNTRIES..	39
SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAGS) (for versions/markets, where provided).....	46

## FUEL RECOMMENDATION

### GASOLINE ENGINE


If your vehicle is not fitted with a restrictor in the fuel filler pipe then you may use leaded or unleaded gasoline with an octane number (RON) of 85 or higher.

Note, it is preferable to use unleaded gasoline.

If your vehicle is fitted with a restrictor in the fuel filler pipe then you **must** use unleaded gasoline with an octane number (RON) of 91 or higher (or RON of 95 or higher if it is stated on the fuel filler lid).

These vehicles are also identified by a label attached near the fuel filler pipe that states: "UNLEADED FUEL ONLY", "NUR UNVERBLEITES BENZIN", "ENDAST BLYFRI BENSIN" or "SOLO GASOLINA SIN PLOMO".

If the "RON 95" label is attached, you must use unleaded gasoline with an octane number (RON) of 95 or higher.

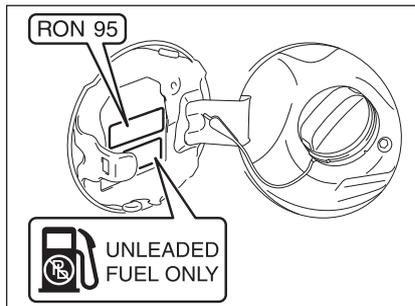

68LMT0101

### Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol (grain alcohol), also known as gasohol, are commercially available in some areas. Blends of this type may be used in your vehicle if they are no more than 10% ethanol. Make sure this gasoline- ethanol blend has octane ratings no lower than those recommended for gasoline.

### Gasoline/Methanol blends

Blends of unleaded gasoline and methanol (wood alcohol) are also commercially available in some areas. **DO NOT USE** fuels containing more than 5% methanol under any circumstances. Fuel system damage or vehicle performance problems resulting from the use of such fuels are not the responsibility of Fiat and may not be covered under the New Vehicle Warranty.

Fuels containing 5% or less methanol may be suitable for use in your vehicle if they contain cosolvents and corrosion inhibitors.

**NOTE** If you are not satisfied with the driveability or fuel economy of your vehicle when you are using a gasoline/ alcohol blend, you should switch back to unleaded gasoline containing no alcohol.

**IMPORTANT** Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

**IMPORTANT** The vehicle must only be filled with diesel fuel for motor vehicles, in compliance with European Standard EN590. The use of other products or mixtures may irreparably damage the engine with invalidation of the warranty due to the damage caused. In the event of accidentally filling with another type of fuel, do not start the engine and empty the tank. If the engine has been run even for only a very short time, in addition to the tank, it is also necessary to drain out the whole fuel circuit.

**IMPORTANT** The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when using an alternative non automatic system, initial vent blowback occurs.



### WARNING


**Do not put naked flames or lighted cigarettes near the fuel filler hole as there is a danger of fire. Do not bend too close to the hole either so as not to breathe in harmful vapours.**

## KEYS


The vehicle comes with two keys, one with remote control (1) and the other exclusively for service purposes (2). Each key controls the opening/closing of all doors.

The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag (for versions/markets, where provided) in a safe place. If you lose your keys, you will need this number to have new keys made.

**IMPORTANT** All the keys and the metal tag must be handed over to the new owner when selling the vehicle.

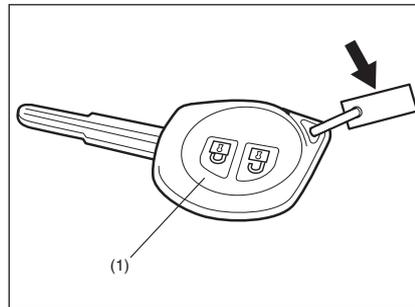

81A183

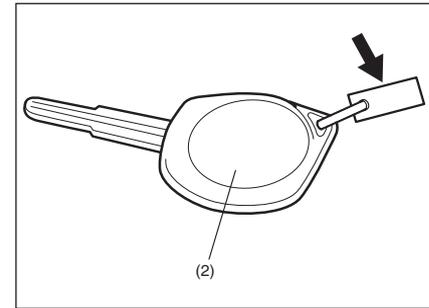


81A182

## Fiat CODE - Immobilizer System (for versions/markets, where provided)

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key which has an electronic identification code programmed into it. The key communicates the identification code to the vehicle when the key is turned to the "ON" position. If you need to make spare keys, see your Fiat Dealership. The vehicle must be programmed with the correct identification code for the spare keys. A key made by an ordinary locksmith will not work.

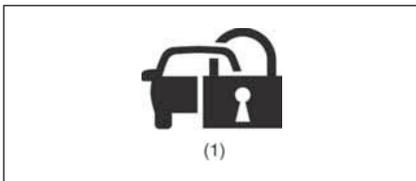

79JMG002

With ignition key “ON” and flashing immobilizer system warning light (1) the engine does not start.

**NOTE** If this light blinks, turn the ignition switch to the “LOCK” position, then turn it back to the “ON” position. If the light still blinks with the ignition switch turned to the “ON” position, there may be something wrong with your key or with the immobilizer system. Ask your Fiat dealer to inspect the system.

#### NOTE

- If you lose your Immobilizer ignition key, see your Fiat Dealership as soon as possible to have the lost one deactivated, then have the new key made by them.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch when using your Fiat, or the engine may not be started because they may interfere with your Fiat’s immobilizer system.

- In case of attaching any metal objects to the immobilizer key, it may not start the engine.

**IMPORTANT** The immobilizer key is a sensitive electronic instrument. To avoid damaging the immobilizer key:

- Do not expose it to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep the immobilizer key away from magnetic objects.

**IMPORTANT** The electronic components inside the key may be damaged if the key is submitted to sharp knocks.

This engine immobilizer system, models 5WK49181 and 5WK49182, complies with the main norms and provisions of the European Directive 1999/5/EC.

#### Ignition Key Reminder

(for versions/markets, where provided)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver’s door is opened.

## DOOR LOCKS

### SIDE DOOR LOCKS

To lock a front door from outside the vehicle:





- Insert the key and turn the top of the key toward the rear of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a front door from outside the vehicle, insert the key and turn the top of the key toward the front of the vehicle.

To lock a door from inside the vehicle, turn the lock knob forward. Turn the lock knob rearward to unlock the door.

To lock a rear door from outside the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

**NOTE** Be sure to hold the door handle when you close a locked front door, or the door will not remain locked.

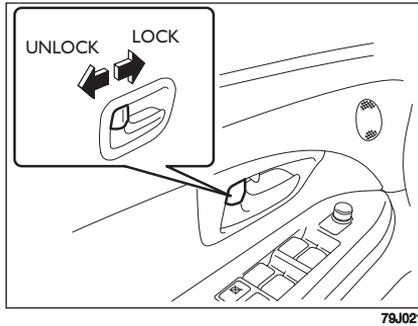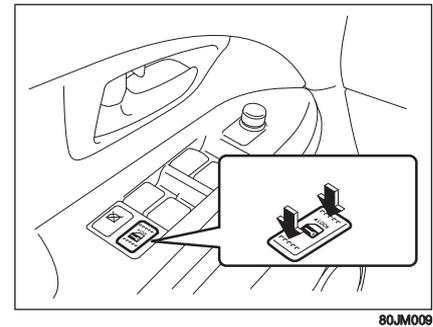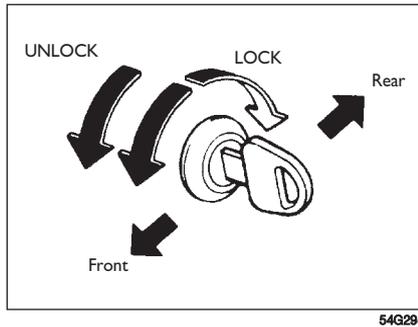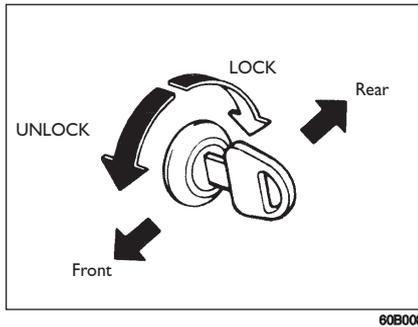

## CENTRAL DOOR LOCKING SYSTEM

(for versions/markets, where provided)

You can lock and unlock all doors (including the rear door) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle once.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle twice.

To unlock the driver's door only, insert the key in that door lock and turn the top of the key toward the front of the vehicle once.

You can also lock or unlock all doors by depressing the front or rear of the switch, respectively.

### NOTE

- If your vehicle is equipped with the keyless entry system, you can also lock or unlock all doors by operating the transmitter. Refer to "Keyless Entry System" in this section.
- If your vehicle is equipped with the keyless start system, you can also lock or unlock all doors by pushing the request switch on the door handle. Refer to "Keyless Start System" in this section.

## DEAD LOCK SYSTEM

(for versions/markets, where provided)

This system is designed to help prevent tamper-unlocking of the door locks.

You can activate this system by turning the key in the driver's door lock.

### NOTE

- If your vehicle is equipped with the keyless entry system, you can activate the dead lock system by operating the transmitter. Refer to “Keyless Entry System” in this section.
- If your vehicle is equipped with the keyless start system, you can activate the dead lock system by pushing the request switch on the door handle. Refer to “Keyless Start System” in this section.




### WARNING

**Do not activate the dead lock system if there are occupants in the vehicle. They will be locked in the vehicle and cannot unlock the doors from inside.**

### NOTE

- The dead lock system will not operate if one or more door(s) is(are) not closed and latched completely. Make sure all doors are completely closed and latched when activating the dead lock system.
- The dead lock system is released automatically allowing all the side doors to be unlocked when the ignition switch is turned to the “ON” position.

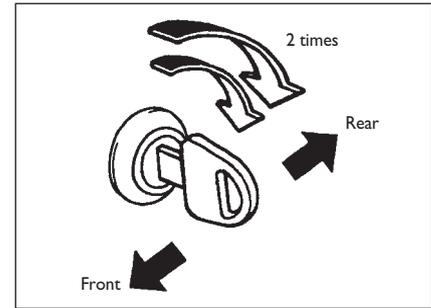


89E107

### To activate this system:

Insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle twice within 3 seconds.


You can not use the lock knobs to unlock the side doors when this system is activated.

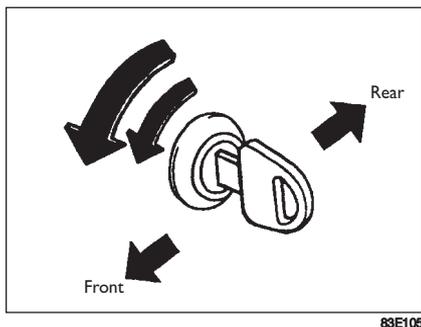

### To release this system:

To unlock all the side doors, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle twice.

To unlock only the driver's door, insert the key in that door lock and turn the top of the key toward the front of the vehicle once.

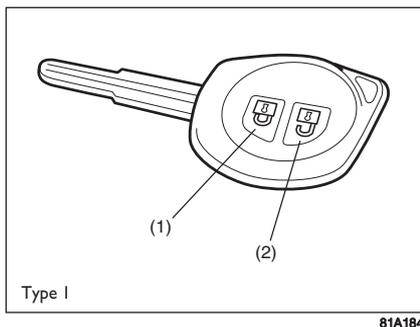


### KEYLESS ENTRY SYSTEM

(for versions/markets, where provided)

(1) "LOCK" button

(2) "UNLOCK" button

There are two ways to lock or unlock all doors simultaneously by operating the transmitter/remote controller near the vehicle.

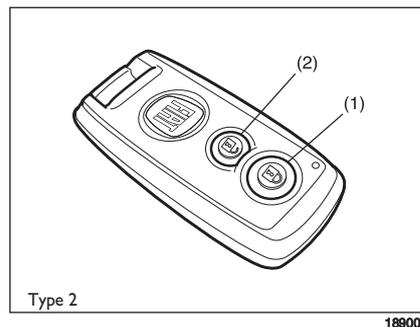

### Central door locking system

- To lock all doors, push the "LOCK" button (1) once.
- To unlock only the driver's door, push the "UNLOCK" button (2) once.
- To unlock other doors, push the "UNLOCK" button (2) once again.

## Central door locking system with the dead lock system

(for versions/markets, where provided)

If you want to prevent tamper- unlocking of the door locks, use this method. When the dead lock system is activated, operating the lock knobs will not unlock the side doors.

To activate this system:

To lock all doors, push the “LOCK” button (1) twice within 3 seconds.

To release this system:

- To unlock only the driver’s door, push the “UNLOCK” button (2) once.
- To unlock other doors, push the “UNLOCK” button (2) once again.



### WARNING

**Do not activate the dead lock system if there are occupants in the vehicle. They will be locked in the vehicle and cannot unlock the doors from inside.**

The turn signal lights will flash once when the doors are locked and then the turn signal lights will flash once again when the doors are locked with the dead lock system.

When the door (s) is (are) unlocked:

- The turn signal lights will flash twice, and
- the interior light will turn on for about 15 seconds and then fade out with the interior light switch in the middle position. If you insert the key into the ignition switch during that time, the light will start to fade out immediately.

Be sure the doors are locked after you operate the “LOCK” button (1).

If no door is opened within about 30 seconds after the “UNLOCK” button (2) is operated, the doors will automatically lock again.

## NOTE

- The maximum operating distance is about 5 meter (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks can not be operated with the transmitter/remote controller:
  - if the ignition switch is in a position other than “LOCK” or the ignition key is inserted in the ignition switch, or
  - if any door is open or incompletely closed.
- If you lose your transmitter/remote controller, ask your Fiat Dealership as soon as possible for a replacement and to have the lost one deactivated.

## Type 1


The Keyless Entry System, Transmitter model TS002 and Receiver model R51K0 are in compliance with the essential requirements and other provisions of Directive 1999/5/EC.

## Type 2

The Keyless Start System, controller model S62J1 and key model TS001 are in compliance with the essential requirements and other provisions of Directive 1999/5/EC.

**IMPORTANT** The transmitter/remote controller is a sensitive electronic instrument. To avoid damaging the transmitter/remote controller:

- Do not expose it to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep the transmitter/remote controller away from magnetic objects such as a television.

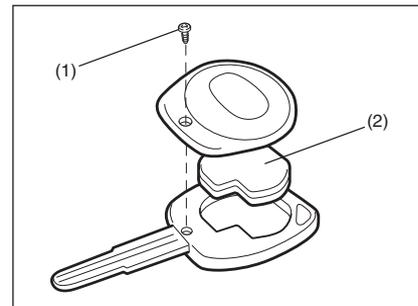


## Replacement of the battery

If the transmitter/ remote controller becomes unreliable, replace the battery.


### To replace the battery for the transmitter of the keyless entry

- Remove the screw (1), and open the transmitter cover.
- Remove the transmitter (2).

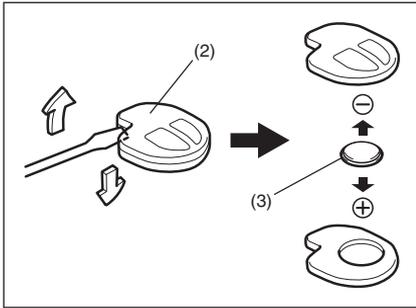

80JM135


- Put the edge of a coin or a flat blade screw driver in the slot of the transmitter (2) and pry it open.
- Replace the battery (3) (Lithium disc-type CR1620 or equivalent) so its + terminal faces the “+” mark of the transmitter.
- Close the transmitter and install it into the transmitter holder.
- Close the transmitter cover, install and tighten the screw (1).
- Make sure the door locks can be operated with the transmitter.
- Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

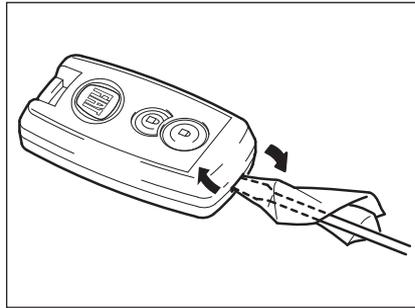

189002

### To replace the battery for the remote controller of the keyless start system

- Insert a flat blade screw driver covered with a soft cloth in the slit of the remote controller and pry it open.
- Replace the battery (1) (Lithium disc type CR2032 or equivalent) so its + terminal faces the bottom of the case as shown in the illustration.
- Close the remote controller firmly.
- Make sure the door locks can be operated with the remote controller.

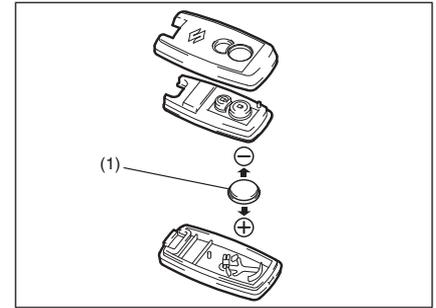

80JM134




### WARNING

*Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact physician immediately.*

**IMPORTANT** The transmitter/remote controller is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.

**NOTE** Used batteries must be disposed properly according to applicable rules or regulations and must not be disposed with ordinary household trash.

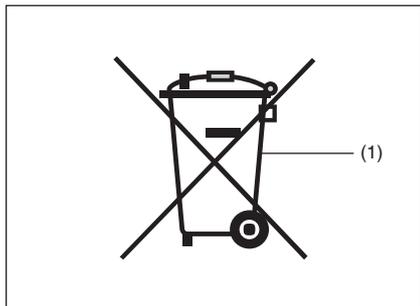


80JM133

### I. Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing or recycling of the used battery, consult your FIAT Dealership.

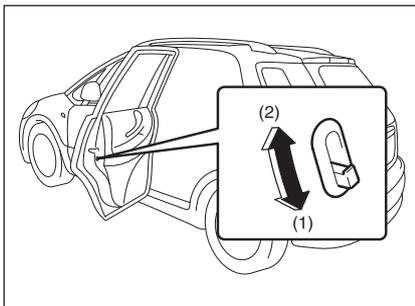

79J025

### Child-Proof Locks (rear side door)

1. LOCK
2. UNLOCK

As illustrated, a child-proof lock is provided for both rear doors. When the lock lever is in position (1), the child-proof lock is locked, and when in position (2), the childproof lock is unlocked. When the childproof lock is in the locked position, the rear door cannot be opened from the inside even if the inside door lock is unlocked but can be opened from the outside.




#### WARNING

Be sure to place the child-proof lock in the locked position whenever children are seated in the rear.



#### WARNING

After engaging the child lock on both rear doors, check for proper engagement by trying to open a rear door with the internal handle.

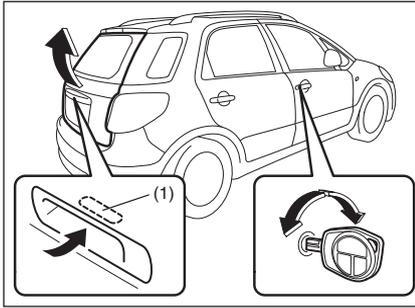

79J026

## Rear door

### I. Rear door unlatch switch

You can lock and unlock the rear door by using the key in the driver's door lock.

If your vehicle is equipped with a rear door keylock, you can lock or unlock the rear door by using the key in the rear door lock. To open the rear door, insert the key and turn it clockwise to unlatch and lift the rear door.

If your vehicle is equipped with a rear door unlatch switch (1), push and hold the rear door unlatch switch (1) and lift the rear door to open the rear door.



## WARNING


**Always make sure that the rear door is closed and latched securely. Completely closing the rear door helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.**

NOTE When the rear door is closed incompletely, follow the procedure below:

- Push the rear door unlatch switch (1) and open the rear door a little.
- After a few seconds, close the rear door.
- Make sure that the rear door is closed completely.

If you can not unlatch the rear door by pushing the unlatch switch (1) due to a discharged battery or malfunction, follow the procedures below to unlatch the rear door from inside the vehicle.

- Fold the rear seat forward for easier access. Refer to "Folding Rear Seats" section for details on how to fold the rear seat forward.

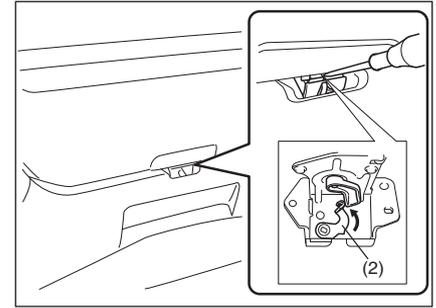

79J099

- Push open the rear door from inside by pushing up on the emergency lever (2) using a flat blade screw driver or the jack handle. The rear door will be latched again by closing the rear door simply.

If the rear door can not be unlatched, have the vehicle inspected by your Fiat Dealership.



## WARNING


**To avoid injury, do not use your finger to push the emergency lever.**

**Make sure there is not anyone near the rear door when pushing open the rear door from inside the vehicle.**


# WINDOWS

## MANUAL WINDOW CONTROL (for versions/markets, where provided)

Raise or lower the door windows by turning the handle located on the door panel.

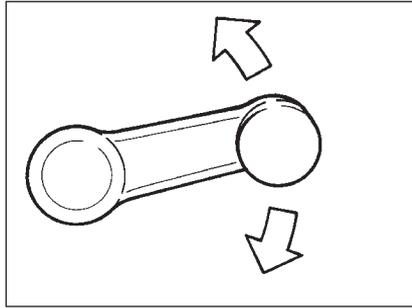

60G010

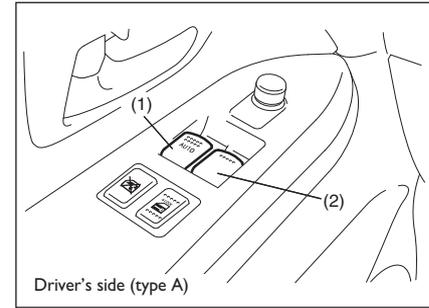


80JM010

## ELECTRIC WINDOW CONTROLS

(for versions/markets, where provided)


The electric windows can only be operated when the ignition switch is in the "ON" position.

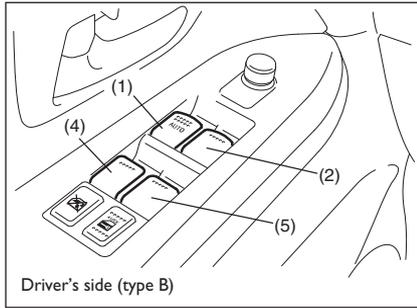

80JC095

### Driver's side


The driver's door has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window or there are switches (4), (5), to operate the rear left and right passenger windows, respectively.

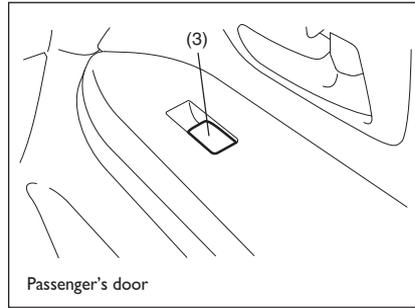

79J029

### Passenger's door


The passenger's door has a switch (3) to operate the passenger's window.

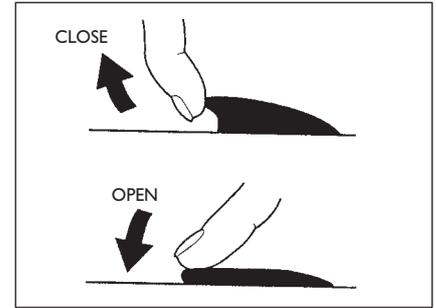

81A009


To open a window, push the top part of the switch and to close the window lift up the top part of the switch.

The driver's window has an "auto-down" feature for added convenience (at toll booths or drive-through restaurants, for example). This means you can open the window without holding the window switch in the "Down" position. Press the driver's window switch completely down and release it. To stop the window before it reaches the bottom, pull the switch up briefly.

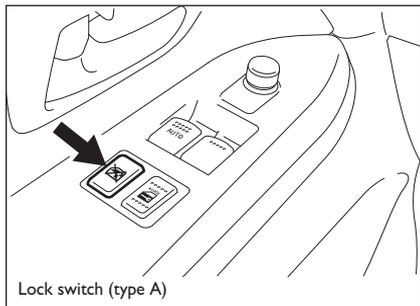


Lock switch (type A)

80JM011

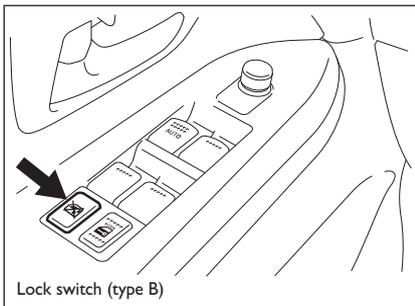

Lock switch (type B)

80JC087

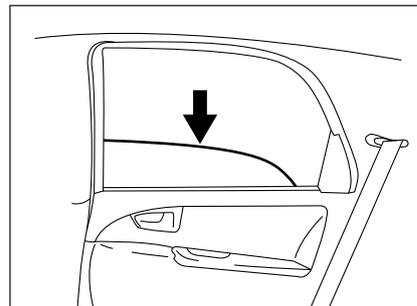

79J207

The driver's door also has a lock switch for the passenger's window (s). When you push in the lock switch, the passenger's window (s) can not be raised or lowered by operating any of the switches (2), (3), (4) or (5). To restore normal operation, release the lock switch by pushing again.



### WARNING

***You should always lock the passenger's window operation when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.***

***To avoid injuring an occupant by window entrapment, be sure no part of the occupant's body such as hands or head is in the path of the electric windows when closing them.***

***Always remove the ignition key when leaving the vehicle even if a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the electric window switches and get trapped by the window.***

**NOTE** The rear side door windows are not designed to open fully. They can be opened about 2/3 of the way down.



**NOTE** If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

# MIRRORS

## INSIDE REARVIEW MIRROR


You can adjust the inside rearview mirror by hand so as to see the rear of your vehicle in the mirror. To adjust the mirror, set the selector tab (1) to the day position, then move the mirror up, down or sideways by hand to obtain the best view.

When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

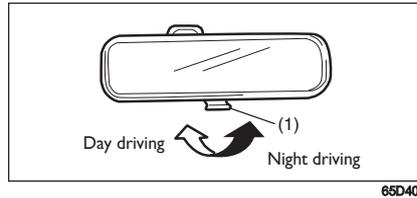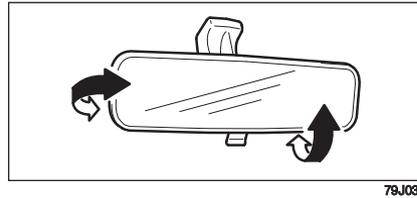

 **WARNING**  
Always adjust the mirror with the selector set to the day position.


 **WARNING**  
Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.

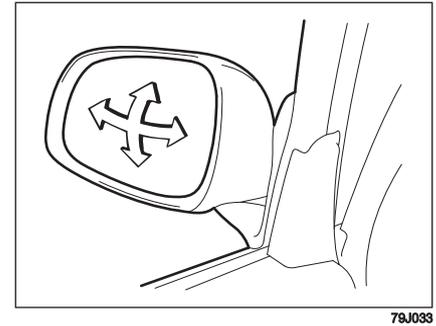

## OUTSIDE REARVIEW MIRRORS

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

 **WARNING**  
Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.

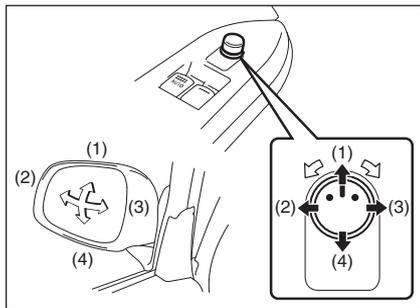

79J034

## ELECTRIC MIRRORS


(for versions/markets, where provided)

The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition switch is in the "ACC" or "ON" position.

To adjust the mirrors:

- Move the selector switch to the left or right to select the mirror you wish to adjust.
- Press the outer part of the switch that corresponds to the direction in which you wish to move the mirror.
- Return the selector switch to the center position to help prevent unintended adjustment.

**NOTE** If your vehicle is equipped with the heated outside rearview mirrors, refer to "Heated Rear Window and Heated Outside Rearview Mirrors (for versions/markets, where provided) Switch" in the "INSTRUMENT PANEL" section.

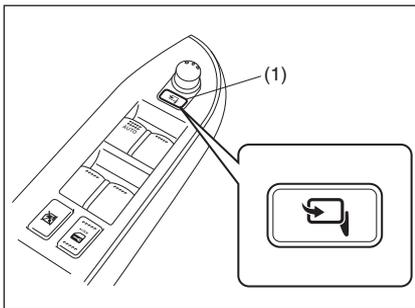

79JM031

## Outside Rearview Mirrors Folding Switch (for versions/markets, where provided)

You can fold the mirrors when you park the vehicle in a narrow space. Push the folding switch (1) to fold and unfold the mirrors.

Make sure the mirrors are completely unfolded before you start driving.



### WARNING

*Moving mirrors can pinch and injure a hand. Do not allow any one's hand to get near the mirrors when folding and unfolding the mirrors.*

## SEAT ADJUSTMENT



### WARNING

*Only make adjustments when the vehicle is stationary.*




### WARNING

*Check that the seat is firmly locked in the runners by trying to move it back and forth. Failure to lock the seat in place could result in the seat moving suddenly and the driver losing control of the vehicle.*



### WARNING

*To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.*

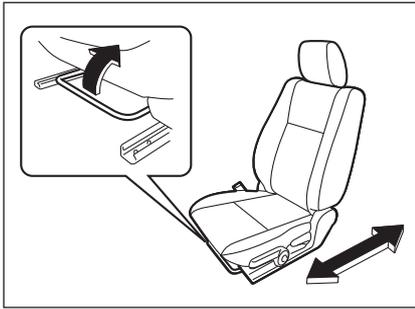


80JF040

### ADJUSTING SEAT POSITION

The adjustment lever for each front seat is located under the front of the seat. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward.

After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

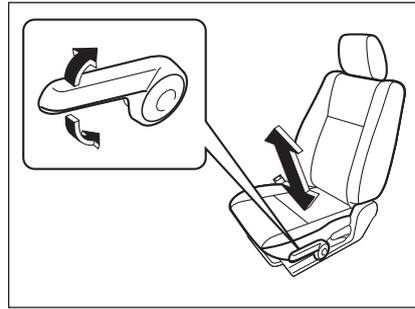

80JM024

If the driver's seat is equipped with a seat height adjuster lever on the outboard side of the seat, raise or lower the seat by pulling up or down the adjuster lever.



80JM025

### ADJUSTING SEATBACKS




#### WARNING

*All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.*


To adjust the seatback angle of front seats, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

## HEAD RESTRAINTS

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

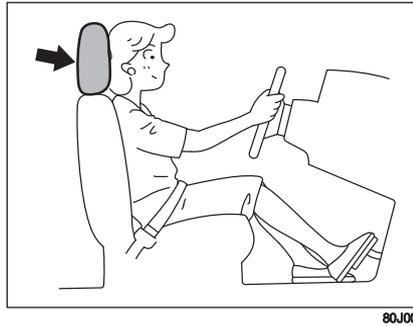

**NOTE** It may be necessary to recline the seatback to provide enough overhead clearance to remove the head restraint.

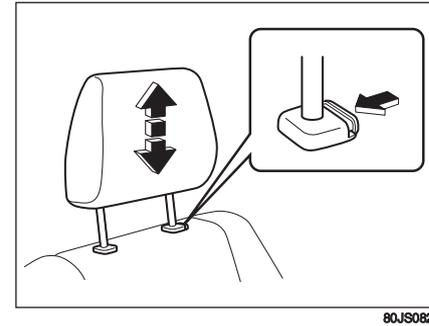


### Front

To raise the front head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.



### WARNING

**Remember that the head restraints should be adjusted to support the back of your head and not your neck. Only in this position do they exert their protective action. Do not attempt to adjust the head restraint while driving.**

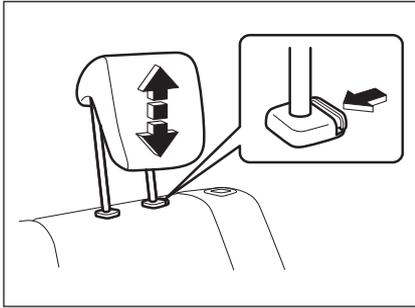

63J135

## Rear

To raise the rear head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

When installing a child restraint system, raise the head restraint to the most upper position.

# SEAT BELTS AND CHILD RESTRAINT SYSTEMS



## WARNING

*Wear Your Seat Belts at All Times.*




## WARNING

*An air bag supplements, or adds to, the frontal crash protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.*



## WARNING

*Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.*

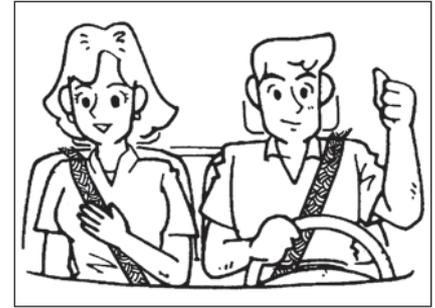


65D231



Above the pelvis

65D606

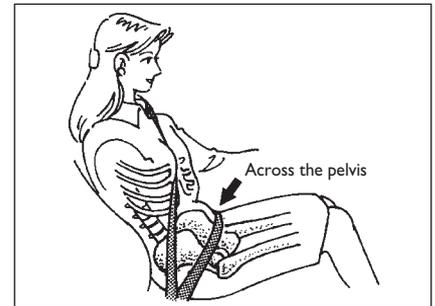

Across the pelvis


65D201



## WARNING

Seat belts should always be adjusted as follows:

- The lap portion of the belt should be worn low across the pelvis, not across the waist.
- The shoulder straps should be worn on the outside shoulder only, and never under the arm.
- The shoulder straps should be away from your face and neck, but not falling off your shoulder.
- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than one which is snug.
- Make sure that each seat belt buckle is inserted into the proper buckle catch. It is possible to cross the buckles in the rear seat.

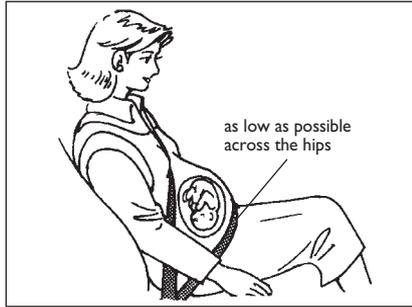

## WARNING

Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the diagram.

Do not wear your seat belt over hard or breakable objects in your pockets or on your clothing. If an accident occurs, objects such as glasses, pens, etc. under the seat belt can cause injury.



## WARNING

Never use the same seat belt on more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.

Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated, or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.

Children age 12 and under should ride properly restrained in the rear seat. Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Make sure that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.



## WARNING

- For children, if the shoulder belt irritates the neck or face, move the child closer to the center of the vehicle.
- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins, clips, etc. into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.



## WARNING

Under no circumstances should the components of the seat belts and pretensioners be tampered with or removed. Any operation should be carried out by qualified and authorised personnel. Always contact a Fiat Dealership.


## LAP-SHOULDER BELT

### Emergency Locking Retractor (ELR)


The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, then pull the belt across your body more slowly.

### Safety reminder


To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

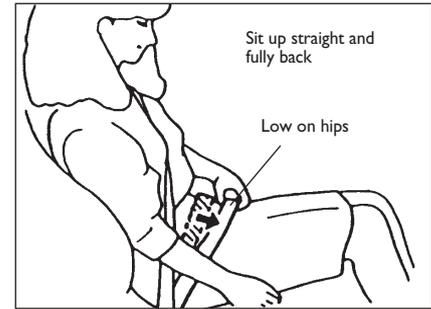

60A038

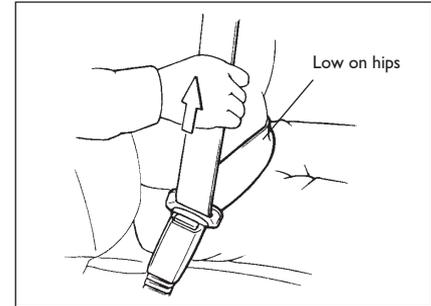


60A040

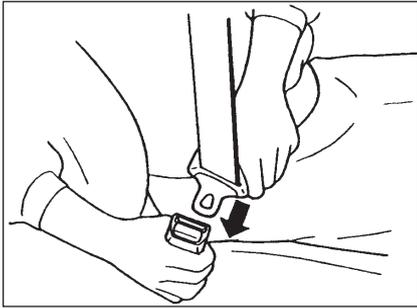

60A036


To fasten the seat belt, sit up straight and well back in the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a “click”.

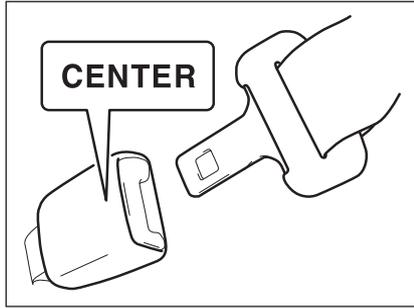

80J2008


**NOTE:**

The word “CENTER” is marked into the buckle for the rear center belt. The buckles are designed so a latch plate cannot be inserted into the wrong buckle.

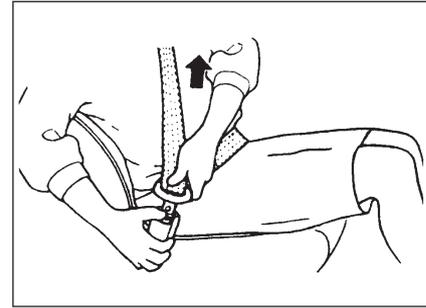

60A039

To unfasten the seat belt, push the button on the buckle and retract the belt slowly while attaching a hand to the belt or/and the latch plate.

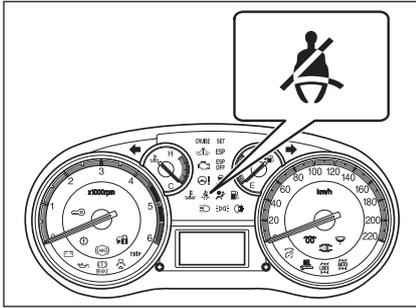

79JF002

## DRIVER'S SEAT BELT REMINDER

When the driver doesn't buckle his or her seat belt, the driver's seat belt reminder light in the instrument cluster will come on and a buzzer will sound as a reminder to the driver to buckle his or her seat belt. For more details, refer to the explanation below.

If the driver's seat belt remains unbuckled when the ignition switch is turned to the "ON" position, the reminder works as follows:

- 1) The driver's seat belt reminder light will come on.
- 2) After the vehicle's speed has reached about 15 km/h, the driver's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- 3) After step 2) has finished, the reminder light will remain on until the driver's seat belt is buckled.


If the driver has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from step 1) or step 2) according to the vehicle's speed. When the vehicle's speed is below about 15 km/h, the reminder will start from step 1). When the vehicle's speed is above about 15 km/h, the reminder will start from step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the ignition switch is turned off.



## WARNING

*It is absolutely essential that the driver and passengers wear their seat belts at all times. Persons who are not wearing seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before putting the key in the ignition.*

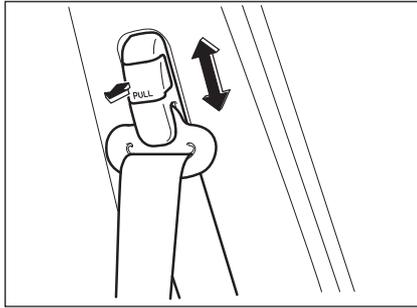

64J198

## SHOULDER ANCHOR HEIGHT ADJUSTER


(for versions/markets, where provided)

Adjust the shoulder anchor height so that the shoulder belt rides on the center of the outboard shoulder. To move upward, slide the anchor up. To move downward, slide the anchor down while pulling the lock knob out. After adjustment, make sure that the anchor is securely locked.



### WARNING

*Be sure that the shoulder belt is positioned on the center of the outside shoulder. The belt should be away from your face and neck, but not falling off your shoulder. Misadjustment of the belt could reduce the effectiveness of the safety belt in a crash.*

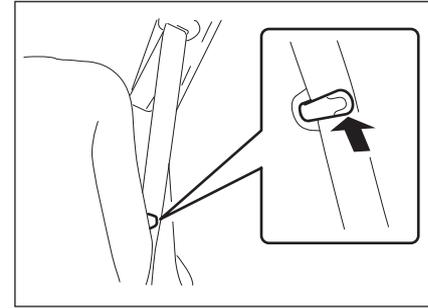


79J035

## SEAT BELT HANGER

(for versions/markets, where provided)

**IMPORTANT** When you move a seat-back, make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

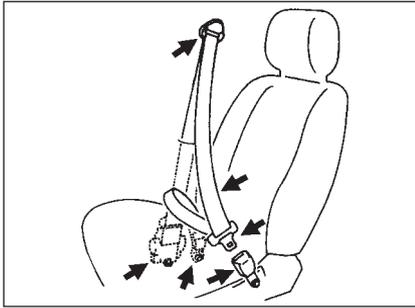

65D209S

## SEAT BELT INSPECTION

Periodically inspect the seat belts to make sure they work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages, and guide loops. Replace any seat belts which do not work properly or are damaged.




### WARNING

*Be sure to inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly which was not in use during a collision should be replaced if it does not function properly, it is damaged in any way or the seat belt pretensioners were activated (that is, if the front air bags were activated).*



### WARNING

*Under no circumstances should the components of the seat belts and pretensioners be tampered with or removed. Any operation should be carried out by qualified and authorised personnel. Always contact a Fiat Dealership.*

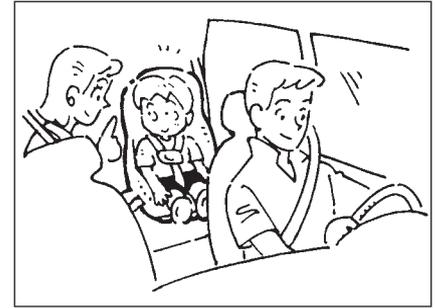


60G332S


## CHILD RESTRAINT SYSTEMS

Fiat highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; make sure that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats by either seat belts (lap belts or the lap portion of lap-shoulder belts) or by special rigid lower anchor bars built into the seat. Whenever possible, Fiat recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

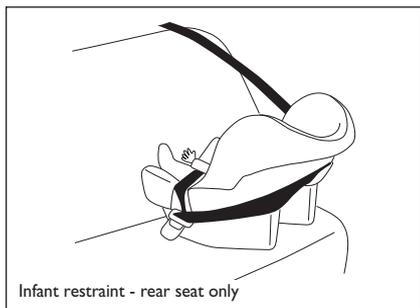


79J221

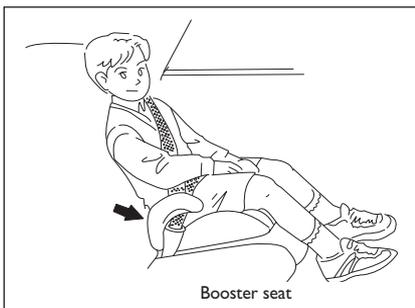

79J223



65D607

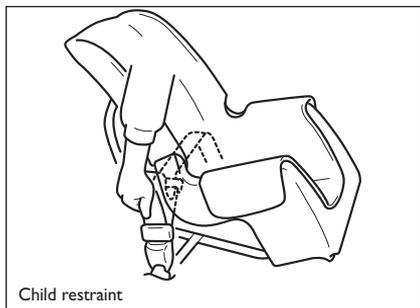

79J222

If you must use a front-facing child restraint in the front passenger's seat, adjust the passenger's seat as far back as possible.

### (For EU countries)

When purchasing a child restraint and install it to your FIAT, refer to the information about suitability for child restraints shown in "Child Restraint System for EU Countries" in this section.

Installation of child restraint systems:

- Conventional (fastening with seat belt) child restraint systems are available to only left position of the rear seat.

**NOTE** Observe any statutory regulation about child restraints.



### WARNING

*The figure is only an example for mounting. Attain to the instructions for fastening which must be enclosed with the specific child restraining system you are using.*



### WARNING

*If your vehicle is equipped with a front passenger air bag, do not install a rear-facing child restraint in the front passenger's seat. If the passenger's air bag inflates, a child in a rear-facing child restraint could be killed or seriously injured. The back of a rear-facing child restraint would be too close to the inflating air bag.*



65D608



### WARNING

*If you install a child restraint system in the rear seat, slide the front seat for enough forward so that the child's feet do not contact the front seatback. This will help avoid injury to the child in the event of an accident.*



### WARNING

*Children could be endangered in a crash if their child restraints are not properly secured in the vehicle. When installing a child restraint system, be sure to follow the instructions below. Be sure to secure the child in the restraint system according to the manufacturer's instructions.*



65D609



### WARNING

*If your vehicle is equipped with side air bags, do not install a child restraint in the front passenger's seat. If the passenger's side air bag inflates, a child in a child restraint could be severely injured.*



### WARNING

*In an accident or sudden stop, the rear seat armrest (for versions/markets, where provided) could fall forward. If there is a child in a rear-facing child restraint in the rear center seating position, the falling armrest could injure the child. Do not install a rear-facing child restraint in the rear center seating position.*

# CHILD RESTRAINT SYSTEM FOR EU COUNTRIES

## CHILD RESTRAINT

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children under 12 years of age or smaller than 150 cm, properly use the child restraints which conform to ECE-R Norm 44, the standard for child restraints, referring to the table.

**Table of vehicle handbook information on conventional (fastening with seat belt) child restraint systems installation suitability for various seating positions**

Mass group		Seating position (or other site)				
		Front Passenger	Rear Outboard	Rear Center	Intermediate Outboard	Intermediate Center
group 0	up to 10 kg	<b>X</b>	<b>U</b> (only left)	<b>X</b>	<b>NA</b>	<b>NA</b>
group 0+	up to 13 kg	<b>X</b>	<b>U</b> (only left)	<b>X</b>	<b>NA</b>	<b>NA</b>
group 1	9 to 18 kg	<b>X</b>	<b>U</b> (only left) *	<b>X</b>	<b>NA</b>	<b>NA</b>
group 2	15 to 25 kg	<b>X</b>	<b>UF</b> (only left)	<b>X</b>	<b>NA</b>	<b>NA</b>
group 3	22 to 36 kg	<b>X</b>	<b>UF</b> (only left)	<b>X</b>	<b>NA</b>	<b>NA</b>

Key of letters to be inserted in the above table:

**U** = suitable for "universal" category restraints approved for use in this mass group.

**UF** = suitable for forward-facing "universal" category restraints approved for use in this mass group.

**X** = seat position not suitable for children in this mass group.

**NA** = not applicable.

\* ISOFIX child restraint systems are available to both left and right position.

NOTE "universal" is the category in the ECE regulation-Norm 44.

**Table of vehicle handbook information on ISOFIX child restraint systems installation suitability for various ISOFIX positions**

Mass group	Size class	Fixture	Vehicle ISOFIX positions					
			Front Passenger	Rear Outboard	Rear Center	Intermediate Ourboard	Intermediate Center	Other Sites
carrycot	F	ISO/L1	NA	X	NA	NA	NA	NA
	G	ISO/L2	NA	X	NA	NA	NA	NA
group 0	up to 10 kg	E	ISO/R1	NA	IL	NA	NA	NA
group 0+	up to 13 kg	E	ISO/R1	NA	IL	NA	NA	NA
		D	ISO/R2	NA	IL	NA	NA	NA
group 1	9-18 kg	C	ISO/R3	NA	IL (1)	NA	NA	NA
		D	ISO/R2	NA	IL	NA	NA	NA
		C	ISO/R3	NA	IL (1)	NA	NA	NA
		B	ISO/F2	NA	IL, IUF	NA	NA	NA
		B1	ISO/F2X	NA	IL, IUF	NA	NA	NA
		A	ISO/F3	NA	IL, IUF	NA	NA	NA
group 2	15-25 kg			NA	ND	NA	NA	NA
group 3	22-36 kg			NA	ND	NA	NA	NA

(I) The front seat should be positioned between foremost and 7 notches rearward of foremost position.

Key of letters to be inserted in the above table:


**IUF** = suitable for ISOFIX forward child restraint systems of universal category approved for use in this mass group Fiat recommends RÖMER DUO plus, available at Lineaccessori Fiat..

**IL** = suitable for particular ISOFIX restraint systems with category "vehicle specific", "restricted" or "semi-universal" categories. The ISOFIX child restraint systems must be approved for the concerned vehicle type.

**X** = ISOFIX position not suitable for ISOFIX child restraint systems in this mass group and/or this size class.

**NA** = not applicable.

NOTE "universal" is the category in the ECE regulation-Norm 44.

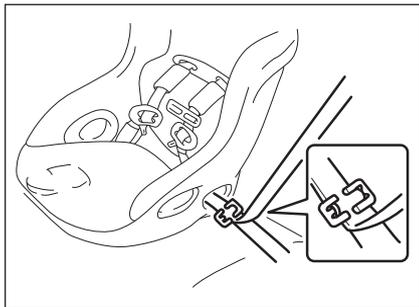

79J224

### INSTALLATION WITH LAP-SHOULDER SEAT BELTS (Available to only left position of the rear seat)

**IMPORTANT** Before installing a child restraint system in the rear seat, raise the head restraint to the most upper position.


#### ELR type belt



#### WARNING

**Install your child restraint system according to the instructions provided by the child restraint system manufacturer.**

Make sure that the seat belt is securely latched. Try to move the child restraint system in all directions, to make sure it is securely installed.

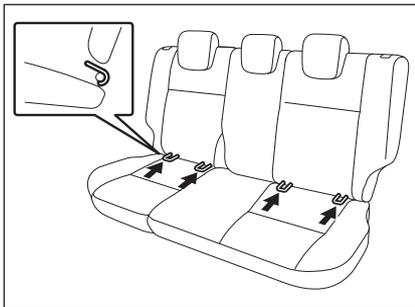

79J058


### INSTALLATION WITH ISOFIX TYPE ANCHORAGES

Your vehicle is equipped with the lower anchorages in the rear seat outboard seating positions for securing a ISOFIX type of child restraints with the connecting bars. The lower anchorages are located where the rear of the seat cushion meets the bottom of the seatback.



#### WARNING

**Be sure to install the ISOFIX type of child restraint(s) in the only outboard seating positions, not in the central position for rear seat.**

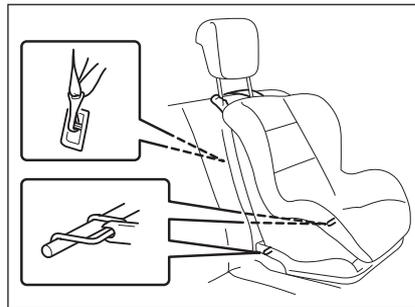


63J020



#### WARNING

**Install the ISOFIX type child restraint system according to the instructions provided by the child restraint system manufacturer. After installing, try moving the child restraint system in all directions especially forward, to make sure the connecting bars are securely latched to the anchorages.**

If your vehicle is equipped with the top strap anchorages, be sure to use the top strap of the child restraint according to the instructions provided by the child restraint system manufacture.

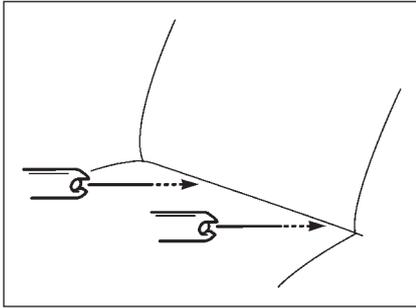


78F114

Here is a general instruction:

- Pull upward on the rear head restraint to the most upper position.


**IMPORTANT** Before installing a child restraint system in the rear seat, raise the head restraint to the most upper position.

- If possible, fold the seatback rearward for easier installation.

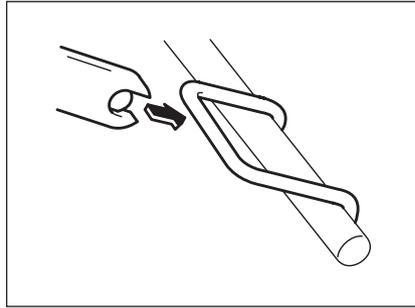

54G183

- Place the child restraint in the rear seat, inserting the connecting bars to the anchorages between the seat cushion and the seatback.

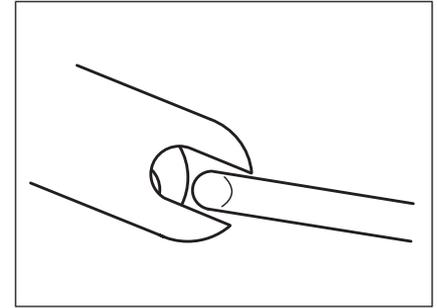


54G184

- Use your hands to carefully align the connecting bar tips with the anchorages. Take care not to pinch your fingers.
- Push the child restraint toward the anchorages so that the connecting bar tips are partially hooked to the anchorages. Use your hands to confirm the position.



54G185

- Grasp the front of the child restraint and push the child restraint forcefully to latch the connecting bars. Make sure they are securely latched by trying to move the child restraint system in all directions, especially forward.
- Return the seatback if folded.
- Attach the top strap referring to “Installation of Child Restraint with Top Strap” section below (for versions/markets, where provided).

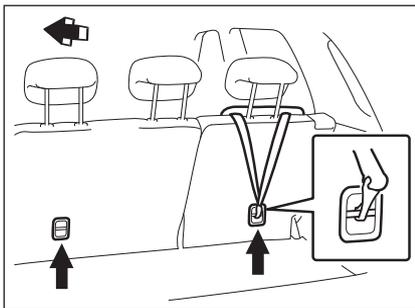

79JF003

### INSTALLATION OF CHILD RESTRAINT WITH TOP STRAP

Some child restraint systems require the use of a top strap. Top strap anchor brackets are located on the back of the rear seatbacks. The number of the anchor bracket provided in your vehicle depends on the vehicle specification.

Install the child restraint system as follows:


- Remove the luggage compartment cover.
- Secure the child restraint on rear seat using the procedure described above for securing a restraint system that does not require a top strap.

- Hook the top strap to the anchor bracket and tighten the top strap according to the instructions provided by the child restraint system manufacturer. Be sure to attach the top strap to the corresponding anchor located directly behind the child restraint. Do not attach the top strap to the luggage restraint loops (for versions/markets, where provided).




#### WARNING

**Do not attach the child restraint top strap to the luggage restraint loops (for versions/markets, where provided). Incorrectly attached top strap will reduce the intended effectiveness of the child restraint system.**

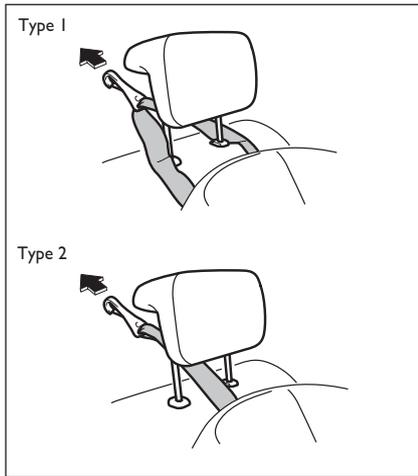

86G032

- When routing the top strap, be sure to pass the top strap as shown in the illustration. (Refer to “Head Restraints” section for details on how to raise or lower the head restraint.).
- Make sure that cargo does not interfere with routing of the top strap.

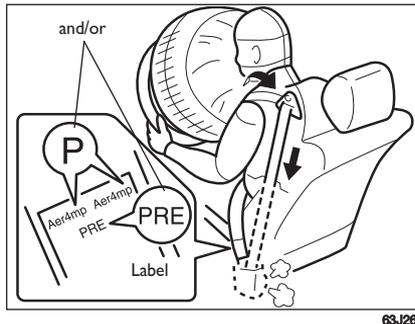

63J269

## SEAT BELT PRETENSIONER SYSTEM

(for versions/markets, where provided)



### WARNING

***This section of the owner’s manual describes your Fiat’s SEAT BELT PRETENSIONER SYSTEM. Please read and follow ALL these instructions carefully to minimize your risk of severe injury or death.***

To determine if your vehicle is equipped with a seat belt pretensioner system at the front seating positions, check the label on the front seat belt at the bottom part. If the letters “p” and/or “PRE” appear as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the pretensioner seat belts in the same manner as ordinary seat belts.

Read this section and the “Supplemental Restraint System (air bags)” section to learn more about the pretensioner system.

The seat belt pretensioner system works with the SUPPLEMENTAL RESTRAINT SYSTEM (Air Bags). The crash sensors and the electronic controller of the air bag system also control the seat belt pretensioners. When the air bags are triggered, the pretensioners are also triggered. For precautions and general information including servicing the pretensioner system, refer to the “Supplemental Restraint System (air bags)” section in addition to this “Seat Belt Pretensioner System” section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal crash. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released. These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by wearing seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a crash.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to the "Seat Adjustment" section and the instructions and precautions about the seat belts in this "Seat Belts and Child Restraint Systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the air bags will activate in severe frontal collisions. They are not designed to activate in rear impacts, side impacts, rollovers, or minor frontal collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the air bags are activated), have the pretensioner system serviced by an authorized Fiat Dealership as soon as possible.

If the "AIR BAG" light on the instrument cluster does not blink or come on briefly when the ignition switch is turned to the "ON" position, stays on for more than 10 seconds, or comes on while driving, the pretensioner system or the air bag system may not work properly. Have both systems inspected by an authorized Fiat Dealership as soon as possible.



#### **WARNING**

***Service on or around the pretensioner system components or wiring must be performed only by an authorized Fiat Dealership who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.***

To prevent damage or unintended activation of the pretensioners, be sure the battery is disconnected and the ignition switch has been in the "LOCK" position for at least 90 seconds before performing any electrical service work on your Fiat.

Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your Fiat, ask your Fiat Dealership, body repair shop, or scrap yard for assistance.

## SUPPLEMENTAL RESTRAINT SYSTEM (air bags)


(for versions/markets, where provided)



### WARNING

*This section of the owner's manual describes the protection provided by your Fiat's SUPPLEMENTAL RESTRAINT SYSTEM (air bags). Please read and follow ALL these instructions carefully to minimize your risk of severe injury or death in the event of a collision.*

Your vehicle is equipped with a Supplemental Restraint System consisting of the following components in addition to a lap-shoulder belt at each front seating position.

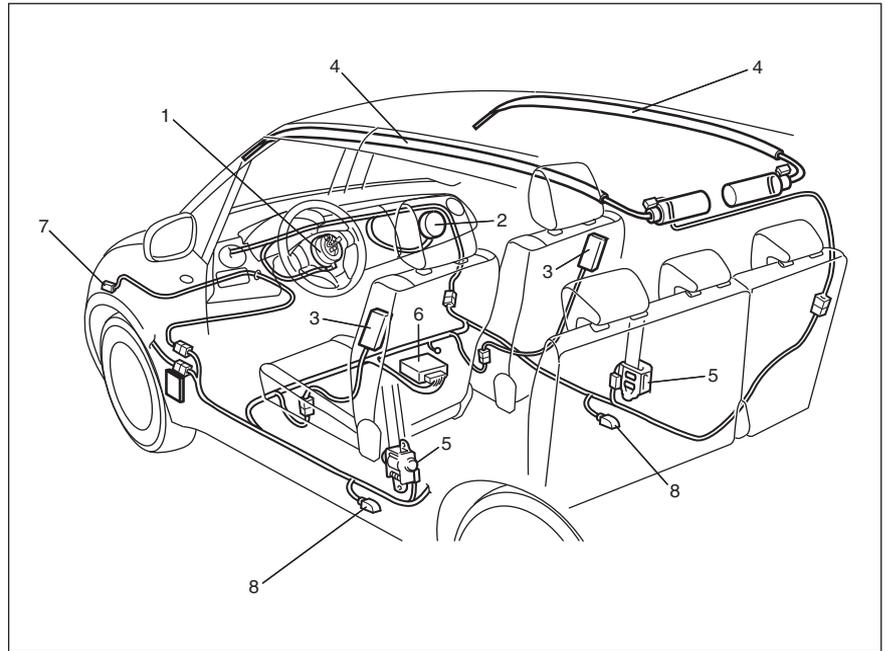


79J115

- |   |  |   |  |
|---|--|---|--|
| 1 | Driver's front air bag module                                      | 5 | Seat belt pretensioners                                  |
| 2 | Front passenger's front air bag module                             | 6 | Air bag controller                                       |
| 3 | Side air bag module (for versions/markets, where provided)         | 7 | Forward crash sensor                                     |
| 4 | Side curtain air bag module (for versions/markets, where provided) | 8 | Side crash sensor (for versions/markets, where provided) |



63J030


If the “AIR BAG” light on the instrument cluster does not blink when the ignition switch is first turned to the “ON” position, or the “AIR BAG” light stays on, or comes on while driving, the air bag system (or the seat belt pretensioner system (for versions/markets, where provided)) may not work properly. Have the air bag system inspected by an authorized Fiat Dealership as soon as possible.

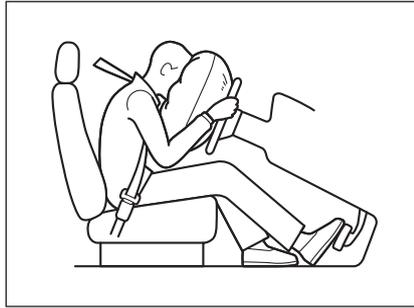


80JS026

### FRONT AIR BAGS

The driver's front air bag is located behind the center pad of the steering wheel and the front passenger's front air bag is located behind the passenger's side of the dashboard. The words “SRS AIRBAG” are molded into the air bag covers to identify the location of the air bags.

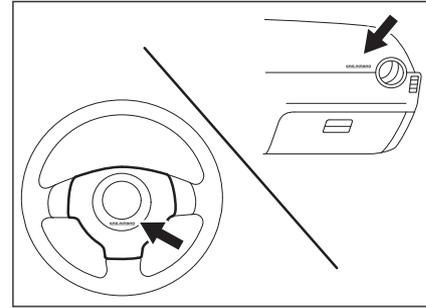

80J2009

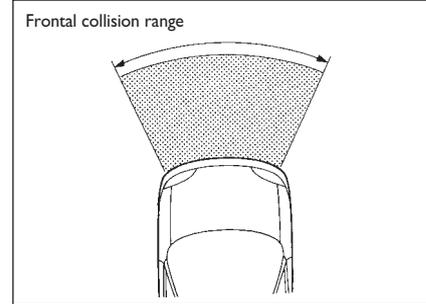


60G032




### WARNING

***Do not apply stickers or other objects to the steering wheel or to the air bag cover on the passenger's side or on the side roof lining. Never put objects (e.g. mobile phones) on the dashboard on passenger side since they could interfere with proper air bag inflation and also cause serious injury.***

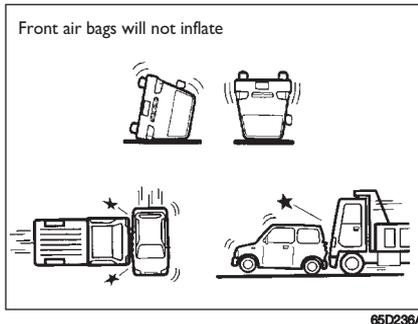

Front air bags are designed to inflate in severe frontal collisions. They are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Remember, since an air bag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

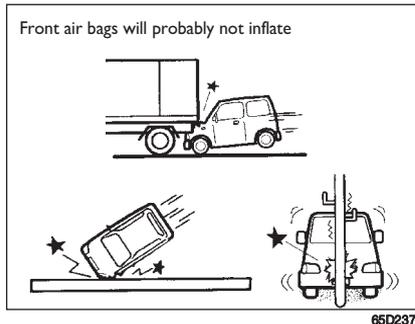

Therefore, an air bag is NOT a substitute for seat belts. To maximize your protection, **ALWAYS WEAR YOUR SEAT BELTS**. Be aware that no system can prevent all possible injuries that may occur in an accident.



### WARNING

**An air bag supplements, or adds to, the crash protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.**



65D807



### WARNING

**Do not install a rear-facing child restraint in the front passenger's seat. If the passenger's front air bag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a rear-facing child restraint would be too close to the inflating air bag.**


If you must use a front-facing child restraint in the front passenger's seat, be sure to move the front passenger's seat as far back as possible. Please refer to the "Seat Belts and Child Restraint Systems" section in this section for details on securing your child.

	 <b>WARNING</b> <b>AVERTISSEMENT</b> <b>ADVERTENCIA</b> <b>WARNUNG</b> <b>ATTENZIONE</b> <b>WAARSCHUWING</b> <b>VIGYÁZAT</b>
	<small>GB</small>
	<small>F</small>
	<small>E</small>
	<small>D</small>
	<small>I</small>
	<small>NL</small>
<small>H</small>	

57L20208

### Air bag plate

The plate is located on the sun visor.

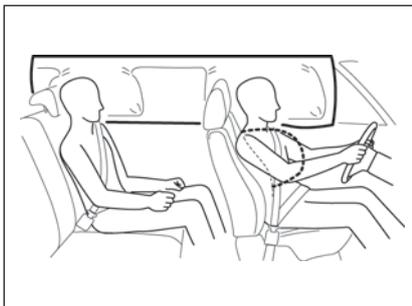


68KM090


### SIDE AIR BAGS AND SIDE CURTAIN AIR BAGS

(for versions/markets, where provided)


Side air bags (for versions/markets, where provided) are located in the part of the front seatbacks closest to the doors. The words “SRS AIRBAG” are molded into the side air bag cover to identify the location of the side air bags.

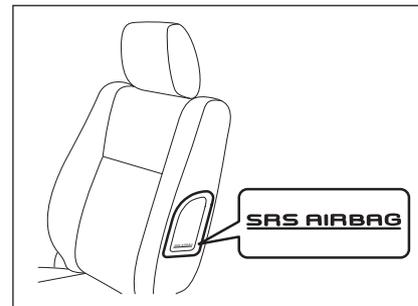


52KM036

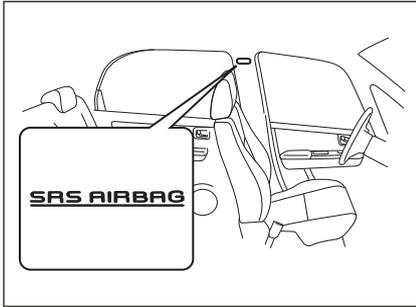

80JM146

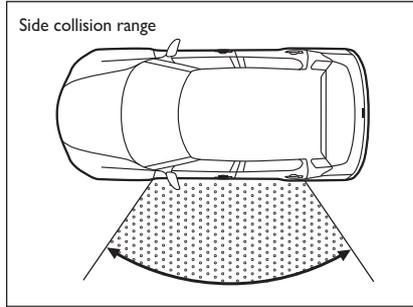

80JM032

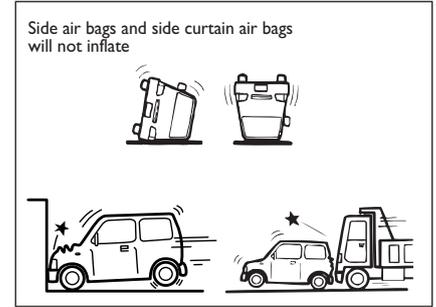

54G027



**WARNING**

*If your vehicle is equipped with a side air bag, do not install a child restraint in the front passenger's seat. If the passenger's side air bag inflates, a child in a child restraint could be injured.*



**WARNING**

*Never rest head, arms and elbows on the door, on the windows and in the window bag area to prevent possible injuries during inflation phase.*




**WARNING**

*Never lean head, arms and elbows out of window.*

Side curtain air bags (for versions/markets, where provided) are located in the roof lining. The words "SRS AIRBAG" are molded into the pillar to identify the location of the side curtain air bags.

Side air bags and side curtain air bags will probably not inflate

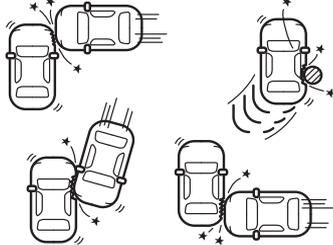

54G028

Side air bags and side curtain air bags are designed to inflate in severe side impact collisions. They are not designed to inflate in frontal or rear collisions, rollovers or minor side collisions, since they would offer no protection in those types of accidents. Remember, since an air bag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an air bag is NOT a substitute for seat belts. To maximize your protection, ALWAYS WEAR YOUR SEAT BELTS. Be aware that no system can prevent all possible injuries that may occur in an accident.



#### WARNING

***An air bag supplements, or adds to, the crash protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, whether or not an air bag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a crash.***



65D610

#### HOW THE SYSTEM WORKS

In a frontal collision, the crash sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal crash, the controller will trigger the inflators. If your vehicle is equipped with side air bags and side curtain air bags, crash sensors will detect a side collision, and if the controller judges that the side collision is severe enough, it will trigger a side inflator. The inflators inflate the appropriate air bags with nitrogen or argon gas. The inflated air bags provide a cushion for your head (front air bags and side curtain air bags only) and upper body. The air bag inflates and deflates so quickly that you may not even realize that it has activated. The air bag will neither hinder your view nor make it harder to exit the vehicle.

Air bags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the air bag may irritate bare skin, such as the facial area against a front air bag. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some air bag components may be hot for a while after inflation.



54G582

A seat belt helps keep you in the proper position for maximum protection when an air bag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Please refer to the “Seat Adjustment” section and the “Seat Belts and Child Restraint Systems” section in this section for details on proper seat and seat belt adjustments.



## WARNING

*The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard, or otherwise get too close to the dashboard. For vehicles with side air bags and side curtain air bag, occupants should not lean on or sleep against the door. In these situations, the out-of-position occupant would be too close to an inflating air bag, and may suffer severe injury.*

*Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the air bag and the driver or front passenger. These objects may interfere with air bag operation or may be propelled by the air bag in the event of a crash. Either of these conditions may cause severe injury.*

*For vehicles with side air bags, do not place seat covers on the front seats, because seat covers could restrict the air bag's inflation. Also, do not place any cup holders on the door, as the cup holder could be propelled by the air bag in the event of a crash. Either of these conditions may cause severe injury.*

Note that even though your vehicle may be moderately damaged in a collision, the collision may not have been severe enough to trigger the front or side air bags to inflate. If your vehicle sustains ANY front-end or side damage, have the air bag system inspected by an authorized Fiat Dealership to ensure it is in proper working order.

Your vehicle is equipped with a diagnostic module which records information about the air bag system if the air bags deploy in a crash. The module records information about overall system status, which sensors activated the deployment.

### **Servicing the air bag system**

If the air bags inflate, have the air bags and related components replaced by an authorized Fiat Dealership as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the air bag controller could be damaged. If it does, have the air bag system inspected by the Fiat Dealership as soon as possible.

Special procedures are required for servicing or replacing an air bag. For that reason, only an authorized Fiat Dealership should be allowed to service or replace your air bags. Please remind anyone who services your Fiat that it has air bags.

Service on or around air bag components or wiring must be performed only by an authorized Fiat Dealership. Improper service could result in unintended air bag deployment or could render the air bag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the air bag system, be sure the battery is disconnected and the ignition switch has been in the "LOCK" position for at least 90 seconds before performing any electrical service work on your Fiat. Do not touch air bag system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

Scrapping a vehicle that has an uninflated air bag can be hazardous. Ask your Fiat Dealership, body repair shop or scrap yard for help with disposal.

## GENERAL WARNINGS



### WARNING

Never travel with objects on your lap, in front of your chest or with a pipe, pencil, etc. between your lips; injury may result in the event of the air bag being triggered.



### WARNING

Remember that with the key engaged and at ON, even if the engine is not running, the air bags may be triggered on a stationary vehicle if it is bumped by another moving car. Therefore, never seat children on the front seat even when the vehicle is stationary. On the other hand remember that if the key is at LOCK, no safety system (air bags or pretensioners) is triggered in the event of an impact; in this case, failure to come into action cannot be considered as a sign that the system is not working properly.



### WARNING

If the vehicle has been stolen or an attempt to steal it has been made, if it has been subjected to vandals or floods, have the air bag system checked by Fiat Dealership.



### WARNING

Do not wash the seat back rest with pressurised water or steam (by hand or at automatic seat washing stations).



### WARNING


The front air bag is triggered for shocks greater in magnitude that the pretensioners. For impacts between these two thresholds, it is therefore normal that only the pretensioners are triggered.



### WARNING


Do not hook rigid objects to the coat hooks and to the support handles.

# STEERING COLUMN CONTROLS

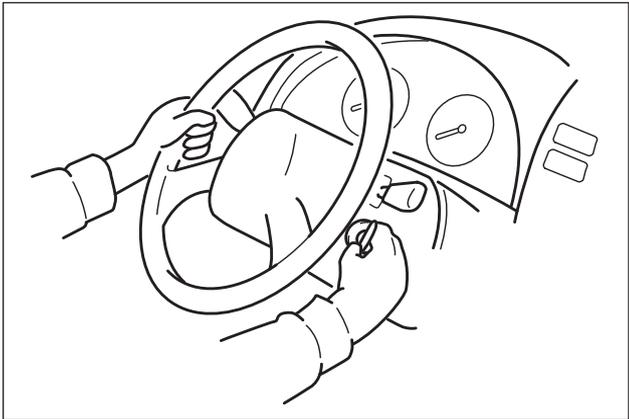

60G406

- IGNITION SWITCH ..... 56
- LIGHTING/TURN SIGNAL CONTROL LEVER..... 59
- WINDSHIELD WIPER AND WASHER LEVER ..... 61
- REAR WINDOW WIPER/WASHER SWITCH  
(for versions/markets, where provided)..... 62
- TILT STEERING LOCK LEVER  
(for versions/markets, where provided)..... 63
- REMOTE AUDIO CONTROLS  
(for versions/markets, where provided)..... 64
- HORN..... 64

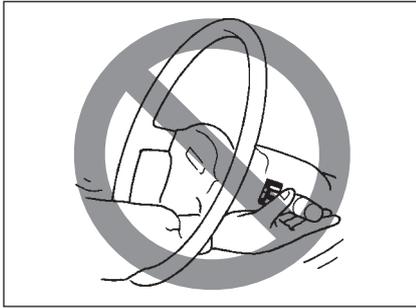

66D811



### WARNING

*To avoid possible injury, do not operate controls by reaching through the steering wheel.*

## IGNITION SWITCH

The ignition switch has the following four positions:

### LOCK

This is the normal parking position. It is the only position in which the key can be removed.

It locks the ignition, and prevents normal use of the steering wheel after the key is removed.


### Manual transaxle vehicles

You must push in the key to turn it to the "LOCK" position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.


### Automatic transaxle vehicles

The gearshift lever must be in the "P" (Park) position to turn the key to the "LOCK" position. It locks the ignition and prevents normal use of the steering wheel and gearshift lever.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering, try turning the steering wheel slightly to the right or left while turning the key.

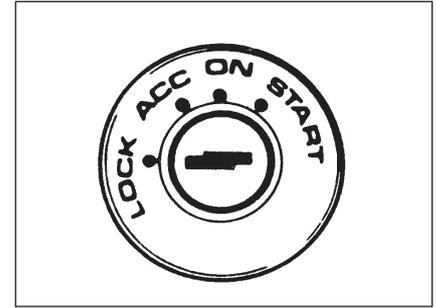

60B041A

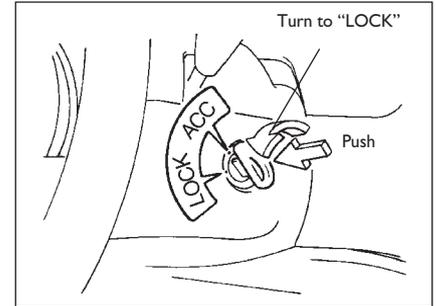

Manual transaxle

60G033A

## ACC

Accessories such as the radio can operate, but the engine is off.

## ON

This is the normal operating position. All electrical systems are on.

## START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

### Ignition key reminder

(for versions/markets, where provided)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.



### WARNING

*If the ignition device is tampered with (e.g.: attempted theft), have it checked over by a Fiat Dealership as soon as possible.*



### WARNING

*When getting out of the vehicle, always remove the key to prevent any occupants from accidentally activating the controls. Remember to engage the handbrake and if the vehicle is parked on uphill slope to engage the first gear. If the vehicle is facing downhill, engage the reverse gear. Never leave unsupervised children in the vehicle.*



### WARNING

*It is absolutely forbidden to carry out whatever after-market operation involving steering system or steering column modifications (e.g.: installation of anti-theft device) that could badly affect performance and safety, cause the lapse of warranty and also result in non-compliance of the vehicle with homologation requirements.*



### WARNING

*Never remove the ignition key while the vehicle is moving. The steering wheel would automatically lock as soon as you try to turn it. This also applies when the vehicle is being towed.*



81A297S



## WARNING

**Never return the ignition switch to the “LOCK” position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.**

**Always return the ignition switch to the “LOCK” position and remove the ignition key when leaving the vehicle even if a short time. Also do not leave children alone in a parked vehicle. Unattended children could cause accidental movement of the vehicle or could tamper with power windows or power sunroof. They also could suffer from heat stroke in warm or hot weather. These could result in severe injury or even death.**

## IMPORTANT

- Do not use the starter for more than 15 seconds at a time. If the engine does not start, wait 15 seconds before trying again. If the engine still does not start after several attempts, check the fuel level and the ignition systems, or contact a Fiat Dealership.
- Do not leave the ignition switch in the “ON” position if the engine is not running as the battery will discharge.

# LIGHTING/TURN SIGNAL CONTROL LEVER

## LIGHTING OPERATION


To turn the lights on or off, twist the knob on the end of the lever. There are three positions:

OFF (1) all lights are off.

☰ (2) Front parking lights, tail-lights, license plate light and instrument lights are on, but headlights are off.


☰ (3) Front parking lights, tail-lights, license plate light, instrument lights and head lights are on.

With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument panel will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.

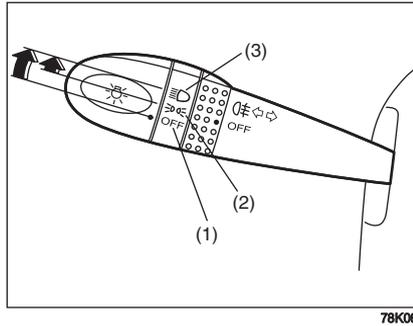


## Lights “On” reminder (for versions/markets, where provided)

A buzzer/chime sounds to remind you to turn off the lights if they are left on when the ignition key is removed and the driver’s door is opened.

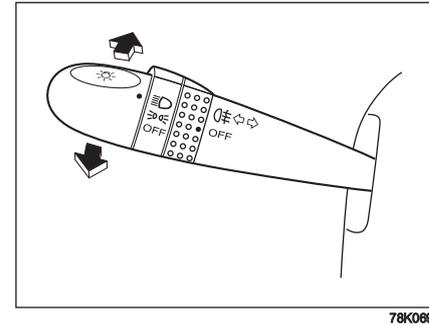

## Day time running light control (for versions/markets, where provided)

When the engine is started, this system turns on all lights. But this control is canceled when the light control lever is turned to any position other than “OFF”.

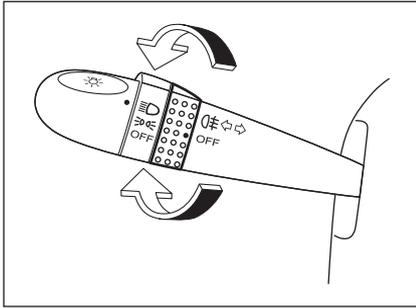


78K070

### REAR FOG LIGHT SWITCH

To turn the rear fog light on, twist the knob as shown in the illustration with the head light switch in the third position. When the rear fog light is on, an indicator light on the instrument cluster will come on. Do not turn the rear fog light switch unless the head light switch is in the third position.

**NOTE** When the head light switch is returned to the "OFF" position, the rear fog light switch will be canceled automatically.

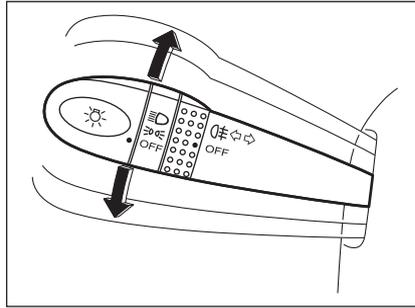


78K071

### TURN SIGNAL OPERATION

With the ignition switch in the "ON" position, move the lever up or down to activate the right or left turn signals.

#### Normal turn signal

Move the lever all the way upward or downward to signal. When the turn is completed, the signal will cancel and the lever will return to its normal position.

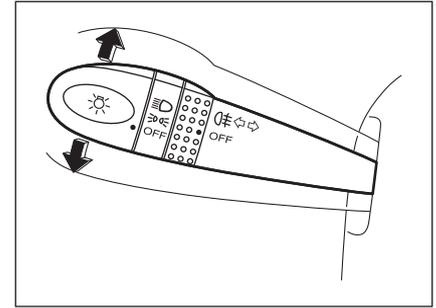

78K072

### Lane change signal

Sometimes, such as when changing lanes, the steering wheel is not turned far enough to cancel the turn signal. For convenience, you can flash the turn signal by moving the lever part way and holding it there. The lever will return to its normal position when you release it.

# WINDSHIELD WIPER AND WASHER LEVER

## Wiper and Washer Operation


When the ignition switch is in the “ON” position, you can use the wiper/washer lever or switch (for versions/markets, where provided).

## WINDSHIELD WIPERS


To turn the windshield wipers on, move the lever down to one of the three operating positions. In the “INT” position (for versions/markets, where provided), the wipers operate intermittently. The “INT” position is very convenient for driving in mist or light rain. In the “LO” position, the wipers operate at a steady low speed. In the “HI” position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to the “OFF” position.

Move the lever up and hold it to the “MIST” position, the windshield wipers will turn on continuously at low speed.

**IMPORTANT** Never use the window wiper to remove ice or snow from the windscreen. In these conditions, the wiper is submitted to excessive effort that results in motor protection cutting in and wiper operation inhibition for few seconds as a consequence. If operation is not restored (also after restarting the vehicle by the ignition key) contact Fiat Dealership.

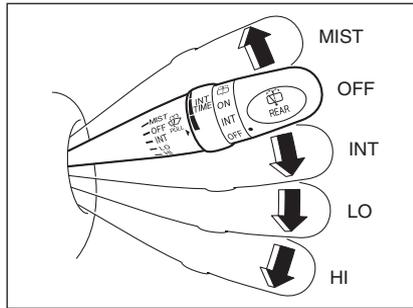


63J301

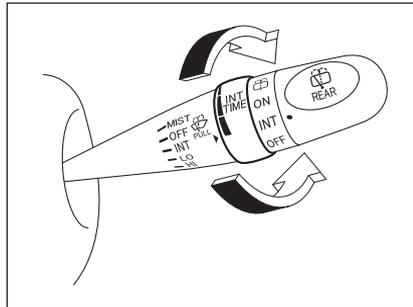

63J302

If the lever is equipped with the “INT TIME” control, turn the control forward or rearward to adjust the intermittent wiper operation to the desired interval.

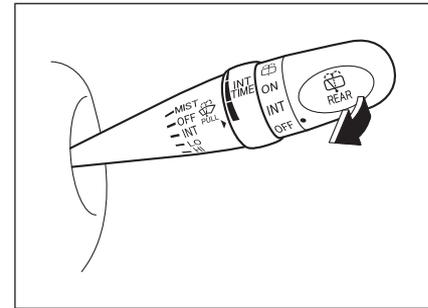

63J303

## WINDSHIELD WASHER

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and the “INT” position is equipped.



### WARNING

*To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.*

*Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.*

**IMPORTANT** To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Only fill the washer fluid reservoir 3/4 full during cold weather to allow room for expansion if the temperature falls low enough to freeze the solution.


## REAR WINDOW WIPER/WASHER SWITCH

(for versions/markets, where provided)

To turn the rear wiper on, twist the rear wiper switch on the end of the lever forward to the “ON” position. If your vehicle is equipped the “INT” position, the rear wiper operates intermittently when you twist the switch forward to the “INT” position. To turn the rear wiper off, twist the switch rearward to the “OFF” position.

With the rear wiper in the “OFF” position, twist the switch rearward and hold it there to spray window washer fluid.

With the rear wiper in the “ON” position, turn the switch forward and hold it there to spray window washer fluid.

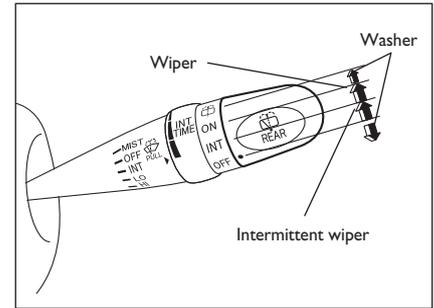

63J304


**IMPORTANT** Clear ice or snow from the rear window and rear wiper blade before using the rear wiper. Accumulated ice or snow could prevent the wiper blade from moving, causing damage to the wiper motor.

## TILT STEERING LOCK LEVER

(for versions/markets, where provided)

The lock lever is located under the steering column. To adjust the steering wheel height:

- Pull up the lock lever to unlock the steering column.
- Adjust the steering wheel to the desired height and lock the steering column by push down the lock lever.
- Try moving the steering wheel up and down to make sure it is securely locked in position.

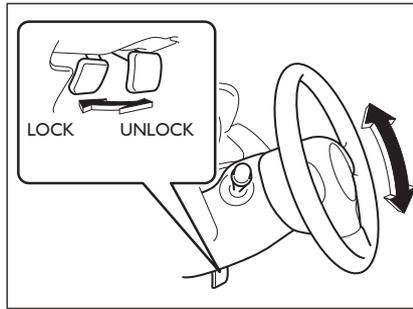

### WARNING

*Any adjustment of the steering wheel position must be carried out only with the vehicle stationary and the engine turned off.*



### WARNING

*It is absolutely forbidden to carry out whatever after-market operation involving steering system or steering column modifications (e.g.: installation of anti-theft device) that could badly affect performance and safety, cause the lapse of warranty and also result in non-compliance of the vehicle with homologation requirements.*



### WARNING



*Never attempt to adjust the steering wheel height while the vehicle is moving or you could lose control of the vehicle.*

## REMOTE AUDIO CONTROLS

(for versions/markets, where provided)

You can control basic functions of the audio system with the switches on the steering wheel.


For details, refer to “Audio Systems” in the “INSTRUMENT PANEL” section.

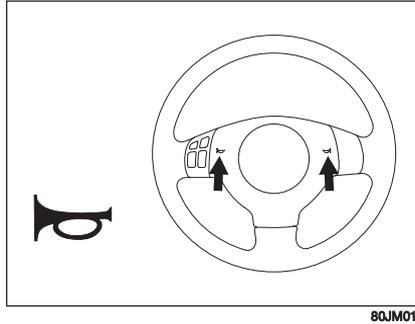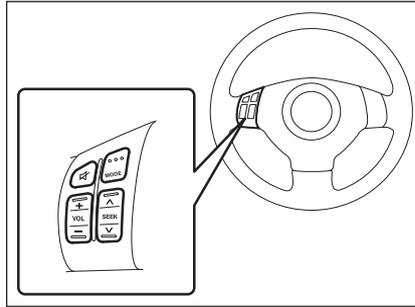

## HORN

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position.

# INSTRUMENT PANEL

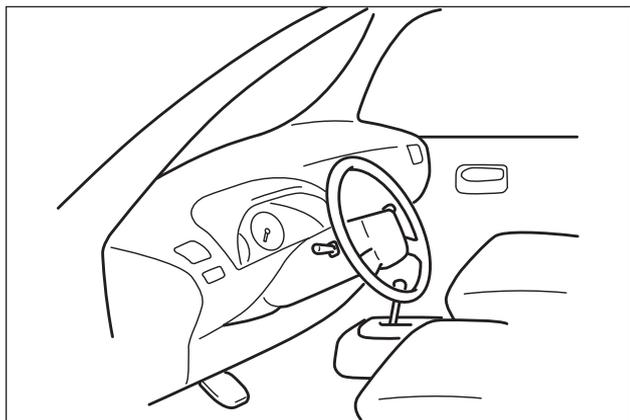


60G406

INSTRUMENT PANEL.....	66
INSTRUMENT CLUSTER.....	67
WARNING AND INDICATOR LIGHTS.....	68
SPEEDOMETER .....	76
TACHOMETER .....	76
FUEL GAUGE.....	76
TEMPERATURE GAUGE .....	77
INFORMATION DISPLAY.....	78
HAZARD WARNING SWITCH.....	85

FRONT FOG LIGHT SWITCH (for versions/markets, where provided).....	85
ACCESSORY SOCKET (for versions/markets, where provided).....	86
ESP® OFF SWITCH (for versions/markets, where provided).....	86
2WD/ 4WD SWITCH (for versions/markets, where provided).....	86
HEATED REAR WINDOW AND HEATED OUTSIDE REARVIEW MIRRORS SWITCH (for versions/markets, where provided).....	87
HEADLIGHT LEVELING SWITCH (for versions/markets, where provided).....	88
GLOVE BOX.....	88
CIGARETTE LIGHTER AND ASHTRAY (for versions/markets, where provided).....	89
THEFT DETERRENT LIGHT .....	89
HEATING AND AIR CONDITIONING SYSTEM .....	90
HEATING SYSTEM (for versions/markets, where provided).....	91
MANUAL HEATING AND AIR CONDITIONING SYSTEM (for versions/markets, where provided).....	94
AUTOMATIC HEATING AND AIR CONDITIONING SYSTEM (Climate Control) (for versions/markets, where provided).....	98
AUDIO SYSTEMS.....	104


# INSTRUMENT PANEL

1. Instrument cluster
2. Ignition switch
3. Lighting switch/Turn signal and dimmer switch
4. Windshield wiper and washer switch/ Rear window wiper and washer switch (for versions/markets, where provided)
5. Hazard warning switch
6. Other switches (for versions/markets, where provided)
7. Heater control panel
8. Audio (for versions/markets, where provided)
9. Accessory socket/cigarette lighter
10. Hood release
11. Center ventilator
12. Side ventilator
13. Side defroster
14. Glove box
15. Fuse box
16. Air bag (for versions/markets, where provided)

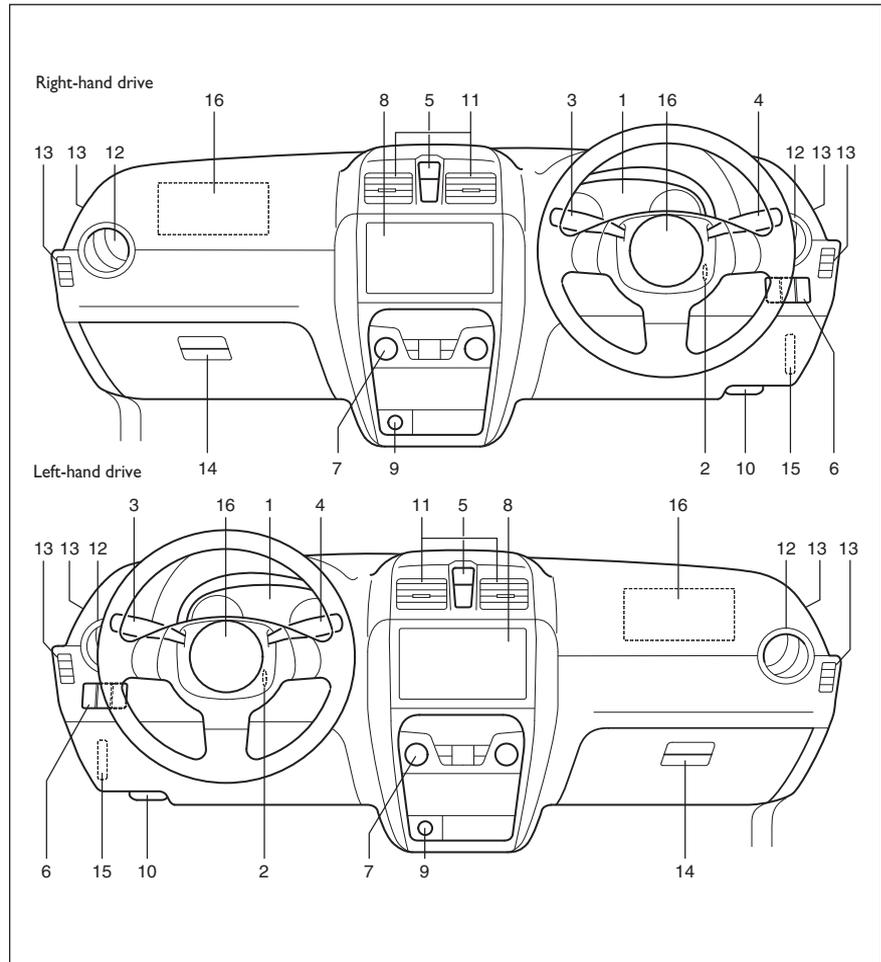

# INSTRUMENT CLUSTER

1. Speedometer
2. Tachometer
3. Fuel gauge
4. Temperature gauge
5. Information display
6. Trip meter selector knob
7. Indicator selector knob
8. Warning and indicator lights

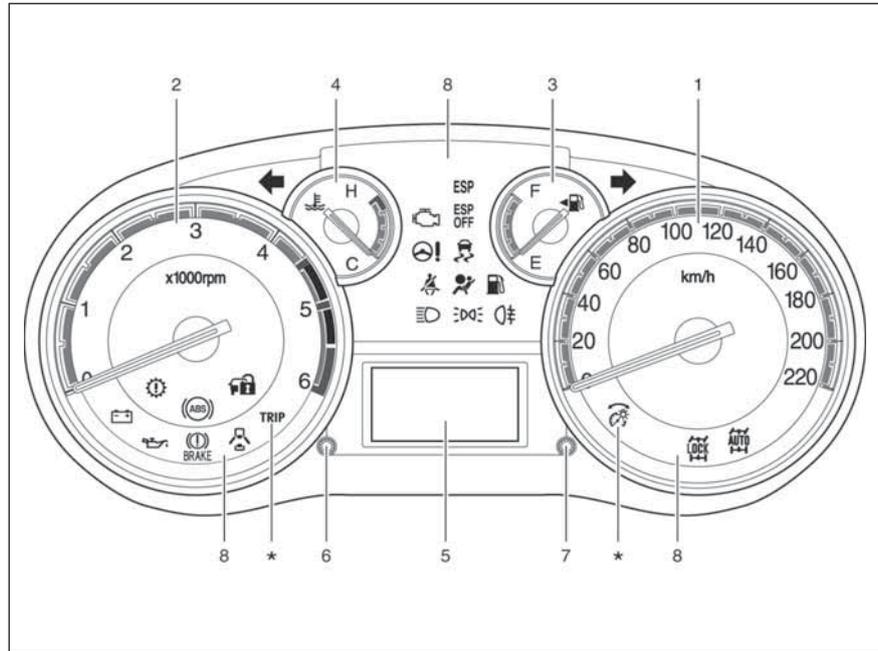

79JFE002

(\*) For more details refer to "Display" in the chapter "DASHBOARD".

## WARNING AND INDICATOR LIGHTS

### BRAKE SYSTEM WARNING LIGHT



For working check of this light, there are following three different type operations depending on the vehicle's specification.

- The light comes on briefly when the ignition switch is turned to the "ON" and/or "START" position.
- The light comes on when the parking brake is engaged with the ignition switch in the "ON" position.
- The light comes on when under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (Proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system. If this happens, you should:

- Pull off the road and stop carefully.



#### WARNING

**Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.**

- Test the brakes by carefully starting and stopping at the side of the road.
  - If you determine that it is safe, drive carefully at low speed to the nearest dealer for repairs, or

- Have the vehicle towed to the nearest dealer for repairs.



#### WARNING

**If any of the following conditions occur, you should immediately ask your Fiat Dealership to inspect the brake system.**


**If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.**

**If the brake system warning light does not come on when the ignition switch is turned to the "ON" or "START" position.**

**If the brake system warning light comes on at any time during vehicle operation.**

**NOTE** Because the disc brake system is selfadjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

## ANTI-LOCK BRAKE SYSTEM (ABS) WARNING LIGHT

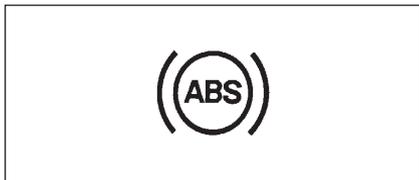

When the ignition switch is turned to the “ON” position, the light comes on briefly so you can check that the light is working.

If the light stays on, or comes on when driving, there may be something wrong with the ABS.

If this happens:

- Pull off the road and stop carefully.
- Turn the ignition switch to “LOCK” and then start the engine again.

If the warning light comes on briefly then turns off, the system is normal. If the warning light still stays on, the system will be something wrong.

If the light and the brake system warning light stay on, or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (Proportioning valve function) and there may be something wrong with both the rear brake force control function and anti-lock function of the ABS

system. If one of these happens, have the system inspected by your Fiat Dealership.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to “Anti-Lock Brake System (ABS)” in the “OPERATING YOUR VEHICLE” section.

## SLIP INDICATOR LIGHT

(for versions/markets, where provided)



ESP® is a registered trademark of Daimler AG.

This light blinks 5 times per second when one of the ESP® systems other than ABS is activated. If this light blinks, drive carefully.

When the ignition switch is turned to the “ON” position, the light comes on briefly so you can check that the light is working. If the light stays on, or comes on when driving and remains on, there may be something wrong with the ESP® systems (other than ABS). You should have the system inspected by your FIAT Dealership.

**NOTE** When you disconnect and reconnect the battery, ESP® system functions other than ABS will be deactivated and the slip indicator light will blink 1 time per second. For details on how to reactivate the ESP® systems, refer to “SLIP Indicator Light” in the “OPERATING YOUR VEHICLE” section.

For details of the ESP® systems, refer to “Electronic Stability Program (ESP®)” in the “OPERATING YOUR VEHICLE” section.



### WARNING

**The ESP® systems cannot prevent accidents. Always drive carefully.**

**ESP® WARNING LIGHT**  
**(Electronic Stability Program)**  
(for versions/markets, where provided)



66J031

When the ignition switch is turned to the “ON” position, the light comes on briefly so you can check that the light is working. If the light stays on, or comes on when driving, there may be something wrong with the ESP® systems (other than ABS). You should have the system inspected by an authorized FIAT dealer.

For details of the ESP® systems, refer to “Electronic Stability Program (ESP®)” in the “OPERATING YOUR VEHICLE” section.

**ESP® OFF INDICATOR LIGHT**  
(for versions/markets, where provided)




66J032

When the ignition switch is turned to the “ON” position, this light comes on briefly so you can check that the light is working.

When the ESP® OFF switch is pushed to turn off the ESP® systems (other than ABS), the ESP® OFF light comes on and stays on.

For details of the ESP® systems, refer to “Electronic Stability Program (ESP®)” in the “OPERATING YOUR VEHICLE” section.

**OIL PRESSURE LIGHT**

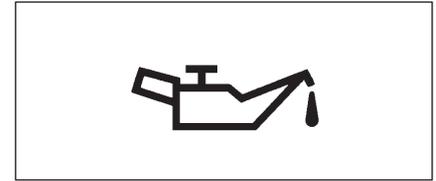

50G051A

This light comes on when the ignition switch is turned to the “ON” position, and goes out when the engine is started. The light will come on and remain on if there is insufficient oil pressure.


 **WARNING**  
*If the warning light  turns on when the vehicle is travelling stop the engine immediately and contact a Fiat Dealership.*

Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by your Fiat Dealership before you drive the vehicle again.

**IMPORTANT**

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the Oil Pressure Light to indicate the need to add oil. Be sure to periodically check the engine oil level.

## CHARGING LIGHT

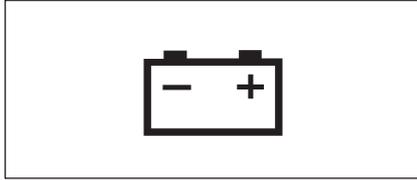

50G052A

This light comes on when the ignition switch is turned to the “ON” position, and goes out when the engine is started. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by your Fiat Dealership.

## SEAT BELT REMINDER LIGHT (for versions/markets, where provided)



60G049

When the driver doesn’t buckle his or her seat belt, this light will come on. For details about the seat belt reminder, refer to “Seat Belts and Child Restraint Systems” in the “BEFORE DRIVING” section.

## “AIR BAG” LIGHT (for versions/markets, where provided)



63J030

This light blinks or comes on for several seconds when the ignition switch is turned to the “ON” position so you can check if the light is working.

The light will come on and stay on if there is a problem in the air bag system or the seat belt pretensioner system (for versions/markets, where provided).



### WARNING

*If the “AIR BAG” light does not blink or come on briefly when the ignition switch is turned to the “ON” position, stays on for more than 10 seconds, or comes on while driving, the air bag system or the seat belt pretensioner system (for versions/markets, where provided) may not work properly. Have both systems inspected by an authorized Fiat Dealership.*


## TRANSAXLE WARNING LIGHT (for versions/markets, where provided)



81A262

This light comes on for several seconds when the ignition switch is turned to the “ON” position so you can check the light is working. If this light comes on, there is the problem with the transaxle system. Ask your Fiat Dealership to have the system inspected.

## MALFUNCTION INDICATOR LIGHT

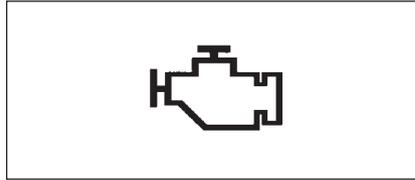

65D530

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument cluster to indicate when it is necessary to have the emission control system serviced. The malfunction indicator light comes on when the ignition switch is turned to the “ON” position to let you know the light is working and goes out when the engine is started.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system. Bring the vehicle to your FIAT dealer to have the damage fixed.

**IMPORTANT** Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle’s emission control system, and can affect fuel economy and driveability.

## FIAT CODE SYSTEM LIGHT (IMMOBILIZER)

(for versions/markets, where provided)



65D239

When the ignition switch is turned to the “ON” position, this light comes on to let you know the light is working.

If this light blinks with the ignition switch turned to “ON”, the engine will not start.

**NOTE** If this light blinks, turn the ignition switch to the “LOCK” position, then turn it back to the “ON” position. If the light still blinks with the ignition switch turned to the “ON” position, there may be something wrong with the immobilizer system. Ask to you Fiat Dealership to inspect the system.

## OPEN DOOR WARNING LIGHT



54G391

This light remains on until all doors (including the rear door) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

## LOW FUEL WARNING LIGHT



54G343

If this light comes on, fill the fuel tank immediately.

When this light comes on, a ding sounds once to remind you to fill the fuel. If you do not fill the fuel, a ding sounds every time when the ignition switch is turned to "ON".

**NOTE** The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

## ELECTRIC POWER STEERING LIGHT

(for versions/markets, where provided)




79J039

This light comes on when the ignition switch is turned to the "ON" position, and goes out when the engine is started.

If this light comes on while driving, the power steering system may not work properly. Have the system inspected by your Fiat Dealership.

## ILLUMINATION INDICATOR LIGHT

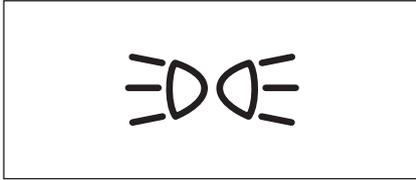


64J045

This indicator light comes on while the position lights, tail light and/or the headlights are on.

## REAR FOG LIGHT INDICATOR LIGHT


(for versions/markets, where provided)

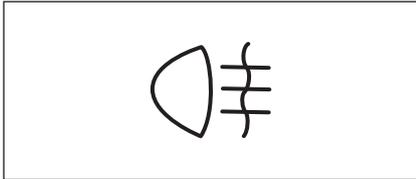

54Q491

The rear fog light indicator light comes on when the rear fog light operates.


## TURN SIGNAL INDICATORS

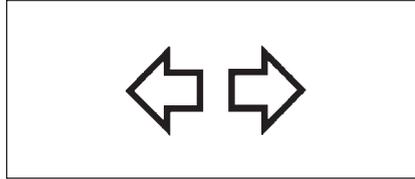

50G055

When you turn on the left or right turn signals, the corresponding green arrow on the instrument cluster will flash along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will flash along with all of the turn signal lights.

## MAIN BEAM (HIGH BEAM) INDICATOR LIGHT

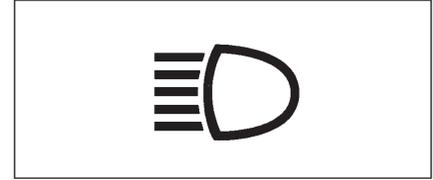

50G056

This indicator comes on when headlight main beams (high beams) are turned on.

## 4WD AUTO INDICATOR LIGHT (for versions/markets, where provided)



79J040

When the ignition switch is turned to the "ON" position, the light comes on briefly so you can check that the light is working. When the 2WD/4WD switch is in the "4WD AUTO" mode with the ignition switch in the "ON" position, the light comes on and stays on.

If the light and the "4WD LOCK" indicator light stay on or come on simultaneously when driving, there may be something wrong with the 4WD system. Have the system inspected by an authorized Fiat Dealership.

If the oil temperature of the parts for 4WD system is high, this light will blink. The "4WD AUTO" or "4WD LOCK" mode will be changed to the "2WD" mode automatically to prevent a damage of the parts for 4WD system.

For details, refer to "Using the 2WD/4WD Switch" in the "OPERATING YOUR VEHICLE" section.

**NOTE** If you restart the engine, the light will stop blinking temporarily.

**NOTE** When the vehicle speed is increased, the "4WD LOCK" mode will be changed to the "4WD AUTO" mode automatically. The "4WD AUTO" indicator light will come on and stay on.

## 4WD LOCK INDICATOR LIGHT (for versions/markets, where provided)



79J100

When the ignition switch is turned to the "ON" position, this light comes on briefly so you can check that the light is working.

The light comes on when the 2WD/4WD switch is changed to the "4WD LOCK" mode from the "4WD AUTO" mode.

If the light and the "4WD AUTO" indicator light stay on or come on simultaneously when driving, there may be something wrong with the 4WD system. Have the system inspected by an authorized Fiat Dealership.

## NOTE


- When the vehicle speed is increased, the "4WD LOCK" mode will be changed to the "4WD AUTO" mode automatically. The "4WD AUTO" indicator light will come on and stay on.
- When the ignition switch is turned to the "OFF" position, the "4WD LOCK" mode is canceled.

For details of the "4WD LOCK" mode, refer to "Using the 2WD/4WD Switch" in the "OPERATING YOUR VEHICLE" section.

**IMPORTANT** Do not operate your vehicle in "4WD LOCK" mode on dry hard surfaces.

## SPEEDOMETER

The speedometer indicates vehicle speed in km/h and/or mph.

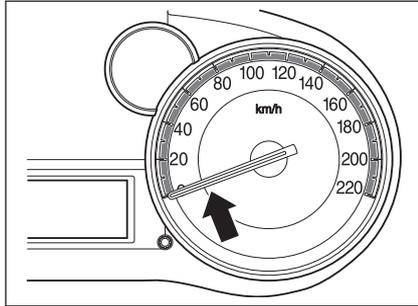


79JM020

## TACHOMETER

The tachometer indicates engine speed in revolutions per minute.

**IMPORTANT** Never drive the vehicle with the engine revving in the red zone, or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position. Refer to “Downshifting maximum allowable speeds” in the “OPERATING YOUR VEHICLE” section.

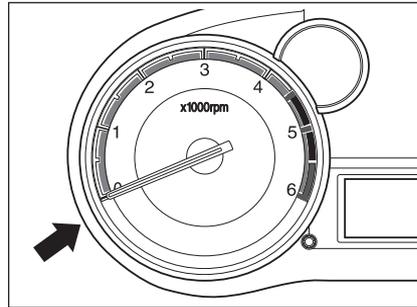


79JM001

The maximum engine speed is limited to approx. 5000 rpm by the fuel cut-off control when pressing the accelerator pedal with lever in “P” (Parking) or “N” (Neutral).

## FUEL GAUGE

When the ignition switch is in the “ON” position, this gauge gives an approximate indication of the amount of fuel in the fuel tank. “F” stands for full and “E” stands for empty.

If the indicator gets off the graduation of “E” (not character “E”), refill the tank as soon as possible.

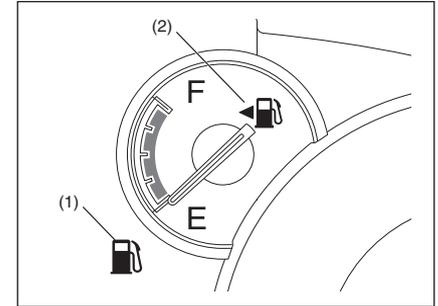

80JM102

**NOTE** The indicator moves a little depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

If the low fuel warning light (1) comes on, fill the fuel tank immediately.


When the low fuel warning light (1) comes on, a ding sounds once to remind you to fill the fuel.

If you do not fill the fuel, a ding sounds every time when the ignition switch is turned to "ON".

**NOTE** The activation point of the low fuel warning light (1) varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel moving in the tank.

The mark (2) indicates that the fuel filler door is located on the left side of the vehicle.

## TEMPERATURE GAUGE

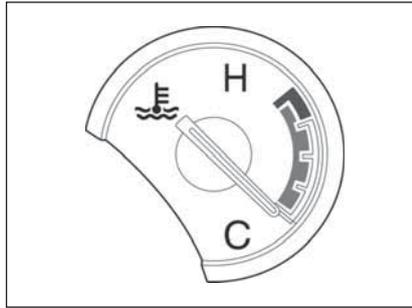

79JMG004

When the ignition switch in ON position, this gauge shows the engine coolant temperature. In standard driving conditions, the gauge must be in the standard and acceptable temperature range between "H" and "C". If the gauge approaches "H", the engine is overheated. Follow the instructions for engine overheating in the "IN AN EMERGENCY" section.

**IMPORTANT** Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

## INFORMATION DISPLAY

When the ignition switch is in the “ON” position, the information display shows the following information.

### Display (A)

Instantaneous fuel consumption

### Display (B)

Trip meter / Average fuel consumption / Driving range / Thermometer

### Display (C)


Transaxle selector position indicator (for automatic transaxle)

### Display (D)

Odometer/Illumination control setting

### Display (E)

Clock (for versions/markets, where provided)

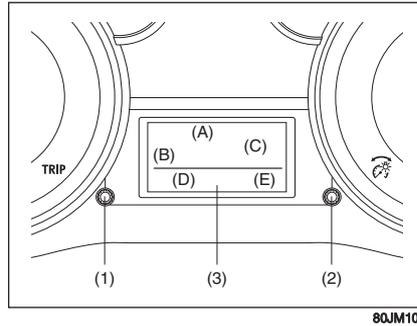


80JM104

1. Trip meter selector knob
2. Indicator selector knob
3. Information display

### Instantaneous Fuel Consumption


The display (A) shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

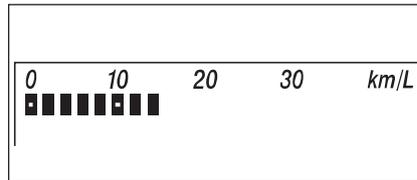

80JM081


### NOTE

- The display does not show the bar graph unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L or MPG.
- For “L/100km” or “km/L” setting, the indicated maximum value of instantaneous fuel consumption is 30. No more than 30 will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- For “MPG” setting, the indicated maximum value of instantaneous fuel consumption is 80. No more than 80 will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.
- For “L/100km” or “km/L” setting, you can change the units that instantaneous fuel consumption is displayed in. Refer to “Average fuel consumption” in this section.

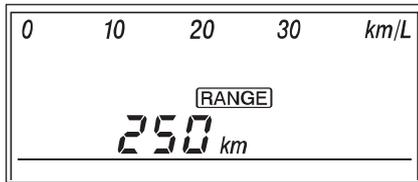

80JM105

- Change the display **(B)** to the driving range by pushing the indicator selector knob **(2)**.

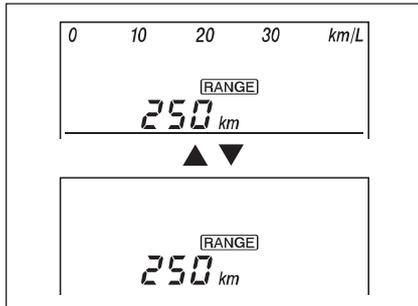

80JM106

- While pushing and holding the trip meter selector knob **(1)**, turn the indicator selector knob **(2)** to turn off or on the indication of instantaneous fuel consumption.



### WARNING

*Do not attempt to adjust the display while driving.*


*If you attempt to adjust the display while driving, you could lose control of the vehicle.*

**NOTE** When you reconnect the negative (-) terminal to the battery, the indication of the instantaneous fuel consumption will be reinitialized. Change the indication again to your preference.

### Trip meter / Average Fuel Consumption / Driving Range / Thermometer

When the ignition switch is in “ON” position, the display **(B)** shows one of the following: trip meter A, trip meter B, average fuel consumption, range, temperature gauge.

To switch the display indication **(B)**, push the trip meter selector knob **(1)** or the indicator selector knob **(2)** quickly.

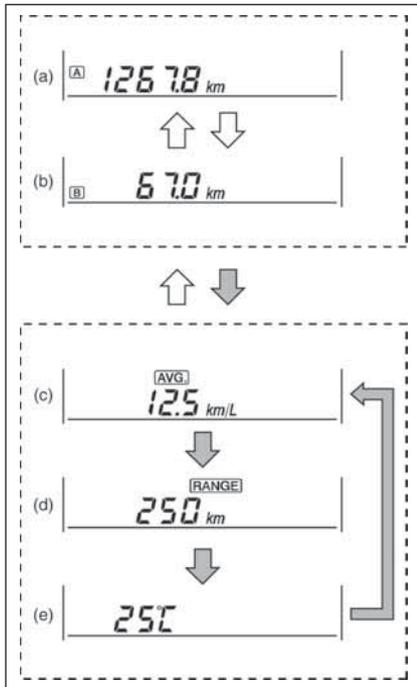

79JMG006

	Push the trip meter selector knob (1).
	Push the indicator selector knob (2).

- a. Trip meter A
- b. Trip meter B
- c. Average fuel consumption
- d. Driving range
- e. Thermometer



### WARNING

**Do not attempt to adjust the display while driving.**

**If you attempt to adjust the display while driving, you could lose control of the vehicle.**

### NOTE

- Indications will change when you push and release a knob.
- The display shows estimated values. Indications may not be the same as actual values.

## Trip meter

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use the trip meter A or trip meter B independently.

To reset the trip meter to zero, push and hold the trip meter selector knob (1) for a while when the display shows the trip meter.

**NOTE** The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

## Average fuel consumption


If you selected average fuel consumption the last time you drove the vehicle, the display shows the last value of average fuel consumption from previous driving when the ignition switch is turned to the "ON" position. Unless you reset the value of average fuel consumption, the display indicates the value of average fuel consumption which includes average fuel consumption during previous driving.

To reset the average fuel consumption to zero, push and hold the indicator selector knob (2) for a while when the display shows the average fuel consumption.

**NOTE** When you reset the indication or reconnect the negative (-) terminal to the battery, the value of average fuel consumption will be shown after driving for a while.

(For "L/100km" or "km/L" setting)

To change the unit of average fuel consumption, while pushing and holding the trip meter selector knob (1), turn the indicator selector knob (2).

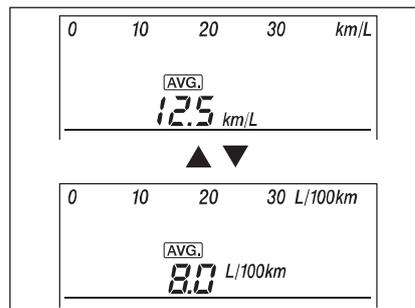

80JM137

**NOTE** Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as km/L or L/100km.

### NOTE

- When you change the units that average fuel consumption is displayed in, the instantaneous fuel consumption units will be changed automatically.
- When you reconnect the negative (-) terminal to the battery, the unit of the average fuel consumption will be reinitialized. Change the unit again to your preference.

## Driving range

If you selected driving range the last time you drove the vehicle, the display indicates “---” for a few seconds and then indicates the current driving range when the ignition switch is turned to the “ON” position.

The driving range shown in the display is the approximate distance you can drive until the fuel gauge indicates “E”, based on current driving conditions.


When the low fuel warning light comes on, the display “---” will appear.

If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

As the driving range after refueling is calculated based on the most recent driving condition, the value is different each time you refuel.

**NOTE** If you refuel when the ignition switch is in the “ON” position, the driving range may not indicate the correct value.

When you reconnect the negative (–) terminal to the battery, the value of driving range will be shown after driving for a while.

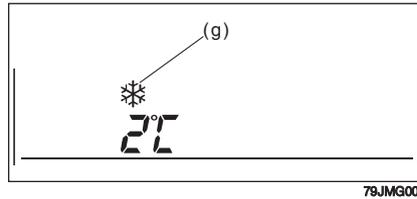

## Thermometer

The thermometer indicates the outside temperature.


If the outside temperature nears freezing, the mark (f) will appear on the display.

**NOTE** The outside temperature indication is not the actual outside temperature when driving at low speed, or when stopped.

If there is something wrong with the thermometer, or just after the ignition switch is turned to the “ON” position, the display may not indicate the outside temperature.

The mark (f) will appear whenever the outside temperature is near freezing, even if the display does not show the thermometer.

To change the unit of temperature, while pushing and holding the trip meter selector knob (1), turn the indicator selector knob (2).

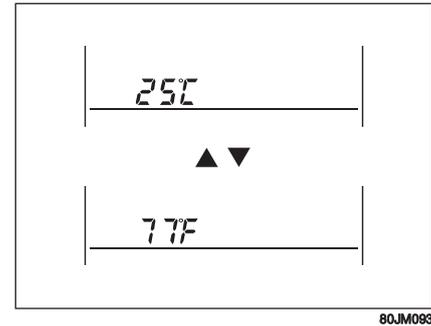

**NOTE** When you reconnect the negative (–) terminal to the battery, the unit of temperature will be reinitialized. Change the unit again to your preference.

## Transaxle selector position indicator (for automatic transaxle)



When the ignition switch is in the “ON” position, the display (C) indicates the gear position (h).

For details on how to use the transaxle, refer to “Using the Transaxle” in the “OPERATING YOUR VEHICLE” section.

## Odometer / Illumination Control Setting

When the ignition switch is in the “ON” position, the display (D) shows the odometer.

If you turn the indicator selector knob (2) clockwise or counterclockwise, the display will change to the illumination control setting.

## Odometer

The odometer records the total distance the vehicle has been driven.

**IMPORTANT** Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

## Illumination control setting

When the starting device is “ON”, the instrument panel lights switch on.



The vehicle is equipped with a system which automatically reduces the brightness of the instrument panel when the headlamps or side lights are turned on.

The brightness of the instrument panel can be changed independently of the headlamps or side lights being on.

To increase the brightness of the instrument panel lights, rotate the display selection knob (2) clockwise.

To decrease the brightness of the instrument panel lights, rotate the display selection knob (2) anticlockwise.

The change in brightness is signalled by the symbol (1) on the instrument panel lighting up.

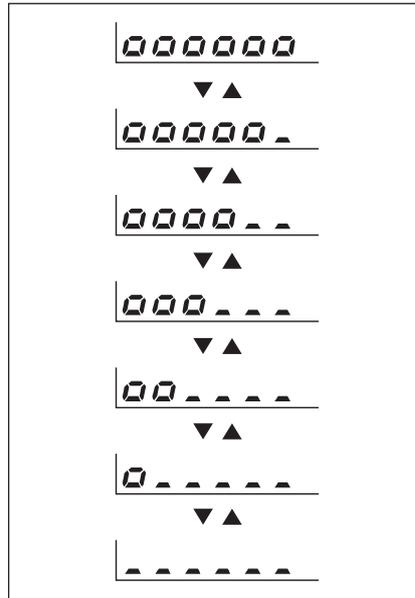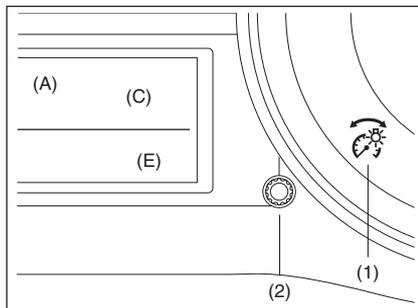

## NOTE

- If you push the indicator selector knob or do not turn the knob for more than 5 seconds while activating the illumination control, the illumination control will be canceled automatically and the display (D) will show the odometer indication.
- You can change the brightness when the position lights or headlights are on even if the ignition switch is in the “ACC” or “LOCK” position.
- When you reconnect the negative (-) terminal to the battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.

NOTE If you select the highest brightness level when the position lights or headlights are on, the instrument panel lights are not dimmed.

**Clock** (for versions/markets, where provided)

When the ignition switch is in the “ON” position, the display (E) shows the time.

To change the time indication:

- Push the trip meter selector knob (1) and the indicator selector knob (2) together.

**WARNING**  
**Do not attempt to adjust the display while driving.**  
**If you attempt to adjust the display while driving, you could lose control of the vehicle.**

- ❑ To change the hour indication, turn the indicator selector knob (2) left or right repeatedly when the hour indication flashes. To change the hour indication quickly, turn and hold the indicator selector knob (2). To set the hour indication, push the indicator selector knob (2) and the minute indication will flash.
- ❑ To change the minute indication, turn the indicator selector knob (2) left or right repeatedly when the minute indication flashes. To change the minute indication quickly, turn and hold the indicator selector knob (2). To set the minute indication, push the indicator selector knob (2).



### WARNING


**Do not attempt to adjust the display while driving.**

**If you attempt to adjust the display while driving, you could lose control of the vehicle.**

## HAZARD WARNING SWITCH

Push in the hazard warning switch to activate the hazard warning lights. All four turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again.

Use the hazard warning lights to warn other traffic during emergency parking or when your vehicle could otherwise become a traffic hazard.

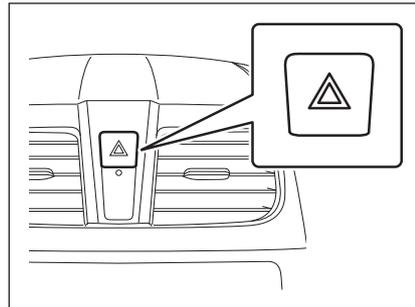


80JM041

## FRONT FOG LIGHT SWITCH

(for versions/markets, where provided)

The front fog light comes on when the fog light switch is pushed in with the head light switch turned to the second and/ or third position. An indicator light above the switch will be lit when the front fog light is on.

**NOTE** In some countries the lighting operation may be different from the above description according to local regulations.

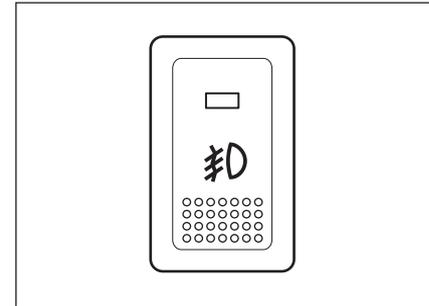

64J058

**NOTE** When you reconnect the negative (-) terminal to the battery, the clock indication will be reinitialized. Change the indication again to your preference.


## ACCESSORY SOCKET

(for versions/markets, where provided)

The accessory socket will work when the ignition switch is in the “ACC” or “ON” position.

This socket can be used to provide 12 volt/120 watt power for electrical accessories.

**NOTE** Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system. Make sure that any electrical accessories you use are designed to plug into this type of socket.

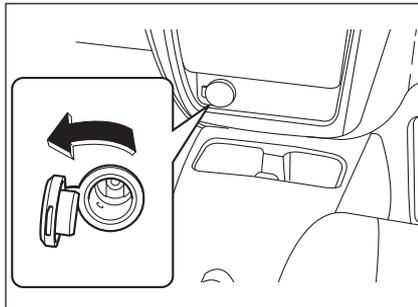

79JF021

## ESP® OFF SWITCH

(for versions/markets, where provided)


ESP® is a registered trademark of Daimler AG.

The ESP® OFF switch is located on the center console. You can turn the ESP® systems (other than ABS) on or off using this switch.

To turn off the ESP® systems (other than ABS), push and hold the ESP® OFF switch until the ESP® OFF indicator light comes on.

To turn on all of the ESP® systems, push the ESP® OFF switch again. The ESP® OFF indicator light will go out.

For details of the ESP® systems, refer to “Electronic Stability Program (ESP®)” in the “OPERATING YOUR VEHICLE” section.

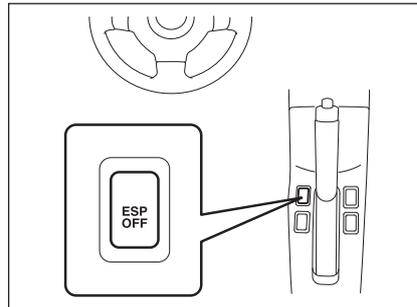


79J180

## 2WD/4WD SWITCH

(for versions/markets, where provided)

The 2WD/4WD switch is located on the center console.

For details on how to use the 2WD/4WD switch, refer to “Using the 2WD/4WD Switch” in the “OPERATING YOUR VEHICLE” section.

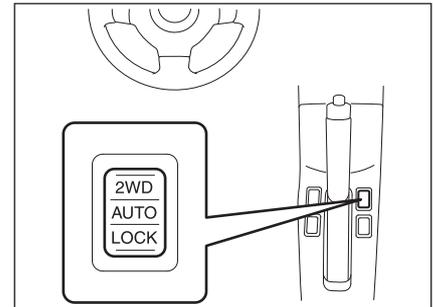

79J177

# HEATED REAR WINDOW AND HEATED OUTSIDE REARVIEW MIRRORS SWITCH


(for versions/markets, where provided)

When the rear window is frosted it is sufficient, with the engine started, to press the button (1) to defrost it.


If the driver's outside rearview mirror has the mark (2), it is also equipped with the heated outside rearview mirrors. When you push the switch (1), both the heated outside rearview mirrors and the heated rear window will operate simultaneously.

An indicator light will be lit when the defogger is on. The defogger will work only when the engine is running. To turn off the defogger, push the switch (1) again.


**IMPORTANT** The heated rear window and the heated outside rearview mirrors (for versions/markets, where provided) use a large amount of electricity. Be sure to turn off after the window and mirrors have become clear.

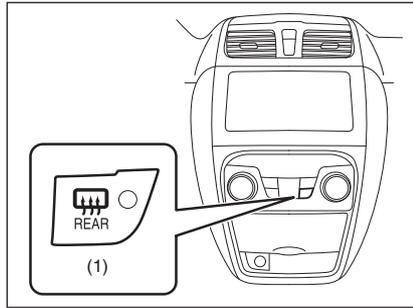

80JM042

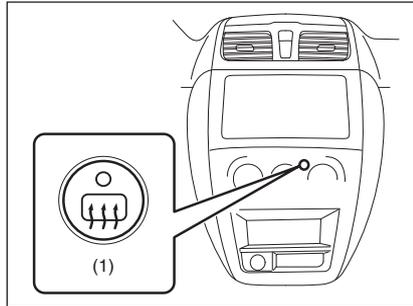

80JM043

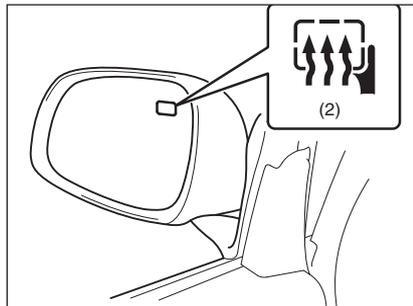

80JC040

## NOTE

- The defogger will work only when the engine is running.
- The defogger will automatically turn off after the defogger remains on for 15 minutes to prevent discharging of the battery.

# HEADLIGHT LEVELING SWITCH

(for versions/markets, where provided)

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart below shows the appropriate switch position for different vehicle-load conditions.

Vehicle Load Condition	Switch Position
Driver only	0
Driver + 1 passenger (in front seat)	0
Driver + 4 passengers, No cargo	1
Driver + 4 passengers, cargo added	2
Driver + full cargo	3


# GLOVE BOX

To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.




## WARNING

**Never drive with the glove box lid open. It could cause injury if an accident occurs.**

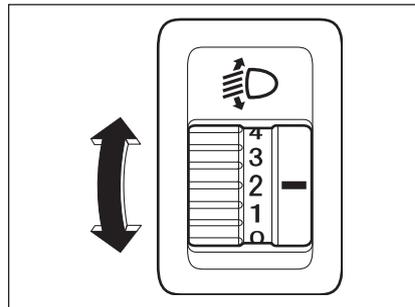

51KM101

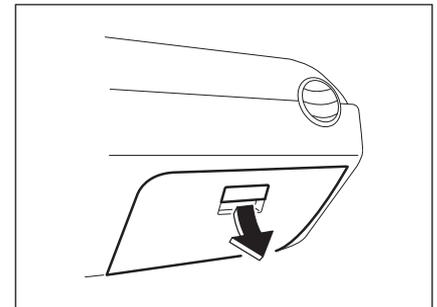

80JP044

## CIGARETTE LIGHTER AND ASHTRAY

(for versions/markets, where provided)

### CIGARETTE LIGHTER

The cigarette lighter will work when the ignition switch is in the “ACC” or “ON” position.

To use the cigarette lighter, push it all the way into the receptacle and release it. It will automatically heat up and will pop out to its normal position when it is ready for use.

**IMPORTANT** To avoid damage to the cigarette lighter socket, do not use it as other accessories’ power source. Some accessories’ power plug can damage the inner mechanism of the cigarette lighter socket.

### ASHTRAY




(for versions/markets, where provided)

You can fit the ashtray into any of the cup holders on the center console.



#### WARNING

**Make sure tobacco is fully extinguished before closing the ashtrays. Never throw waste in the ashtrays: it could create a fire hazard.**

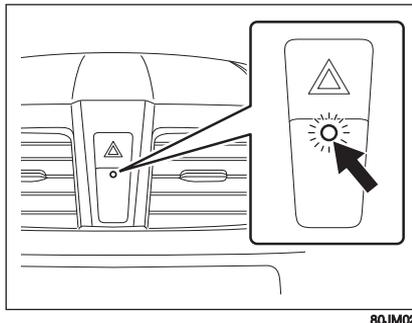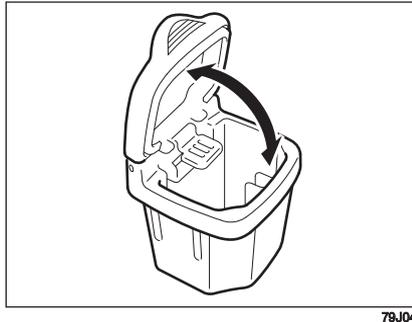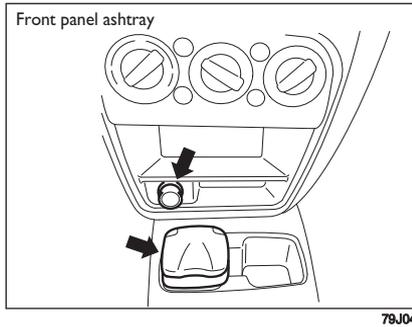


## THEFT DETERRENT LIGHT

This light will blink with the ignition switch in the “OFF” or “ACC” position. The blinking light is intended to deter theft by leading others to believe that the vehicle is equipped with a security system.

## UNIVERSAL SERIAL BUS (USB) SOCKET

(for versions/markets, where provided)

Connect your portable digital music player, etc. to this socket to enjoy music through the vehicle’s audio system using it as a source. Refer to the manual of audio player for further information.

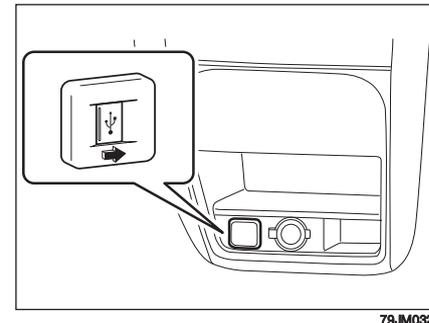

80JM022

79JM032


## HEATING AND AIR CONDITIONING SYSTEM

There are three types of heating and air conditioning systems as follows:


- Heating System
- Manual Heating and Air Conditioning System
- Automatic Heating and Air Conditioning System (Climate Control)

### AIR OUTLET

1. Windshield defroster outlet
2. Side defroster outlet
3. Side outlet
4. Center outlet
5. Floor outlet (for versions/markets, where provided)

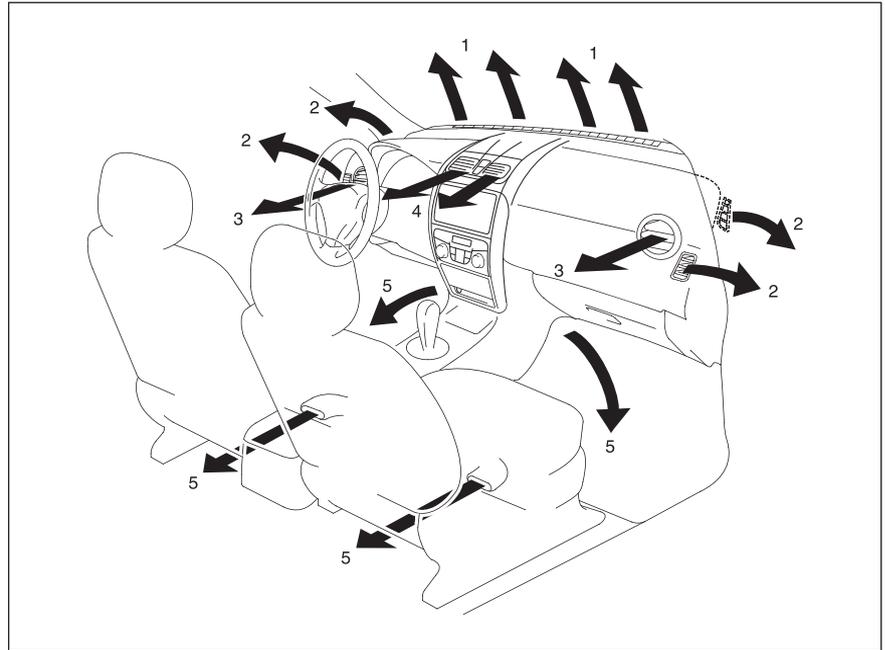

80JM151

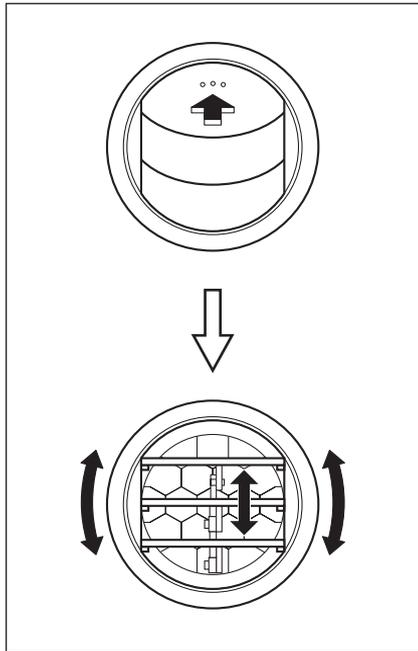

63J045

## SIDE OUTLET

When “Open”, air comes out regardless of the air flow selector position.

## HEATING SYSTEM

(for versions/markets, where provided)


### DESCRIPTION OF CONTROLS

#### Temperature selector (1)


This is used to select the temperature by turning the selector.

#### Blower speed selector (2)

This is used to turn on the blower and to select blower speed by turning the selector.

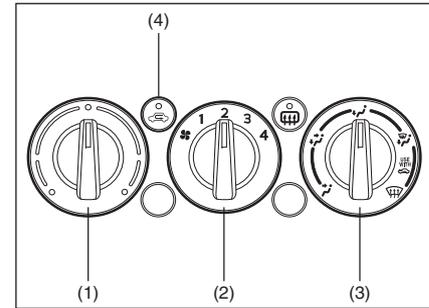


63J193

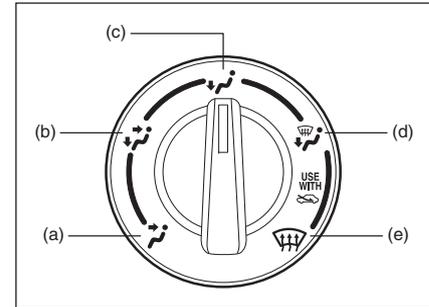

63J048

#### Air flow selector (3)


This is used to select one of the functions described below.

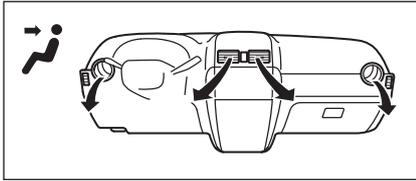

79J065

### Ventilation (a)


Temperature-controlled air comes out of the center and side air outlets.

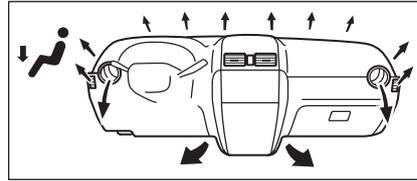

79J067

### Heat (c)


Temperature-controlled air comes out of the floor outlets and the side outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.

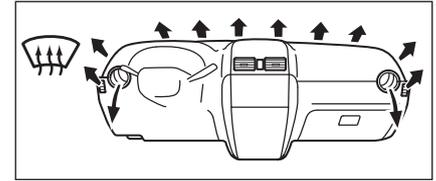

79J068

### Defrost (e)


Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

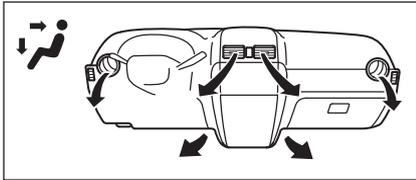

79J066

### Bi-level (b)


Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (I) is in the fully COLD position or fully HOT position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.

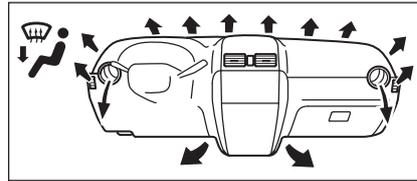

79J068

### Heat & defrost (d)

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

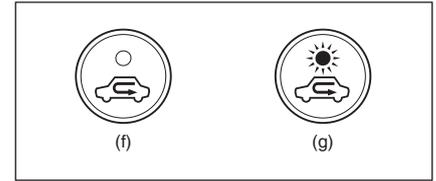

(f)

(g)

63J047

### Air intake selector (4)

This selector is used to select the following modes.

### Fresh Air (f)

When this mode is selected, the indicator light will go off and outside air is used.

## **Recirculated Air (g)**

When this mode is selected, the indicator light will come on, outside air is shut out and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down the interior.

“FRESH AIR” and “RECIRCULATED AIR” are switched alternately each time the air intake selector is pushed.

NOTE If you select “RECIRCULATED AIR” for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select “FRESH AIR”.

## **SYSTEM OPERATING INSTRUCTIONS**

### **Natural ventilation**

Select “VENTILATION” and “FRESH AIR”, the temperature selector to the desired temperature position, and the blower speed selector to “OFF”. Fresh air will flow through the vehicle during driving.

### **Forced ventilation**

The control settings are the same as for natural ventilation except you set the blower speed selector to a position other than “OFF”.

### **Normal heating (using outside air)**

Select “HEAT” and “FRESH AIR”, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

### **Quick heating (using recirculated air)**

The control settings are the same as for normal heating except you select “RECIRCULATED AIR”. If you use this heating method for an extended period of time, the air in the vehicle can become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

### **Head cooled/Feet warmed heating**


Select “BI-LEVEL” and “FRESH AIR”, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully COLD position or fully HOT position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

### **Defrosting/Feet warmed heating**

Select “HEAT & DEFROST” and “FRESH AIR”, the temperature selector to the desired temperature position, and the blower speed selector to HIGH. When the windshield has become clear, set the blower speed selector to the desired blower speed position.

### **Defrosting**

Select “DEFROST” and “FRESH AIR”, the temperature selector to the desired temperature position (higher temperature provides more efficient defrosting), and the blower speed selector to HIGH. When the windshield has become clear, set the blower speed selector to the desired blower speed position.

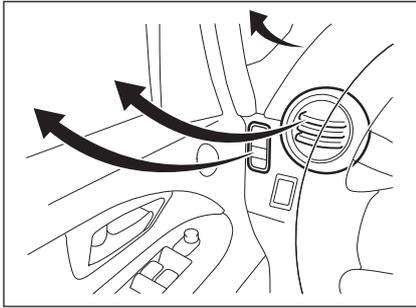

79J070

**NOTE** If you need maximum defrosting, adjust the temperature selector to the **HOT** end and adjust the side outlets so the air blows on the side window, in addition to the above Defrosting steps.

## MANUAL HEATING AND AIR CONDITIONING SYSTEM

(for versions/markets, where provided)


### DESCRIPTION OF CONTROLS

#### Temperature selector (1)


This is used to select the temperature by turning the selector.

#### Blower speed selector (2)

This is used to turn on the blower and to select blower speed by turning the selector.

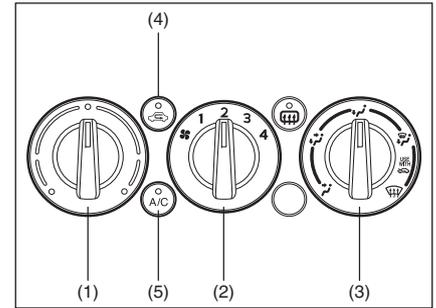


79J108

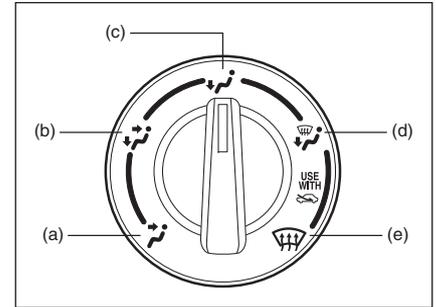

63J048

#### Air flow selector (3)


This is used to select one of the functions described below.

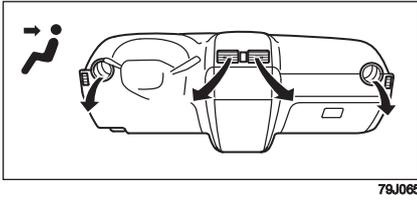

79J065

### Ventilation (a)


Temperature-controlled air comes out of the center and side air outlets.

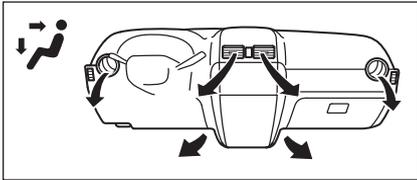

79J066

### Bi-level (b)


Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (I) is in the fully COLD position or fully HOT position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.

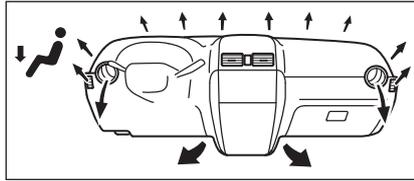

79J067

### Heat (c)


Temperature-controlled air comes out of the floor outlets and the side outlets, also comes out of the windshield defroster outlets and the side defroster outlets slightly.

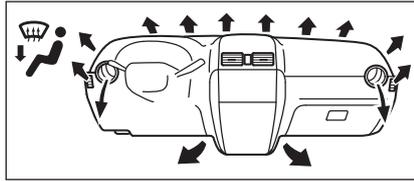

79J068

### Heat & defrost (d)


Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

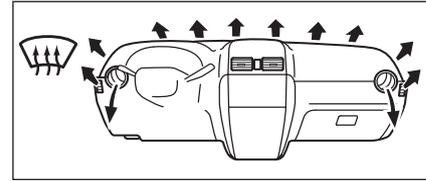

79J069

### Defrost (e)

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

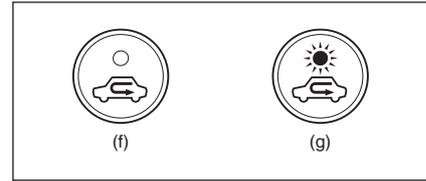

63J047

### Air intake selector (4)

This selector is used to select the following modes.

### Fresh Air (f)

When this mode is selected, the indicator light will go off and outside air is used.

### **Recirculated Air (g)**

When this mode is selected, the indicator light will come on, outside air is shut out and inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down the interior.

“FRESH AIR” and “RECIRCULATED AIR” are switched alternately each time the air intake selector is pushed.

**NOTE** If you select “RECIRCULATED AIR” for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select “FRESH AIR”.

### **Air conditioning switch (5)**

To turn on the air conditioning system, set the blower speed selector to a position other than “OFF” and push in the “A/C” switch. With this “A/C” switch operation, a indicator light will come on when the air conditioning system is on. To turn off the air conditioning system, push the “A/C” switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

## **SYSTEM OPERATING INSTRUCTIONS**

### **Natural ventilation**

Select “VENTILATION” and “FRESH AIR”, the temperature selector to the desired temperature position, and the blower speed selector to “OFF”. Fresh air will flow through the vehicle during driving.

### **Forced ventilation**

The control settings are the same as for natural ventilation except you set the blower speed selector to a position other than “OFF”.

### **Normal heating (using outside air)**

Select “HEAT” and “FRESH AIR”, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

### **Quick heating (using recirculated air)**

The control settings are the same as for normal heating except you select “RECIRCULATED AIR”. If you use this heating method for an extended period of time, the air in the vehicle can become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

### Head cooled/ Feet warmed heating

Select “BI-LEVEL” and “FRESH AIR”, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully COLD position or fully HOT position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

### Normal cooling

Set the air flow selector to “VENTILATION”, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on the “A/C” switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either “FRESH AIR” or “RECIRCULATED AIR” as you desire. Choosing “RECIRCULATED AIR” increases cooling efficiency.

### Quick cooling (using recirculated air)


The control settings are the same as for normal cooling except you select “RECIRCULATED AIR” and the highest blower speed.

#### NOTE

- If you select “RECIRCULATED AIR” for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select “FRESH AIR”.
- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at “FRESH AIR” and the blower at high speed.

### Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select “FRESH AIR” and turn on the “A/C” switch.

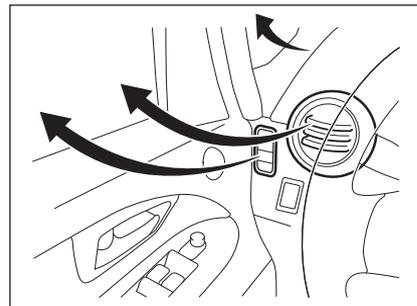

78J070

**NOTE** Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using the “DEFROST” or “HEAT & DEFROST” functions.

**NOTE** If you need maximum defrosting:

- select “DEFROST” and “FRESH AIR”,
- set the blower speed selector to HIGH,
- adjust the temperature selector to the HOT end,
- turn on the “A/C” switch, and
- adjust the side outlets so the air blows on the side windows.

## **MAINTENANCE**

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

Your air conditioner is equipped with air filters. Clean or replace them as specified in the “Maintenance Schedule” in the “INSPECTION AND MAINTENANCE” section. Have this job done by your Fiat Dealership as the lower glove box must be lowered for this job.

**NOTE** Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called “R-134a”. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.


**IMPORTANT** Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

## **AUTOMATIC HEATING AND AIR CONDITIONING SYSTEM (Climate Control)**


(for versions/markets, where provided)

### **DESCRIPTION OF CONTROLS**

1. Temperature selector
2. Blower speed selector
3. Air intake selector
4. Air flow selector
5. Defrost switch
6. “OFF” switch
7. Air conditioning switch
8. “AUTO” switch
9. Display

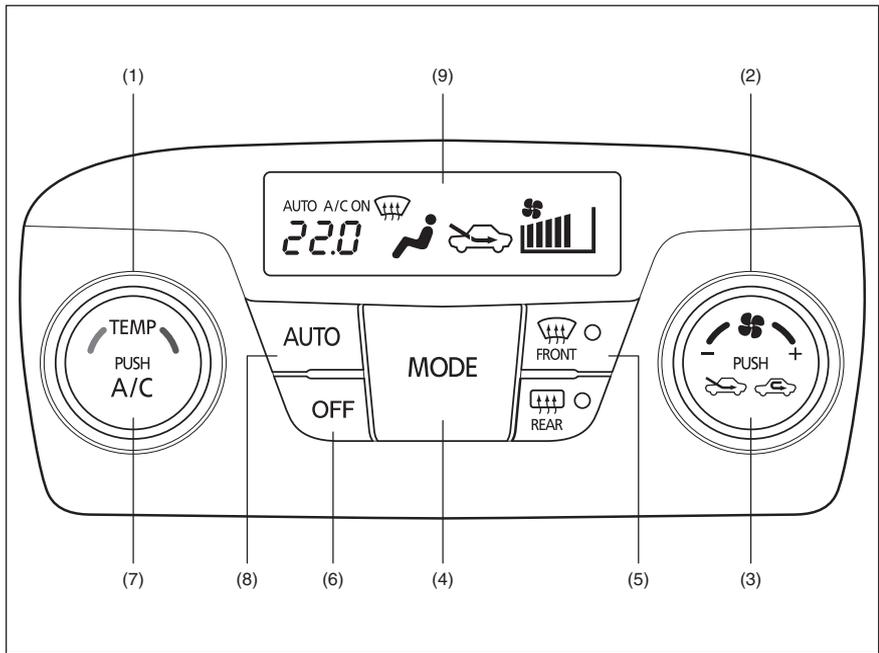

79JF008

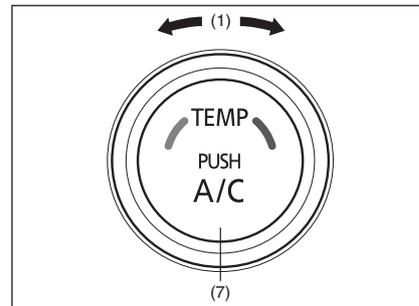

79JF013


### Temperature selector (1)

Turn the temperature selector (1) to adjust the temperature.

### Air conditioning switch (7)

The air conditioning switch (7) is used to turn on and off the air conditioning system (with blower "ON", only).

To turn on the air conditioning system, push in the switch and "A/C ON" will appear on the display. To turn off the air conditioning system, push in the switch again and "A/C ON" will go off.

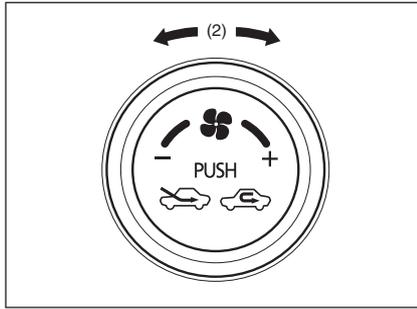


80JM047

### Blower speed selector (2)

The blower speed selector (2) is used to turn on the blower and to select blower speed.

If the “AUTO” switch (8) is pushed, the blower speed will vary automatically as the climate control system maintains the selected temperature.

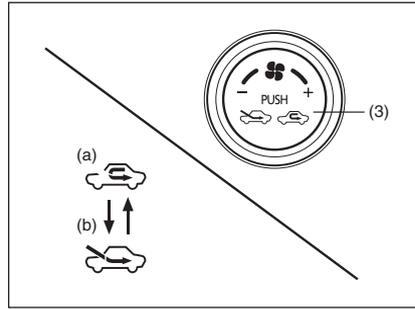

80J2145

### Air intake selector (3)

Push the air intake selector (3) to change between the following modes.

If the “AUTO” switch (8) is pushed, the air intake will vary automatically as the climate control system maintains the selected temperature.

### RECIRCULATED AIR (a)


When this mode is selected, outside air is shut off and inside air is recirculated. This mode is suitable when driving through an area with polluted air such as a tunnel, or when attempting to quickly cool down the vehicle.

### FRESH AIR (b)

When this mode is selected, outside air is introduced.

“FRESH AIR” and “RECIRCULATED AIR” are selected alternately each time the air intake selector is pushed.


**NOTE** If you select “RECIRCULATED AIR” for an extended period of time, the air in the vehicle can become contaminated. Therefore, you should occasionally select “FRESH AIR”.

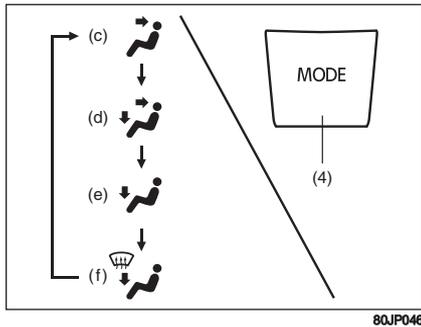

### Air flow selector (4)

Push the air flow selector (4) to change among the following functions. The indication of the selected mode appears on the display.


If the "AUTO" switch (8) is pushed, the air flow will vary automatically as the climate control system maintains the selected temperature.

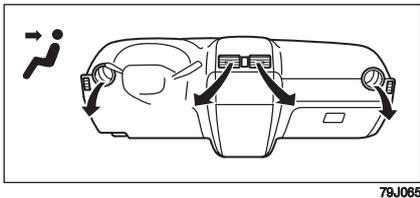

79J065

### Ventilation (c)


Temperature-controlled air comes out of the center and side air outlets.

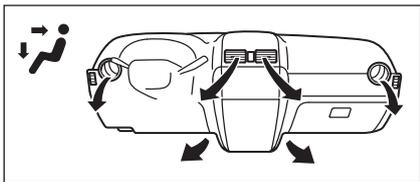

79J066

### Bi-level (d)


Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully COLD position or fully HOT position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.

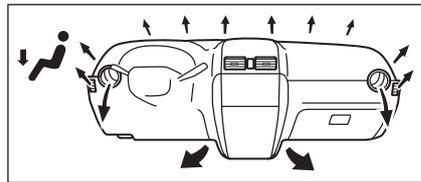

79J067

### Heat (e)


Temperature-controlled air comes out of the floor outlets and the side outlets, a small amount of air comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.

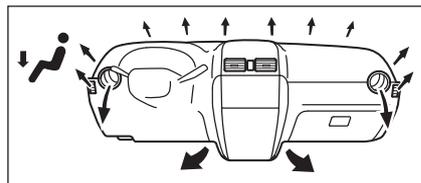

79J068

### Heat & defrost (f)

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

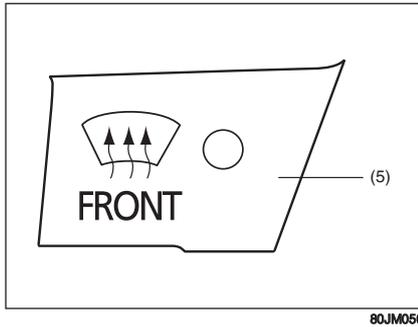


### Defrost switch (5)

Push the defrost switch (5) to turn on the defroster.

### Defrost

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

**NOTE** When the defrost switch (5) is pushed to turn on the defroster, the air conditioning system will come on and the “FRESH AIR” mode will be selected automatically. In very cold weather, however, the air conditioning system will not turn on.

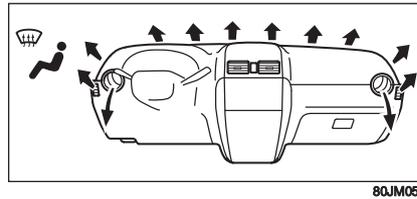


## SYSTEM OPERATING INSTRUCTIONS

### Automatic operation

You can let the climate control system work automatically. To set the system for fully-automatic operation, follow the procedure below.

- Start the engine.
- Push the “AUTO” switch (8).
- Set the desired temperature by turning the temperature selector (1).

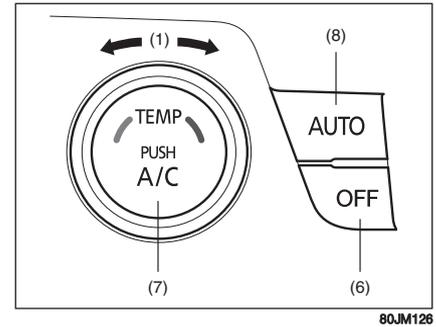

The blower speed, air intake and air flow are controlled automatically to maintain the set temperature.


You can use the air conditioning switch (7) to manually turn the air conditioner on or off according to your preference. When you turn the air conditioning switch off, the climate control system cannot lower the inside temperature below outside temperature.

To turn the climate control system off, push the “OFF” switch (6).

**NOTE** If the “AUTO” on the display blinks, there is a problem in the heating system and/or air conditioning system. You should have the system inspected by an authorized FIAT Dealership.

## NOTE

- To find the temperature at which you are most comfortable, start with the 22°C (72°F) setting.
- If you turn the temperature selector (1) until “HI” or “LO” appears on the display, the climate control system will operate at the maximum cooling or heating and the blower will run at full speed.
- To avoid blowing cold air in cold weather or hot air in hot weather, the system will delay turning on the blower until warmed or chilled air is available.
- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly.
- Even under the automatic operation, you can set individual selectors to the manual mode. The manually selected functions are maintained, and the other functions remain under automatic operation.
- To return the blower speed selector (2), air intake selector (3), and air flow selector (4) to automatic operation, push the “AUTO” switch (8).

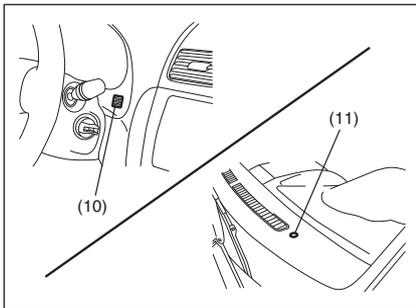

80JM127

Be careful not to cover the interior temperature sensor (10) located between the steering wheel and the climate control panel, or the solar sensor (11) located at the top of the driver's side dashboard.

These sensors are used by the automatic system to regulate temperature.


## Manual operation

You can manually control the climate control system. Set the selectors to the desired positions.

## NOTE

If you need maximum defrosting:

- push the defrost switch (5) to turn on the defroster (the air conditioning system will come on and the “FRESH AIR” mode will be selected automatically),

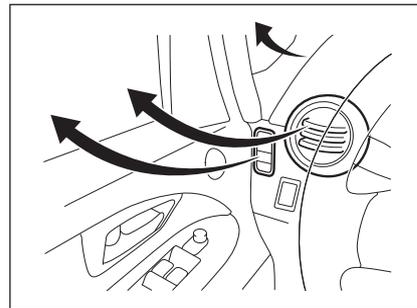

78J070

- set the blower speed selector to HIGH,
- adjust the temperature selector to the “HI” indication on the display,
- adjust the side outlets so the air blows on the side windows.

## MAINTENANCE

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

Your air conditioner is equipped with air filters. Clean or replace them as specified in the “Maintenance Schedule” in the “INSPECTION AND MAINTENANCE” section. Have this job done by your Fiat Dealership as the lower glove box must be lowered for this job.

**NOTE** Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called “R-134a”. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

**IMPORTANT** Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

## AUDIO SYSTEMS




### WARNING

*Too high a volume when driving can put the driver's life at risk and that of other people. Therefore the volume should always be adjusted in such a way that it is always possible to hear the noises of the surrounding environment (e.g.: horns, ambulance, police sirens, etc.).*

### FM/MW/LW CD PLAYER WITH CD CHANGER CONTROL

#### PRECAUTIONS

- When the inside of the vehicle is very cold and the player is used soon after switching on the heater, moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour, this will allow the condensation to disappear normally.

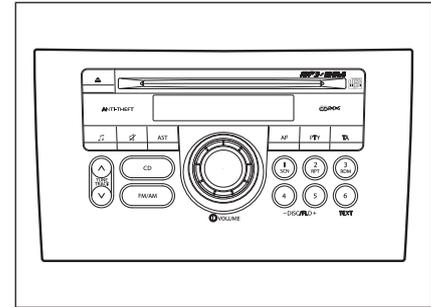

79J188

- Driving on extremely bumpy roads which cause severe vibrations may cause sound to skip.
- This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts. Please bring the unit to an authorized Fiat Dealership.




52D274

## CAUTIONS ON HANDLING

This unit has been designed specifically for playback of compact discs bearing the mark **(A)**.

No other discs can be played.

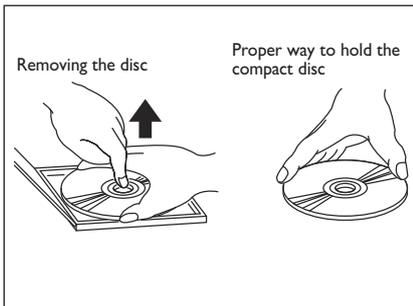


52D275


To remove the compact disc from its storage case, press down on the center of the disc and lift the disc out, holding it carefully by the edges.

Always handle the compact disc by the edges.

Never touch the surface.

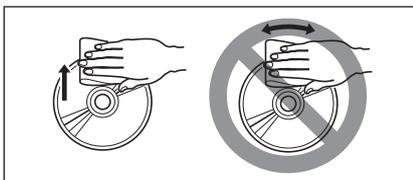


To remove fingermarks and dust, use a soft cloth, and wipe in a straight line from the center of the compact disc to the circumference.

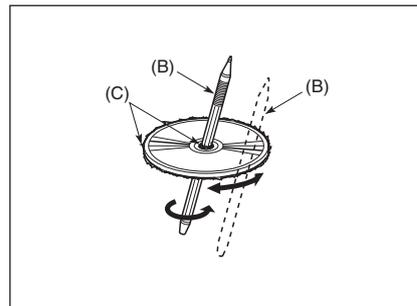


52D277

New discs may have some roughness around the edges. The unit may not work or the sound may skip if such discs are used. Use a ball-point pen **(B)**, etc. to remove the roughness **(C)** from edges of the disc before insertion inside the unit.

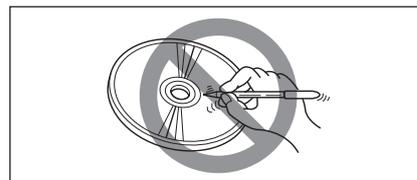


Never stick labels on the surface of the compact disc or mark the surface with a pencil or pen.

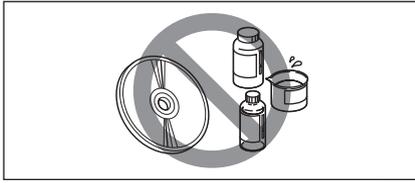


52D349

Do not use any solvents such as commercially available cleaners, anti-static spray, or thinner to clean compact discs.

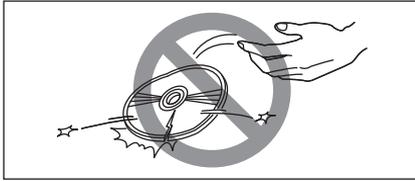

52D350

Do not use compact discs that have large scratches, are misshaped, or cracked, etc. Use of such discs will cause damage or prevent the system from operating properly.

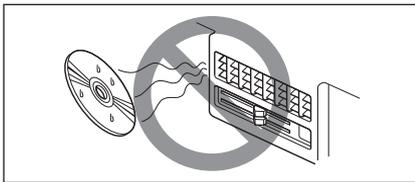

52D351

Do not expose compact discs to direct sunlight or any heat source.

## NOTE


- Do not use commercially available CD protection sheets or discs equipped with stabilizers, etc. These may get caught in the internal mechanism and damage the disc.
- CD-R discs may not be able to playback in this unit due to the recording conditions.
- CD-RW discs can not playback in this unit.



52D274

## LISTENING TO A CD

- CDs or CD-ROMs carrying no mark **(A)** cannot be used.
- Some discs previously recorded in CD-R/CD-RW format may not be used.

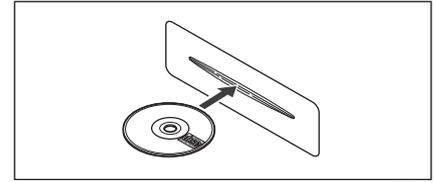


52D291

- A CD is inserted with its label facing upward.
- When there is a CD already loaded in the unit, another CD cannot be loaded at the same time. Do not use force when inserting the CD into the CD insertion slot.
- If a blank disc (non recorded CD-R) is loaded in the unit, the disc will be ejected.

## IMPORTANT

- Never insert your finger or hand into the CD insertion slot. Never insert foreign objects.
- Never insert a CD with glue coming out from adhesive tape or a rental CD label or with a trace indicating that adhesive tape or a rental CD label has been removed. This may cause the CD not to eject or result in a malfunction.

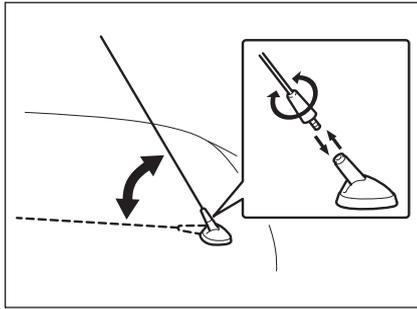

80G143

## RADIO ANTENNA

(for versions/markets, where provided)

The radio antenna at the front of the roof can be folded down and is removable. To fold the antenna rearward, be sure to grip the bottom of antenna. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

**IMPORTANT** To avoid damage to the radio antenna:

- Remove the antenna when using an automatic vehicle wash.
- Remove or fold down the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a vehicle cover over your vehicle.

## GENERAL

1. Power on/ off knob – Volume control knob
2. Mute button
3. Audio control button
4. Up button
5. Down button

### Power On/Off


Press the power on/off knob (1) to switch power on.

Press the power on/off knob (1) again to switch power off.

### Volume Up/Down

Turn the volume control knob (1) clockwise to increase the volume.

Turn the volume control knob (1) counterclockwise to decrease the volume.

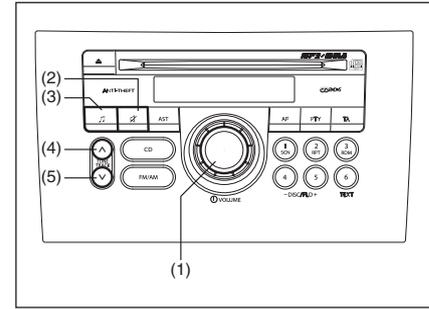

79J189

### Mute On/Off

Press the mute button (2) to temporarily muffle the sound.

Press the mute button (2) again to restore the sound to the preceding level.

### NOTE

- In CD mode, play is temporarily stopped (pause) instead of muting.
- If power is switched off, or if some button is pressed, mute is automatically released.

### Audio Control

Bass / Treble / Balance / Fader can be adjusted.

Press the audio control button (3) to select the desired item.

Each time the audio control button (3) is pressed the selectable items change as follows:

BAS (Bass) / TRE (Treble) / BAL (Balance) / FAD (Fader) / AVC (Auto Volume Control) (only MP3 version)

Pressing the audio control button (3) again releases Audio Control.

Press the up button (4) or the down button (5) to adjust the selected item.

- BAS (Bass)  
(4): To increase bass  
(5): To decrease bass
- TRE (Treble)  
(4): To increase treble  
(5): To decrease treble
- BAL (Balance)  
(4): To decrease the left speaker's volume  
(5): To decrease the right speaker's volume
- FAD (Fader)  
(4): To decrease the rear speaker's volume  
(5): To decrease the front speaker's volume
- AVC (Auto Volume Control) (only MP3 version)  
(4): AVC OFF / AVC1 / AVC2 / AVC3  
(5): AVC3 / AVC2 / AVC1 / AVC OFF

**NOTE** The Auto Volume Control (AVC) function automatically adjusts (increases/decreases) the sound volume in accordance with vehicle speed.

## RADIO

4. Up button
5. Down button
6. FM/AM button
7. Preset button [1] to [6]
8. Auto search button

### Radio Mode

If FM/AM button (6) is pressed when power is off or in other than radio mode, the last station you were listening to is received.

### Band


Each time FM/AM button (6) is pressed in radio mode, the bands change as follows:

FM1 / FM2 / LW / MW1 / MW2 / (FM1)

### Manual Tuning

The frequencies can be adjusted by pressing the up button (4) or the down button (5).

- (4): Higher frequency
- (5): Lower frequency

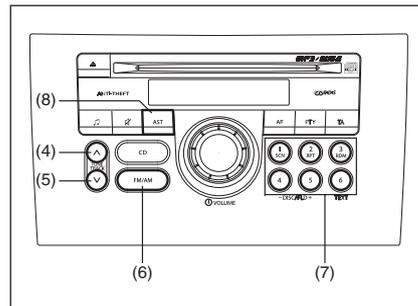

79J190

### Auto Tuning

If the up button (4) or the down button (5) is released after pressing it for about 1 second or more, the unit searches for a station till it receives one.

(4): Higher frequency

(5): Lower frequency

**NOTE** If AF is ON, the unit searches for RDS stations only.

## Manual Preset

If any of the preset buttons (7) with numbers [1] to [6] is pressed for about 2 seconds or more, the station received corresponding to the pressed button is preset.

### NOTE

- Stations can be preset for FM1, FM2, LW, MW1, and MW2 respectively.
- When stations are preset, the new data is written over the old data.

## Auto Preset

By pressing auto search button (8) for about 2 seconds or longer, six stations in good receiving condition on the band now selected can be automatically preset.

### NOTE

- Auto Preset can be released by pressing the auto search button (8) while auto preset is in process.
- Stations can be preset for FM1, FM2, LW, MW1, and MW2 respectively.
- Up to six stations can be preset. If stations in good receiving condition are not found, the number of stations preset may be less than six.
- After you have preset stations, the station preset under the button with number [1] is received. If none of stations is found, the unit is reset to the preceding frequency.
- When stations are preset, the new data is written over the old data.
- If AF is ON, only RDS stations are preset.

## Preset Station Calling

By pressing any of the preset buttons (7) with numbers [1] to [6], the corresponding station preset can be received.

NOTE If the button for a station not preset is pressed, the unit displays “- -”.

## RDS (Radio Data System)

1. Power on/off knob – Volume control knob
4. Up button
5. Down button
9. Auto frequency button
10. Traffic announcement button
11. Program type button

### What is RDS?


Some FM stations are broadcasting added data compatible with RDS. This radio set offers convenient functions using such data.

RDS service availability varies with areas.

Please understand the following functions are not available in some areas.

### AF (Alternative Frequency)

The unit searches for a station in better receiving condition that emits the same programme as now received, and automatically selects that station.

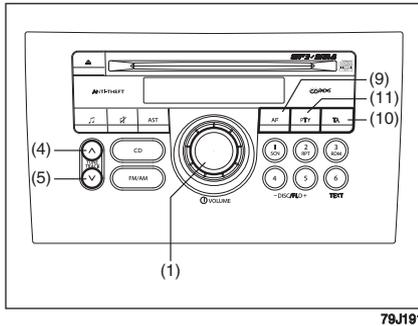

79J191

### REG (Region)

An area in which the AF function may be used to select stations can be set. When REG is ON, the AF function is effective in the present area only.

### PS (Program Service Name)

Instead of the frequency, the name of the broadcast station appears.

### PTY (Program Type)

Programs can be searched for by PTY.

### TA (Traffic Announcement)

The unit can search for stations emitting TP (traffic programmes), and tune in to such stations in preference to others. Stations emitting TP are called TP stations.

### EON (Enhanced Other Network)

RDS information is updated constantly in response to the current position.

The “EON” indicator remains lit while RDS information is received.

### Emergency Announcement Reception

Emergency announcements are automatically received and displayed.

### AF/REG On/Off

Each time the auto frequency button (9) is pressed, AF/ REG changes as follows:

AF ON / REG OFF / AF ON/ REG ON / AF OFF / REG OFF / (AF ON/ REG OFF)

The “AF” indicator lights up when AF is ON. In addition to that, the “REG” indicator lights up when REG is ON.

### TA On/off

Press the traffic announcement button (10) to turn TA on.

Press the traffic announcement button (10) again to turn TA off.

When TA is turned on, the “TA” indicator lights.

The “TP” indicator remains lit while TP data is being received.

### NOTE

If the up button (4) or the down button (5) is pressed while TA is turned on, the unit searches for a TP station (TP SEEK).

If TP data is not received in about 20 seconds after TA is turned on, TP SEEK automatically takes place only once.

If no TP station is received, the unit displays “NOTHING”.

### TA Standby

If TP is received when TA is ON in CD or CD changer mode, radio mode is automatically selected. The unit returns to the preceding mode after TP.

## PTY Search

Programs can be searched for by PTY.


- Press the program type button (11) to select PTY mode.
- Turn the volume control knob (1) clockwise to select a desired PTY.

Turning the volume knob (1) clockwise changes the items in the following order. (Turning it counter clockwise changes them in the reverse order.)

NO PTY / NEWS / AFFAIRS / INFO / SPORTS / EDUCATE / DRAMA / CULTURE / SCIENCE / VARIED / POP / ROCK / EASY M / LIGHT M / CLASSICS / OTHER M / WEATHER / FINANCE / CHILDREN / SOCIAL / RELIGION / PHONE IN / TRAVEL / LEISURE / JAZZ / COUNTRY / NATION M / OLDIES / FOLK M / DOCUMENT / (NEWS)

- Press the up button (4) or the down button (5) while PTY is displayed. Search begins.

**NOTE** If the specified PTY is not received, the unit displays “NOTHING”, and then PTY again. If the up button (4) or the down button (5) is pressed, the same PTY is searched for again.

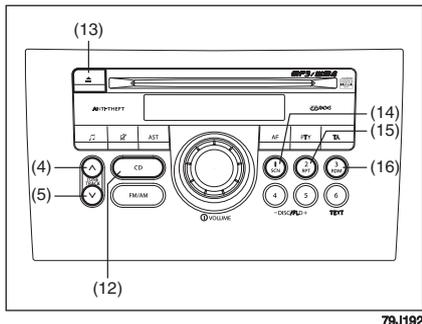

## CD PLAYER

- 4. Up button
- 5. Down button
- 12. CD button
- 13. Eject button
- 14. Scan button
- 15. Repeat button
- 16. Random play button

## CD Mode

CD mode is selected by pressing the CD button (12) when power is off or in other modes

## NOTE

- CD mode is not selected if no CD is in the unit.
- If the mode has changed to CD changer mode, press the CD button (12) again.

## CD Insert/Eject

To insert a CD, make sure that its label side is up.

To eject it, press the eject button (13).

**NOTE** The “CD IN” indicator remains lit while a CD is in the unit. Be careful not to insert a CD when the “CD IN” indicator is lit.

## Track Selection

The desired track can be selected by pressing the up button (4) or the down button (5).

(4): Next track

(5): Preceding track (Press it twice)

## Fast Forward/Fast Reverse

Play speed increases while the up button (4) or down button (5) is kept depressed.

(4): Fast forward

(5): Fast reverse

## NOTE

- When the present track in REPEAT play mode comes to its end, it returns to normal play.
- If Fast Forward is kept to the end of the disc, it returns to the first track.

## SCAN Play

For scan play (playing about 10 seconds of the top of each track), press the scan button (14).

To release scan play, press the scan button (14) again.

The “SCN” indicator remains lit during scan play.

## REPEAT Play

For repeat play (playing the present track repeatedly), press the repeat button (15).

To release repeat play, press the repeat button (15) again.

The “RPT” indicator remains lit during repeat play.

## RANDOM Play

For random play (playing the disc tracks at random), press the random play button (16).

To release random play, press the random play button (16) again.

The “RDM” indicator remains lit during random play.

## CD CHANGER

A CD changer is optional. Consult your Fiat Dealership for details.


4. Up button
5. Down button
12. CD button
14. Scan button
15. Repeat button
16. Random play button
17. Disc up button
18. Disc down button

### CD Changer Mode

If the CD button (12) is pressed when power is off or in other modes, CD changer mode is selected.

### NOTE

- CD changer mode is not selected if the CD changer is not connected, or if no CD is inserted in the unit.
- If the mode has changed to CD mode, press the CD button (12) again.

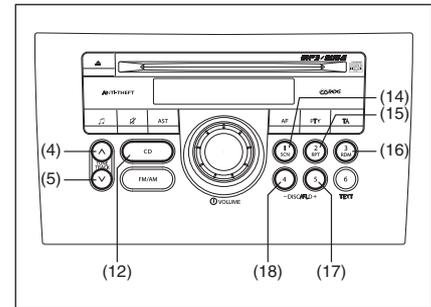

79J183

### Disc Up/Down

The desired disc can be selected by pressing The disc up button (17) or the disc down button (18).

(17) Next disc

(18) Preceding disc

### Track Up/Down

The desired track can be selected by pressing the up button (4) or the down button (5).

(4): Next track

(5): Preceding track (Press it twice)

## Fast Forward/Fast Reverse

Play speed increases while the up button (4) or down button (5) is kept depressed.

(4): Fast forward

(5): Fast reverse

### NOTE

- When the present track in REPEAT play mode comes to its end, it returns to normal play.
- If Fast Forward is kept to the end of the disc, it returns to the first track.

## SCAN Play

### SCAN Play

For scan play (playing about 10 seconds of the top of each track on the present disc), press the scan button (14).

To release scan play, press the scan button (14) again.

The “SCN” indicator remains lit during scan play.

### DISC SCAN Play

For disc scan play (playing about 10 seconds of the top of the first track on each disc), press the scan button (14) for about 1 second or more.

To release disc scan play, press the scan button (14) again.

The “D. SCN” indicator remains lit during disc scan play.

## REPEAT Play

### REPEAT Play

For repeat play (playing the present track repeatedly), press the repeat button (15).

To release repeat play, press the repeat button (15) again.

The “RPT” indicator remains lit during repeat play.

### DISC REPEAT Play

For disc repeat play (playing the present disc repeatedly), press the repeat button (15) for about 1 second or more.

To release disc repeat play, press the repeat button (15) again.

The “D.RPT” indicator remains lit during disc repeat play.

## RANDOM Play

### RANDOM Play

For random play (playing the disc tracks at random), press the random play button (16).

To release random play, press the random play button (16) again.

The “RDM” indicator remains lit during random play.

### DISC RANDOM Play

For disc random play (playing the tracks of all discs at random), press the random play button (16) for about 1 second or more.

To release disc random play, press the random play button (16) again.

The “D.RDM” indicator remains lit during disc random play.


## MP3/WMA PLAYER

(for versions/markets, where provided)

4. File up button
5. File down button
12. CD button
13. Eject button
15. Repeat button
16. Random play button
17. Folder up button
18. Folder down button
20. Text display button

### What is MP3/WMA?

MP3 (MPEG1/2 Audio Layer-II/III) and WMA (Windows Media™ Audio) are the compression formats of digital audio. The former is developed by MPEG (Motion Picture Experts Group), and the latter is developed by Microsoft Corporation. Using these compression formats, you can record the contents of about 10 music CDs on a single CD media (This figure refers to data recorded on a 650 MB CD-R or CD-RW at a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz).

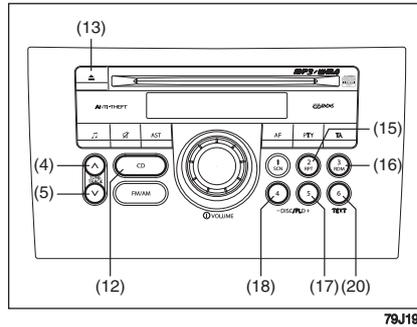

### Points to remember when making MP3/WMA files

#### Common

- High bit rate and high sampling frequency are recommended for high quality sounds.
- Selecting VBR (Variable Bit Rate) is not recommended because playing time is not displayed properly and sound may be skipped.
- The playback sound quality differs depending on the encoding circumstances. For details, refer to the user manual of your own encoding software and writing software.

#### MP3

- It is recommended to set the bit rate to “128 kbps or more” and “fixed”.

#### WMA

- It is recommended to set the bit rate to “64 kbps or more” and “fixed”.
- Do not set the copy protect attribute on the WMA file to enable this unit to play back.

**NOTE** Never assign the “.mp3”, or “.wma” file name extension to a file that is not in the MP3/WMA format. This may not only produce noise from the speaker damage, but also damage your hearing.

### Recording MP3/WMA files on a CD-media

- You are recommended to minimize the chances of making a disc that contains both CD-DA files and MP3/WMA files.
- If CD-DA files are on the same disc as MP3 or WMA files, the songs may not play in the intended order, or some songs may not play at all.
- When storing MP3 data and WMA data on the same disc, use different folders for each data.
- Do not record files other than MP3/WMA files and unnecessary folder on a disc.
- The name of an MP3/WMA file should be added by rules as shown in the following descriptions and also comply with the rules of each file system.

- The file extension “.mp3” or “.wma” should be assigned to each file depending on the file format.
- You may encounter trouble in playing MP3/WMA files or displaying the information of MP3/WMA files recorded with certain writing software or CD recorders.
- This unit does not have a play list function.
- Although Multi-session recording is supported, the use of Disc-at-Once is recommended.

### Compression formats MP3

- Bit rate
  - MPEG1 Audio Layer II : 64k – 320 kbps
  - MPEG1 Audio Layer III : 32k – 320 kbps
  - MPEG2 Audio Layer II : 64k – 320 kbps
  - MPEG2 Audio Layer III : 8k – 160 kbps
- Sampling frequency
  - MPEG1 Audio Layer II/III : 44.1 k/48 k/32 kHz
  - MPEG2 Audio Layer II/III : 22.05 k/24 k/16 kHz

### WMA (Ver.7, Ver.8, Ver. 9\*)

- Bit rate 32 k – 192 kbps
  - Sampling frequency 44.1 k/48 k/32 kHz
- \* WMA 9 Professional/LossLess/Voice are not supported.

### Supported file systems

ISO 9660 Level 1/Level 2, Apple Extension to ISO 9660, Joliet, Romeo

### Maximum number of files/folders

- Maximum number of files: 511 (files + folders)
- Maximum number of files in one folder: 255
- Maximum depth of trees: 8
- Maximum number of folders: 255 (Root folder is included.)

### MP3/WMA Mode

MP3/WMA mode is selected by pressing the CD button (12) when power is off or in other modes.

### NOTE

- MP3/WMA mode is not selected if no MP3/WMA disc is in the unit.
- If the mode has changed to CD changer mode, press the CD button (12) again.

### Disc Insert/Eject

To insert a disc, make sure that its label-side is up. To eject it, press the eject button (13).

NOTE The “CD IN” indicator remains lit while a disc is in the unit. Be careful not to insert a disc when the “CD IN” indicator is lit.

### File Up/Down

The desired file can be selected by pressing the file up button (4) or the file down button (5).

(4): Next file

(5): Preceding file (Press it twice.)

### Folder Up/Down

The desired folder can be selected by pressing the folder up button (17) or the folder down button (18).

(17): Next folder

(18): Preceding folder

### Fast Forward/Fast Reverse

Play speed increases while the button (4) or (5) is kept depressed.

(4): Fast forward

(5): Fast reverse

### NOTE

- When the present file in REPEAT play mode comes to its end, it returns to normal play.
- If Fast Forward is kept to the end of the disc, it returns to the first file.

## Text Display

Each time the text display button (20) is pressed in MP3/ WMA mode, the display change as follows:

Elapsed Time / Folder Name / File Name / (Elapsed Time)

NOTE For scrolling text, hold down the text display button (20) for 2 seconds or more.

## REPEAT Play

For repeat play (playing the present file repeatedly), press the repeat button (15).

To release repeat play, press the repeat button (15) again.

The “RPT” indicator remains lit during repeat play.

## RANDOM Play

For random play (playing the disc files at random), press the random play button (16).

To release random play, press the random play button (16) again.

The “RDM” indicator remains lit during random play.


## ANTI-THEFT SYSTEM (SEC)

1. Power on/ off knob – Volume control knob
4. Up button
11. Program type button
19. Numbered buttons [1] to [4]

You can set up a 4-digit ID to prevent theft. Once you set up the ID, the unit is inoperable without the ID when this unit or the battery is removed.

### NOTE

- If the wrong user ID is entered 10 times, the unit displays “HELP” and cannot be operated.
- If you should forget your user ID, consult your Fiat Dealership.

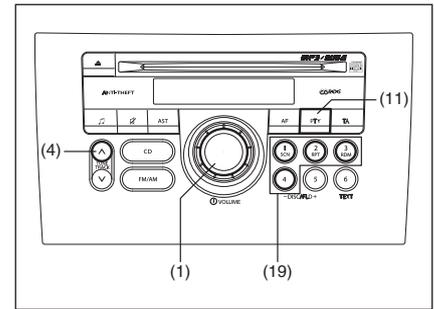

79J195

## User ID Setting

- Press the power on/ off knob (1) to turn off the power.
- With numbered buttons (19) with number [3] and [4] kept depressed at the same time; press the power on/ off knob (1) for about 1 second or more. The unit displays “SEC”.
- With the up button (4) kept depressed, press the numbered button (19) with number [1]. The unit displays “- - - -”.
- Press the numbered buttons (19) with number [1] to [4], and enter the user ID. Each button corresponds to each digit, and the number increases each time the button is pressed. For example, to raise the digit second from the left to 3, press the numbered button (19) with number [2] four times.

- ❑ Press the program type button **(11)** for about 2 second or more to enter. Power is switched off after the unit displays “SEC”. Once the ID is set up, the ID is required at power-on when this unit or the battery has been removed.

### User ID Entry

Once the ID is set up, this unit displays “SEC” to prompt you to enter your user ID when the power is turned on again in the case of removal of this unit or the battery.

The unit cannot be used unless the ID is entered in the following order.

**NOTE** The unit does not display “SEC” when the power is turned on within 20 seconds from the last use.

- ❑ With the up button **(4)** kept depressed, press the numbered button **(19)** with number [1].  
The unit displays “- - - -”.
- ❑ Press the numbered buttons **(19)** with number [1] to [4], and enter the user ID. Each button corresponds to each digit. Enter the stored user ID.
- ❑ Press program type button **(11)** for about 2 second or more to enter. Power is switched off. When you switch the unit back on, it is in radio mode for normal use.

### Erasing User ID

Your stored user ID can be erased. After erasing it, you may set a new user ID. Therefore, you can change your user ID as often as you like.

- ❑ Press the power on/off knob **(1)** to turn off the power.
- ❑ With the numbered buttons **(19)** with numbers [3] and [4] kept depressed at the same time, press the power on/ off knob **(1)** for about 1 second or more. The unit displays “SEC”.
- ❑ With the up button **(4)** kept depressed, press the numbered button **(19)** with number [1].  
The unit displays “- - - -”.
- ❑ Press the numbered buttons **(19)** with number [1] to [4], and enter the user ID. Each button corresponds to each digit. Enter the stored user ID.
- ❑ Press the program type button **(11)** for about 2 seconds or more to enter. The power is turned off approx. 10 seconds after “- - - -” is displayed.

## TROUBLESHOOTING

If you suspect something is wrong, then please check and take steps as described below.

If the described suggestions do not solve the problem, it is recommended to take the unit to your nearest dealer.

### Common

<b>Problem</b>	<b>Possible cause</b>	<b>Possible solution</b>
A lot of noise	A mobile phone is used nearby.	If you are going to use a mobile phone, use it away from the unit.
Unable to operate	The security function is on.	If the unit displays “SEC”, enter your user ID. If the unit displays “HELP”, consult your dealer.

## Radio

Problem	Possible cause	Possible solution
A lot of noise	The unit is not exactly tuned in to the station.	Tune it exactly to the station.
Unable to receive by auto tuning	There is no station emitting signals powerful enough. If AF is ON, the unit searches for RDS stations only.	Pick up a station by manual tuning. Turn AF off.
Unable to preset stations of signals powerful enough by auto preset	If AF is ON, only RDS stations will be preset.	Turn AF off.

## CD

Problem	Possible cause	Possible solution
Sound skipping or noise	The disc is dirty. The disc has a major flaw or is warped.	Wipe the disc with a soft cloth. Replace the disc with another without flaws.
CD cannot be inserted	A disc is already loaded.	Insert a CD after having removed the already inserted disc by pressing the eject button (13).

## ERROR DISPLAY MESSAGES

### CD

Display	Possible cause	Possible solution
ERROR 1	The disc cannot be read.	Insert the disc with its label side up. Check the disc that it is not warped and is free of flaws. If ERROR 1 does not go out when a normal disc is inserted, consult your Fiat Dealership.
ERROR 3	The player developed an error of an unidentified cause.	If CD is inserted in the unit, press the eject button ( <b>I3</b> ) to remove the disc. If the disc cannot be ejected, consult your Fiat Dealership.

## REMOTE AUDIO CONTROLS

(for versions/markets, where provided)


The main functions of the radio system can be controlled with the controls on the steering wheels.

To control the volume:

- To increase the volume, push the switch (1).
- To decrease the volume, push the switch (2).
- To mute, push the switch (3).

To select the mode, push the switch (4).

You can also turn on the audio system by pushing the switch (4).

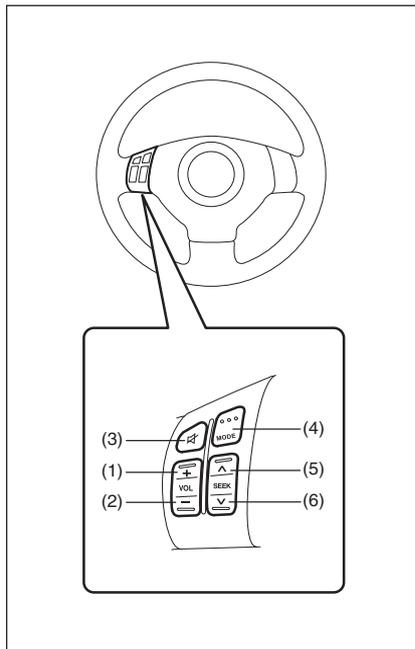

To change the radio station:


- To advance to the next preset station, push the switch (5) briefly (only MP3 version).
- To select the previous preset station, push the switch (6) briefly (only MP3 version).
- To scan the higher frequency radio station, push and hold the switch (5).
- To scan the lower frequency radio station, push and hold the switch (6).

To scan the selection on a CD:

- To advance to the next track on a CD, push the switch (5).
- To select the previous track on a CD, push the switch (6).

88J305

# OTHER CONTROLS AND EQUIPMENT

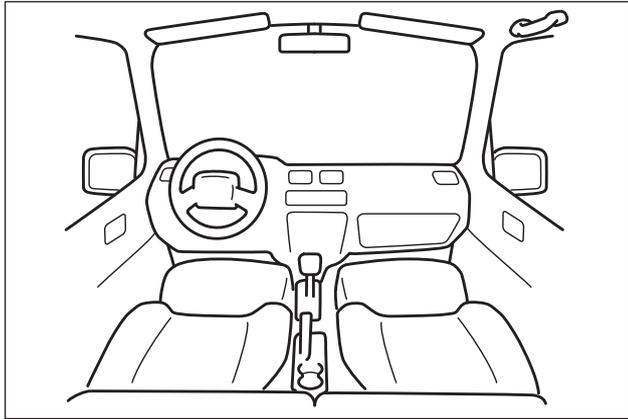

60G407

PARKING BRAKE LEVER.....	124
PEDAL.....	125
GEARSHIFT LEVER.....	126
FUEL FILLER CAP .....	126
FOLDING REAR SEATS.....	128
SUN VISOR .....	131
INTERIOR LIGHT SWITCH.....	132
SPOT LIGHT (for versions/markets, where provided).	132
FRONT SEAT HEATER (for versions/markets, where provided).....	133
ASSIST GRIPS (for versions/markets, where provided)	134
ENGINE HOOD .....	134
CUP HOLDER AND STORAGE AREA (for versions/markets, where provided).....	136
FRAME HOOKS .....	137
TIRE CHANGING TOOL.....	138
FRONT SEAT BACK POCKET (for versions/markets, where provided).....	139
SHOPPING HOOK (for versions/markets, where provided).....	139
FLOOR MATS.....	139
LUGGAGE RESTRAINT LOOPS (for versions/markets, where provided).....	140
LUGGAGE COMPARTMENT COVER (for versions/markets, where provided).....	140
LUGGAGE COMPARTMENT LIGHT.....	140
RADIO ANTENNA (for versions/markets, where provided).....	141
INSTALLATION RADIO FREQUENCY TRANSMITTERS.....	141
ROOF RAILS OR ROOF RACK ANCHORS (for versions/markets, where provided).....	141

## PARKING BRAKE LEVER

The parking brake lever is located between the seats. To set the parking brake, hold the brake pedal down and pull the parking brake lever all the way up. To release the parking brake, hold the brake pedal down, pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.


1. To set
2. To release
3. To release



### WARNING

**Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.**

**If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by an authorized Fiat Dealership.**

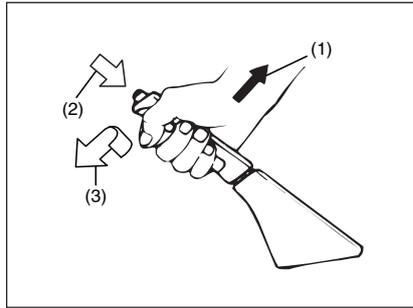

For automatic transaxle vehicles, always set the parking brake before moving the gearshift lever to the “P” (PARK) position. If you park on an incline and shift into “P” before setting the parking brake, the weight of the vehicle may make it difficult to shift out of “P” when you are ready to drive the vehicle.

When preparing to drive the vehicle, move the gearshift lever out of the “P” position before releasing the parking brake.



### WARNING

**Always set the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, make sure the gearshift lever for manual transaxle vehicles is in 1st gear or “R” (Reverse) and the gearshift lever for automatic transaxle vehicles is in “P” (Park). Remember, even though the transaxle is in gear or in Park, you must set the parking brake fully.**



### WARNING

**When parking the vehicle in extremely cold weather, the following procedure should be used:**

- 1) Set the parking brake.
- 2) Manual transaxle - turn off the engine, then shift into reverse or first gear.  
Automatic transaxle - shift into “P” (Park) and turn off the engine.
- 3) With the engine off, get out of the vehicle and put chocks under the wheels.
- 4) Release the parking brake.  
When you return to your vehicle, you must remember to first set the parking brake, then remove the wheel chocks.

# PEDAL

## Clutch Pedal (1)

(For manual transaxle)


The clutch pedal is used to disengage the drive to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

**IMPORTANT** Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

## Brake Pedal (2)


Your Fiat vehicle is equipped with either front and rear disc brakes or front disc brakes and rear drum brakes. Depressing the brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as cold, wet, snow, etc.

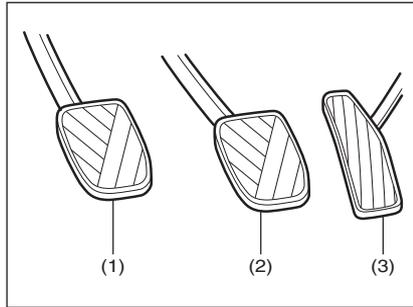

Manual transaxle

79J072

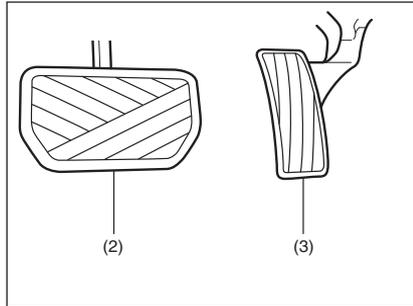

Automatic transaxle

79J154



### WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by your Fiat Dealership.



### WARNING

Do not “ride” the brakes by applying them continuously or resting your foot on the pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

## Accelerator Pedal (3)

This pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

## GEARSHIFT LEVER

Your vehicle is equipped with either a manual transaxle or automatic transaxle.


The gearshift lever for each transaxle type is shown in the illustrations. For details on how to use the transaxle, refer to “Using the Transaxle” in the “OPERATING YOUR VEHICLE” section.



### WARNING


**Manual transaxle: to change gears properly you must push the clutch pedal fully down. It is therefore essential that there is nothing under the pedals: make sure the mats are lying flat and do not get in the way of the pedals.**

**IMPORTANT** Do not drive with your hand resting on the gear lever as the force exerted, even if slight, could lead over time to premature wear on the gearbox internal components.

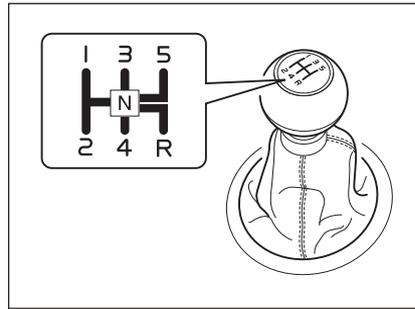

5-speed manual transaxle

63J061

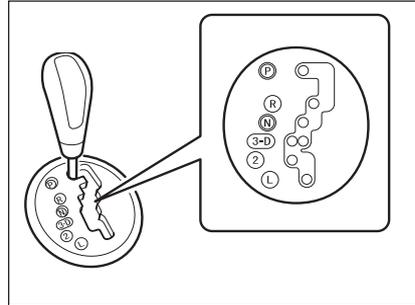

Automatic transaxle  
(for versions/markets, where provided)

77J021

## FUEL FILLER CAP

The fuel filler cap is located on the left rear side of the vehicle. The fuel filler lid can be unlocked by pulling up the opener lever located on the outboard side of the driver's seat and locked by simply closing the lid.




### WARNING

**Remove the fuel filler cap slowly. The fuel may be under pressure and may spray out, causing injury.**




### WARNING


**Gasoline is extremely flammable. Do not smoke when refueling, and make sure there are no open flames or sparks in the area.**

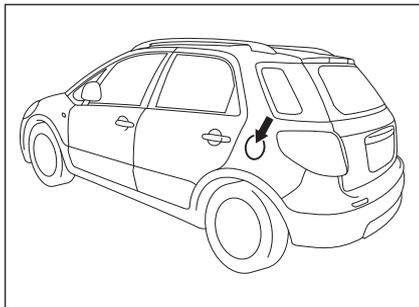


79J048

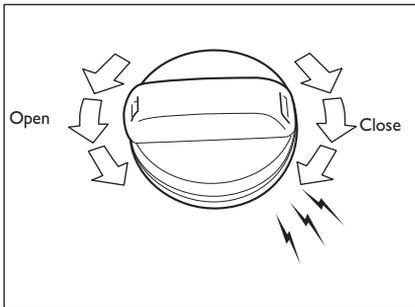

68KN048

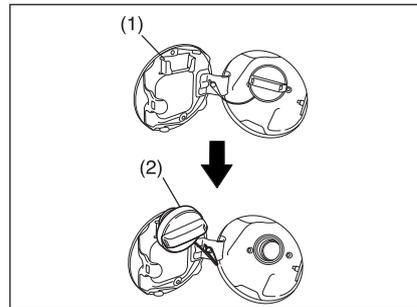

80J2112

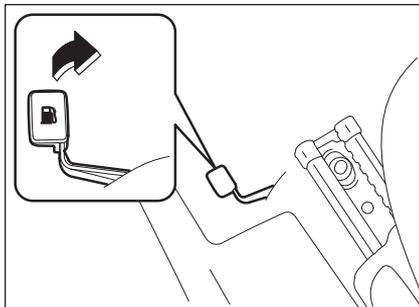

79J049

To remove the fuel filler cap:

- Open the fuel filler door.
- Remove the cap by turning it counter-clockwise.

NOTE The cap holder (1) can hold the fuel filler cap (2) when refueling.

To reinstall the fuel filler cap:

- Turn the cap clockwise until you hear several clicks.
- Close the fuel filler door.



### WARNING

*If you need to replace the fuel cap, use a genuine Fiat cap or its equivalent. Use of an improper cap can result in a malfunction of the fuel system or emission control system. It may also result in fuel leakage in the event of an accident.*

## FOLDING REAR SEATS

The rear seats of your vehicle can be folded forward to provide additional cargo space.

To fold the rear seats forward:


- Hook the webbing of the outboard lap-shoulder belts in the belt hangers.

**IMPORTANT** When you move a seat-back, make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.


- Make sure the belt webbing is not twisted.
- Stow the seat belt buckles of the center and right seating position as shown in the illustration.

**IMPORTANT** When you fold the rear seatback forward, stow the seat belt buckles of the center and right seating position into the seat first. This helps prevent being caught by the seat and being damaged.


- Lower the head restraint fully.
- Pull the release lever on the top of each split seat, and fold the seatbacks forward.

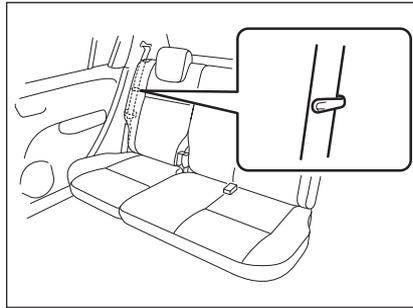


79J121

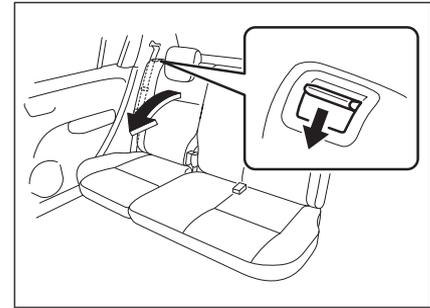

79J123

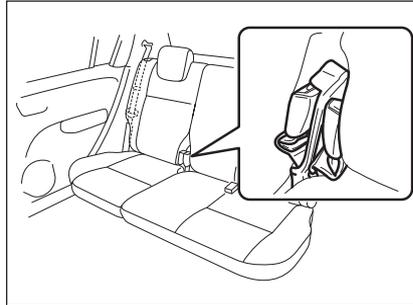

79J213

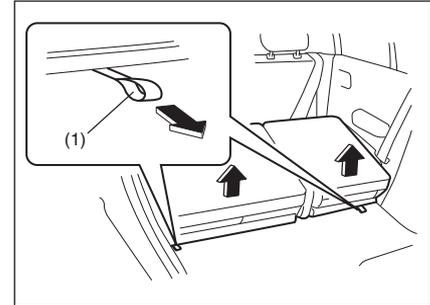

63J057

**IMPORTANT** When the rear seat head restraint reaches the front seatback, slide the front seat forward.


**IMPORTANT** After folding the rear seatback forward, do not allow any foreign material to enter the lock opening. This may cause damage to the inside of the lock and prevent the seatback from being locked securely.

- Pull the lock release strap (1) rearward to unlatch the seat cushion.



### WARNING


**When you unlatch the rear seat cushion, be careful that your face or hands are not injured from the seat popping up.**

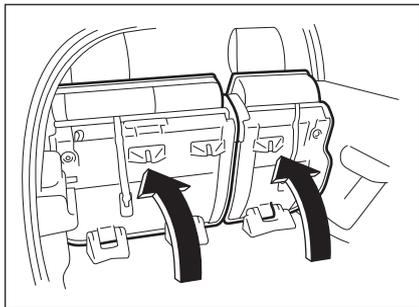

79J124

- Fold the entire seat forward.


**IMPORTANT** When the rear seat reaches the front seatback, slide the front seat forward.

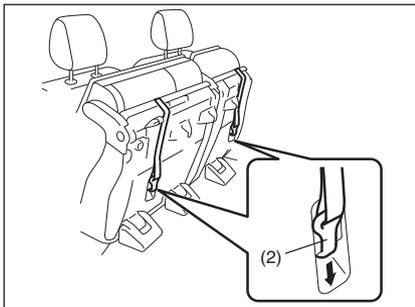

79J125

- Unhook the strap (2) by pushing down the hook as shown in the illustration.
- Hook the strap (2) to the front seat head restraint as shown in the illustration.

**IMPORTANT** When securing the folded rear seat with a strap, adjust the strap length so that the rear seat will not move.





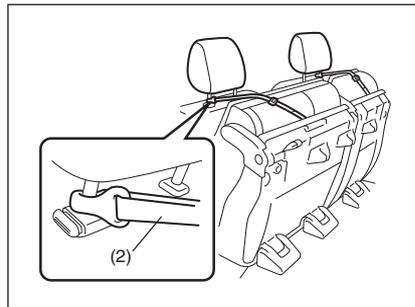


63J059



### WARNING

**Luggage or other cargo should be stowed in the luggage compartment with the rear seat in an upright position, whenever possible. If you need to carry cargo in the passenger compartment with the rear seat back folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatbacks.**

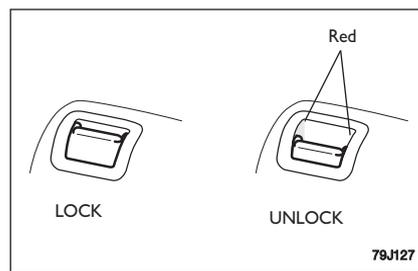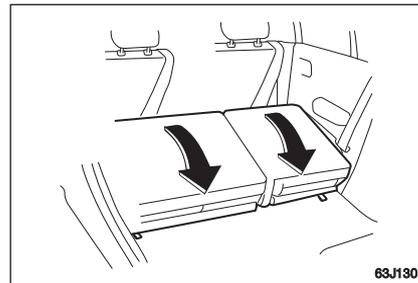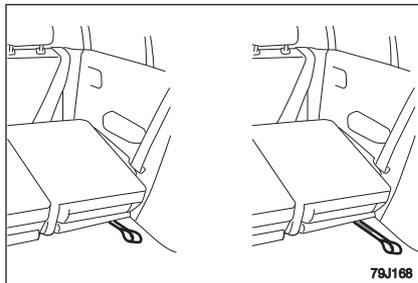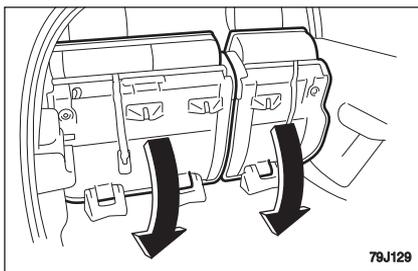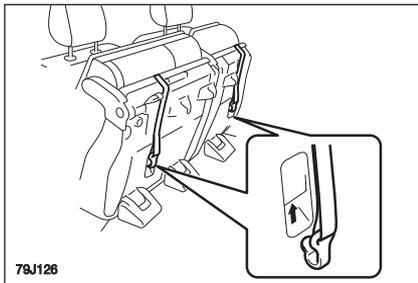

To return the seat to the normal position, follow the procedure below.

- Unhook the strap from the head restraint and stow the strap to the back of the seat cushion as shown in the illustration. Make sure to adjust the strap length to avoid any slack or twist. Pull down the seat cushion until it locks into place.



### WARNING

When returning the rear seat cushion to the normal position, be careful that your finger is not caught between the lock and the floor.

### IMPORTANT

- When returning the rear seat cushion to the normal position, make sure that there is nothing around the striker. Any foreign materials prevent the seat cushion from being locked securely.
- When returning the rear seat cushion to the normal position, make sure that there is nothing under the seat cushion. This prevents damage to the seat cushion.
- Make sure that the rear seat cushion is securely locked. If it is not, you will see the partial red on the lock release strap.



### WARNING

Do not put your hand into the rear seatback lock opening, or your finger may get caught and be injured.


- Raise the seatback until it locks into place.

After returning the seat, try moving the seat and seatback to make sure they are securely latched.

**IMPORTANT** After securing the rear seatback, make sure that it is locked securely. If it is not, you will see red in the release lever.


## SUN VISOR

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

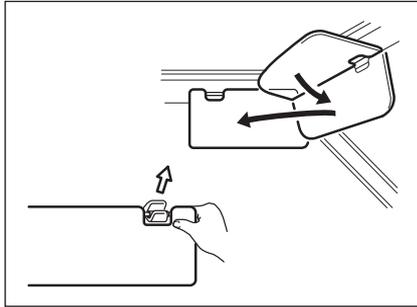

79J161

**IMPORTANT** When unhooking and hooking a sun visor, be sure to handle it by the hard plastic parts or the sun visor can be damaged.

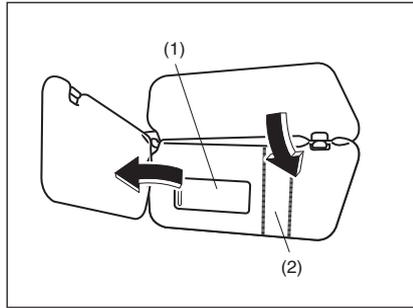

79JM027


### Card holder

(for versions/markets, where provided)

You can put a card in the card holder (2) on the back of the sun visor.

On the back of the sun visor there is the mirror (1).

**IMPORTANT** When you park your vehicle outdoors in direct sun light or in hot weather, do not leave plastic cards in the holder. The heat may distort them.

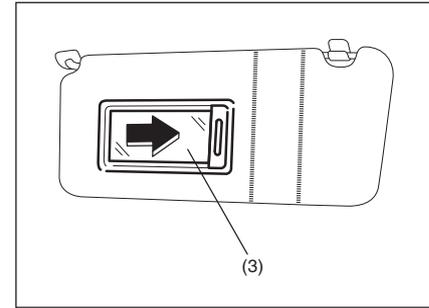

79JM029

### Vanity mirror

(for versions/markets, where provided)

To use the vanity mirror (3) on the back of the sun visor, slide the mirror cover.

### IMPORTANT

- Do not use the mirror while driving your vehicle or could lose control of the vehicle.
- When using the vanity mirror, do not move too close to a front air bag location or lean against it. If the front air bag is accidentally inflated, it could hit you hard.

## INTERIOR LIGHT SWITCH

This light switch has three positions which function as described below:

### ON (1)

The light comes on and stays on regardless of whether the door is open or closed.

### DOOR (2)


The light comes on when the door is opened.

After closing all doors, the light will remain on for about 15 seconds and then fade out. If you insert the key into the ignition switch during that time, the light will start to fade out immediately.


After removing the key from the ignition switch, the light will turn on for about 15 seconds and then fade out.

### OFF (3)

The light remains off even when the door is opened.

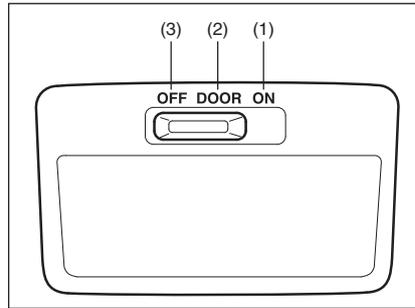

64J104

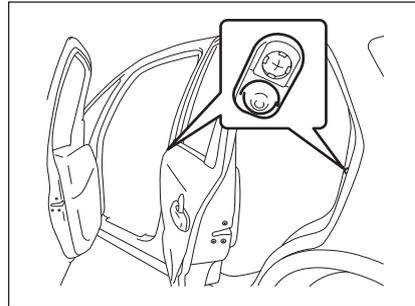


78J075

## SPOT LIGHT

(for versions/markets, where provided)

Push the switch to turn on the light and push it again to turn off the light.

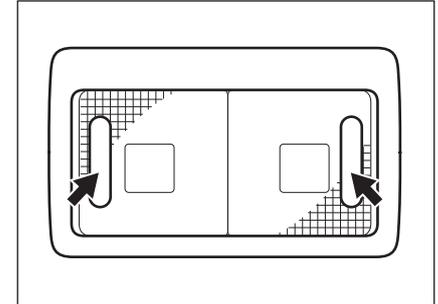


78J074

**NOTE** The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber projection) at the door opening as shown, the door is involved in the lighting operation.

## FRONT SEAT HEATER

(for versions/markets, where provided)

With the ignition switch in the “ON” position, push in one or both of the seat heater switches to warm the corresponding seat(s). The indicator light below the switch will also come on. To turn off the seat heater, push in the switch again. The indicator light below the switch will go off.

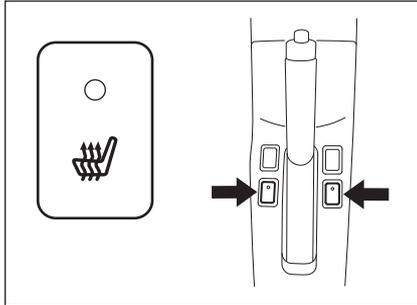

79J076




### WARNING

**Improperly using the seat heater can be hazardous. An occupant can suffer burns even if the heating temperature is fairly low, if the occupant is wearing thin pants, a thin skirt or shorts and leaves the heater on for long periods.**

**Avoid using the seat heater for these occupants:**

- **People who have reduced feeling in their legs, including the elderly or those with certain disabilities.**
- **Small children, or anyone with sensitive skin.**
- **People who are asleep or under the influence of alcohol or other drugs which make them tired.**

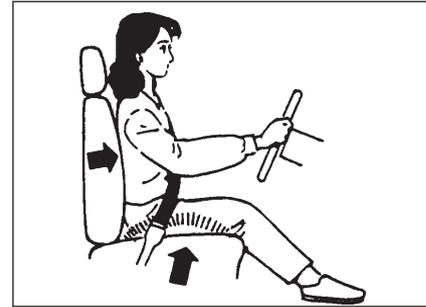

86G064

**IMPORTANT** To avoid damaging the heater element:


- Do not subject the front seats to heavy impacts, such as children jumping on them.
- Do not cover the seat with any insulating materials such as blankets or cushions.

## ASSIST GRIPS

(for versions/markets, where provided)

Assist grips are provided for convenience.

**IMPORTANT** To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

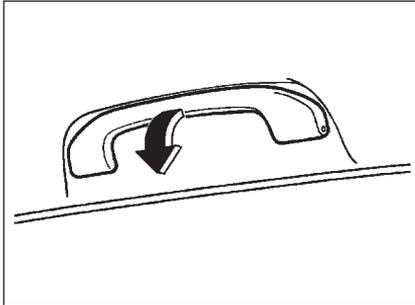


54Q249


## ENGINE HOOD

To open the engine hood:

- Pull the hood release handle located on the outboard side of the driver's side of the instrument panel. This will disengage the engine hood lock halfway.

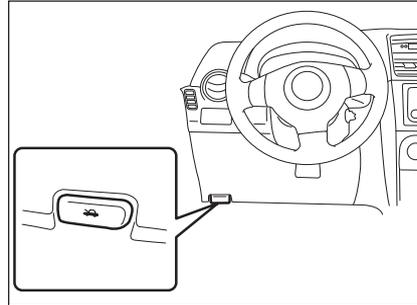


78J077

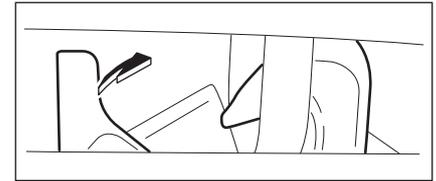

80J045

- Push the under-hood release lever sideways with your finger, as shown in the illustration. While pushing the lever, lift up the engine hood.

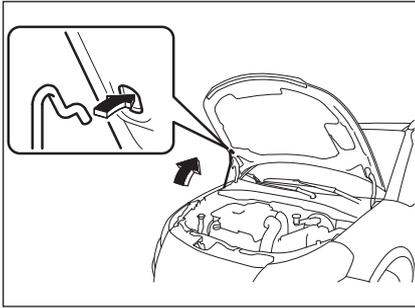

79JM022

- Continue to lift up the hood until it is high enough to support with the prop rod.

To close the engine hood:

- Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back to the holding clip.
- Lower the hood close to the bumper, then let it drop down. Make sure the hood is securely latched after closing.



### WARNING

*For safety reasons the bonnet must be closed properly to avoid its opening while the vehicle is travelling. Therefore, always check it is properly closed and the catch engaged. Should you notice that the catch is not perfectly engaged when travelling, stop the vehicle immediately and close the bonnet.*



### WARNING

*If the supporting rod is not positioned correctly the bonnet may fall violently.*

## CUP HOLDER AND STORAGE AREA

(for versions/markets, where provided)

The cup holders are provided in the center console.



### WARNING


*Do not use the cup holder to hold cups containing hot liquids, or sharpedged, hard or breakable objects. Objects in the cup holder may be thrown about during a sudden stop or impact, and could cause personal injury.*




### WARNING

*Avoid pouring liquids above all on the gear lever boot, as the liquids may penetrate and damage the electric and/or mechanical components below.*


Pull the lid to open.

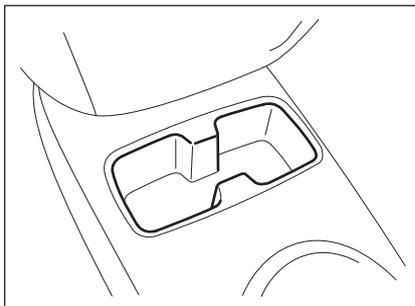


78JM033

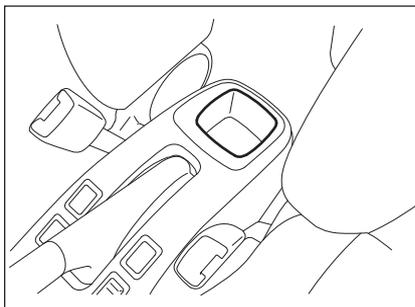

78J052

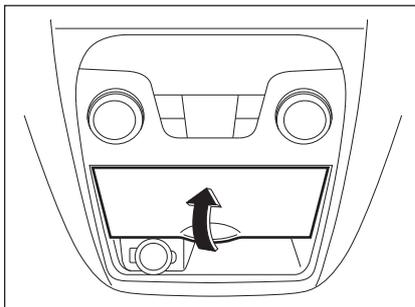


80JM087

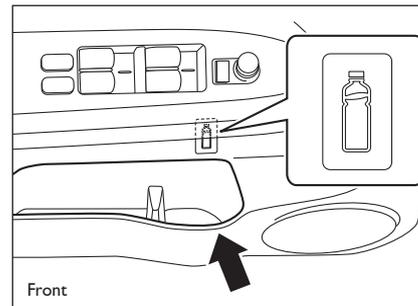

Front

80JM055

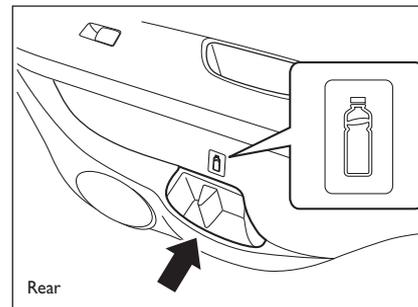

Rear

80JM143

### Bottle holder

You should hold a bottle with a cap in the holder

## FRAME HOOKS

Frame hooks are provided on the front (1), rear (2) and side (3) (for versions/markets, where provided) of the vehicle. The hooks (1) and (2) are used for emergency situations. The hooks (3) (for versions/markets, where provided) are used for trailer/train shipping purposes.

To tow your vehicle on the road or highway, follow the instruction of “Towing” in “EMERGENCY SERVICE” or “VEHICLE LOADING AND TOWING” section.



### WARNING


**Do not use the frame hooks to tow another vehicle or to have your vehicle towed on the road or highway.**

**The hooks (1) and (2) are designed for use in emergency situations only, such as if your vehicle or another vehicle gets stuck in deep mud or snow.**


**The hooks (3) (for versions/markets, where provided) are provided for trailer/ train shipping purposes.**

NOTE When you use the towing hook (1), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, or the vehicle body.


Do not sudden accelerate.

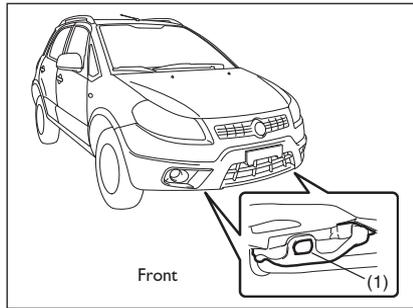


79JF019

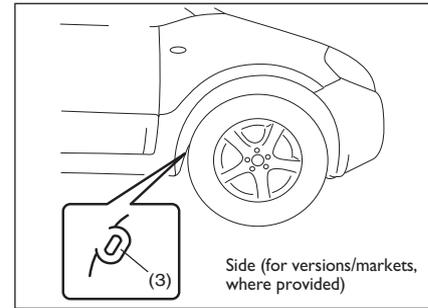

79J081

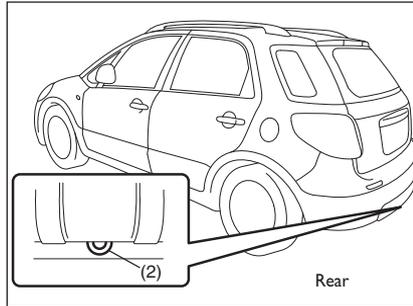

79J080

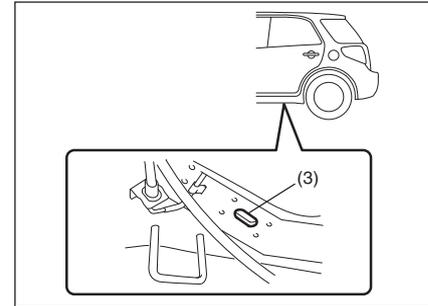

79J132

NOTE When you use the frame hook (2), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, the vehicle body or the drive system.

- Do not sudden accelerate.
- Do not tow the vehicle heavier than your vehicle.

IMPORTANT Never use the hooks (1) and (2) for trailer/train shipping purposes to prevent damage to the vehicle.

## TIRE CHANGING TOOL

The jack, wheel brace, jack handle are stowed in the luggage compartment.

To remove the spare tire, turn its bolt (1) counterclockwise and remove it.

To remove the jack, turn its shaft counterclockwise and pull the jack out of the storage bracket.


To stow the jack, place it in the storage bracket and turn the shaft clockwise.




### WARNING

*The jack shall only be used for changing wheels on the vehicle with which it is provided or on cars of the same model. It must not be used for other purposes such as for instance raising vehicles of other models. In no case should it be used for repairs under the vehicle. Incorrect positioning of the jack may cause the jacked vehicle to fall. Do not use the jack for higher capacities than stated on its label.*


*It is important to read the jacking instructions in the "EMERGENCY SERVICE" section of this manual before attempting to use the jack.*

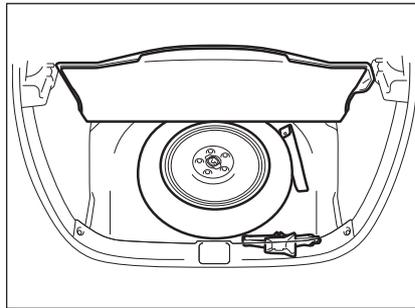


78JM014

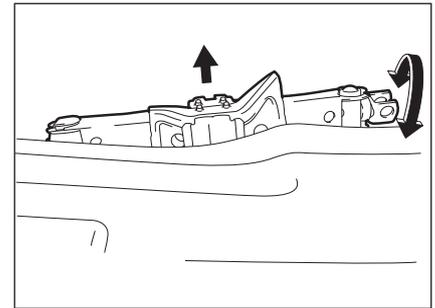


78J085

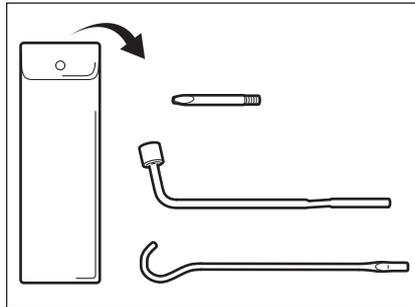

78J083

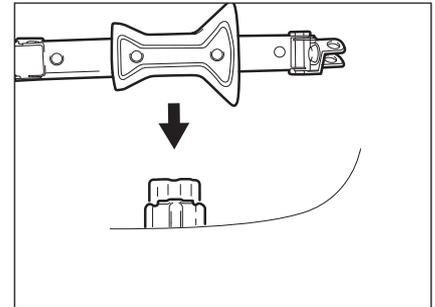

78J086

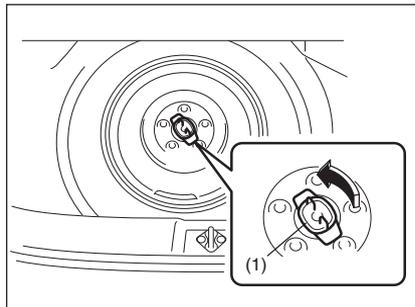

80J048




### WARNING

*After using the tire changing tools, be sure to stow them securely or they can cause injury if an accident occurs.*

## FRONT SEAT BACK POCKET

(for versions/markets, where provided)

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

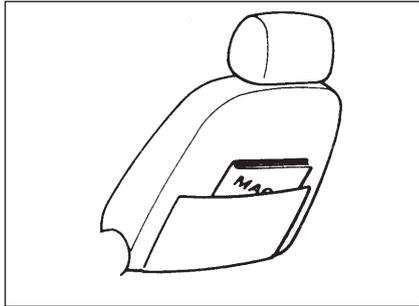

60B119



### WARNING

**Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat.**


## SHOPPING HOOK

(for versions/markets, where provided)


You can hang a shopping bag or other suitable objects on the hook (in the luggage compartment).

This hook is not designed for large or heavy items.

**IMPORTANT** To avoid breaking the hook, do not hang items heavier than 2 kg / 4.4 lbs.

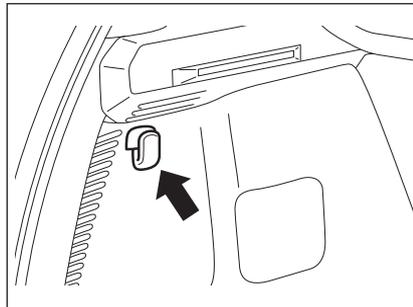

80JM058

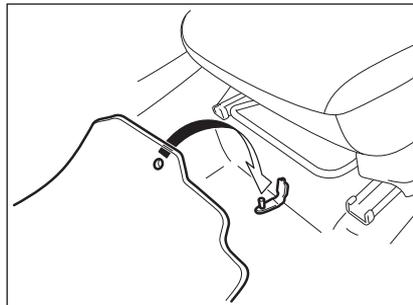

80J2014

## FLOOR MATS

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, genuine FIAT floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, be sure to hook the floor mat grommet(s) to the fastener(s) and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend using genuine FIAT floor mats for proper fitting.



### WARNING


**Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.**

- Make sure that the floor mat grommet(s) is(are) hooked to the fastener(s).**
- Never place additional floor mats on top of the existing floor mats.**


## LUGGAGE RESTRAINT LOOPS

(for versions/markets, where provided)

Four luggage restraint loops are provided on the luggage compartment floor. An optional rubber net can be hooked to these loops to help keep cargo from moving around in the luggage compartment during normal driving.

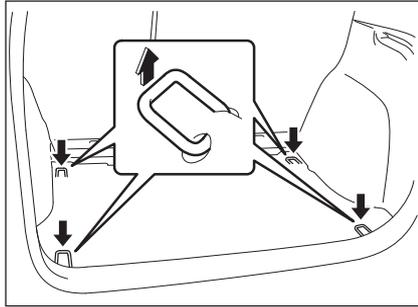

79J087

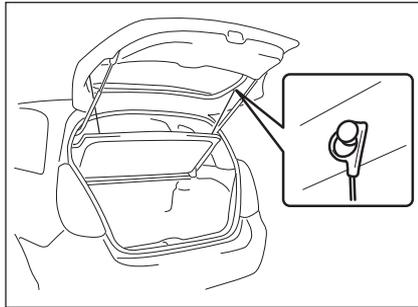

79J128

## LUGGAGE COMPARTMENT COVER


(for versions/markets, where provided)

Luggage or other cargo placed in the luggage compartment are hidden from view by a luggage compartment cover.



### WARNING

*Do not carry items on top of the luggage compartment cover, even if they are small and light. Objects on top of the cover could be thrown about in an accident, causing injury, or could obstruct the driver's rear view.*

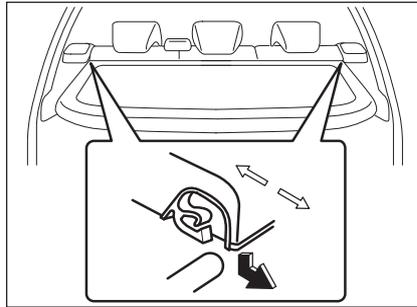


79J162

## LUGGAGE COMPARTMENT LIGHT

When you open the rear door with the luggage compartment light switch in the "ON" position (1), the light comes on and remains on as long as you keep the rear door open.

When the luggage compartment light switch is in the "OFF" position (2), the light remains off regardless of whether the rear door is opened or closed.

**IMPORTANT** Do not leave the rear door open with the luggage compartment light switch in the "ON" position for a long time, or the battery will discharge.

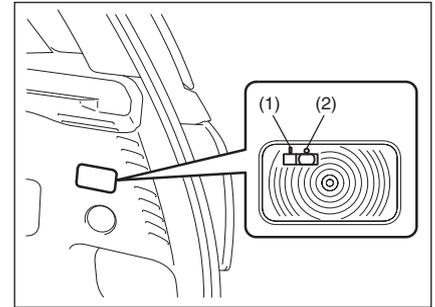

79J053


## RADIO ANTENNA

(for versions/markets, where provided)

The radio antenna at the front of the roof can be folded down and is removable. To fold the antenna rearward, be sure to grip the bottom of antenna. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

**IMPORTANT** To avoid damage to the radio antenna:

- Remove the antenna when using an automatic vehicle wash.
- Remove or fold down the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a vehicle cover over your vehicle.

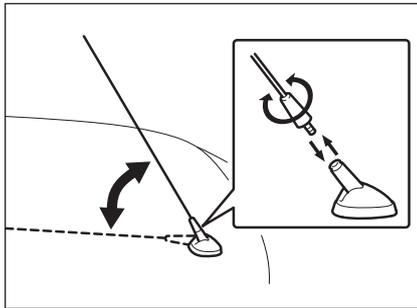

80G143

## INSTALLATION RADIO FREQUENCY TRANSMITTERS


We recommend that you always ask a FIAT Dealership about frequency band, max output power, antenna position at vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.

## ROOF RAILS OR ROOF RACK ANCHORS


(for versions/markets, where provided)

You can use the roof rails to attach the optional roof rack which is available at your Fiat Dealership. If you use a roof rack, observe the instructions and precautions in this section and provided with the roof rack.

- Make sure the roof rack is securely installed.
- To mount various types of cargo (such as skis, bicycles, etc.) properly, use suitable attachments which are available from your Fiat Dealership. Be sure to install the attachments properly and securely according to the instructions provided. Do not mount cargo directly on the roof panel. The cargo can damage the roof panel.
- The gross weight of the roof rack plus cargo must not exceed the loading capacity (50 kg - 110 lbs). Also, do not let the gross vehicle weight (fully loaded vehicle including driver, passengers, cargo, roof load and trailer tongue weight) exceed the Gross Vehicle Weight Rating (GVWR) listed in the "SPECIFICATIONS" section of this manual.

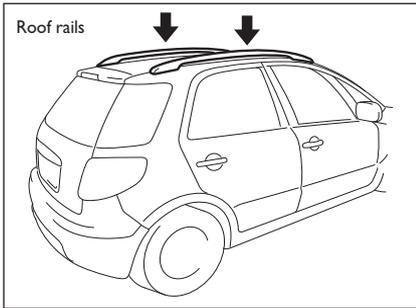

79J088

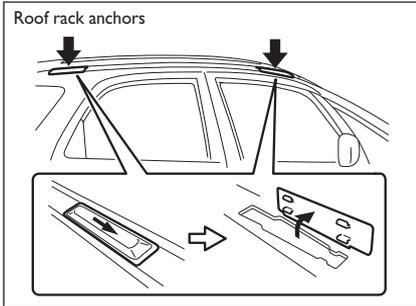

79J089

- Mount and secure the cargo onto the roof rack properly according to the instructions provided. Be sure to stow the heaviest items at the bottom and distribute the cargo as evenly as possible.
- Do not carry items so large that they hang over the bumpers or the sides of the vehicle, or block your view.
- Secure the front and rear ends of long items – such as wood panels, surfboards and so forth – to both the front and rear of the vehicle. You should protect the painted surfaces of the vehicle from scuffing caused by tie-down ropes.
- Check periodically to make sure the roof rack is securely installed and free from damage.
- For vehicles with roof rack anchors, make sure the anchors are covered with the caps when not in use.




## WARNING

**Abrupt maneuvers or failure to properly secure cargo can allow the cargo to fly off the vehicle and hit others, causing personal injury or property damage.**

**Mount cargo securely and avoid abrupt maneuvers such as “jackrabbit” starts, sharp turns, fast cornering and sudden braking. Check periodically to make sure that cargo is securely fastened.**

**Large, bulky, long, or flat items can affect vehicle aerodynamics or be caught by the wind, and can reduce vehicle control resulting in an accident and personal injury. Drive cautiously at reduced speed when carrying this type of cargo.**

# OPERATING YOUR VEHICLE

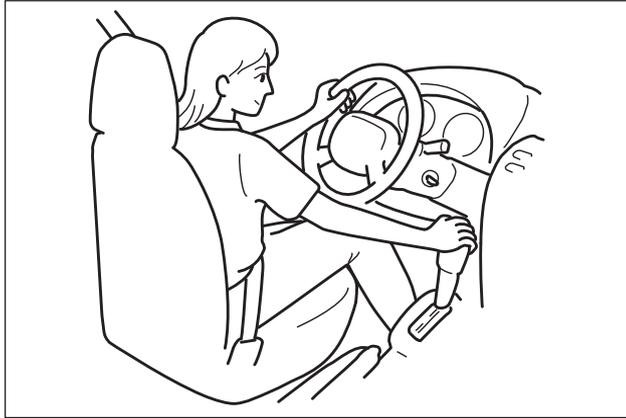

60G408

EXHAUST GAS WARNING .....	144
DAILY INSPECTION CHECKLIST .....	144
ENGINE OIL CONSUMPTION.....	146
STARTING THE ENGINE.....	146
USING THE TRANSAXLE.....	148
USING THE 2WD/4WD SWITCH (for versions/markets, where provided).....	151
BRAKING.....	153
ELECTRONIC STABILITY PROGRAM (ESP®) (for versions/markets, where provided).....	156
RUNNING-IN.....	159
CATALYTIC CONVERTER (for versions/markets, where provided).....	159
IMPROVING FUEL ECONOMY.....	160


## EXHAUST GAS WARNING



### WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, be sure to take the following precautions to help prevent carbon monoxide from entering your vehicle.

- Do not leave the engine running in garages or other confined areas.
- Do not park with the engine running for a long period of time, even in an open area. If it is necessary to sit for a short time in a parked vehicle with the engine running, make sure the air intake selector is set to “FRESH AIR” and the fan is at high speed.
- Avoid operating the vehicle with the tail gate or trunk open. If it is necessary to operate the vehicle with the tail gate or trunk open, make sure the sunroof (for versions/markets, where provided) and all windows are closed, and the blower is at high speed with the air intake selector set to “FRESH AIR”.

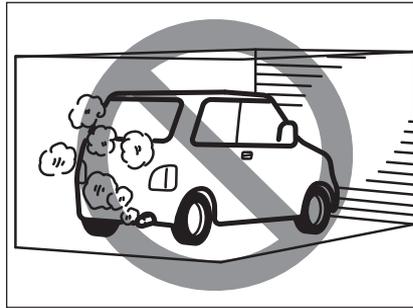

52D334



### WARNING

To allow proper operation of your vehicle's ventilation system, keep the air inlet grille in front of the windshield clear of snow, leaves, or other obstructions at all times.

- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.
- Have the exhaust system inspected periodically for damage and leaks. Any damage or leaks should be repaired immediately.

## DAILY INSPECTION CHECKLIST

### BEFORE DRIVING


- Make sure that windows, mirrors, lights, and reflectors are clean and unobstructed.
- Visually check the tires for the following points:
  - the depth of the tread groove
  - abnormal wear, cracks and damage
  - loose wheel bolts
  - existence of foreign material such as nails, stones, etc.

Refer to “Tires” in “INSPECTION AND MAINTENANCE” section for details.

- Look for fluid and oil leaks.

NOTE It is normal for water to drip from the air conditioning system after use.

- Make sure the hood is fully closed and latched.
- Check the headlights, turn signal lights, brake lights and horn for proper operation.

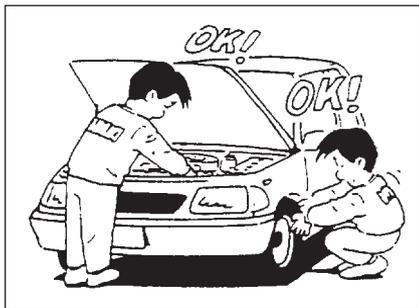

60A187S

- Adjust the seat and head restraint.
- Check the brake pedal and the parking brake lever.
- Adjust the mirrors.
- Make sure that you and all passengers have properly fastened your seat belts.
- Make sure that all warning lights come on as the key is turned to the "ON" or "START" position.
- Check all gauges.
- Make sure that the BRAKE SYSTEM WARNING light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, perform the following under-hood checks:

- Engine oil level
- Coolant level
- Brake fluid level
- Power steering (for versions/markets, where provided) fluid level
- Windshield washer fluid level
- Battery solution level
- Hood latch operation  
Pull the hood release handle inside the vehicle. Make sure that you cannot open the hood all the way without releasing the secondary latch. Be sure to close the hood securely after checking for proper latch operation. See "All latches, hinges & locks" of "CHASSIS AND BODY" in the "Periodic Maintenance Schedule" in the "INSPECTION AND MAINTENANCE" section for lubrication schedule.



### WARNING

***Make sure the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.***

Once a month, or each time you fill your fuel tank, check the tire pressure using a tire pressure gauge. Also check the tire pressure of the spare tire.

## ENGINE OIL CONSUMPTION

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumed depends on the viscosity of the oil, the quality of the oil and the conditions the vehicle is driven under.

More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil.

A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil consumption only after approximately 5000 km (3000 miles) driving.

**Oil consumption: Max. 1.0 L per 1000 km (1 Qt. per 600 miles)**

When judging the amount of oil consumption, note that the oil may become diluted and make it difficult to accurately judge the true oil level.

As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km (600 miles) or more of driving. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed.

You should also be aware that the diluting ingredients evaporate out when the vehicle is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.

## STARTING THE ENGINE

### BEFORE STARTING THE ENGINE

**NOTE** Gearshift levers shown in the above illustration are examples of 5-speed manual transaxle and automatic transaxle.


- Make sure the parking brake is set fully.
- Manual transaxle – Shift into “N” (Neutral) and depress the clutch pedal all the way to the floor. Hold the clutch pedal while starting the engine.
- Automatic transaxle – If the gearshift lever is not in “P” (Park) position, shift into “P” (Park). (If you need to re-start the engine while the vehicle is moving, shift into “N”.)

**NOTE** Automatic transaxle vehicles have a starter interlock device which is designed to keep the starter from operating if the transaxle is in any of the drive positions.



## WARNING

**Make sure that the parking brake is set fully and the transaxle is in Neutral (or Park for vehicles with an automatic transaxle) before attempting to start the engine.**

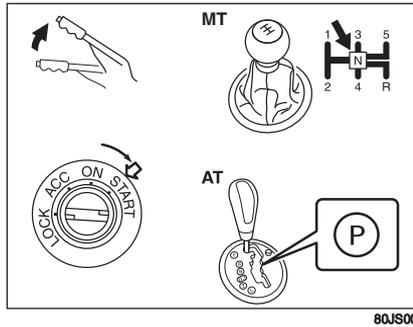

**IMPORTANT** We recommend that during the initial period you do not drive to full vehicle performance (e.g.: excessive acceleration, long journeys at top speed, sharp braking, etc.).

**IMPORTANT** When the engine is switched off never leave the key into the ignition switch to prevent pointless current absorption from draining the battery.

## STARTING A COLD ENGINE

With your foot off the accelerator pedal, crank the engine by turning the ignition key to “START”. Release the key when the engine starts.

### IMPORTANT

- Stop turning the starter immediately after the engine has started or the starter system can be damaged.
- Do not crank the engine for more than 15 seconds at a time. If the engine doesn't start on the first try, wait about 15 seconds before trying again.

If the engine does not start after 15 seconds of cranking, wait about 15 seconds, then press down the accelerator pedal to 1/3 of its travel and try cranking the engine again. Release the key and accelerator pedal when the engine starts.

If the engine still does not start, try holding the accelerator pedal all the way to the floor while cranking. This should clear the engine if it is flooded.

# USING THE TRANSAXLE

## 4-SPEED AUTOMATIC TRANSAXLE

(for versions/markets, where provided)

### Gearshift lever

The gearshift lever is designed so that it cannot be shifted out of the “P” position unless the ignition switch is in the “ON” position and the brake pedal is depressed.




### WARNING

*Always depress the brake pedal before shifting from “P” (Park) (or “N” (Neutral) if the vehicle is stationary) to a forward or reverse gear, to help prevent the vehicle from moving unexpectedly when you shift.*

Use the gearshift lever positions as described below:


### P (Park)

Use this position to lock the transaxle when the vehicle is parked or when starting the engine. Shift into Park only when the vehicle is completely stationary.

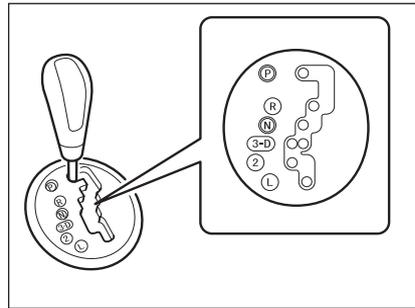

4-Speed Automatic Transaxle

77J021

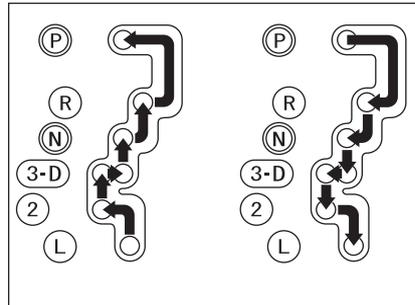

Gearshift lever positions

77J028

### R (Reverse)

Use this position to reverse the vehicle from stop. Make sure that vehicle is completely stationary before shifting into Reverse.

### N (Neutral)

Use this position for starting the engine if the engine stalls and you need to restart it while the vehicle is moving. You may also shift into Neutral and depress the brake pedal to hold the vehicle stationary during idling.

### D (Drive)

Use this position for all normal driving. With the gearshift lever in “D” range you can get an automatic downshift by pressing the accelerator pedal. The higher the vehicle speed is, the more you need to press the accelerator pedal to get a downshift.

### 3 (Low 3)

Use this position for driving on moderate uphill and downhill gradients. The engine braking effect on moderate downhills can be used in this position. The transaxle shifts up only to 3rd gear.

### 2 (Low 2)

Use this position to provide extra power when climbing hills, or to provide engine braking when going down hills.

### L (Low 1)

Use this position to provide maximum power when climbing steep hills or driving through deep snow or mud, or to provide maximum engine braking when going down steep hills.

**NOTE** If you move the gearshift lever to a lower gear while driving faster than the maximum allowable speed for the lower gear, the transaxle will not actually downshift until your speed drops below the maximum speed for the lower gear.

**IMPORTANT** Be sure to take the following precautions to help avoid damage to the automatic transaxle:

- Make sure that the vehicle is completely stationary before shifting into “P” or “R”.
- Do not shift from “P” or “N” to “R,” “D,” “3,” “2,” or “L” when the engine is running above idle speed.
- Do not rev the engine with the transaxle in a drive position (“R,” “D,” “3,” “2,” or “L”) and the front wheels not moving.
- Do not use the accelerator to hold the vehicle on a hill. Use the vehicle’s brakes.

## MANUAL TRANSAXLE

### Starting off

To start off, push in the clutch pedal and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine’s sound, slowly press the accelerator while continuing to gradually release the clutch.


### Shifting

All forward gears are synchronized, which provides for quiet and easy shifting. Always push in the clutch pedal fully before shifting gears.



#### WARNING

*To change gears properly you must push the clutch pedal fully down. It is therefore essential that there is nothing under the pedals: make sure the mats are lying flat and do not get in the way of the pedals.*

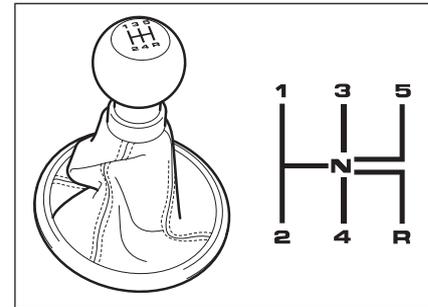

5-speed manual transaxle

78J002

## Downshifting maximum allowable speeds

### For 1.6 L engine

Downshifting	Km/h (mph)
2nd to 1st	50 (31)
3rd to 2nd	90 (56)
4th to 3rd	135 (84)
5th to 4th	180 (113)*

(\* NOTE You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

**IMPORTANT** When downshifting to a lower gear, make sure not to downshift at the speed faster than the maximum allowable speeds or severe engine damage can result.

## For vehicle with tachometer

Keep the engine speed so it does not get into the red zone of tachometer.



### WARNING

**– Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking.**

**– Avoid riding the brakes or they may overheat, resulting in brake failure.**

**– When driving on slippery roads, be sure to slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.**

**– Make sure that the vehicle is completely stationary before you shift into reverse.**

## IMPORTANT

- To help avoid clutch damage, do not use the clutch pedal as a footrest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

## USING THE 2WD/4WD SWITCH

(for versions/markets, where provided)

This 4WD system enables you to select the driving mode according to the driving conditions by operating the 2WD/4WD switch. With this feature, you can select 3 mode positions, “2WD”, “4WD AUTO” and “4WD LOCK” by operating the 2WD/4WD switch even when the vehicle is moving, provided the front wheels are in the straight ahead position.


### DESCRIPTION OF 3 MODE 4 X 4 SYSTEM POSITIONS

#### 2WD

In this position, engine power is supplied to the front axle only. Use this position for normal driving (on dry, hard surfaces).

#### 4WD AUTO

In this position, engine power is supplied to the front and rear axles at normal speed, providing greater traction than 2-wheel drive. Use this position for driving on paved roads or on slippery roads (icy, snow-covered, muddy, etc.).

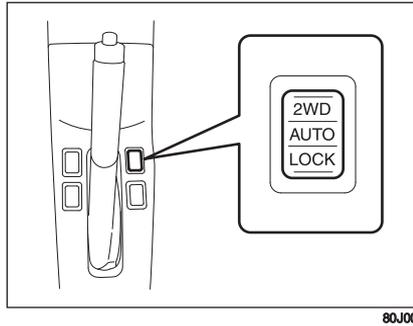

In the AUTO mode, the 4WD controller judges the driving conditions using signals from sensors.

When slipping of the front wheels is detected, the electronically controlled coupling supplies optimum driving force to the rear wheels. This function improves driving stability and running through performance on rough roads and stabilizes driving performance even on a snow covered up- hill road or the like.

Also, during normal driving on paved roads, torque distribution to the rear wheels is reduced to achieve the nearly front wheel drive condition, thereby fuel consumption is improved.

#### 4WD LOCK

In this position, engine power is supplied to the front and rear axles at reduced speed. Use this position when it is hard to start off in the “4WD AUTO” mode such as in mud, sand or on snow.

#### NOTE

- Avoid operating your vehicle in the “4WD LOCK” on wet pavement as much as possible. Operating your vehicle in the “4WD LOCK” on wet pavement may cause severe damage to the drive train.
- As the vehicle speed increases, the “4WD LOCK” mode is automatically canceled and the “4WD AUTO” mode is selected.
- When the ignition switch is turned to the “OFF” position, the “4WD LOCK” mode is canceled.

## 2WD/4WD SWITCH OPERATION

Operate the 2WD/4WD switch according to the appropriate procedure described below:

### How to turn on 2WD/4WD switch

2WD/4WD switch will activate when the ignition switch is turned on.

### From 2WD to 4WD AUTO

Turn the 2WD/4WD switch to the neutral position, and the “4WD AUTO” indicator will come on.



79J040

### From 4WD AUTO to 4WD LOCK

Push the “4WD LOCK” switch for a few seconds until the “4WD LOCK” indicator will come on.



79J100

### From 4WD LOCK to 4WD AUTO

Push the “4WD LOCK” switch, and the “4WD AUTO” indicator will come on.

### From 4WD AUTO or LOCK to 2WD

Push the “2WD” switch, and the “4WD AUTO” or “4WD LOCK” indicator will turn off.

#### NOTE

- The 2WD/4WD switch can be operated when the vehicle is either stopped or moving.
- Make sure that the front wheels are in the straight ahead position when operating the 2WD/4WD switch.
- While making turns or accelerating and decelerating, operating the 2WD/4WD switch or turning off the key switch in the “4WD AUTO” or “4WD LOCK” mode may cause a shock, but this is not a system malfunction.
- While driving in the “4WD LOCK” mode, as the vehicle speed increases, the driving mode changes to the “4WD AUTO” mode automatically. Even when the vehicle speed reduces, on the other hand, the driving mode does not return to the “4WD LOCK” mode automatically. You should press the “4WD LOCK” switch according to the driving conditions.

- Any forcible operation while driving off-road in the sand or water or when a wheel has run off the road, the difference of the revolution between front wheels and rear wheels increases (wheels run idle). If this state continues, the oil temperature of the driving system parts rises.

In such case, the “4WD AUTO” indicator light blinks and the driving mode changes to the 2WD mode to protect the driving system parts.

When you operate your vehicle in the 4WD mode continuously, park the vehicle at a safe place and run the engine idle. After some time, the “4WD AUTO” indicator light turns on again and the driving mode returns to the “4WD AUTO” mode.

#### IMPORTANT

- Never use the “4WD LOCK” mode when driving on dry paved roads.

Avoid using the “4WD LOCK” mode when driving on wet paved roads as much as possible. Use of the “4WD LOCK” mode in above conditions will apply excessive force to the driving system and may cause a critical failure. Also, the tires may wear faster and fuel consumption may be affected adversely.

- Note that 4WD vehicles are not all-terrain vehicles. Be sure to observe following instructions when driving your vehicle.


- Do not drive through water like crossing a river.
- Do not drive continuously where front wheels tend to race such as in the sand and mud.
- When any wheel is in the air for such reason as running off the road, do not race it needlessly.

- If the “4WD AUTO” and the “4WD LOCK” indicator lights stay on and come on simultaneously when driving, there may be something wrong with the 4WD system. Have the system inspected by an authorized Fiat Dealership.

**IMPORTANT** Unevenly worn tires can cause problems in the operation of the 2WD/4WD switch. Be sure to rotate the tires according to the maintenance schedule. Refer to “Tires” and “Maintenance Schedule” in the “INSPECTION AND MAINTENANCE” section for proper tire rotation procedures.

## BRAKING

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h (37 mph) will be approximately 4 times greater than the braking distance needed at 30 km/h (19 mph). Start to brake the vehicle when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

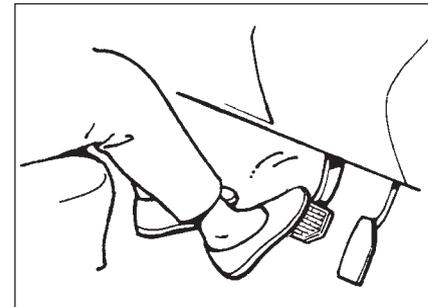

80G165A



### WARNING

*If water gets into the brake drums, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.*

## POWER-ASSISTED BRAKES

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.



### WARNING

*Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.*

## Brake Assist System

When you slam the brakes on, the brake assist system judges as an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

**NOTE** If you quickly and forcefully depress the brakes, you may hear a clicking sound in the brake pedal. This is normal and indicates that the brake assist system is activated properly.

## ANTI-LOCK BRAKE SYSTEM (ABS)

(for versions/markets, where provided)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.

The ABS works automatically, so you do not need any special braking technique.


Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal moves a little while the ABS is operating.

**NOTE** The ABS will not work if vehicle speed is under about 6 km/h (4 mph).



## WARNING

- On some types of loose surfaces (such as gravel, snow-covered roads, etc.) the stopping distance required for an ABS-equipped vehicle may be slightly greater than for a comparable vehicle with a conventional brake system. With a conventional brake system, skidding tires are able to “plow” the gravel or snow layer, shortening the stopping distance, ABS minimizes this resistance effect. Allow for extra stopping distance when driving on loose surfaces.
- On regular paved roads, some drivers may be able to obtain slightly shorter stopping distances with conventional brake systems than with ABS.
- In both of the above conditions, ABS will still offer the advantage of helping you maintain directional control. However, remember that ABS will not compensate for bad road or weather conditions or poor driver judgment. Use good judgment and do not drive faster than conditions will safely allow.

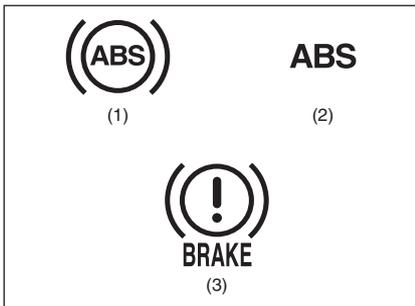

65D451

1. ABS warning light Type 1
2. ABS warning light Type 2
3. Brake system warning light



## WARNING

If the ABS warning light ((1) or (2)) on the instrument panel comes on and stays on while driving, there may be a problem with the ABS system. Ask your Fiat Dealership to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.



## WARNING

If the ABS warning light ((1) or (2)) and the Brake system warning light (3) on the instrument panel simultaneously stays on or comes on when driving, both anti-lock function and rear brake force control function (Proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road.

Ask your Fiat Dealership to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

## HOW THE ABS WORKS

A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle or when you accelerate after a hard stop, you may hear a momentary motor or clicking noise as the system resets or checks itself.



### WARNING

*The ABS may not work properly if tires or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tires or wheels, use only the size and type specified in this owner's manual.*

## ELECTRONIC STABILITY PROGRAM (ESP®)

(for versions/markets, where provided)

ESP® is a registered trademark of Daimler AG.

The Electronic Stability Program (ESP®) helps to control the vehicle during cornering if the vehicle is understeering or oversteering. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's output, and by selectively applying the brakes. In addition, ESP® helps to avoid skidding by controlling braking pressure.



### WARNING

*The ESP® cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP® cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only a safe and attentive driver can prevent accidents. The capabilities of an ESP® - equipped vehicle must never be used as a substitute for careful driving.*

The ESP® has the following three systems:

### STABILITY CONTROL SYSTEM

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and engine to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

### TRACTION CONTROL SYSTEM

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces engine power to limit wheel spin.

**NOTE** You may hear a clunking sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

## ANTI-LOCK BRAKING SYSTEM (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard. The ABS works automatically, so you do not have to use any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that wheels are locking up. You may feel the brake pedal pulsate while the ABS is operating.

(For more information on ABS, see “Braking” in this section.)

**NOTE** If the ABS system is activated, you may hear a clunking noise and/ or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.



### WARNING

***– The ESP® may not work properly if tires or wheels other than those specified in the Owner’s Manual are used. When replacing tires or wheels, use only the size and type specified in this Owner’s Manual.***

***– The ESP® may not work properly if tires are not inflated to the recommended tire inflation pressure.***

***– The ESP® may not work properly if tires are fitted with tire chains.***

***– The ESP® may not work properly if the tires are excessively worn. Be sure to replace tires when the tread wear indicators in the grooves appear on the tread surface.***

***– The ESP® is not a substitute for winter tires or tire chains on a snow covered road.***



### WARNING

***– The ESP® may not work properly if engine related parts such as the muffler are not equivalent to standard equipment or are extremely deteriorated.***

***– Do not modify the vehicle’s suspension since the ESP® may not operate correctly.***

The ESP® indicator lights are described below:

## SLIP INDICATOR LIGHT



52KM133

When one of the ESP® systems other than ABS is activated, the SLIP indicator light in the instrument cluster blinks 5 times per second.

**IMPORTANT** If the SLIP indicator light comes on and stays on while driving, there may be a malfunction of the ESP® systems (other than ABS). You should have the systems inspected by an authorized Fiat Dealership.

**NOTE** When the SLIP indicator light comes on and stays on while driving, indicating a malfunction of the ESP® systems (other than ABS), the brake system will function as an ordinary ABS with no additional ESP® functions.

## NOTE

When you disconnect and re- connect the battery, ESP<sup>®</sup> system functions other than ABS will be deactivated and the slip indicator light will blink 1 time per second. In this case, use the following procedure to reactivate the ESP<sup>®</sup> systems:

- Drive your vehicle straight ahead without tire slippage at a speed greater than approximately 15 km/ h (9 mph) for a few seconds
- The slip indicator light will go out and the ESP<sup>®</sup> systems (other than ABS) will be re- activated

It may take more than few seconds before the slip indicator light goes out depending on the road surface condition.

## ESP<sup>®</sup> Warning Light



When the ESP<sup>®</sup> systems (other than ABS) have a system malfunction, the ESP<sup>®</sup> warning light in the instrument cluster comes on.

**IMPORTANT** If the ESP<sup>®</sup> warning light comes on, or stays on while driving, there may be a malfunction of the ESP<sup>®</sup> systems (other than ABS). You should have the systems inspected by an authorized Fiat Dealership.

**NOTE** When the ESP<sup>®</sup> warning light comes on, or stays on while driving, indicating a malfunction of the ESP<sup>®</sup> systems (other than ABS), the brake system will function as an ordinary ABS that has no additional ESP<sup>®</sup> functions.

## ESP<sup>®</sup> OFF Indicator Light



You should turn the ESP<sup>®</sup> on during your ordinary driving, so that you have the benefits of all of the ESP<sup>®</sup> systems.

It may be required to turn the ESP<sup>®</sup> systems (other than ABS) off if your vehicle is stuck in sand, mud, or snow, where wheel spin is necessary.

## ESP<sup>®</sup> OFF switch



When the ESP<sup>®</sup> OFF switch located at the center of the instrument panel is pushed and held to turn off the ESP<sup>®</sup> systems (other than ABS), the ESP<sup>®</sup> OFF indicator light in the instrument cluster comes on.

When you have turned the ESP<sup>®</sup> systems (other than ABS) off, make sure to turn them back on before resuming ordinary driving.

When you push and hold the ESP<sup>®</sup> OFF switch again, the ESP<sup>®</sup> OFF indicator light will go out and all of the ESP<sup>®</sup> systems will be activated.

## ABS Warning Light / Brake System Warning Light

See “Braking” in this section.

## RUNNING-IN

**IMPORTANT** The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the initial 960 km (600 miles) of vehicle operation.


- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km (200 miles) of driving.
- Do not drive slowly with the transaxle in a high gear.
- Drive the vehicle at moderate engine speeds.
- Do not tow a trailer during the first 960 km (600 miles) of vehicle operation.

## CATALYTIC CONVERTER

(for versions/markets, where provided)

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalyst. This may result in permanent heat damage to the catalyst and other vehicle components.

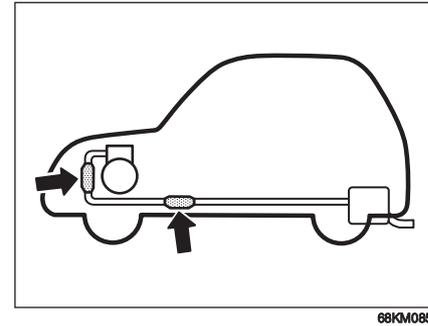

**IMPORTANT** To avoid damaging catalyst or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfiring or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transaxle is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.



54G584S

- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.
- Avoid driving your vehicle at excessively high engine speed in or around the red zone of the tachometer (for versions/markets, where provided).



### WARNING

**Be careful in areas where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.**

## IMPROVING FUEL ECONOMY

The following instructions will help you improve fuel economy.

### Avoid excessive idling

If you are to wait for more than a minute while you are parked, stop the engine and start it again later. When warming up a cold engine, allow the engine to idle until the temperature gauge pointer comes up to the “C” position (if the idling is not prohibited). In this position, the engine is sufficiently warm for starting off.

### Avoid “fast” starts


Fast starts away from lights or stop signs will consume fuel unnecessarily and shorten engine life. Start off slowly.

### Avoid unnecessary stops

Avoid unnecessary deceleration and stopping. Try to maintain a slow, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

### Keep a steady cruising speed

Keep as constant a speed as road and traffic conditions will permit.

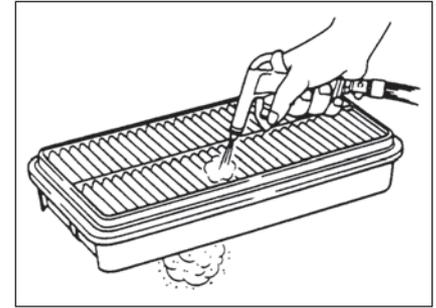

60A183S

### Keep the air cleaner clean

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.


### Keep weight to a minimum

The heavier the load, the more fuel the vehicle consumes. Take out any luggage or cargo when it is not necessary.

### Keep tire pressures correct

Underinflation of the tires can waste fuel due to increased running resistance of the tires. Keep your tires inflated to the correct pressure shown on the label on the driver's side door or the driver's door lock pillar.

# DRIVING TIPS

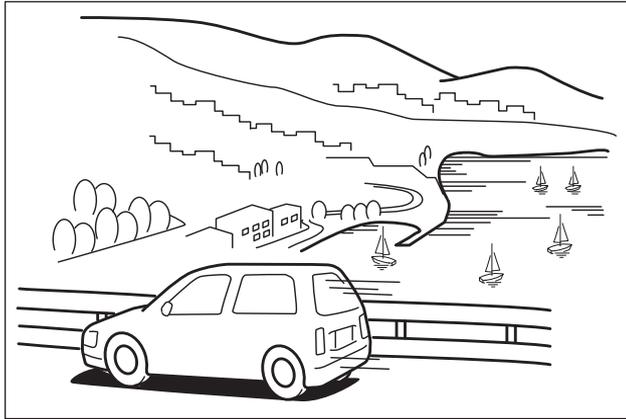

60G408

HIGHWAY DRIVING .....	162
DRIVING ON HILLS .....	162
DRIVING ON SLIPPERY ROADS .....	163



52D078S



### WARNING

**– Wear Your Seat Belts at All Times. Even though air bags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to the “Seat Belts and Child Restraint Systems” section for instructions on proper use of the seat belts.**

**– Never drive while under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated, or under stress.**

## HIGHWAY DRIVING

When driving at high-speed, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, “Aquaplaning” can occur. “Aquaplaning” is the loss of direct contact between the road surface and the vehicle’s tires due to a water film forming between them. Steering or braking the vehicle while “Aquaplaning” can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.


## DRIVING ON HILLS

- When climbing steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its normal power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting into a lower gear. (Do this with EITHER an automatic or manual transaxle.)



### WARNING

**Try not to hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.**

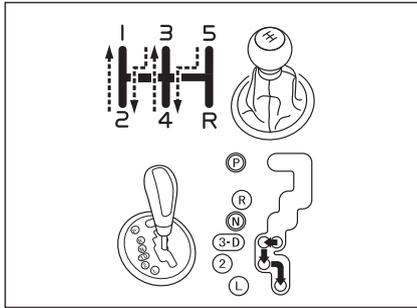

79J028

**IMPORTANT** When descending a down hill, **NEVER** turn the ignition key to the “OFF” position. Emission control system damage may result.

## DRIVING ON SLIPPERY ROADS

Under wet road conditions you should drive at a lower speed than on dry roads due to possible slippage of tires during braking. When driving on icy, snow-covered, or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements.

### FOR 4-WHEEL DRIVE (4WD) MODELS

Your 4WD is designed to get better traction on slippery roads than 2-wheel drive models. However, your 4WD will not have as much traction in deep snow, mud or sand as multipurpose 4WD vehicles. You should not attempt to drive your 4WD in deep snow, mud or sand. 4WD models are not sport/utility vehicles, and are not designed for off-road use.

### SNOW CHAINS

Snow chains should only be used if they are needed to increase traction or are required by law. Make sure that the chains you use are the correct size for your vehicle’s tires. Also make sure that there is enough clearance between the fenders and the chains as installed on the tires.



60G0895

Install the chains on the front tires tightly, according to the chain manufacturer’s instructions. Retighten the chains after driving about 1.0 km (1/2 mile) if necessary. With the chains installed, drive slowly.

### IMPORTANT

- If you hear the chains hitting against the vehicle body while driving, stop and tighten them.
- If your vehicle is equipped with full wheel caps, remove the wheel caps before installing the chains or the wheel caps can be damaged by the chain bands.

## IF YOUR VEHICLE GETS STUCK


If your vehicle gets stuck in snow, mud, or sand, follow the directions below:

- Shift the transaxle back and forth between first gear and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spin to a minimum. Remove your foot from the accelerator while shifting. Do not race the engine. Excessive wheel spin will cause the tires to dig deeper, making it more difficult to free the vehicle.
- If your vehicle remains stuck after a few minutes of rocking, get another vehicle to pull you out.



### WARNING

**Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h (25 mph) on the speedometer. Personal injury and/ or vehicle damage may result from spinning the wheels too fast.**

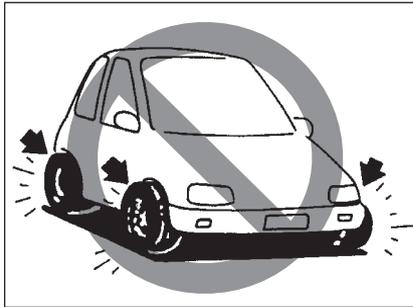

54G638S

**IMPORTANT** Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating or transaxle damage.



### WARNING

**In addition to following the driving tips in this section, it is important to observe the following precautions.**

**– Make sure your tires are in good condition and always maintain the specified tire pressure. Refer to “Tires” in the “INSPECTION AND MAINTENANCE” section for details.**




### WARNING

**– Do not use tires other than those specified by Fiat. Never use different sizes or types of tires on the front and rear wheels. For information regarding the specified tires, refer to the Tire Information Label located on the driver’s door lock pillar.**

**– Never use oversized tires or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tires may also rub against the fender over bumps, causing vehicle damage or tire failure.**

**– After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.**

# VEHICLE LOADING AND TOWING

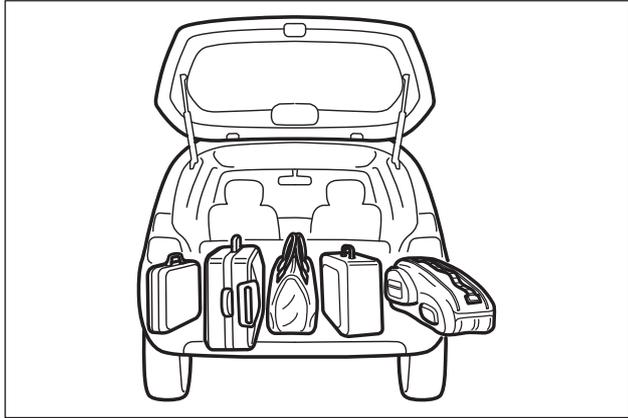

54G215

VEHICLE LOADING .....	166
TRAILER TOWING.....	166
TOWING YOUR VEHICLE (RECREATIONAL TOWING).....	171

## VEHICLE LOADING

The vehicle has been designed to bear specific loads. The vehicle capacity is indicated by the gross vehicle weight rating (GVWR) and by the max. allowed weight on each axis (PAW, front or rear). The gross weight is indicated in the “SPECIFICATIONS” section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.



### WARNING

**Avoid overloading the vehicle. The gross weight (weight of the vehicle with occupants, accessories, loads and towing device, if any) must never exceed the gross vehicle weight rating (GVWR). Further avoid distributing the load so that the weight on the front or rear axle exceeds the max. allowed weight (PAW).**



### WARNING

**Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.**

## TRAILER TOWING

Your Fiat was originally designed to carry people and a normal amount of cargo, not to tow a trailer. Fiat does not recommend you use your vehicle to tow a trailer if there is not any local regulation about towing capacity permitted (for example, registered or statutory towing capacity). Towing a trailer can adversely affect handling, durability, and fuel economy.

Some countries have regulations which specifically allow trailer towing up to a specified maximum trailer weight (registered or statutory towing capacity, whichever is smaller); vehicles sold in these countries can be used to tow a light trailer, provided the trailer does not exceed the maximum trailer weight specified in the country's regulations.

If you use your Fiat to tow a trailer, you should always observe the requirements and recommendations in this section. If you intend to tow a trailer, it is essential to select a trailer and trailer towing equipment which are compatible. A reputable towing specialist can help you.

**IMPORTANT** Trailer towing puts additional stress on the engine, drive train, and brakes of your vehicle. Never tow a trailer during the first 960 km (600 miles) of vehicle operation.

**IMPORTANT** For Automatic Transaxle vehicles, do not use “D” range when towing on a steep hill. Towing in “D” range when driving on a steep hill can cause automatic transaxle fluid overheating without warning, which can result in transaxle damage.

## TOW BARS

Only use a tow bar that is designed to attach to the chassis of your vehicle, and a hitch that is designed to bolt to this bracket.



### WARNING

**Never use a tow bar which attaches to the axle or the bumper of your vehicle.**

## SAFETY CHAINS

Always attach safety chains between your vehicle and trailer. Cross safety chains under the nose of the trailer so that the nose will not drop to the road if the trailer becomes separated from the tow bar. Follow the manufacturer’s recommendation for attaching safety chains. Always leave just enough slack to permit full turning. Never allow safety chains to drag on the road.



### WARNING

**Never attach safety chains to the bumper of your vehicle. Secure connections so that they can’t come loose.**

## TRAILER LIGHTS

Make sure your trailer is equipped with lights which meet local requirements. Always check for the proper operation of all trailer lights before you start to tow.



### WARNING

**Never connect trailer lights directly into your vehicle’s electrical system, or electrical system damage may occur.**

## BRAKES



### WARNING

**If trailer brakes are used, you should follow all instructions provided by the manufacturer. Never connect to the brake system of your vehicle and never take an electrical supply directly from the wiring harness.**

## TIRES



### WARNING

*When towing a trailer, it is very important for your vehicle and trailer to have properly inflated tires. Your vehicle's tires should be inflated to the pressures listed on your vehicle's Tire Information label. If laden pressures are listed on the label, the tires should be inflated to the laden pressures. Inflate trailer tires according to the specifications provided by the trailer manufacturer.*

## MIRRORS

Check to see if your vehicle's mirrors meet local requirements for mirrors used on towing vehicles. If they do not, you must install the required mirrors before you tow.

## VEHICLE/TRAILER LOADING

To load your vehicle and trailer properly, you must know how to measure gross trailer weight and trailer nose weight.

Gross Trailer Weight is the weight of the trailer plus all the cargo in it. You can measure gross trailer weight by putting the fully loaded trailer on a vehicle scale.

Nose Weight is the downward force exerted on the tow bar by the trailer coupler, with the trailer fully loaded and the coupler at its normal towing height. This weight can be measured using a bathroom scales.

The weight of your loaded trailer (Gross Trailer Weight) should never exceed the "Towing capacity".

Distribute cargo in your trailer so that nose weight is about 10% of gross trailer weight, but does not exceed "Maximum vertical load on trailer hitch point". You should measure gross trailer weight and nose weight before towing to make sure that your load is properly distributed.



### WARNING

*Improper weight distribution of your trailer may result in poor vehicle handling and swaying of the trailer. Always make sure that trailer nose weight is about 10% of gross trailer weight, but does not exceed "Maximum vertical load on trailer hitch point". Also make sure that the cargo is properly secured. Failure to observe this requirement may result in an accident.*



### WARNING

Never overload your trailer or your vehicle. Gross trailer weight must never exceed the “Towing capacity”. Gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories including tow bars and a trailer hitch, cargo and trailer nose weight) must never exceed the Gross Vehicle Weight Rating (GVWR) listed in the “SPECIFICATIONS” section.

## ADDITIONAL TRAILER TOWING WARNINGS



### WARNING

Connect trailer lights and hook up safety chains every time you tow.

**IMPORTANT** Because towing a trailer puts additional stress on your vehicle, more frequent maintenance will be required than under normal driving conditions. Follow the schedule for “Maintenance Recommended under Severe Driving Conditions”.



### WARNING

Your vehicle will handle differently when towing a trailer. For your safety and the safety of others, you should observe the following precautions:

– Practice turning, stopping, and reversing before you begin towing in traffic. Do not tow in traffic until you are confident that you can handle the vehicle and trailer safely.

– Never exceed towing speed limits or 80 km/h (50 mph), whichever is lower.

– Never drive at a speed that causes shaking or swaying of the trailer. If you notice even the slightest sign of shaking or swaying, slow down.

– When roads are wet, slippery or rough, drive at a slower speed than you would on dry, smooth roads.

Failure to slow down when road conditions are bad can result in loss of control.

– Always have someone guide you when reversing.

– Allow adequate stopping distance. Stopping distance is increased when you tow a trailer. For each 16 km/h (10 mph) of speed, allow at least one vehicle and trailer length between you and the vehicle ahead. Follow at a greater distance if roads are wet or slippery.



### WARNING

– If the trailer has over-run brakes, apply the brakes gradually to avoid snatching caused by the trailer wheels locking.

– Slow down before corners and maintain a steady speed while cornering. Deceleration or acceleration while cornering can result in loss of control. Remember that a larger than normal turning radius is needed because the trailer wheels will be closer than vehicle wheels to the inside of the turn.

– Avoid sudden acceleration and stopping of the vehicle. Do not make quick maneuvers unless they are necessary.

– Slow down in cross winds and be prepared for gusts of wind from large passing vehicles.

– Be careful when overtaking other vehicles. Be sure to allow enough room for your trailer before you change lanes, and signal well in advance.


– Slow down and shift into a lower gear before you reach long or steep downhill grades. It is hazardous to attempt downshifting while you are descending a hill.



### WARNING

– Avoid “riding” the brakes. This could cause the brakes to overheat resulting in reduced braking efficiency. Use engine braking as much as possible.

– Because of the added trailer weight, your engine may overheat on hot days when going up long or steep hills. Pay attention to your engine temperature gauge. If it indicates overheating, pull off the road and stop in a safe place. Refer to “If the Engine Overheats” in “EMERGENCY SERVICE” section.

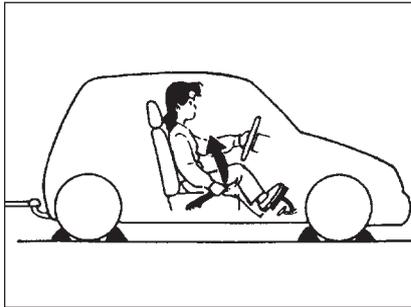

60A186



### WARNING

When parking your vehicle and connected trailer, always use the following procedure:


- Apply the vehicle’s brakes firmly.
- Have another person place wheel chocks under the wheels of the vehicle and the trailer while you are holding the brakes.
- Slowly release the brakes until the wheel chocks absorb the load.
- Fully engage the parking brake.
- Manual Transaxle – Shift into Reverse or first gear and turn off the engine.
- Automatic Transaxle – Shift into Park and turn off the engine.



### WARNING

When starting out after parking:

- Depress the clutch and start the engine.
- Shift into gear, release the parking brake, and slowly pull away from the chocks.
- Stop, apply the brakes firmly and hold them.
- Have another person remove the chocks.

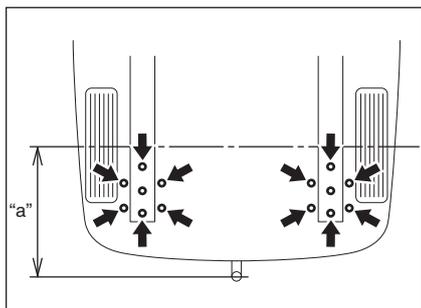

79J158

### Registered maximum vertical load on trailer hitch point (EU)

50 kg (110 lbs)

### Maximum permissible overhang "a"

810 mm (31.9 in.)

## TOWING YOUR VEHICLE (RECREATIONAL TOWING)

Your vehicle may be towed behind another vehicle (such as a motorhome), provided you use the proper towing method specified for your vehicle. The towing method you must use depends on the specifications of your vehicle: whether it is a 2-wheel drive (2WD) vehicle or a 4-wheel drive (4WD) vehicle.

Use the towing instruction table to select the proper towing method for your vehicle, and carefully follow the corresponding instructions. Be sure to use proper towing equipment designed for recreational towing and make sure that towing speed does not exceed 90 km/h (55 mph).

**IMPORTANT** Towing an automatic transaxle vehicle with four wheels on the ground can result in damage to the automatic transaxle.



### WARNING

*When you tow your vehicle, follow the instructions below to avoid accidents and damage to your vehicle. In addition, be sure to observe government and local requirements regarding vehicle lighting and trailer hitches or tow bars.*



### WARNING

*A safety chain should always be used when you tow your vehicle.*

## TOWING INSTRUCTION TABLE


DRIVE TRAIN	TRANSAXLE	TOWING METHOD
2WD	A/T	A
	M/T	A B
4WD including 2WD mode	M/T	B



54G641

### TOWING METHOD A

FROM THE FRONT:  
FRONT WHEELS ON A DOLLY  
AND REAR WHEELS ON THE GROUND

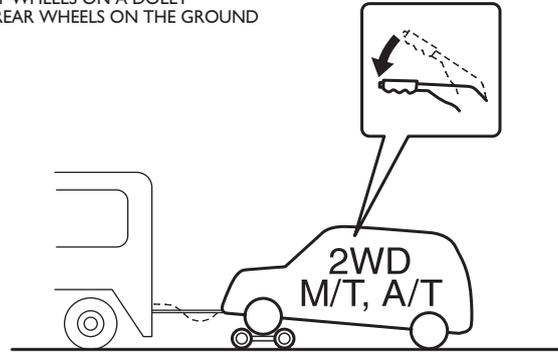


54G212

### A: 2WD (EXCEPT 2WD MODE OF 4WD) VEHICLES WITH MANUAL TRANSAXLE OR AUTOMATIC TRANSAXLE

- Secure the front wheels on a towing dolly according to the instructions provided by the dolly manufacturer.
- Release the parking brake.

## TOWING METHOD B

FROM THE FRONT:  
FOUR WHEELS ON THE GROUND

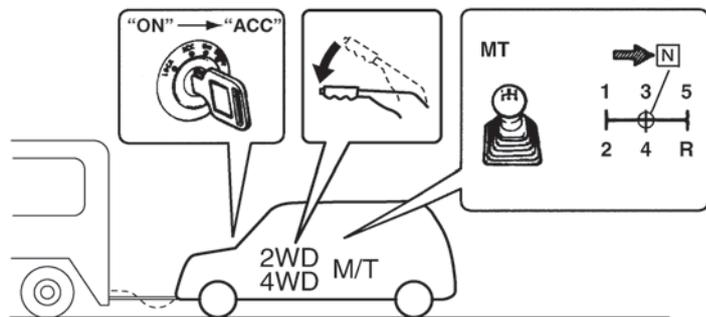

79J130

## B: 2WD (EXCEPT 2WD MODE OF 4WD) VEHICLES WITH MANUAL TRANSAXLE

- Shift the manual transaxle lever into neutral.
- Turn the ignition key to the “ACC” position to unlock the steering wheel.
- Release the parking brake.


**IMPORTANT** The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.

**B: 4WD (INCLUDING 2WD MODE OF 4WD) VEHICLES WITH MANUAL TRANSAXLE**


**IMPORTANT** Do not tow the 4WD vehicle with either front wheels or rear wheels directly on the ground (and the transaxle in neutral). If you do, the transaxle will be damaged fatally.

- Shift the 2WD/4WD switch to the “2WD” mode.
- Shift the manual transaxle lever into neutral.
- Turn the ignition key to the “ACC” position to unlock the steering wheel.
- Release the parking brake.

**IMPORTANT** The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.

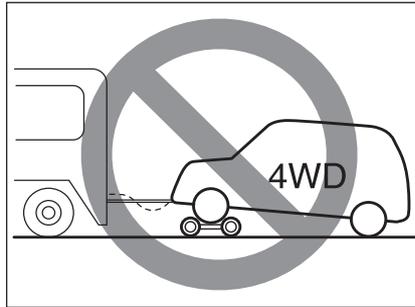


79J175

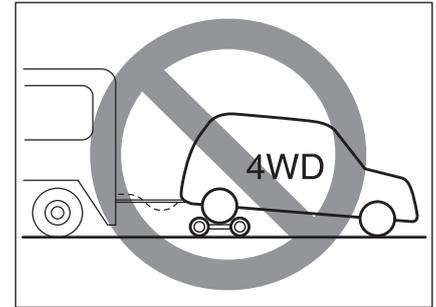

79J176

# INSPECTION AND MAINTENANCE

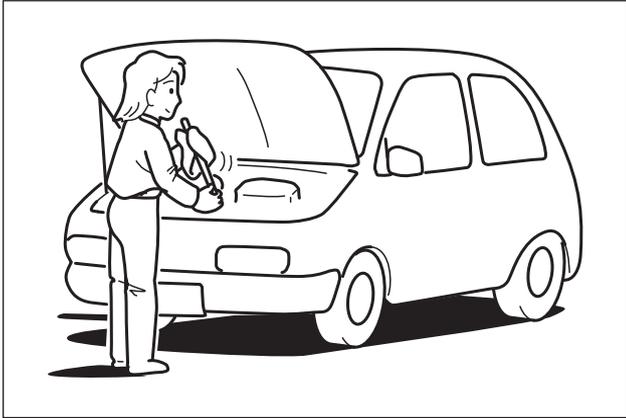

60G410

MAINTENANCE SCHEDULE.....	177
SERVICE SCHEDULE .....	178
MAINTENANCE RECOMMENDED UNDER SEVERE DRIVING CONDITIONS .....	180
DRIVE BELT .....	181
ENGINE OIL AND OIL FILTER.....	181
GEAR OIL.....	185
AUTOMATIC TRANSAXLE (AT) FLUID .....	187
ENGINE COOLANT .....	188
WINDSHIELD WASHER FLUID.....	191
AIR CLEANER.....	191
SPARK PLUGS .....	192
BRAKES.....	194
STEERING .....	196
CLUTCH PEDAL .....	197
TIRES.....	197
BATTERY.....	202
FUSES.....	204
BULB REPLACEMENT.....	208
WIPER BLADES.....	214
AIR CONDITIONING SYSTEM.....	217



60B128S



### WARNING

You should take extreme care when working on your vehicle to prevent accidental injury. Here are a few precautions that you should be especially careful to observe:

– To prevent damage or unintended activation of the air bag system or seat belt pretensioner system, be sure the battery is disconnected and the ignition switch has been in the “LOCK” position for at least 90 seconds before performing any electrical service work on your Fiat. Do not touch air bag system components, seat belt pretensioner system components or wires.

The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

– Do not leave the engine running in garages or other confined areas.



### WARNING

– When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.

– When it is necessary to do service work with the engine running, make sure that the parking brake is set fully and the transaxle is in Neutral (for manual transaxle vehicles) or Park (for automatic transaxle vehicles).

– Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.

– Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.

– Do not allow smoking, sparks, or flames around gasoline or the battery. Flammable fumes are present.

– Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.



### WARNING

– Be careful not to cause accidental short circuits between the positive and negative battery terminals.

– Keep used oil, coolant, and other fluids away from children and pets.

Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

## MAINTENANCE SCHEDULE

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in miles, kilometers and months when you should perform inspections, adjustments, lubrication and other services. These intervals should be shortened if driving is usually done under severe conditions (refer to “Maintenance Recommended under Severe Driving Conditions”).

**IMPORTANT** The Programmed Maintenance coupons are specified by the Manufacturer. The failure to have them carried out may invalidate the warranty.

**IMPORTANT** Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use genuine Fiat replacement parts.



### WARNING

*Vehicle maintenance should be entrusted to Fiat Dealership. For routine and minor maintenance operations you wish to carry out yourself, always make sure you have the proper equipment, genuine Fiat spare parts and the necessary fluids; do not however carry out these operations if you have no experience.*



### WARNING

*The shock absorbers are filled with high pressure gas. Never attempt to disassemble it or throw it into a fire. Avoid storing it near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask your Fiat Dealership for assistance.*

# SERVICE SCHEDULE

Service coupons shall be carried out every 15,000 km

Thousands of km	15	30	45	60	75	90	105	120	135	150	165	180
Check tyre condition/wear and adjust pressure, if required	●	●	●	●	●	●	●	●	●	●	●	●
Check lighting system operation (headlights, direction indicators, hazard lights, passenger compartment lights, boot lights, instrument panel warning lights, etc.)	●	●	●	●	●	●	●	●	●	●	●	●
Check windscreen wiper/washer operation and adjust nozzles, if required	●	●	●	●	●	●	●	●	●	●	●	●
Check the position/wear of the windscreen/rearscreen wiper blades	●	●	●	●	●	●	●	●	●	●	●	●
Check condition and wear of front disc brake pads and brake pad wear indication	●	●	●	●	●	●	●	●	●	●	●	●
Check rear disc brake pad or shoes condition and wear		●		●		●		●		●		●
Visually inspect the condition of: bodywork, underbody protection, pipes and hoses (exhaust - fuel - brakes), rubber parts (gaiters, sleeves, bushes, etc.)	●	●	●	●	●	●	●	●	●	●	●	●
Check and top up, if required, fluid levels (brake/hydraulic clutch fluid, windscreen washer fluid, battery fluid, engine coolant, etc.)	●	●	●	●	●	●	●	●	●	●	●	●
Visually inspect condition of auxiliary drive belt			●						●			
Check the handbrake lever travel and adjust it	●		●		●		●		●		●	
Check and adjust tappet clearance, if required		●		●		●		●		●		●
Check exhaust emissions		●		●		●		●		●		●
Check battery charge status and recharge if necessary	●	●	●	●	●	●	●	●	●	●	●	●

	Thousands of km											
	15	30	45	60	75	90	105	120	135	150	165	180
Check cleanliness of locks, bonnet and boot, and cleanliness and lubrication of linkages	●	●	●	●	●	●	●	●	●	●	●	●
Replace spark plugs (replace Iridium spark plugs every 105,000 km) or every 7 years			●			●			●			●
Change engine oil and oil filter	●	●	●	●	●	●	●	●	●	●	●	●
Check air cleaner conditions	●	●		●	●		●	●		●	●	
Replace air filter cartridge			●			●			●			●
Change engine coolant			●			●			●			●
Replace auxiliary drive belt						●						●
Sight inspect fuel tank conditions			●			●			●			●
Check manual transaxle gear oil level	●											
Check automatic transaxle gear oil level		●		●		●		●		●		
Change manual transaxle gear oil			●			●			●			●
Change automatic transaxle gear oil											●	
Check transmission unit oil level (4x4 version)	●		●		●		●		●		●	
Check rear differential oil level (4x4 version)			●		●		●		●		●	
Change rear differential oil (4x4 version) (just the first time at 15,000 km)	●											
Check suspension operation		●		●		●		●		●		●
Check steering system		●		●		●		●		●		●
Check engine management system operation (via diagnostic socket)		●		●		●		●		●		●
Change brake and clutch fluid (or every 2 years)		●		●		●		●		●		●
Replace pollen filter (or every 2 years)		●		●		●		●		●		●

# MAINTENANCE RECOMMENDED UNDER SEVERE DRIVING CONDITIONS

If the vehicle is usually used under the conditions corresponding to any severe condition code given below, it is recommended that applicable maintenance operation be performed at the particular interval as given in the chart below.

## Severe condition code

- A** Repeated short trips
- B** Driving on rough and/or muddy roads
- C** Driving on dusty roads
- D** Driving in extremely cold weather and/or salted roads
- E** Repeated short trips in extremely cold weather
- F** Leaded fuel use

**G** ---

**H** Trailer towing (if admitted)

## Maintenance Operation

- I** Inspect and correct or replace if necessary
- R** Replace or Change

NOTE 4WD: 4-wheel drive

Severe Condition Code	Maintenance	Maintenance Operation	Maintenance Interval
<b>B C D</b>	Engine accessory drive belt (V-rib belt)	<b>I</b>	Every 15,000 km (9,000 miles) or 12 months
		<b>R</b>	Every 45,000 km (27,000 miles) or 36 months
<b>A C D E F H</b>	Engine oil and oil filter	<b>R</b>	Every 7,500 km (4,500 miles) or 6 months
		<b>R</b>	Every 30,000 km (18,000 miles) or 24 months
<b>A B C E F H</b>	Spark plugs	<b>R</b>	Every 30,000 km (18,000 miles) or 24 months
	Iridium plug (Highly recommended) Nickel plug (Standard type)	<b>R</b>	Every 10,000 km (6,000 miles) or 8 months
<b>C</b>	Air cleaner filter element (Inspect or replace more frequently if necessary)	<b>I</b>	Every 2,500 km (1,500 miles)
		<b>R</b>	Every 30,000 km (18,000 miles) or 24 months
<b>B E H</b>	Automatic transaxle fluid change	<b>R</b>	Every 30,000 km (18,000 miles) or 24 months
<b>B C D H</b>	Wheel bearings	<b>I</b>	Every 15,000 km (9,000 miles) or 12 months
<b>B D E H</b>	Drive axle boots/Propeller shaft (4WD)	<b>I</b>	Every 15,000 km (9,000 miles) or 12 months
<b>B E H</b>	<ul style="list-style-type: none"> <li>• Transfer oil (4WD)</li> <li>• Differential oil (4WD)</li> </ul>	<b>R</b>	First time only: 15,000 km (9,000 miles) or 12 months
			Second time and after: Every 30,000 km (18,000 miles) or 24 months reckoning from 0 km (0 mile) or 0 month
		Manual transaxle oil	<b>I</b>
<b>C D</b>	Air conditioner filter element (for versions/markets, where provided) (Clean more frequently if the air flow from the air conditioner decreases)	<b>R</b>	Every 75,000 km (45,000 miles) or 60 months
		<b>I</b>	Every 15,000 km (9,000 miles) or 12 months
		<b>R</b>	Every 45,000 km (27,000 miles) or 36 months

## DRIVE BELT




### WARNING

**When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.**

Make sure the drive belt tension is correct. If the belt is too loose, insufficient battery charging, engine overheating, poor power steering, poor air conditioning, or excessive belt wear can result. When you press the belt with your thumb midway between the pulleys, there should be a deflection according to the following chart.

The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by your Fiat Dealership.

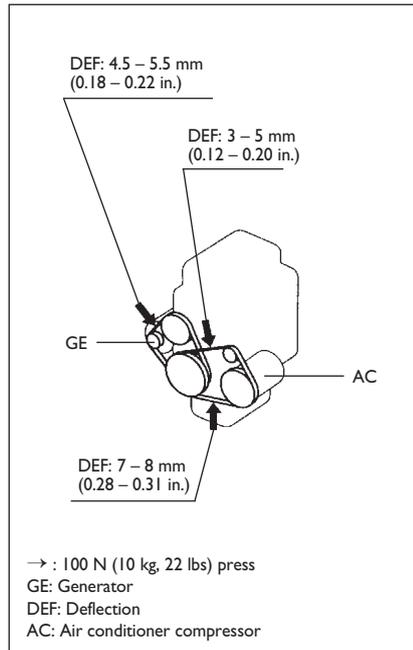

63J182

## ENGINE OIL AND FILTER


### OIL SPECIFICATIONS - GASOLINE ENGINES

Check that the engine oil used meets the ACEA C3 specifications; recommended product SELENIA K P.E. SAE 5W-40 C.T.R. F603.C07 classification FIAT 9.55535-S2.


## OIL LEVEL CHECK

It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.

The handle of the engine oil dipstick is colored yellow for easy identification. Pull out the oil dipstick, wipe oil off with a clean cloth, insert the dipstick all the way into the engine, then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

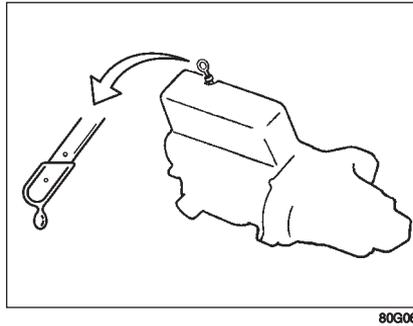


**IMPORTANT** Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

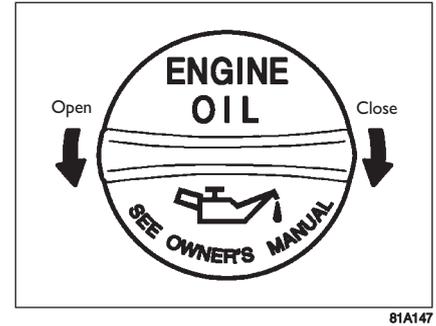

## REFILLING

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

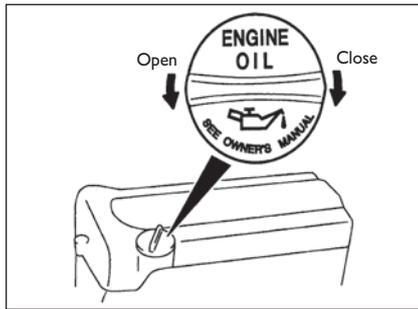

54G091S

## CHANGING ENGINE OIL AND FILTER


Drain the engine oil while the engine is still warm.

- Remove the oil filler cap.
- Place a drain pan under the drain plug.
- Using a wrench, remove the drain plug and drain out the engine oil.



### WARNING

*The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.*

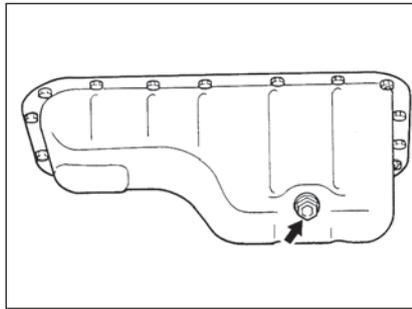

60G306

Tightening torque for drain plug:  
35 Nm (3.5 kgm, 25.3 lb·ft)



### WARNING

*New and used oil can be hazardous.*

*Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.*

*Repeated, prolonged contact with used engine oil may cause skin cancer.*

*Brief contact with used oil may irritate skin.*



### WARNING

*To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.*


*Launder any clothing or rags if wet with oil.*

*Recycle or properly dispose of used oil and filters.*

- Reinstall the drain plug and gasket. Tighten the plug with a wrench to the specified torque.

## REPLACE THE OIL FILTER


- Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
- Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- Smear a little engine oil around the rubber gasket of the new oil filter.
- Screw on the new filter by hand until the filter gasket contacts the mounting surface.

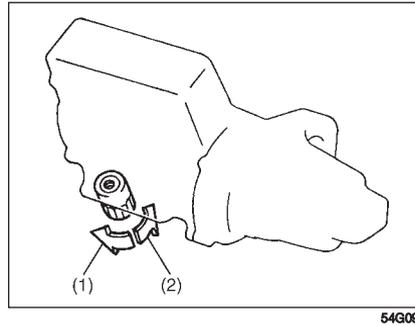

1. Loosen
2. Tighten

**IMPORTANT** To tighten the oil filter properly, it is Important to accurately identify the position at which the filter gasket first contacts the mounting surface.

- Tighten the filter specified turn from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

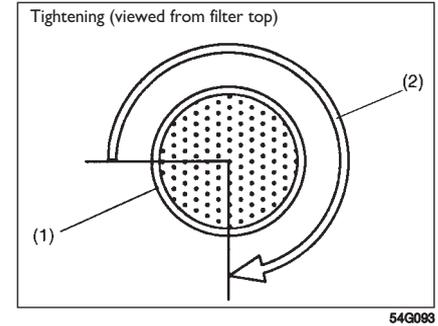

1. Oil filter
2. 3/4 turn

**Tightening torque for oil filter:**  
**3/4 turn or 14 Nm**  
**(1,4 kgm, 10,1 lb-ft)**

**IMPORTANT** To prevent oil leakage, make sure that the oil filter is tight, but do not over-tighten it.

## Refill with Oil and Check for Leaks

- Pour oil through the filler hole and install the filler cap.  
For the approximate capacity of the oil, refer to the "Capacities" item in the "SPECIFICATIONS" section.
- Start the engine and look carefully for leaks at the oil filter and drain plug. Run the engine at various speeds for at least 5 minutes.
- Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leaks again.

### IMPORTANT

- When replacing the oil filter, it is recommended that you use a genuine Fiat replacement filter. If you use an after-market filter, make sure it is of equivalent quality and follow the manufacturer's instructions.
- Oil leaks from around the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leaks or are not sure that the filter has been properly tightened, have the vehicle inspected by your Fiat Dealership.


## GEAR OIL

### Manual Transaxle Oil/Transfer Oil (4WD)/Rear Differential Oil (4WD)

When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the charts below.

We highly recommend you use: TUTELA CAR XVI LD, SAE 75W-80, API GL-4, FIAT 9.55550-MZ5, Contractual Technical Reference N° F921.B10. Synthetic oil for manual transaxle gearboxes of petrol and diesel engines.

### Manual transaxle oil (API GL-4)

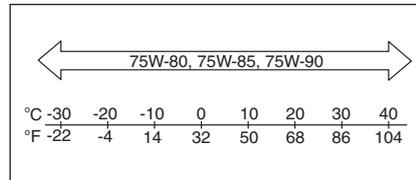


80J2087

We highly recommend you use:

Hypoid gear oil TUTELA W90/M - DA, SAE 80W-90, API GL-5, for transmission and rear differential unit (4WD versions).

### Transfer oil (4WD) Rear differential oil (4WD) (API GL-5 Hypoid)

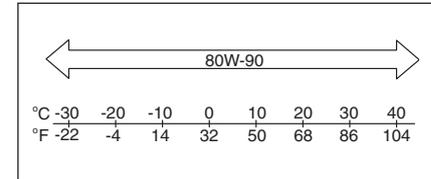

80J2147

### Gear Oil Level Check

#### Manual transaxle

To check the gear oil level, use the following procedure:

- Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- Remove the oil filler plug ((1) or (2)).

- ❑ Check the inside of the hole with your finger. If the oil level comes up to the bottom of the plug hole, the oil level is correct. If so, reinstall the plug.
- ❑ If the oil level is low, add gear oil through the oil filler plug hole ((1) or (2)) until the oil level reaches the bottom of the filler hole, then reinstall the plug.

**Tightening torque for oil filler and level plug (1) and (2)**



**Manual transaxle/Transfer:**

**21 Nm (2.1 kgm, 15.2 lb·ft)**

**Rear differential:**

**23 Nm (2.3 kgm, 17.0 lb·ft)**

NOTE To check the transfer oil (4WD), bring your vehicle to your FIAT Dealership since special procedures, materials and tools are required.

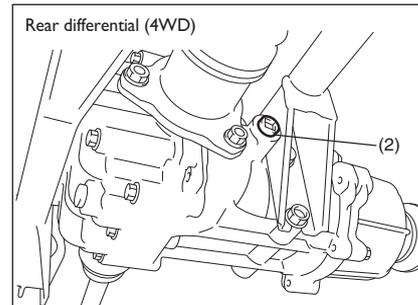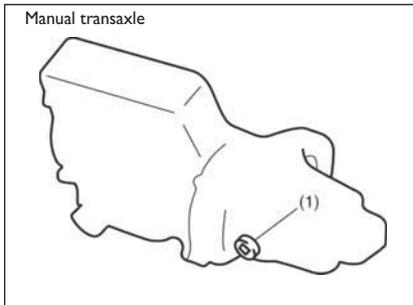

**WARNING**

*After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler plug is cool enough to touch with your bare hands before inspecting transaxle oil.*

**IMPORTANT** When tightening the plug, apply sealing compound Loctite 510 or equivalent to the plug threads to prevent oil leakage.

**Gear Oil Change**

Since special procedures, materials and tools are required, it is recommended that you trust this job to your authorized Fiat Dealership.

# AUTOMATIC TRANSAXLE (AT) FLUID

(for versions/markets, where provided)

## SPECIFIC FLUID

Contact Fiat Dealership to receive indications about the proper fluid to use.

## FLUID LEVEL CHECK


**IMPORTANT** Driving with too much or too little fluid can damage the transaxle.

You must check the fluid level with the automatic transaxle fluid at normal operating temperature.

To check the fluid level:

- To warm up the transaxle fluid, drive the vehicle or idle the engine until the temperature gauge indicates normal operating temperature.
- Then drive for ten more minutes.


**IMPORTANT** To prevent damages to the automatic transaxle of your vehicle, never use a fluid different than that recommended by Fiat Dealership.

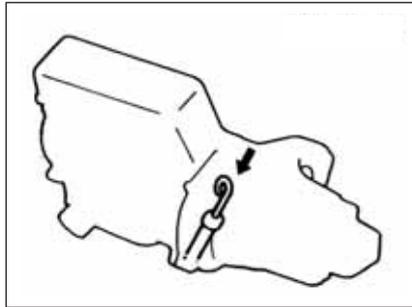

63J125

**NOTE** Do not check the fluid level if you have just driven the vehicle for a long time at high speed, if you have driven in city traffic in hot weather, or if the vehicle has been pulling a trailer. Wait until the fluid cools down (about 30 minutes), or the fluid level indication will not be correct.

- Park your vehicle on level ground.
- Apply the parking brake and then start the engine in "P" (Park). Let it idle for two minutes and keep it running during the fluid level check.
- With your foot on the brake pedal, move the gearshift lever through each range, pausing for about three seconds in each range. Then move it back to the "P" (Park) position.

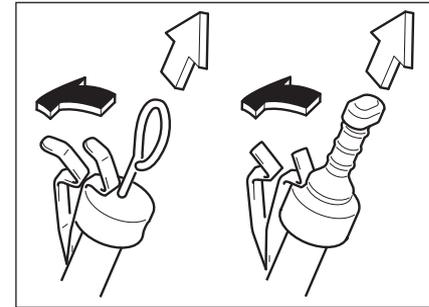


52KM144



## WARNING

**Be sure to depress the brake pedal when moving the gearshift lever, or the vehicle can move suddenly.**

- The handle of the A/T fluid dipstick is colored red or orange for easy identification. Remove the dipstick, clean it and push it back in until the cap seats. Then pull out the dipstick.
- Check both sides of the dipstick, and read the lowest level. The fluid level should be between the two marks in the "HOT" range on the dipstick.

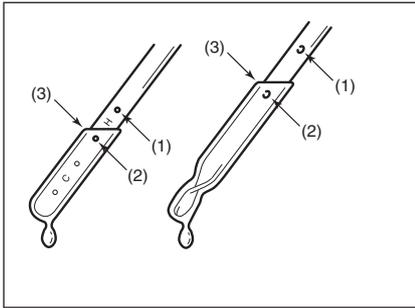

54G317

1. FULL HOT
2. LOW HOT
3. The lowest point = Fluid level

- Add just enough specified fluid through the dipstick hole to fill the transaxle to the proper level.

**IMPORTANT** After checking or adding oil, be sure to insert the dipstick securely.

## CHANGING OIL

Since special procedures, materials, and tools are required to change the automatic transaxle oil, it is recommended that you trust this job to your authorized FIAT dealer.

## ENGINE COOLANT


### SELECTION OF COOLANT

To maintain optimum performance and durability of your engine, use **PARAFLU<sup>UP</sup>**.

This type of coolant is best for your cooling system as it:

- Helps maintain proper engine temperature.
- Gives proper protection against freezing and boiling.
- Gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. Your authorized Fiat Dealership can help you select the proper coolant.

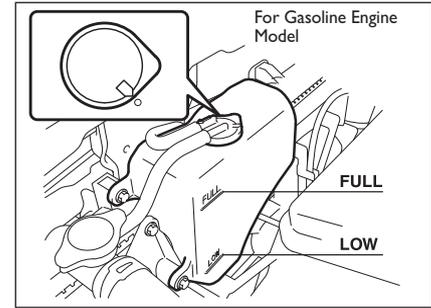

56K090

### IMPORTANT

To avoid damaging your cooling system:

- Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.
- Make sure that the proper mix is 50/50 coolant to distilled water and in no case higher than 70/30. Concentrations greater than 70/30 coolant to distilled water will cause overheating conditions.
- Do not use straight coolant nor plain water.

- ❑ Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- ❑ Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/ or the possibility of severe overheating and extensive engine/automatic transaxle damage. In any case, topping up to 20% of the maximum capacity of the system is permitted with **PARAFLU<sup>UP</sup>**, with a different colour to the basic coolant.

## COOLANT LEVEL CHECK

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between the “FULL” and “LOW” marks.

## ADDING COOLANT



### WARNING

***It is hazardous to remove the degassing tank cap for Diesel engine when the water temperature is high, because scalding fluid and steam may be blown out under pressure. Wait until the coolant temperature has lowered before removing the cap.***

If the coolant level is below the “LOW” mark, more coolant should be added.

When the engine is cool, remove the degassing tank cap by turning it anticlockwise slowly to release any pressure. And add coolant until the degassing tank level reaches the “FULL” mark. Never fill the degassing tank above the “FULL” mark.

### IMPORTANT

- ❑ The mixture you use should contain 50% concentration of antifreeze.

- ❑ If the lowest ambient temperature in your area is expected to be  $-35^{\circ}\text{C}$  ( $-31^{\circ}\text{F}$ ) or below, use higher concentrations up to 60% following the instructions on the antifreeze container.
- ❑ When putting the cap on the reservoir tank, line up the arrow on the cap and the arrow on the tank. Failure to follow this can result in coolant leakage.




### WARNING

***Engine coolant is harmful or fatal if swallowed or inhaled. Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. Avoid inhaling mist or hot vapors; if inhaled, remove to fresh air. If coolant gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of the reach of children and animals.***



79J007

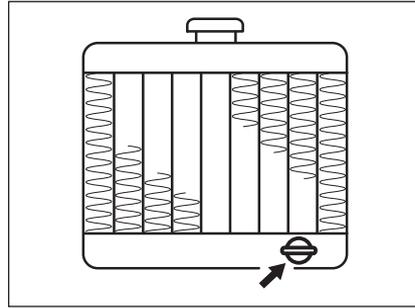

60A212

## COOLANT REPLACEMENT



### WARNING

*It is hazardous to remove the radiator cap when the water temperature is high, because scalding fluid and steam may be blown out under pressure. Wait until the coolant temperature has lowered before removing the cap.*

- When the engine is cool, remove the radiator cap by turning it slowly to the left until a “stop” is felt. Do not press down while turning the cap. Wait until any pressure is released, then press down on the cap and continue turning it anticlockwise.

- Check the coolant level in the radiator again. If the level has gone down, add more coolant.

**IMPORTANT** The coolant must be replaced with the vehicle on level ground.

- Remove the reservoir by lifting it up, and drain the reservoir completely.
- Loosen the drain plug attached to the lower part of the radiator and drain the coolant into a suitable container.
- Reinstall the reservoir and fill it with coolant to the “FULL” line.
- Tighten the drain plug on the radiator.
- Fill the radiator with coolant and install the radiator cap.
- After filling, let the engine idle for about 2–3 minutes to get rid of air in the cooling system.
- Stop the engine.

## WINDSHIELD WASHER FLUID

Check windscreen washer fluid level in the tank and if required top up with TUTELA PROFESSIONAL SC35 diluted with water, if necessary.



### WARNING


Do not use “antifreeze” solution in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and can also damage your vehicle’s paint.



### WARNING

Do not travel with the windscreen washer reservoir empty: the windscreen washer is fundamental for improving visibility.

Front and rear (for versions/markets, where provided)

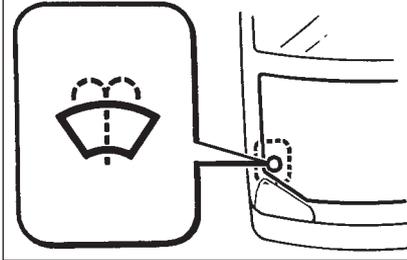


### WARNING

Certain commercial additives for windscreen washers are inflammable. The engine compartment contains hot components which may set it on fire.

## AIR CLEANER


If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

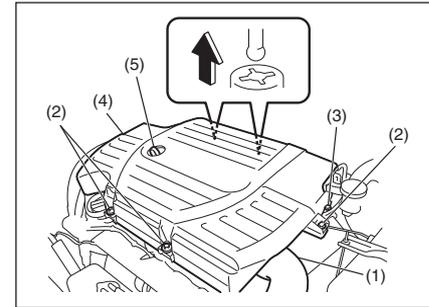

To remove the air cleaner element:

- Remove the air cleaner inlet hose (1).
- Undo the screws (2), loosen the screw (3) and directly raise the air cleaner casing (4).

**IMPORTANT** When lifting the air cleaner, make sure the air cleaner does not interfere the engine oil dipstick (5) to avoid damage the dipstick.

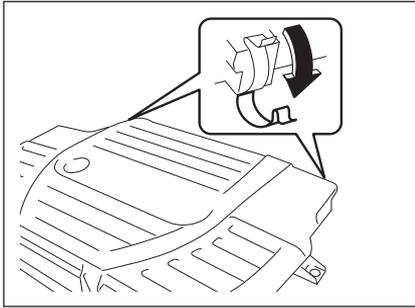

80JM067

- Unclamp the side clamps, and remove the element from the air cleaner case. If it appears to be dirty, replace it with a new one.

## SPARK PLUGS

For Nickel spark plugs (traditional type):


You should inspect spark plugs periodically for carbon deposits. When carbon accumulates on a spark plug, a strong spark may not be produced. Remove carbon deposits with a wire or pin and adjust the spark plug gap.

To access the spark plugs:


1. Remove the air cleaner casing, as previously described in the "Air cleaner" chapter of this section.
2. If necessary, disconnect the fitting (1) by pressing the release lever.
3. Remove the bolts.
4. Remove the ignition coils.

### IMPORTANT


- While removing the ignition coils, do not pull the cable. This may damage it.
- When servicing iridium/platinum plugs (plug type with thin central electrode) do not touch the brittle central electrode as it could be damaged.

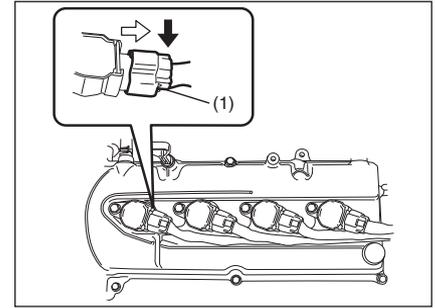


80JM125

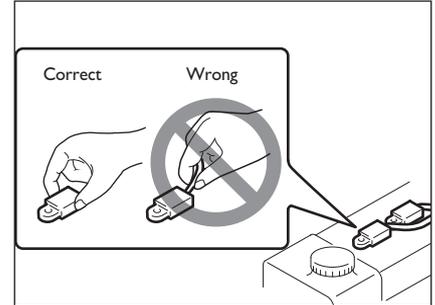

78K179

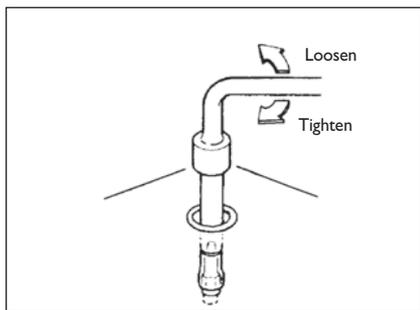

60G160S

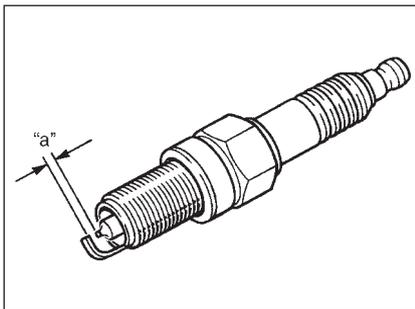

54G106

**NOTE** If your engine is equipped with the hightension cord type ignition wiring and you experience some firing problem of spark plugs, such as, hard engine- starting, misfire etc., the cause may be located not only on spark plugs but also on deteriorated ignition wirings (generally, used for more than 80,000 km or five years). If spark plug replacement does not solve the problem, have the ignition wiring and other ignition system inspected by your Fiat Dealership.

### IMPORTANT

- When disconnecting the spark plug cables, pull on the boot, not on the cable itself. Pulling on the cable can damage it.
- When servicing the Iridium/ Platinum spark plugs (slender center electrode type plugs), do not touch the center electrode, as it is easy to damage.
- When installing the spark plugs, screw them in with your fingers to avoid stripping the threads. Tighten with a torque wrench to 25 Nm (2.5 kgm, 18.0 lb-ft). Do not allow contaminants to enter the engine through the spark plug holes when the plugs are removed.
- Never use spark plugs with the wrong thread size.


**Spark plug gap "a"**  
**K16HPR-U11**  
**SILFR6A11**  
**1.0 – 1.1 mm (0.039 – 0.043 in.)**

**IMPORTANT** When replacing spark plugs, you should use the brand and type specified for your vehicle. For the specified plugs, refer to the "SPECIFICATIONS" section at the end of this book. If you wish to use a brand of spark plug other than the specified plugs, consult your Fiat Dealership.

## BRAKES

### BRAKE FLUID

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between the “MAX” and “MIN” lines. If the brake fluid level is near the “MIN” line, fill it up to the “MAX” line with TUTELA TOP 4 SAE J1704 or DOT4 brake fluid.

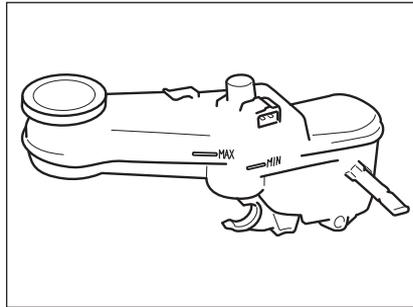

79J148



#### WARNING

*Failure to follow the guidelines below can result in personal injury or serious damage to the brake system.*

- If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument panel will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask your Fiat Dealership to inspect the brake system.*
- A rapid fluid loss indicates a leak in the brake system which should be inspected by your Fiat Dealership immediately.*



#### WARNING

*– Brake fluid can harm your eyes and damage painted surfaces. Use caution when refilling the reservoir.*


*– Do not use any fluid other than SAE J1704 or DOT4 brake fluid. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.*



#### WARNING

*Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of the reach of children and animals.*

NOTE With disc brakes, the fluid level can be expected to gradually fall as the brake pads wear.

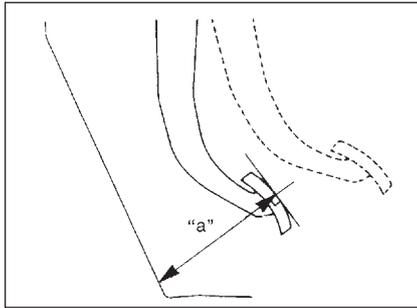

54G108

## BRAKE PEDAL


Check if the brake pedal stops at the regular height without “spongy” feeling when you depress it. If not, have the brake system inspected by your Fiat Dealership. If you doubt the brake pedal for the regular height, check it as follows:

**Pedal to wall minimum distance**  
**“a”: 40 mm (1.6 in.)**

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified. Since your vehicle’s brake system is self-adjusting, there is no need for pedal adjustment.

If the pedal to floor wall distance as measured above is less than the minimum distance required, have your vehicle inspected by your Fiat Dealership.

**NOTE** When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor wall in your measurement.

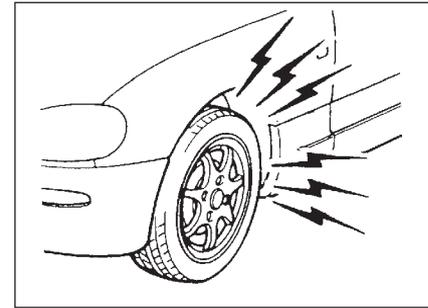


60G104S



## WARNING

**If you experience any of the following problems with your vehicle’s brake system, have the vehicle inspected immediately by your Fiat Dealership.**

- Poor braking performance
- Uneven braking (Brakes not working uniformly on all wheels.)
- Excessive pedal travel
- Brake dragging
- Excessive noise
- Pedal pulsation (Pedal pulsates when depressed.)

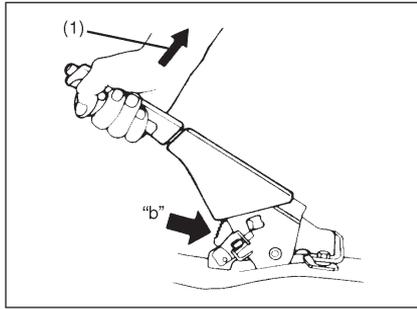

54G109

## PARKING BRAKE

**Ratchet tooth specification “b”:**

**4th – 9th**

**Lever pull force (1):**

**200 N (20 kg, 44 lbs)**

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag after the lever has been fully released, have the parking brake inspected and/ or adjusted by your Fiat Dealership.


## STEERING

**Steering wheel play “c”:**

**0 – 30 mm (0.0 – 1.2 in.)**

Check the play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is outside the specification or you find anything else to be wrong, an inspection must be performed by your Fiat Dealership.

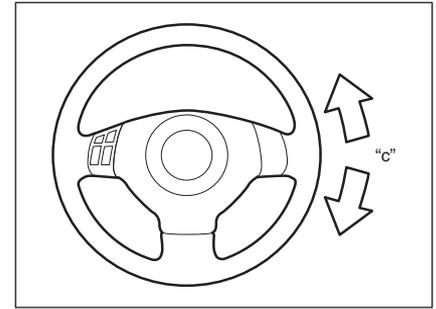


80JM008

## CLUTCH PEDAL

### FLUID CONTROL CLUTCH

Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by your Fiat Dealership. If the clutch fluid level is near the “MIN” line, fill it up to the “MAX” line with TUTELA TOP 4 SAE J1704 or DOT4 brake fluid.

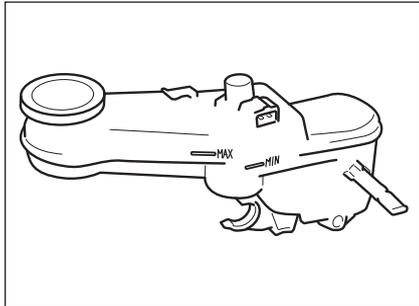


79J148

## TIRES

The front and rear tire pressure specifications for your vehicle are listed on the Tire Information Label. Both the front and rear tires should have the specified tire pressure.

Note that the value does not apply to the compact spare tire (for versions/markets, where provided).

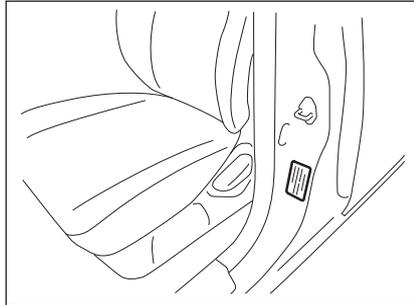

54G307

## TIRE INSPECTION

Inspect your vehicle's tires at least once a month by performing the following checks:

- Measure the air pressure with a tire gauge. Adjust the pressure if necessary. Remember to check the spare tire, too.



## WARNING

– Air pressures should be checked when the tires are cold or you may get inaccurate readings.


– Check the inflation pressure from time to time while inflating the tire gradually, until the specified pressure is obtained.

– Never underinflate or overinflate the tires.

**Underinflation can cause unusual handling characteristics or can cause the rim to slip on the tire bead, resulting in an accident or damage to the tire or rim.**

**Overinflation can cause the tire to burst, resulting in personal injury.**

**Overinflation can also cause unusual handling characteristics which may result in an accident.**

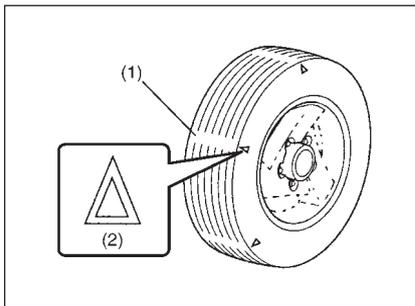

1. Tread wear indicator
2. Indicator location mark

- Check that the depth of the tread groove is more than 1.6 mm (0.06 in.). To help you check this, the tires have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm (0.06 in.) or less and the tire should be replaced.
- Check for abnormal wear, cracks and damage. Any tires with cracks or other damage should be replaced. If any tires show abnormal wear, have them inspected by your Fiat Dealership.



## WARNING

**Hitting curbs and running over rocks can damage tires and affect wheel alignment. Be sure to have tires and wheel alignment checked periodically by your Fiat Dealership.**

- Check for loose wheel bolts.
- Check that there are no nails, stones or other objects sticking into the tires.



## WARNING

– Your Fiat is equipped with tires which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tires of different size or type on the four wheels of your vehicle. The size and type of tires used should be only those approved by Fiat as standard or optional equipment for your vehicle.


– Replacing the wheels and tires equipped on your vehicle with certain combinations of aftermarket wheels and tires can significantly change the steering and handling characteristics of your vehicle.

– Therefore, use only those wheel and tire combinations approved by Fiat as standard or optional equipment for your vehicle.

**IMPORTANT** Replacing the original tires with tires of a different size may result in false speedometer or odometer readings. Check with your Fiat Dealership before purchasing replacement tires that differ in size from the original tires.

**IMPORTANT** For 4-wheel drive (4WD) models, replacing a tire with one of a different size, or using different brands among the four tires can result in damage to the drive train.


4-tire rotation

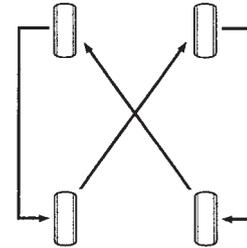

54G114

## TIRE ROTATION

To avoid uneven wear of your tires and to prolong their life, rotate the tires as illustrated. Tires should be rotated every 10,000 km (6,000 miles). After rotation, adjust front and rear tire pressures to the specification listed on your vehicle's Tire Information Label.

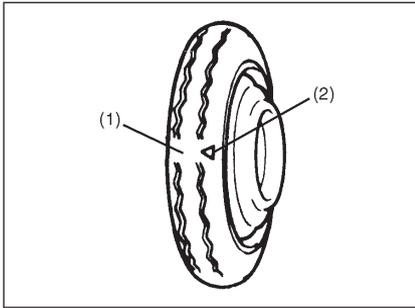

54G115

## COMPACT SPARE TIRE

(for versions/markets, where provided)

1. Wear indicator
2. Indicator location mark

Your vehicle comes equipped with the compact spare tire. The compact spare is designed to save space in your storage area, and its lighter weight makes it easier to install if a flat tire occurs. It is only intended for temporary emergency use, until the conventional tire can be repaired or replaced. The inflation pressure of the compact spare tire should be checked at least monthly. Use a quality pocket-type inflation pressure gauge and set at 4.2 bar (60 psi). At the same time, check that the tire is stored securely. If it is not, tighten it.

Note that two or more compact spare tires should not be used on one vehicle simultaneously.



## WARNING

*The compact spare tire and wheel are intended for temporary emergency use only. Continuous use of this spare can result in tire failure and loss of control. Always observe these precautions when using this spare:*

- Your vehicle will handle differently with this temporary spare.
- Do not exceed 80 km/h (50 mph) speed.
- Replace this spare with a standard tire and wheel as soon as possible.
- Use of this spare will reduce ground clearance.

*o Recommended air pressure for this spare is 4.2 bar (420 kPa, 60 psi).*

*– Do not use tire chains on the compact spare. If you must use tire chains, rearrange the wheels so standard tires and wheels are fitted to the front axle.*

*– The compact spare tire has a much shorter tread life than the conventional tires on your vehicle. Replace the tire as soon as the tread wear indicator appears.*

*– When replacing the compact spare tire, use a replacement tire with the exact same size and construction.*




FOB0510B

## RIM PROTECTOR TYRES



## WARNING

*If after-sale tyres with rim protector are used and the car has integral cups fixed (by springs) to the sheet wheel, DO NOT fit wheel cups. The use of unsuitable tyres and wheel cups could cause a sudden pressure loss of the tyre.*

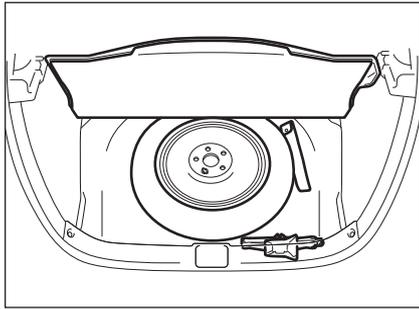


79J196

## CHANGING WHEELS

To change a wheel, use the following procedure:

- Remove the jack, tools and spare wheel from the vehicle.
- Loosen, but do not remove the wheel bolts.
- Jack up the vehicle (follow the jacking instructions in the “EMERGENCY SERVICE” section).
- Remove the wheel bolts and wheel.
- Before installing the new wheel, clean any mud or dirt off from the surface of the wheel and hub with a clean cloth. Clean the hub carefully; it may be hot from driving.
- Tighten the wheel hanger (1) in one of the bolt holes on the wheel hub.

**IMPORTANT** Do not tighten the wheel hanger too hard since the wheel hanger can be damaged.

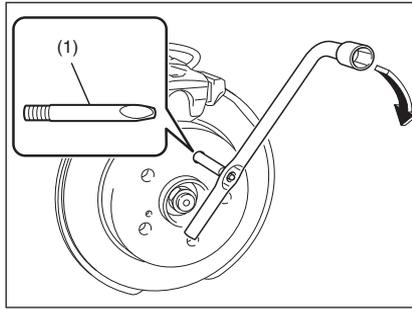

79JM017


- Insert the new wheel to the wheel hanger. Install the wheel bolts to bolt holes other than the position of wheel hanger with their cone shaped end facing the wheel. Tighten each bolt snugly by hand until the wheel is securely seated on the hub.
- Remove the wheel hanger and install a wheel bolt.



### WARNING

– Be sure to shift into “P” (Park) for an automatic transaxle vehicle, or into “R” (Reverse) for a manual transaxle vehicle when you jack up the vehicle.

– Never jack up the vehicle with the transaxle in “N” (Neutral). Otherwise, unstable jack may cause an accident.

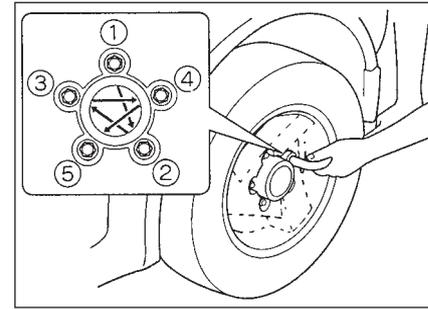

81A057


## Tightening torque for wheel bolt 85 Nm (8.5 kgm, 61.5 lb-ft)

- Lower the jack and fully tighten the bolts in a crisscross fashion with a wrench as shown in the illustration.




### WARNING

Use genuine wheel bolts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel bolts or improperly tightened wheel bolts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel bolt torque checked by an authorized Fiat Dealership.

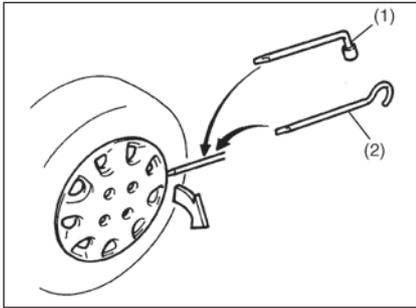

60G309

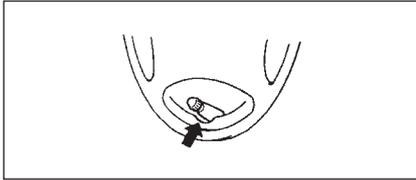

54G117

## FULL WHEEL COVER

(for versions/markets, where provided)

### 1. or 2. Flat end tool

Your vehicle includes two tools, a wheel brace and a jack crank, one of which has a flat end.

Use the tool with the flat end to remove the full wheel cap, as shown above.

When installing the cover, make sure that it is positioned so that it does not cover or foul the air valve.

## BATTERY




### WARNING

– Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working in the vicinity of the battery.

– When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.

– To avoid harm to yourself or damage to your vehicle or battery, follow the jump starting instructions in the “EMERGENCY SERVICE” section of this manual if it is necessary to jump start your vehicle.


– The battery acid may cause serious burns and/or blindness. Always use protective goggles and protective gloves when intervening on the battery. In the event of accidental contact, immediately wash the parts affected with plenty of running water then contact a doctor immediately. Keep the battery out of the reach of children.

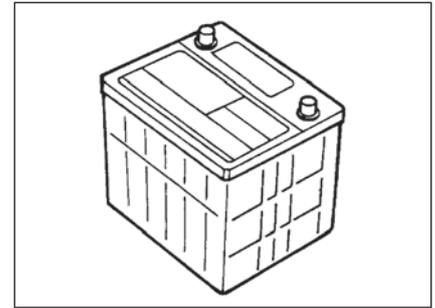

52KM160

Your vehicle is equipped with a battery that requires infrequent maintenance. You will never have to add water. You should, however, periodically check the battery, battery terminals and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.

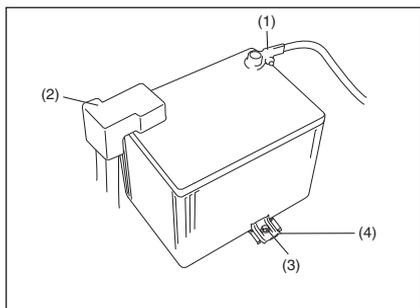

51KM039

## REPLACEMENT OF THE BATTERY

To remove the battery

- Disconnect the negative cable (1).
- Disconnect the positive cable (2).
- Remove the retainer bolt (3) and remove the retainer (4).
- Remove the battery.

To install the battery:

- Install the battery in the reverse order of removal.
- Tighten the retainer bolt and battery cables securely.

**NOTE** When the battery is disconnected, some of the vehicle's function will be initialized and/or deactivated.


These function are required to reset after the battery is reconnected.



### WARNING

**Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used battery must be disposed or recycled according to the local law and must not be discarded with ordinary household trash. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injury.**

- 5. Crossed-out wheeled bin symbol
- 6. Chemical symbol of "Pb"

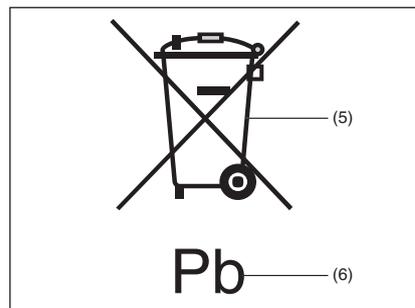

51KM042

The crossed-out wheeled bin symbol (5) located on the battery label indicates that used battery should be collected separately from ordinary household trash. The chemical symbol of "Pb" (6) indicates the battery contains more than 0.004% lead.

By ensuring the used battery is disposed or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing or recycling of the used battery, consult your Fiat Dealership.

## FUSES

Your vehicle has three types of fuses, as described below:

### Main fuse

The main fuse takes current directly from the battery.



### Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.

### Individual fuses

These fuses are for individual electrical circuits.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover.

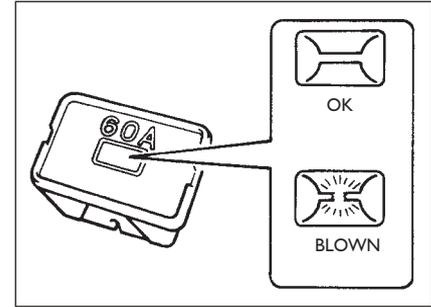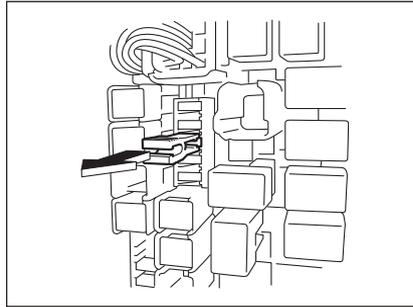

## FUSES IN THE ENGINE COMPARTMENT

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a genuine Fiat replacement.



### WARNING


*If a general protection fuse for safety systems (air bag system, braking system), power unit systems (engine system, transmission system) or steering system is triggered, contact a Fiat Dealership.*




### WARNING

*If the main fuse or a primary fuse blows, be sure to have your vehicle inspected by an authorized Fiat Dealership. Always use a genuine Fiat replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.*

NOTE Make sure that the fuse box always carries spare fuses.

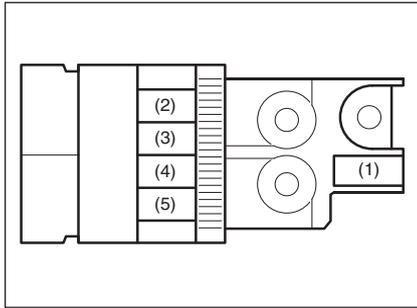

62J085

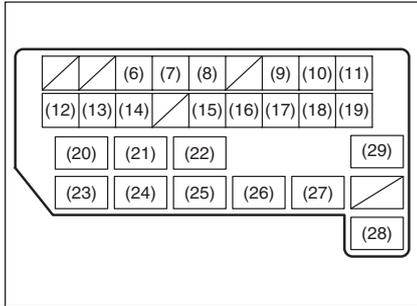

79J092

## FUSES IN THE ENGINE COMPARTMENT


### For Gasoline Engine Model

#### Main fuse / Primary fuse


(1)	80A	All electric load
(2)	50A	Power window, Ignition Wiper, Starter
(3)	50A	Tail light, Rear defogger, Door lock, Hazard/Horn, Dome
(4)	80A	Heater, Air compressor
(5)	80A	Radiator fan, Front fog light, Head light, Power steering
(6)	15A	Head light (Right) fuse
(7)	15A	Head light (Left) fuse
(8)	20A	Front fog light fuse
(9)	60A	Power steering control module fuse
(11)	30A	Radiator fan fuse
(13)	30A	Starting motor fuse
(14)	50A	Ignition switch fuse
(15)	30A	Blower fan fuse

**Main fuse / Primary fuse**

(16)	20A	Air compressor fuse
(17)	15A	Throttle motor fuse
(18)	15A	Automatic transaxle fuse (for versions/markets, where provided)
(19)	15A	Fuel injection fuse
(20)	–	Automatic transaxle relay (for versions/markets, where provided)
(21)	–	Air compressor relay
(22)	–	Fuel pump relay
(23)	–	Condenser fan relay
(24)	–	Front fog light relay
(25)	–	Throttle motor relay
(26)	–	FI MAIN
(27)	–	Starting motor relay
(28)	–	Radiator fan relay
(29)	–	Shift lock relay

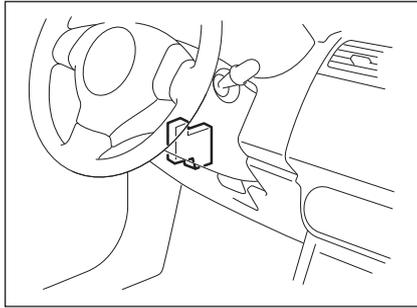

79J093

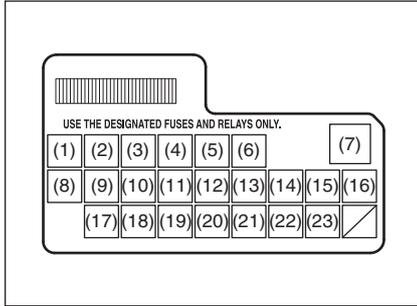


79J011

## FUSES UNDER THE DASH BOARD

### Main fuse / Primary fuse

(1)	15A	Rear wiper
(2)	15A	Ignition coil
(3)	10A	Back-up light
(4)	10A	Meter
(5)	15A	Accessory
(6)	15A	Accessory 2
(7)	30A	Power window
(8)	30A	Wiper
(9)	10A	IG1 SIG
(11)	10A	Anti-lock brake system
(12)	10A	Tail light
(13)	10A	Stop light
(14)	20A	Door lock
(15)	15A	4WD light
(16)	10A	ST SIG
(17)	15A	Seat heater
(18)	10A	IG 2 SIG
(19)	10A	Rear fog light
(20)	15A	Dome
(21)	30A	Rear defogger
(22)	15A	Horn / Hazard
(23)	10A	Fiat CODE (Immobilizer)

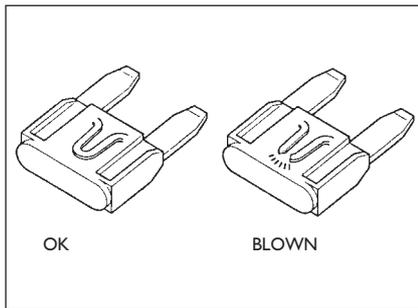

65D046

The fuses are also located under the driver's side of the dashboard. Remove the fuse box cover by pulling it off. The amperage of each fuse is shown on the top of the fuse box cover.



#### **WARNING**

*Always be sure to replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by your Fiat Dealership.*

## **BULB REPLACEMENT**




#### **WARNING**

*– Light bulbs can be hot enough to burn your finger right after being turned off. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.*

*– The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.*

**IMPORTANT** The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.

**IMPORTANT** Frequent replacement of a bulb indicates the need for an inspection of the electrical system. This should be carried out by your Fiat Dealership.

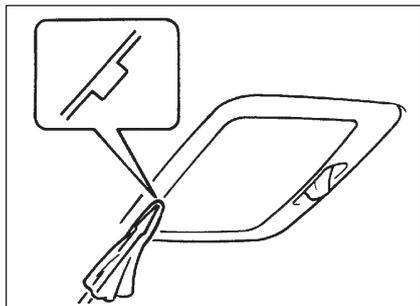


80G115

### CENTER INTERIOR LIGHT

(for versions/markets, where provided)

Pull down the lens by using a plane screw driver covered with a soft cloth as shown. To install it, simply push it back in.


The bulb can be removed by simply pulling it out. When replacing the bulb, make sure that the contact springs are holding the bulb securely.

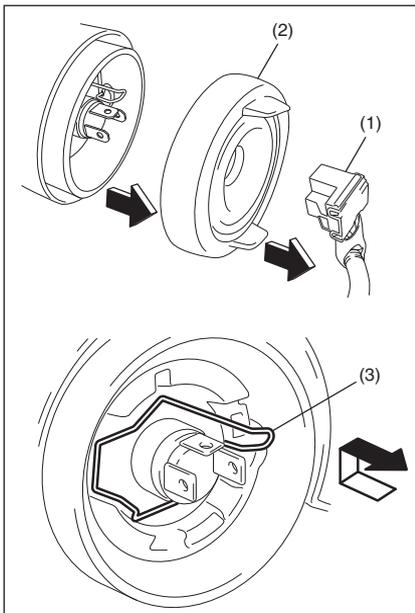

80JM089


### HEADLIGHT

Open the engine hood. Disconnect the coupler (1). Remove the sealing rubber (2). Push the retaining spring (3) forward and unhook it. Then remove the bulb. Install a new bulb in the reverse order of removal.

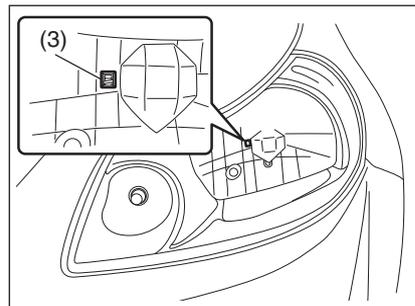

80JM113

**NOTE** You can see the position of retaining spring (3) from the hole of headlight.

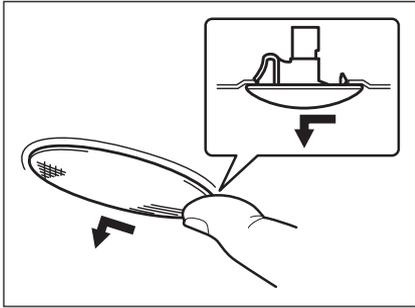


64J195

### SIDE TURN SIGNAL LIGHT

(for versions/markets, where provided)

As the bulb is built-in type, the light assembly must be replaced. Remove the light assembly by sliding the light housing leftward with your finger.

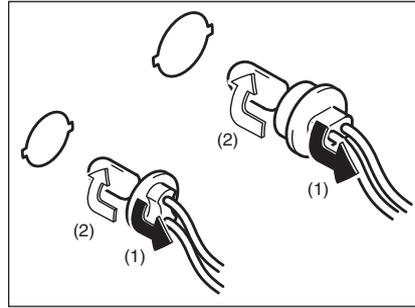


54G123

### OTHER GENERAL LIGHTS

#### Bulb holder

1. Removal
2. Installation

To remove a bulb holder from a light housing, turn the holder counterclockwise and pull it out. To install the holder, push the holder in and turn it clockwise.

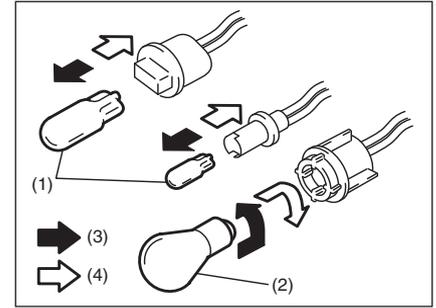

54G124

#### Bulb


3. Removal
4. Installation

There are two types of bulb, "Full glass type" (1) and "Glass/ metal type" (2).

To remove and install a full glass type bulb (1), simply pull out or push in the bulb.


To remove a glass metal type bulb (2) from a bulb holder, push in the bulb and turn it counterclockwise. To install a new bulb, push it in and turn it clockwise.

You can access the individual bulb or bulb holders as follows.

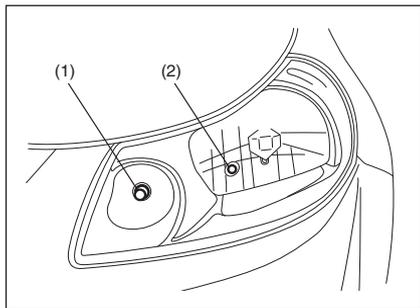


80JM123

**Front turn signal light (1)  
Front position light (2)**

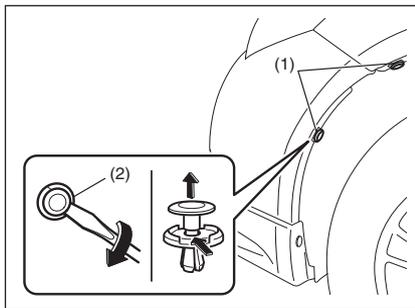


80JM114

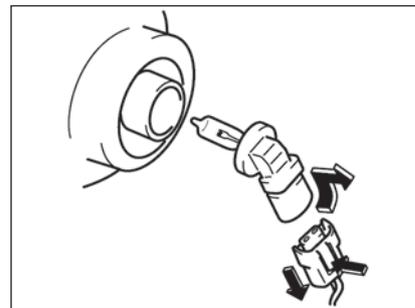

80JM071

- Remove the bolts (3).
- Open the fender cover. Disconnect the coupler with pushing the lock release.
- Turn the bulb holder counterclockwise and remove it.

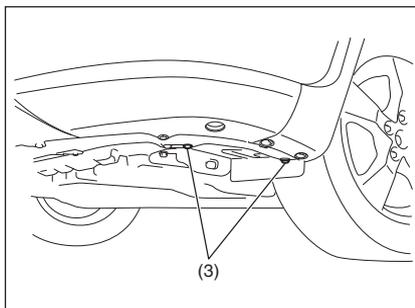


79JM025

**Front fog light**


(for versions/markets, where provided)

**NOTE** To replace the bulb easily, turn the steering wheel to the opposite side of the replacing fog light.


- Insert a flat blade screwdriver into the hole (2) and remove the clips (1) by twist the driver as shown in the illustration.

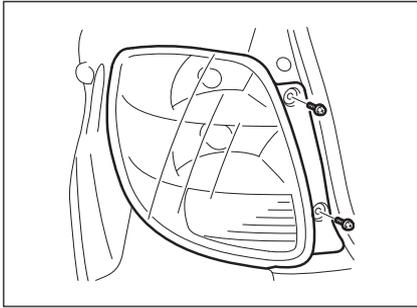


80JM131

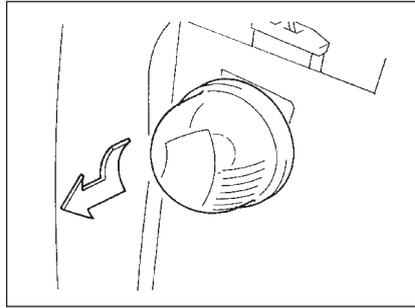

75F087

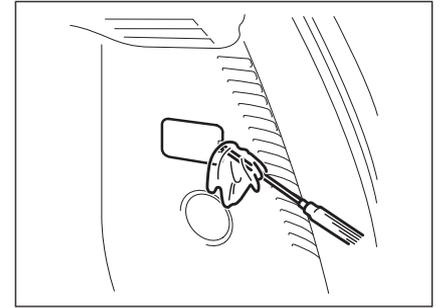

79J015

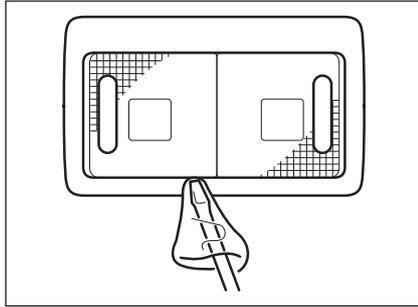

80JM088

**License plate light**


**Luggage compartment light**

**Rear combination light  
(tail, stop, turn signal, etc.)**


**Spot light**

(for versions/markets, where provided)


Pull down the lens by using a flat blade screwdriver covered with a soft cloth as shown. To install it, simply push it back in.

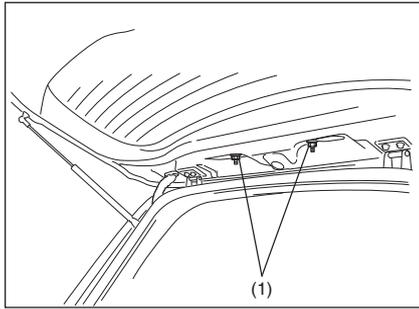

63J106

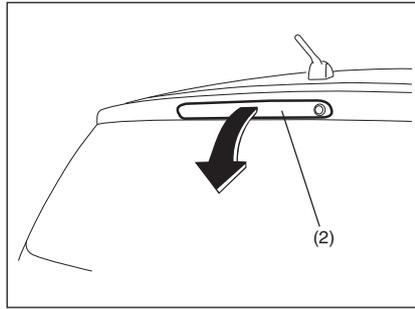

63J127

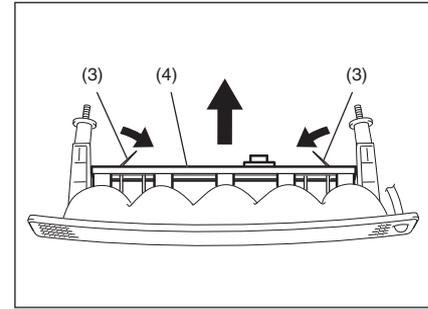

80JM076

### High-mount stop light

(for versions/markets, where provided)

To remove a high-mounted stop light housing the following procedure:

- Open the tailgate, and remove the nuts (1) as shown in the illustration.
- Close the tailgate. Remove a high-mounted stop light housing (2) from the tailgate.

- Pushing the unguiform prongs (3) toward inside and remove the bulb holder (4).

- Replace the bulbs.

- To install a high-mounted stop light housing in the reverse order of removal.

## WIPER BLADES

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.


**IMPORTANT** To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.

**NOTE** Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult your Fiat Dealership for proper replacement method.




### WARNING

**Driving with worn wiper blades is a serious hazard, because visibility is reduced in bad weather.**

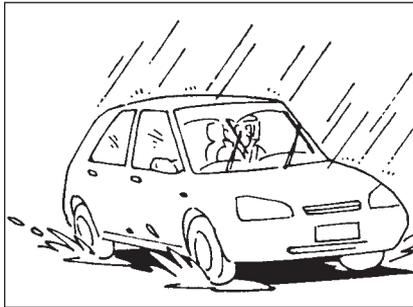

54G129

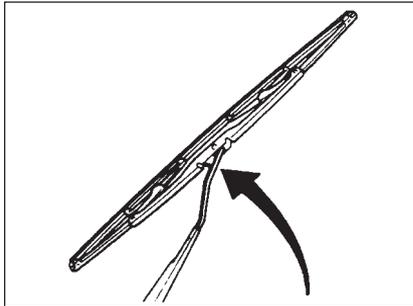


70G119

### FOR WINDSCREEN WIPERS


- Hold the wiper arm away from the window.

**NOTE** When raising both of the front wiper arms, pull the driver's side wiper arm up first. When returning the wiper arms, lower the passenger's side wiper arm first. Otherwise, the wiper arms may interfere with each other.

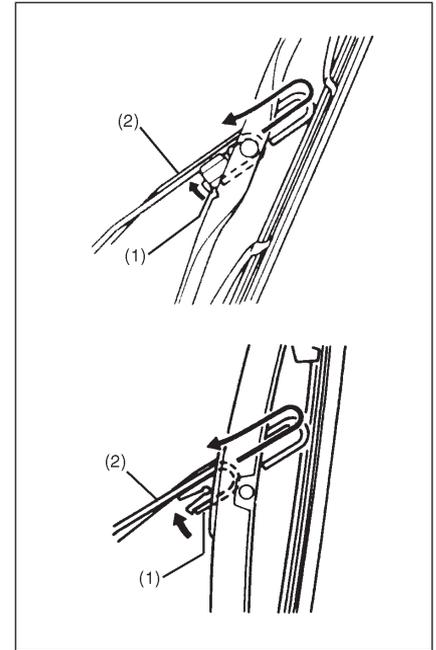


54G130


- Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
- Unlock the lock end of the wiper blade and slide the blade out as shown.

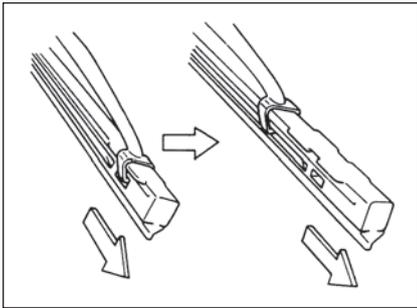


60A260

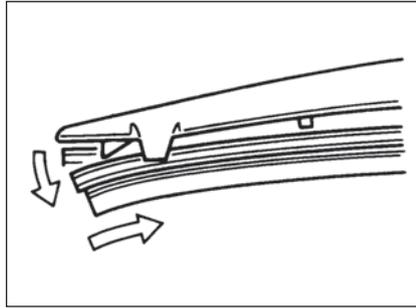


54G133

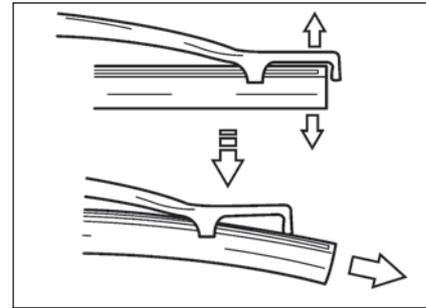

65D151

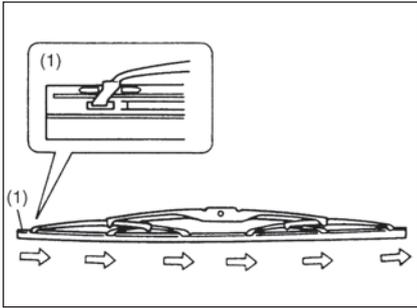

54G132

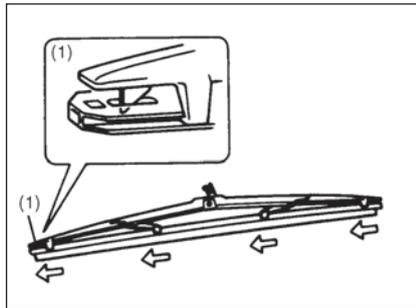

54G134

**Type A  
(Removal / Installation)**


I. Locked end

**Type B  
(Removal / Installation)**

I. Locked end

**Type C**


NOTE For Type C, do not flex the wiper blade frame end more than necessary. If you do, it can break off.

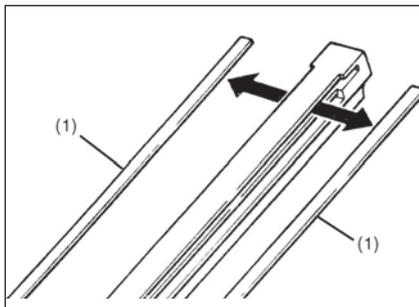

54G135

### I. Retainer


- If the new blade is not equipped with the two metal clips remove them from the old blade and fit them on the new one. While fitting, make sure the clips 1 are positioned as shown.
- Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm (except Type C).

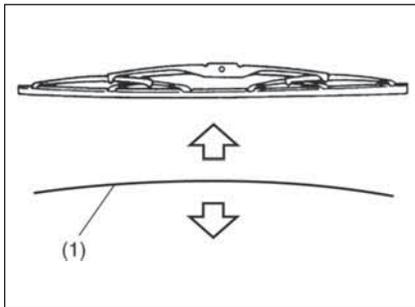

79JMG011

**IMPORTANT** Make sure the blade is properly retained by all the hooks. Lock the blade end into place.


- Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.

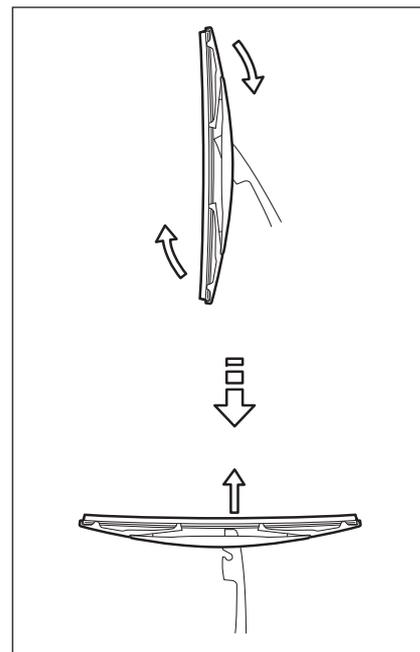

80G146


### FOR REAR WIPERS

- Hold the wiper arm away from the window.
- Remove the wiper frame from the arm as shown.
- Slide the blade out as shown.

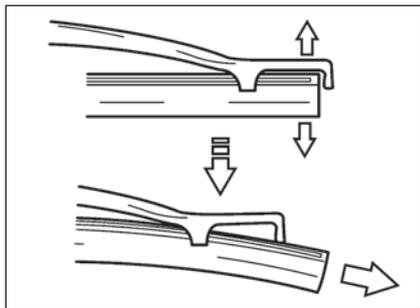

65D151

**NOTE** Do not flex the wiper blade frame end more than necessary. If you do, it can break off.

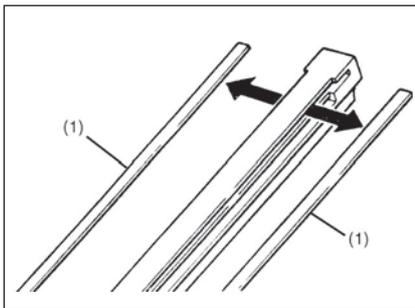

54G135

#### I. Retainer

- If the new blade is provided without the two metal retainers, move them from the old blade to the new one.
- Install the new blade in the reverse order of removal.

**IMPORTANT** Make sure the blade is properly retained by all the hooks.


- Reinstall wiper frame to arm in the reverse order of removal.

## AIR CONDITIONING SYSTEM

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically.

Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

Page left blank voluntarily.

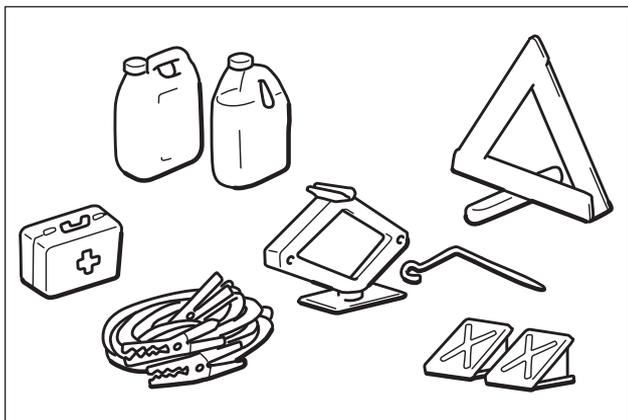

60G411

# EMERGENCY SERVICE

In an emergency, we recommend that you call the freephone number found in the **Warranty Booklet**. You can also go to the [www.fiat.com](http://www.fiat.com) website to find your nearest Fiat Dealership.

JACKING INSTRUCTIONS.....	220
JUMP STARTING INSTRUCTIONS.....	221
TOWING.....	223
IF THE STARTER DOES NOT OPERATE.....	224
IF THE ENGINE IS FLOODED.....	224
IF THE ENGINE OVERHEATS.....	224
IF YOU CAN NOT SHIFT AUTOMATIC TRANSAXLE GEARSHIFT LEVER OUT OF "P" (PARK).....	226

# JACKING INSTRUCTIONS

- Place the vehicle on level, hard ground.
- Set the parking brake firmly and shift into “P” (Park) if your vehicle has an automatic transaxle, or shift into “R” (Reverse) if your vehicle has a manual transaxle.




## WARNING


– Be sure to shift into “P” (Park) in automatic transaxle, or shift into “R” (Reverse) in manual transaxle when you jack up the vehicle.

– Never jack up the vehicle with the transaxle in “N” (Neutral). Otherwise, unstable jack may cause an accident.


- Turn on the hazard warning flasher if your vehicle is near traffic.
- Block the front and rear of the wheel diagonally opposite of the wheel being lifted.

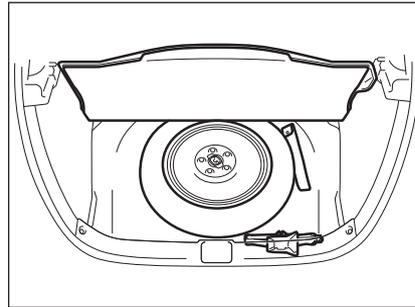

78JM014

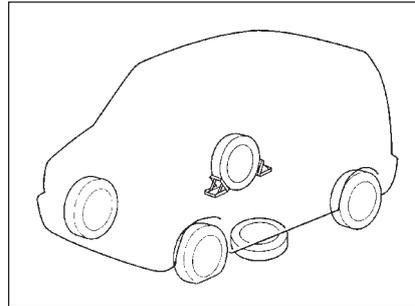

75F062

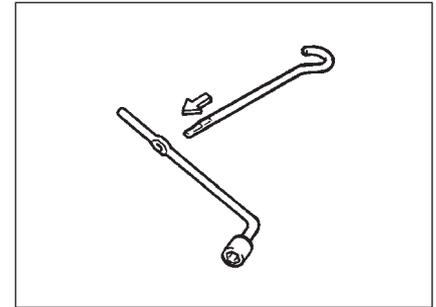

54G253



- Position the jack vertically and raise the jack by turning the jack handle clockwise until the jack head recess fits the rod of the body.
- Continue to raise the jack slowly and smoothly until the tire clears the ground. Do not raise the vehicle more than necessary.

- Place the spare wheel near the wheel being lifted as shown in the illustration in case that the jack is slipped.



## WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than between the frame bosses near the wheel to be changed.
- Make sure that the jack is raised at least 51 mm (2 inches) before it contacts the flange. Use of the jack when it is within 51 mm (2 inches) of being fully collapsed may result in failure of the jack.
- Never get under the vehicle when it is supported by the jack.
- Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.

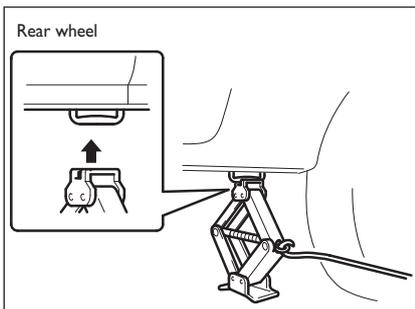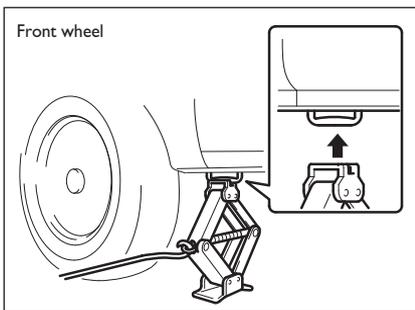

## JUMP STARTING INSTRUCTIONS



## WARNING

- Never attempt to jump start your vehicle if the battery appears to be frozen. Batteries in this condition may explode or rupture if jump starting is attempted.
- When making jump lead connections, be certain that your hands and the jump leads remain clear from pulleys, belts, or fans.
- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working in the vicinity of the battery.
- If the booster battery you use for jump starting is installed in another vehicle, make sure the two vehicles are not touching each other.
- If your battery discharges repeatedly, for no apparent reason, have your vehicle inspected by an authorized Fiat Dealership.




## WARNING

– To avoid harm to yourself or damage to your vehicle or battery, follow the jump starting instructions below precisely and in order. If you are in doubt, call for qualified road service.

**IMPORTANT** Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.

## WHEN JUMP STARTING YOUR VEHICLE, USE THE FOLLOWING PROCEDURE

- Use only a 12 volt battery to jump start your vehicle. Position the good 12 V battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, **DO NOT LET THE VEHICLES TOUCH**. Set the parking brakes fully on both vehicles.

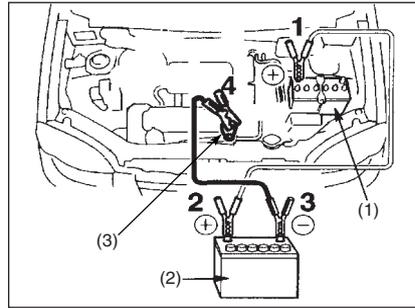

## WARNING

Never connect the jump lead directly to the negative (–) terminal of the discharged battery, or an explosion may occur.

- Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).
- Make jump lead connections as follows:
  - Connect one end of the first jump lead to the positive (+) terminal of the flat battery (1).
  - Connect the other end to the positive (+) terminal of the booster battery (2).
  - Connect one end of the second jump lead to the negative (–) terminal of the booster battery (2).
  - Make the final connection to an unpainted, heavy metal part (i. e. engine hook (3)) of the engine of the vehicle with the flat battery (1).
- If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- Start the engine of the vehicle with the flat battery.
- Remove the jump leads in the exact reverse order in which you connected them.

# TOWING

If you need to have your vehicle towed, contact a professional service. Your dealer can provide you with detailed towing instructions.

**IMPORTANT** To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.

## 2- WHEEL DRIVE (2WD) AUTOMATIC TRANSAXLE

Automatic transaxle vehicles may be towed using either of the following methods.

- From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, make sure that the parking brake is released.
- From the rear, with the rear wheels lifted and a dolly under the front wheels.

**IMPORTANT** Towing your vehicle with the front wheels on the ground can result in damage to the automatic transaxle.

## 2-WHEEL DRIVE (2WD) MANUAL TRANSAXLE

Manual transaxle vehicles may be towed using either of the following methods.

- From the front, with the front wheels lifted and the rear wheels on the ground. Before towing, make sure that the parking brake is released.
- From the rear, with the rear wheels lifted and the front wheels on the ground, provided the steering and drivetrain are in operational condition. Before towing, make sure that transaxle is in neutral, the steering wheel is unlocked (the ignition key should be in the “ACC” position), and the steering wheel is secured with a clamping device designed for towing service.

**IMPORTANT** The steering column is not strong enough to withstand shocks transmitted from the front wheels during towing. Always unlock the steering wheel before towing.

## 4-WHEEL DRIVE (4WD)

Your vehicle should be towed under one of the following conditions:

- With all four wheels on a flat-bed truck.
- With the front or rear wheels lifted and a dolly under the other wheels.
- If you can shift the 2WD/4WD switch to the “2WD” mode, and if the steering and drive train are in good condition and the engine can be started, the vehicle may also be towed according to the instructions in the “Towing Your Vehicle (recreational towing)” section.

**IMPORTANT** Towing your vehicle with front and/or rear wheels on the ground can result in damage to the automatic transaxle and/or the 4WD drive system.

## IF THE STARTER DOES NOT OPERATE

- ❑ Try turning the ignition switch to the “START” position with the headlights turned on to determine the battery condition. If the headlights go excessively dim or go off, it usually means that either the battery is flat or the battery terminal contact is poor. Recharge the battery or correct battery terminal contact as necessary.
- ❑ If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by your authorized Fiat Dealership.

## IF THE ENGINE IS FLOODED

If the engine is flooded with gasoline, it may be hard to start. If this happens, press the accelerator pedal all the way to the floor and hold it there while cranking the engine. (Do not operate the starter motor for more than 15 seconds).

## IF THE ENGINE OVERHEATS

The engine could overheat temporarily under severe driving conditions. If the engine coolant temperature gauge indicates overheating during driving:

- ❑ Turn off the air conditioner, for versions/markets, where provided.
- ❑ Take the vehicle to a safe place and park.
- ❑ Let the engine run at the normal idle speed for a few minutes until the indicator is within the normal, acceptable temperature range between “H” and “C”.




### WARNING

***If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to let it cool. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.***

If the temperature indication does not come down to within the normal, acceptable range:

- Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- Check the coolant level in the reservoir. If it is found to be lower than the "LOW" line, look for leaks at the radiator, water pump, and radiator and heater hoses. If you locate any leaks that may have caused the overheating, do not run the engine until these problems have been corrected.

NOTE if the engine overheats and you are not sure how to proceed, contact your FIAT dealership.

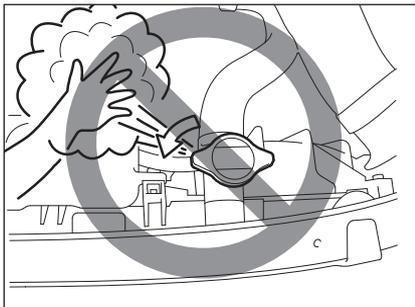

- If you do not find a leak, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine Coolant" in the "INSPECTION AND MAINTENANCE" section.)



## WARNING

– It is hazardous to remove the radiator cap when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.

– To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan (for versions/markets, where provided). These electric fans can automatically turn on without warning.

# IF YOU CANNOT SHIFT AUTOMATIC TRANSAXLE GEARSHIFT LEVER OUT OF "P" (PARK)

## Left Hand Drive Vehicle

Vehicles with an automatic transaxle have an electrically operated park- lock feature. If the vehicle's battery is discharged, or there is some other electrical failure, the automatic transaxle cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transaxle out of Park.


- Be sure the parking brake is firmly applied.
- If the engine is running, stop the engine.
- Make sure the key is in the "ON" or "ACC" position.
- Remove the cover (1) over the button.
- With pushing the release button by the key or the flat end rod, shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take the vehicle to your dealer for repair.


## Right Hand Drive Vehicle

Vehicles with an automatic transaxle have an electrically operated park- lock feature. If the vehicle's battery is discharged, or there is some other electrical failure, the automatic transaxle cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transaxle out of Park.

- Be sure the parking brake is firmly applied.
- If the engine is running, stop the engine.

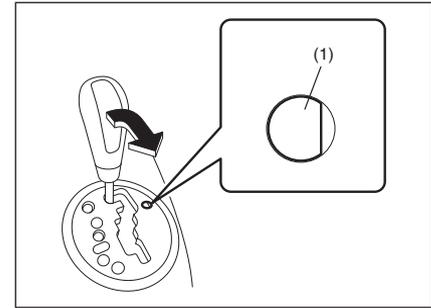

68KM037

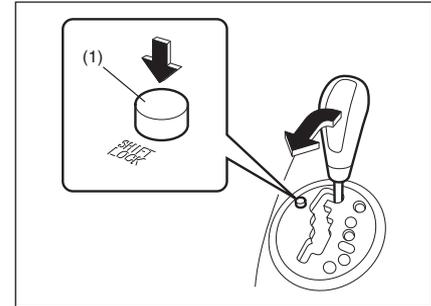


68KM038

- Make sure the key is in the "ON" or "ACC" position.
- With pushing the release button (1), shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take the vehicle to your dealer for repair.

# BODY WORK CARE

CORROSION PREVENTION .....	228
VEHICLE CLEANING .....	230

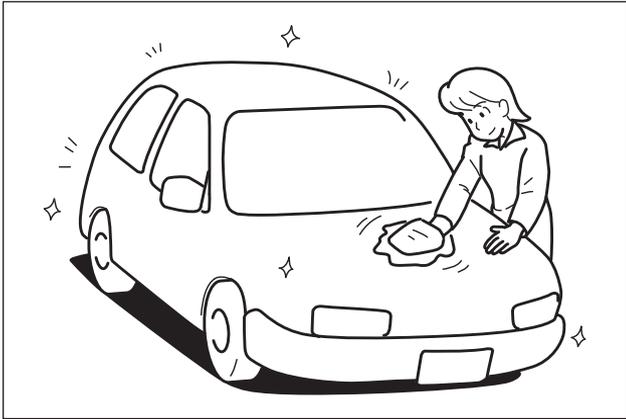

60G412

## CORROSION PREVENTION

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

### IMPORTANT INFORMATION ABOUT CORROSION

#### Common causes of corrosion

- Accumulation of road salt, dirt, moisture, or chemicals in hard to reach areas of the vehicle underbody or frame.
- Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.

#### Environmental conditions which accelerate corrosion

- Road salt, dust control chemicals, sea air or industrial pollution will all accelerate the corrosion of metal.
- High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
- Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even though other body sections may be completely dry.
- High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

## HOW TO HELP PREVENT CORROSION

### Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing.

Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible.

If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to the "Vehicle Cleaning" section.

### Remove foreign material deposits

Foreign material such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Be sure that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

### Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

### Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion.

Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used off road or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If a spill or leak does occur, clean and dry the area immediately.

### Store your vehicle in a dry, well-ventilated area

Do not park your vehicle in a damp, poorly ventilated area. If you often wash your vehicle in the garage or if you frequently drive it in when wet, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.



#### **WARNING**

*Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter, exhaust pipes, etc. A fire could be started if the undercoating substance becomes overheated.*

# VEHICLE CLEANING



## WARNING

*When cleaning the interior or exterior of the vehicle, NEVER USE flammable solvents such as lacquer thinners, gasoline, benzene or cleaning materials such as bleaches or strong household detergents. The materials could cause personal injury or damage to the vehicle.*

## CLEANING THE INTERIOR

### Vinyl upholstery

Prepare a solution of soap or mild detergent mixed with warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.



76G044A

### Fabric upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

### Seat belts

Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

### Vinyl floor mats

Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

## Carpets

Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.


## CLEANING THE EXTERIOR

**IMPORTANT** It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.

### Caring for Aluminum Wheels

#### NOTE

- Do not use an acidic or alkaline detergent to wash aluminum wheels. These types of detergent will cause permanent spots, discoloration and cracks on finished surfaces.
- Do not use a bristle brush and soap containing an abrasive material. These will damage finished surfaces.

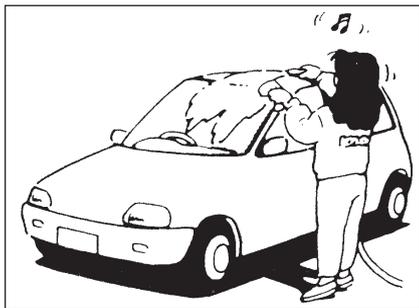

60B212S

## WASHING



### WARNING

**– Never attempt to wash and wax your vehicle with the engine running.**

**– When cleaning the underside of the body and fender, where there may be sharp-edged parts, you should wear gloves and a long sleeved shirt to protect your hands and arms from being cut.**

**– After washing your vehicle, carefully test the brakes before driving to make sure they have maintained their normal effectiveness.**

When washing the vehicle, park it where direct sunlight does not fall on it and follow the instructions below:

- Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

### IMPORTANT

When washing the vehicle:

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- To avoid damaging engine components, do not use pressurized water in the engine compartment.
- Do not pour the water on the battery. And wipe off the water which remains on the battery. The water entering inside the battery possibly causes fluid leakage.

- Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

**IMPORTANT** To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Be sure to follow above procedure.

- Wash the entire exterior with a mild detergent or vehicle wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

**IMPORTANT** When using a commercial vehicle wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- ❑ Once the dirt has been completely removed, rinse off the detergent with running water.
- ❑ After rinsing, wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
- ❑ Check carefully for damage to painted surfaces. If there is any damage, “touch-up” the damage following the procedure below:
  - Clean all damaged spots and allow them to dry.
  - Stir the paint and “touch- up” the damaged spots lightly using a small brush.
  - Allow the paint to dry completely.

**IMPORTANT** If you use an automatic vehicle wash, make sure that your vehicle’s body parts, such as spoilers, can not be damaged. If you are in doubt, consult the vehicle wash operator for advice.



60B211S

## WAXING

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

Only use waxes and polishes of good quality.

When using waxes and polishes, observe the precautions specified by the manufacturers.


# GENERAL INFORMATION

VEHICLE IDENTIFICATION.....	234
FUEL CONSUMPTION - CO <sub>2</sub> EMISSIONS.....	235


# VEHICLE IDENTIFICATION

## CHASSIS SERIAL NUMBER


The chassis and/ or engine serial numbers are used to register the vehicle. They are also used to assist your dealer when ordering or referring to special service information. Whenever you have occasion to consult your Fiat Dealership, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

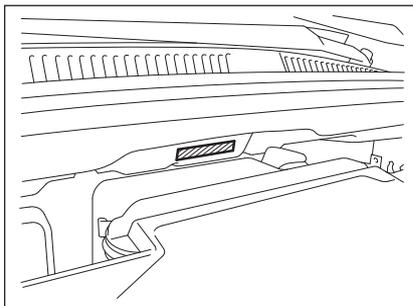

78J019

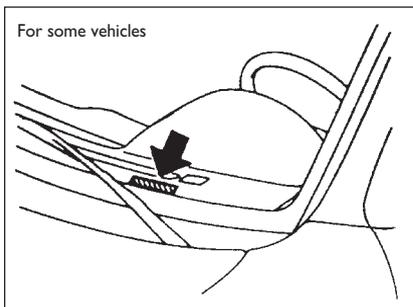

60G152

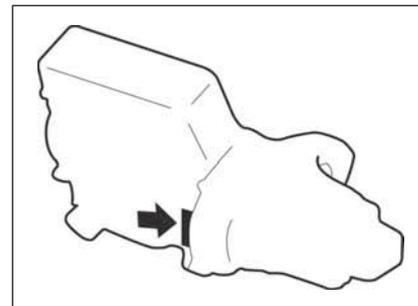

78JMG012

## ENGINE SERIAL NUMBER

The engine serial number is stamped on the cylinder block as shown in the illustration.

## FUEL CONSUMPTION - CO<sub>2</sub> EMISSIONS

According to European Directive in force.

M/T: Manual transaxle

A/T: Automatic transaxle (for versions/markets, where provided)

			1.6 16V	
			1.6 L 2WD	1.6 L 4WD
Urban	(L/100km)	M/T	7.9	8.2
	CO <sub>2</sub> (g/km)	M/T	181	188
	(L/100km)	A/T	8.7	–
	CO <sub>2</sub> (g/km)	A/T	201	–
Extra-urban	(L/100km)	M/T	5.1	5.5
	CO <sub>2</sub> (g/km)	M/T	118	126
	(L/100km)	A/T	5.6	–
	CO <sub>2</sub> (g/km)	A/T	128	–
Combined	(L/100km)	M/T	6.2	6.5
	CO <sub>2</sub> (g/km)	M/T	141	149
	(L/100km)	A/T	6.7	–
	CO <sub>2</sub> (g/km)	A/T	155	–

NOTE As these data are obtained under certain specific conditions, actual fuel consumption of your vehicle will be different from these data.

Page left blank voluntarily.

# TECHNICAL SPECIFICATIONS

ENGINE.....	238
FUEL FEED – IGNITION.....	238
ELECTRICAL COMPONENTS.....	239
BULBS .....	239
TRANSMISSION.....	240
BRAKES .....	240
SUSPENSIONS.....	240
STEERING.....	240
WHEELS .....	241
DIMENSIONS.....	241
WEIGHTS .....	242
PERFORMANCE .....	242
CAPACITIES.....	242

## TECHNICAL SPECIFICATIONS

NOTE Technical specifications are subject to change without notice

M/T: Manual transaxle  
 A/T: Automatic transaxle  
 (for versions/markets, where provided)

2WD: 2-wheel drive  
 4WD: 4-wheel drive

### ENGINE

**1.6 16V**

Code - type	M16A (DOHC) - Euro 5+	
Number and layout of cylinders	4 in line	
Piston bore and stroke	78.0 x 83.0 mm (3.07 x 3.27 in.)	
Total displacement	1,586 cm <sup>3</sup> (96.8 cu. in.)	
Compression ratio	11 : 1	
Maximum power (EEC)	kW	88
	HP	120
corresponding ratio	rpm	6,000
Maximum torque (EEC)	Nm	156
	kgm	15.9
corresponding ratio	rpm	4,400
Fuel	Unleaded petrol 95 RON (Specification EN228)	

### FUEL FEED - IGNITION

**1.6 16V**

Fuel feed	MPI electronic injection
Ignition	Electronic Single Spark



#### WARNING

*Modifications or repairs to the fuel feed system that are not carried out properly or do not take the system's technical specifications into account can cause malfunctions leading to the risk of fire.*

**ELECTRICAL COMPONENTS****1.6 16V**

Battery

non cold area: 12V 44Ah 350A(DIN)  
cold area: 12V 60Ah 620A(DIN)

Spark plugs

Iridium

NGK SILFR6A11

Nickel

DENSO K16HPR-U11

Fuses

See "INSPECTION AND MAINTENANCE" section

**BULBS****Power****Type**

Main beam/dipped beam headlights

12V – 60/55W

H4

Front fog lights

12V – 55W

H11

Front direction indicators

12V – 21W

PY21W

Rear direction indicators

12V – 21W

P21W

Parking lights

12V – 5W

W5W

Brake lights / taillights

12V – 21/5W

P21/5W

License plate lights

12V – 5W

W5W

Reversing lights

12V – 21W

P21W

Passenger compartment light

12V – 10W

–

Luggage compartment light

12V – 5W

–

Rear fog lights

12V – 21W

P21W

Spot lights

12V – 8W

W5W (8W)

Third brake light (additional brake light)

12V – 5W

W5W

## TRANSMISSION

Drive 4WD		4-wheel drive, electronic-control self-locking differential
Clutch		Dry single disc, Belleville washer, hydraulic control
Gearbox	M/T	5 forward gears + reverse
	A/T	4 forward gears + reverse

## BRAKES

Service brakes	Front	Disc (Ø 280 mm - 11 in.)
	Rear	Disc (Ø 280 mm - 11 in.)
Parking brake		Controlled by hand lever, it works on rear brakes
Vacuum brake		10"

## SUSPENSIONS

Front		Mc Pherson independent wheels
Rear		Bent twisting axle

## STEERING

Type		Power steering, electric
Minimum steering cycle		11 m (433 in.)

## WHEELS

Tyre size	205/60 R16 (*)		
Rim size	16 x 6J		
Tyre pressures	<p>The tyre inflating pressure values are specified in the label on the driver door. When up to 4 people are transported, the specified pressure values of the ECO Tire tyres are recommended to reduce fuel consumption as much as possible:</p> <ul style="list-style-type: none"> <li>– <b>Front</b> 280 kPa (2.80 kg/cm<sup>2</sup>, 40 psi)</li> <li>– <b>Rear</b> 260 kPa (2.60 kg/cm<sup>2</sup>, 38 psi)</li> </ul> <p>NOTE If more than 4 people are transported, keep to the pressure values specified in the label on the driver's door.</p>		
Recommended snow chains	Radial/Axial thickness: 10 mm (0.39 in.)		
Recommended snow tire	205/60 R16 (**)		
Wheel geometry	Toe-in, front		1 ± 1 mm (0.0393 ± 0.0393 in.)
	Camber angle, front	2WD	– 0° 23' ± 1°
		4WD	– 0° 10' ± 1°
	Caster angle, front	2WD	3° 40' ± 2°
4WD		3° 32' ± 2°	

(\*) If a tyre with the specified load index and speed code cannot be found, use another one with higher load index and speed code.

(\*\*) Use winter tyres with suitable speed code. Never drive at a speed higher than the speed code of the winter tyre.

## DIMENSIONS

Unit: mm (in.)

1.6 16V

		2WD	4WD
Overall length		4,115 (162.0)	4,115 (162.0)
Overall width		1,755 (69.1)	1,755 (69.1)
Overall height		1,620 (63.8)	1,620 (63.8)
Wheelbase		2,500 (98.4)	2,500 (98.4)
Track	Front	1,495 (58.9)	1,495 (58.9)
	Rear	1,495 (58.9)	1,495 (58.9)
Ground clearance (Standard A)		190 (7.5)	190 (7.5)
Boot volume	dm <sup>3</sup>	270/670	270/670

**WEIGHTS Unit: kg (lbs)****1.6 16V**

Kerb weight (including fuel, spare wheel, tools and accessories)

2WD

1,190 (2,623)

4WD

1,250 (2,755)

**PERFORMANCE****1.6 16V**

Top admitted speed after initial vehicle use

2WD

185 km/h

4WD

175 km/h

**CAPACITIES (indicative values)****1.6 16V**Coolant  
(including reservoir tank)

M/T

6.6 litres (11.6 Imp pt)

A/T

6.5 litres (11.4 Imp pt)

Fuel tank

50 litres (11.0 Imp gal)

Engine oil

3.9 litres (6.9 Imp pt)  
(replacement with oil filter)

Transaxle oil

2WD (M/T)

2.5 litres (4.4 Imp pt)

2WD (A/T)

5.8 litres (10.2 Imp pt)  
(when overhauling)

4WD (M/T)

2.5 litres (4.4 Imp pt)

Transfer oil

4WD

0.6 litres (1.1 Imp pt)

Rear differential oil

4WD

0.8 litres (1.4 Imp pt)

# SUPPLEMENT

DECLARATION OF CONFORMITY ..... 244-246



Interior

Continental Automotive GmbH - Postfach 10 00 43 - 93008 Regensburg

Body & Security  
 Thomas Heselberger  
 I BS PG3 CFFR WM  
 Phone +49 (0)41 790-3554  
 Fax +49 (0)41 79099-3554  
 thomas.heselberger@continental-  
 corporation.com

Your reference

Our reference

Your message dated

Date

April 8, 2011

#### Declaration of Conformity in accordance with Directive 1999/5/EC (R&TTE Directive)

Manufacturer: Continental Automotive GmbH  
 Address: Siemensstrasse 12  
 D-93055 Regensburg Germany  
 Product type designation: SWK49181  
 Intended use: Immobilization System

The product mentioned above complies with the essential requirements and other relevant provisions of Directive 1999/5/EC, when used for its intended purpose.

Health and safety pursuant to §3.1.a:

Applied standard(s):  
 EN 60950-1: 2006

Electromagnetic compatibility pursuant to § 3.1.b:

Applied standard(s):  
 EN 301 489 -1; V1.8.1 (2008-04)  
 EN 301 489 -3; V1.4.1 (2002-08)

Efficient use of spectrum pursuant to § 3.2:

Applied standard(s):  
 EN 300 330 -1; V1.7.1 (2010-02)  
 EN 300 330 -2; V1.5.1 (2010-02)

The following marking applies to the above mentioned product:



Continental Automotive GmbH  
 Regensburg, 08.04.2011

*Wolff*  
 .....  
 Andreas Wolf

Executive Vice President  
 Body & Security

*Müller*  
 .....  
 Norbert Müller

Director Product Group 3  
 Body & Security

Continental Automotive GmbH  
 Siemensstr. 12  
 D-93055 Regensburg  
 Postfach 10 00 43  
 93008 Regensburg

Phone +49 (0)41 790-02  
 Fax  
 www.continental-corporation.com

Managing Director:  
 Helmut Schmitt,  
 Harald Schmitt,  
 Norbert Schmitt

Registered Office: Havelhof  
 Regensburg Court, Arrondissement  
 Regensburg  
 VAT-ID-No. DE 218509693



Interior

Continental Automotive GmbH - Postfach 10 09 40 - 93069 Regensburg

Body & Security  
Thomas Heeslberger  
I BS P03 CFFP WM  
Phone +49 (041) 7900-3554  
Fax +49 (041) 790099-3554  
thomas.heeslberger@continental-  
corporation.com

Date  
April 8, 2011

Your message dated

Our Reference

Your reference

**Declaration of Conformity in accordance with Directive 1999/5/EC (R&TTE Directive)**

Manufacturer: Continental Automotive GmbH  
Address: Siemensstrasse 12  
D-93065 Regensburg Germany  
Product type designation: SWK49182  
Intended use: Immobilization System

The product mentioned above complies with the essential requirements and other relevant provisions of Directive 1999/5/EC, when used for its intended purpose:

- Health and safety pursuant to § 3.1.a: Applied standard(s): EN 60950-1; 2006
- Electromagnetic compatibility pursuant to § 3.1.b: Applied standard(s): EN 301 489 -1; V1.8.1 (2008-04)  
EN 301 489 -3; V1.4.1 (2002-08)
- Efficient use of spectrum pursuant to § 3.2: Applied standard(s): EN 300 330 -1; V1.7.1 (2010-02)  
EN 300 330 -2; V1.5.1 (2010-02)

The following marking applies to the above mentioned product:



Continental Automotive GmbH  
Regensburg, 08.04.2011

.....  
*Wolff*  
Andreas Wolff  
Executive Vice President  
Body & Security

.....  
*Norbert Müller*  
Norbert Müller  
Director Product Group 3  
Body & Security

Continental Automotive GmbH  
33055 Regensburg  
Postfach 10 09 40  
93069 Regensburg

Phone +49 941 790-02  
Fax +49 941 790-02  
www.continental-corporation.com

Managing Director:  
Hans-Martin  
Hanselmann

Registered Office: Regensburg  
Registered Court: Amtsgericht  
Regensburg  
VAT ID No. DE 81520663

## **DECLARATION OF CONFORMITY**

We, **Calsonic Kansei Corp.** hereby declare, at our sole responsibility, that the following product conforms to the Essential Requirements of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EC in accordance with the tests conducted to the appropriate requirements of the relevant standards, as listed herewith.

**Product: Transmitter of Keyless Entry System**

**Model/Type Number: TS002**

**Year of affixing CE marking: 2004**

## **DECLARATION OF CONFORMITY**

We, **Calsonic Kansei Corp.**, of the above address, hereby declare, at our sole responsibility, that the following product conforms to the Essential Requirements of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EC in accordance with the tests conducted to the appropriate requirements of the relevant standards, as listed herewith.

**Product: Transmitter of Keyless Entry System**

**Model/Type Number: R51K0**

**Year of affixing CE marking: 2007**

# INDEX

- 2WD/4WD switch ..... 86–151
- ABS**..... 154
- Adjustable head restraint..... 29
- Air cleaner..... 191
- Air conditioner (maintenance)..... 217
- Air recirculation..... 93–96
- Airbags ..... 46
  - Front ..... 47
  - General warnings..... 54
  - Maintenance..... 53
  - Side window ..... 49
  - Side ..... 49
  - System operation..... 51
- Anti-theft (warning light)..... 89
- Anti-theft warning light..... 89
- Appendix**..... 243
- Ashtray..... 89
- Automatic climate control system... 98
- Automatic transmission oil
  - Level check ..... 187
  - Replacement..... 188
  - Specifications ..... 187
- Bag hook**..... 139
- Battery plate symbols ..... 6
- Battery.....202–239
  - Replacement..... 203
- Before getting behind the steering wheel** ..... 11
- Bodywork maintenance**..... 227
- Bodywork waxing..... 232
- Bonnet..... 134
- Brake fluid ..... 194
- Brakes
  - Brake pedal ..... 195
  - Brake servo..... 154
  - Braking system ..... 240
  - Parking brake lever..... 124–196
  - Windscreen washer fluid..... 194
- Braking system ..... 153
- Bulbs
  - Replacement..... 208
  - Types..... 239
- Catalytic converter** ..... 159
- Central locking..... 15
- Changes (warning)..... 8
- Chassis (marking)..... 234
- Chassis hooks..... 137
- Child lock ..... 21
- Children
  - Child lock..... 21
  - Fitting Isofix child seat..... 41
  - Restraint system ..... 36
  - Seat belt anchoring..... 41
- Children's restraint systems ..... 30–36–39
- Cigar lighter socket..... 89
- Cigar lighter ..... 89
- Clutch..... 125–197
- CO<sub>2</sub> emissions..... 235
- Cup/can holders..... 136
- Daily checks**..... 144
- Dashboard..... 65
- Dead lock ..... 16
- Dimensions ..... 241
- Dipped beam headlights ..... 59
  - Bulb replacement..... 209
- Direction indicators ..... 60
  - Bulb replacement..... 210
- Doors
  - Central locking..... 15–18
  - Child lock..... 21
  - Dead Lock..... 16
  - Opening/closing ..... 14
  - USB..... 89
- Drive belt (maintenance) ..... 181
- Driving advice**..... 161

Driving			
– At high speed.....	162	– Plugs .....	192
– On slippery surfaces .....	163	– Specifications .....	238
– While lifting/lowering .....	162	– Starting.....	146
<b>Engine coolant</b>		<b>ESP</b>	
– Level check .....	189	(Electronic Stability Program)	
– Replacement.....	190	– Control button .....	86–156
– Specifications .....	188	Ethyl/methyl alcohol (mixtures).....	12
– Topping up.....	189	Exhaust gas (warning) .....	144
Engine oil consumption .....	146	Exterior lights .....	59
Engine oil filter (replace).....	184	<b>Fiat CODE</b>	
Engine oil		(engine immobilizer system).....	13
– Level check .....	182	Fog lights.....	85
– Oil consumption.....	146	Foreword.....	7
– Replacement.....	183	Front seat backrest pocket.....	139
– Specifications .....	181	Fuel cap.....	126
– Topping up.....	182	Fuel level gauge.....	76
Engine temperature indicator .....	77	Fuel	
Engine		– Average consumption.....	81
– Air cleaner .....	191	– Consumption.....	235
– Coolant temperature gauge.....	77	– Fuel cap .....	126
– Coolant.....	188	– Instant fuel consumption	
– Emergency starting.....	221	(indicator).....	79
– Engine oil and filter.....	183	– Level gauge .....	78
– If the engine is flooded.....	224	– Range .....	82
– If the engine overheats.....	224	– Refuelling.....	12–242
– If the starter is not working.....	224	– Saving fuel .....	160
– Marking.....	234	Fuses.....	204
		<b>Gearbox lever .....</b>	<b>126</b>
		<b>Gearbox</b>	
		– Automatic transmission .....	148
		– If the automatic transmission	
		lever remains locked in the "P"	
		(Parking) position .....	226
		– Lever .....	126
		– Manual.....	149
		– Oil change .....	186–188
		– Oil level check.....	185–187
		– Using.....	148
		General information.....	233
		Glove compartment.....	88
		<b>Hazard warning lights .....</b>	<b>85</b>
		Headlight alignment (switch).....	88
		Headlights	
		– Bulb replacement.....	209
		– Headlight alignment switch.....	88
		Heated rear window.....	87
		Heating/	
		climate control system.....	90
		– Automatic climate	
		control system .....	98
		– Heating system.....	91
		– Manual climate control	
		system .....	94
		Heating system.....	91
		Horn.....	64

Ignition switch.....	56	– Parcel shelf.....	140	– CD player.....	111
Immobilizer.....	13	– Tailgate (opening).....	22	– Error messages.....	121
<b>In an emergency</b> .....	219	Luggage retaining hooks.....	139	– General information.....	107
Information display.....	78	<b>Main beams</b> .....	59	– MP3/WMA player.....	114
Instrument panel.....	67	– Bulb replacement.....	209	– Precautions and warning.....	105
– Lighting (brightness adjustment)	84	Maintenance		– Radio mode.....	108
Interior lights.....	132	– Heavy use of the vehicle.....	180	– RDS (Radio Data System).....	109
Isofix child seat.....	39–40–41	– Scheduled maintenance plan.....	177	– Steering wheel controls.....	122
<b>Jack</b> .....	138	Manual climate control system.....	94	– System.....	104
Jump starting.....	221	MP3/WMA player.....	114	– Troubleshooting.....	118
<b>Keyless Entry system</b> .....	17	<b>Odometer</b> .....	83	Radio–frequency transmitters (installation).....	141
Keys.....	13	Original/reconditioned parts.....	2	Raising the vehicle.....	220
– Keyless Entry.....	17	<b>Other controls and devices</b> .....	123	Rear fog light.....	60
– Replacing the battery.....	19	Outside temperature gauge.....	82	Rear view mirrors	
<b>Knowing your car</b> .....	143	<b>Parcel shelf</b> .....	140	– Demisting.....	87
<b>Light lever</b> .....	59	Parking brake lever.....	124	– Electric.....	27
Lighting (adjustment).....	84	Pedals.....	125	– External.....	26
Luggage compartment light.....	140	Performance.....	242	– Internal.....	26
Luggage compartment		Plugs.....	192–239	Rear window washer	
– Capacity.....	241	<b>Radio aerial</b> .....	107–141	– Control.....	62
– Extending the luggage compartment (seat tipping).....	128	Radio		Rear window wiper	
– Luggage compartment light.....	140	– Aerial.....	107–141	– Control.....	62
– Luggage retaining hooks.....	140	– Anti–theft.....	116	– Replacing blades.....	216
		– CD Changer player.....	112	Refuelling.....	12–242

Roof light			
– Bulb replacement.....	209		
Roof rack (fasteners) .....	141		
Running-in.....	159		
<b>Seat belt pretensioners</b> .....	44		
Seat belts			
– Attachment device .....	35		
– Check.....	36		
– Height adjustment.....	35		
– Pretensioners .....	44		
– Use.....	32		
– Warnings.....	30		
Seats			
– Folding rear.....	128		
– Front (adjustment) .....	28		
– Heated front.....	133		
– Seat backrest pocket .....	139		
Service station .....	5		
Snow chains .....	163		
Space-saver wheel.....	138–200		
Specifications .....	237		
Speedometer (speed indicator) .....	76		
Spot light (control) .....	132		
Starting (device) .....	56		
Starting the engine.....	146		
Steering column controls.....	55		
Steering wheel			
– Adjustment lever .....	63		
– Radio controls.....	64		
Steering .....	196–240		
Sun visors .....	131		
Supplementary restraint systems (airbags).....	46		
Support handles .....	134		
Suspension.....	240		
<b>T</b> ailgate .....	22		
Tool kit .....	138		
Tow hook.....	166		
Towing a trailer.....	166		
Towing the vehicle .....	171–223		
– Hooks .....	137		
– Instructions .....	172–173–174		
Transmission fluid			
– Level check .....	185		
– Replacement.....	186		
– Specifications .....	185		
Transmission.....	240		
Trip meter.....	79		
Tyres			
– Check.....	197		
– Rim protector .....	200		
– Rotation.....	199		
– Space-saver wheel .....	200		
– Specifications .....	241		
<b>U</b> SB port.....	89		
<b>V</b> ehicle checks and maintenance.....	175		
Vehicle identification data .....	234		
Vehicle Identification.....	234		
<b>V</b> ehicle load and towing.....	165		
Vehicle load.....	166		
<b>W</b> arning lights and indicators.....	68		
Weights.....	242		
Wheel rims (specifications) .....	241		
Wheels			
– Changing.....	138		
– Specifications .....	241		
Windows			
– Electric windows .....	23		
– Manual windows .....	23		
Windscreen demisting .....	92–103–102		
Windscreen washer fluid .....	191		
Windscreen washer			
– Bodywork washing.....	230		
– Control.....	61		
– Windscreen washer fluid.....	191		
Windscreen wiper			
– Control.....	61		
– Replacing blades.....	214		
Windscreen/rear window wiper blades.....	216		
– Replacement.....	214–216		

## **PROVISIONS FOR THE PROCESSING OF A VEHICLE AT THE END OF ITS LIFE-CYCLE**

For years now Fiat has been developing its global commitment towards the safeguarding and protection of the Environment through the continuous improvement of its production processes and the making of increasingly more “eco friendly” products. With a view to guaranteeing the best possible service to clients in full observance of environmental standards and in response to the obligations imposed by European Directive 2000/53/EC on end-of-life vehicles, Fiat offers its clients the possibility to hand in their vehicle\* at the end of its life span without additional costs.

The European Directive, in fact, provides for the take-back of the vehicle without the last holder or owner of the same incurring expenses due to the fact that the market value of the vehicle is zero or negative. In particular, in almost all of the countries of the European Union, up until 1st January 2007, take-back of the vehicle free of charge only applies to vehicles registered from 1 July 2002 on, while, from 2007 on, take-back will be carried out free of charge, independently of the year of registration, provided that the vehicle still contains all its essential component parts (especially engine and body) and is free from additional waste materials.

Our contracted network of authorised treatment facilities has been carefully selected in order to provide a quality service to our customers by de-polluting and recycling “End of Life Vehicles” to approved environmental standards. To find out the location of your nearest authorised treatment facility, offering free of charge take-back, simply contact one of our dealers or refer to the Fiat web site or call the toll free number 00800 3428 0000.

\* Passenger transportation vehicles to seat a max. of nine persons, having a total admissible weight of 3.5 t

# SELENIA<sup>®</sup>

***In the heart of your engine.***



Always ask your mechanic for **SELENIA<sup>®</sup>**

*Oil change? The experts recommend Selenia*

*The engine of your car is factory filled with **Selenia**. This is an engine oil range which satisfies the most advanced international specifications. Its superior technical characteristics allow **Selenia** to guarantee the **highest performance and protection of your engine**.*

---

*The Selenia range includes a number of technologically advanced products:*

**SELENIA K PURE ENERGY**

Synthetic lubricant designed for latest generation, low emission, petrol engines. Its specific formulation warrants the utmost protection also for high performance turbocharged engines with high thermal stress. Its low ash content helps to maintain the total cleanliness of modern catalyts.

**SELENIA WR PURE ENERGY**

Fully synthetic lubricant that can meet the requirements of the latest diesel engines. Low ash content to protect the particulate filter from the residual products of combustion. High Fuel Economy System that allows considerable fuel saving. It reduces the danger of dirtying the turbine to ensure the protection of increasingly high performance diesel engines

**SELENIA MULTIPOWER**

Particularly ideal for the protection of new generation petrol engines, very effective even in the most severe weather conditions. It guarantees a reduction in fuel consumption (Energy conserving) and it is also ideal for alternative engines.

**SELENIA SPORT**

Fully synthetic lubricant capable of meeting the needs of high performance engines. Studied to protect the engine also in high thermal stress conditions, it prevents deposits on the turbine to achieve the utmost performance in total safety.

The range also includes **Selenia StAR Pure Energy, Selenia Racing, Selenia K, Selenia WR, Selenia 20K, Selenia 20K AR**. For further information on Selenia products visit the web site **[www.selenia.com](http://www.selenia.com)**.

---





Fiat Group Automobiles S.p.A. - Parts&Services - Technical Services - Service Engineering  
Largo Senatore G. Agnelli, 3 - 10040 Volvera - Torino (Italia)  
Printed n. 603.99.381 - 07/2013 - I edition



The data contained in this publication is intended merely as a guide. FIAT reserves the right to modify the models and versions described in this booklet at any time for technical and commercial reasons.

If you have any further questions please consult your FIAT dealer.

Printed in recycled paper without chlorine.