

# Jeep<sup>®</sup>

# Compass

---

OPERATING INFORMATION



## OWNER REGISTRATION CERTIFICATE

Selling Dealer  
Stamp

Selling Dealer  
Signature \_\_\_\_\_

VIN | | | | | | | | | | | | | | | | | | | | | |

Make \_\_\_\_\_

Model \_\_\_\_\_

DATE OF REG.:      Day      Month      Year  
                         | |      | |      | |

Registration No.  
or License No. \_\_\_\_\_  
\_\_\_\_\_

OWNER: \_\_\_\_\_

ADDRESS: \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Telephone Number:

Private \_\_\_\_\_

Business \_\_\_\_\_

I have provided and explained the following:

OPERATING MANUAL

(Vehicle Handbook)

☐

VEHICLE

☐

PRE DELIVERY INSPECTION

☐

CUSTOMER

SIGNATURE: \_\_\_\_\_

DEALER

SIGNATURE: \_\_\_\_\_



# Table of Contents

1	INTRODUCTION . . . . .	3
2	THINGS TO KNOW BEFORE STARTING YOUR VEHICLE . . . . .	9
3	UNDERSTANDING THE FEATURES OF YOUR VEHICLE . . . . .	57
4	UNDERSTANDING YOUR INSTRUMENT PANEL . . . . .	109
5	STARTING AND OPERATING . . . . .	145
6	WHAT TO DO IN EMERGENCIES . . . . .	189
7	MAINTAINING YOUR VEHICLE . . . . .	205
8	MAINTENANCE SCHEDULES . . . . .	239
9	IF YOU NEED CONSUMER ASSISTANCE . . . . .	259
10	INDEX . . . . .	283



## INTRODUCTION

• INTRODUCTION	.4
• ROLLOVER WARNING	.4
• IMPORTANT NOTICE	.5
• HOW TO USE THIS MANUAL	.6
• WARNINGS AND CAUTIONS	.8
• VEHICLE IDENTIFICATION NUMBER	.8
• VEHICLE MODIFICATIONS/ALTERATIONS	.8

## INTRODUCTION

Congratulations on selecting your new Chrysler Group LLC vehicle. Be assured that it represents precision workmanship, distinctive styling, and high quality - all essentials that are traditional to our vehicles.

Before you start to drive this vehicle, read this Owner's Manual and all the supplements. Be sure you are familiar with all vehicle controls, particularly those used for braking, steering, and transmission shifting. Learn how your vehicle handles on different road surfaces. Your driving skills will improve with experience, but as in driving any vehicle, take it easy as you begin. Always observe local laws wherever you drive.

### NOTE:

**After reviewing the owner information, it should be stored in the vehicle for convenient referencing and remain with the vehicle when sold.**

Failure to operate this vehicle correctly may result in loss of control or a collision.

Operating this vehicle at excessive speeds or while intoxicated may result in loss of control, collision with other vehicles or objects, going off the road, or overturning; any of which may lead to serious injury or death. Also, failure to use seat belts subjects the driver and passengers to a greater risk of injury or death.

To keep your vehicle running at its best, have your vehicle serviced at recommended intervals by an authorized dealer who has the qualified personnel, special tools, and equipment to perform all service.

The manufacturer and its distributors are vitally interested in your complete satisfaction with this vehicle. If you encounter a service or warranty problem, which is not resolved to your satisfaction, discuss the matter with your authorized dealer's management.

Your authorized dealer will be happy to assist you with any questions about your vehicle.

## ROLLOVER WARNING

Utility vehicles have a significantly higher rollover rate than other types of vehicles. This vehicle has a higher ground clearance and a

higher center of gravity than many passenger cars. It is capable of performing better in a wide variety of off-road applications. Driven in an unsafe manner, all vehicles can go out of control. Because of the higher center of gravity, if this vehicle is out of control it may roll over when some other vehicles may not.

Do not attempt sharp turns, abrupt maneuvers, or other unsafe driving actions that can cause loss of vehicle control. Failure to operate this vehicle safely may result in a collision, rollover of the vehicle, and severe or fatal injury. Drive carefully.



808fe0f0

**Rollover Warning Label**



Failure to use the driver and passenger seat belts provided is a major cause of severe or fatal injury. In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Always buckle up.

## IMPORTANT NOTICE

ALL MATERIAL CONTAINED IN THIS PUBLICATION IS BASED ON THE LATEST INFORMATION AVAILABLE AT TIME OF PUBLICATION APPROVAL. THE RIGHT IS RESERVED TO PUBLISH REVISIONS AT ANY TIME.

This Owner's Manual has been prepared with the assistance of service and engineering specialists to acquaint you with the operation and maintenance of your new vehicle. It is supplemented by a Warranty Information Booklet and various customer-oriented documents. You are urged to read these publications carefully. Following the instructions and recommendations in this Owner's Manual will help assure safe and enjoyable operation of your vehicle.

After you have read the Owner's Manual, it should be stored in the vehicle for convenient reference and remain with the vehicle when sold.

The manufacturer reserves the right to make changes in design and specifications, and/or to make additions to or improvements in its products without imposing any obligations upon itself to install them on products previously manufactured.

The Owner's Manual illustrates and describes the features that are standard or available as extra cost options. Therefore, some of the equipment and accessories in this publication may not appear on your vehicle.

### NOTE:

**Be sure to read the Owner's Manual first before driving your vehicle and before attaching or installing parts/accessories or making other modifications to the vehicle.**

In view of the many replacement parts and accessories from various manufacturers available on the market, the manufacturer cannot be certain that the driving safety of your vehicle will not be impaired by the attachment or installation

of such parts. Even if such parts are officially-approved (for example, by a general operating permit for the part or by constructing the part in an officially approved design), or if an individual operating permit was issued for the vehicle after the attachment or installation of such parts, it cannot be implicitly assumed that the driving safety of your vehicle is unimpaired. Therefore, neither experts nor official agencies are liable. The manufacturer only assumes responsibility when parts, which are expressly authorized or recommended by the manufacturer, are attached or installed at an authorized dealer. The same applies when modifications to the original condition are subsequently made on the manufacturer's vehicles.

Your warranties do not cover any part that the manufacturer did not supply. Nor do they cover the cost of any repairs or adjustments that might be caused or needed because of the installation or use of non-manufacturer parts, components, equipment, materials, or additives. Nor do your warranties cover the costs of repairing damage or conditions caused by any changes to your vehicle that do not comply with the manufacturers specifications.

Original Mopar® parts and accessories and other products approved by the manufacturer, including qualified advice, are available at your authorized dealer.

When it comes to service, remember that your authorized dealer knows your vehicle best, has the factory-trained technicians and genuine Mopar® parts, and is interested in your satisfaction.

Copyright © 2012 Chrysler International.

## **HOW TO USE THIS MANUAL**

Consult the Table of Contents to determine which section contains the information you desire.

Since the specification of your vehicle depends on the items of equipment ordered, certain descriptions and illustrations may differ from your vehicle's equipment.

The detailed index at the back of this Owner's Manual contains a complete listing of all subjects.

Consult the following table for a description of the symbols that may be used on your vehicle or throughout this Owner's Manual:



010533317

## WARNINGS AND CAUTIONS


This Owners Manual contains **WARNINGS** against operating procedures that could result in a collision or bodily injury. It also contains **CAUTIONS** against procedures that could result in damage to your vehicle. If you do not read this entire Owners Manual, you may miss important information. Observe all Warnings and Cautions.

## VEHICLE IDENTIFICATION NUMBER

The Vehicle Identification Number (VIN) is found on the left front corner of the instrument panel, visible through the windshield. This number also is stamped into the right front body, on the right front seat crossmember under the carpet and appears on the vehicle registration and title.



Vehicle Identification Number (VIN)

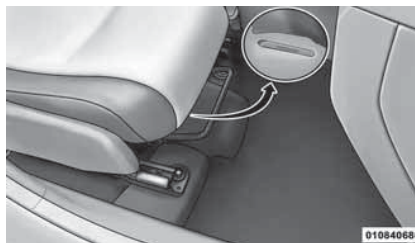

Right Front Body VIN Location

## VEHICLE MODIFICATIONS/ALTERATIONS

### WARNING!

Any modifications or alterations to this vehicle could seriously affect its roadworthiness and safety and may lead to a collision resulting in serious injury or death.

## THINGS TO KNOW BEFORE STARTING YOUR VEHICLE


- **A WORD ABOUT YOUR KEYS . . . . .12**
  - Ignition Key Removal . . . . .12
  - Locking Doors With A Key . . . . .13
  - Key-In-Ignition Reminder . . . . .13
- **STEERING WHEEL LOCK — IF EQUIPPED . . . . .13**
  - To Manually Lock The Steering Wheel . . . . .13
  - To Release The Steering Wheel Lock — If Equipped . . . . .13
- **SENTRY KEY® . . . . .14**
  - Replacement Keys . . . . .14
  - Customer Key Programming . . . . .15
  - General Information . . . . .15
- **PREMIUM VEHICLE SECURITY ALARM — IF EQUIPPED . . . . .15**
  - To Arm The System . . . . .15
  - To Disarm The System . . . . .15
  - Vehicle Security Alarm Manual Override . . . . .16
- **REMOTE KEYLESS ENTRY (RKE) . . . . .16**
  - To Unlock The Doors And Liftgate. . . . .16
  - Remote Key Unlock, Driver Door/All First Press . . . . .17

• Illuminated Approach — If Equipped . . . . .	17
• To Lock The Doors And Liftgate . . . . .	17
• Flash Lights With Remote Key Lock/Unlock . . . . .	17
• Battery Replacement . . . . .	18
• General Information . . . . .	18
• DOOR LOCKS . . . . .	19
• Manual Door Locks . . . . .	19
• Power Door Locks . . . . .	20
• Child-Protection Door Lock System — Rear Doors . . . . .	21
• POWER WINDOWS — IF EQUIPPED . . . . .	22
• Power Window Switches . . . . .	22
• Auto-Down . . . . .	23
• Window Lockout Switch . . . . .	23
• LIFTGATE . . . . .	24
• OCCUPANT RESTRAINTS . . . . .	25
• Lap/Shoulder Belts . . . . .	27
• Adjustable Upper Shoulder Belt Anchorage . . . . .	29
• Second Row Center Lap/Shoulder Belt Operating Instructions . . . . .	30
• Lap/Shoulder Belt Untwisting Procedure . . . . .	31
• Seat Belts In Passenger Seating Positions . . . . .	31
• Automatic Locking Retractor Mode (ALR) — If Equipped . . . . .	32
• Energy Management Feature . . . . .	32
• Seat Belt Pretensioners . . . . .	33
• Supplemental Active Head Restraints (AHR) . . . . .	33
• Enhanced Seat Belt Use Reminder System (BeltAlert®) . . . . .	35
• Seat Belts And Pregnant Women . . . . .	36
• Supplemental Restraint System (SRS) — Air Bags . . . . .	36

- Advanced Front Air Bag Features . . . . .37
- Air Bag Deployment Sensors And Controls . . . . .39
- Event Data Recorder (EDR) . . . . .44
- Child Restraints . . . . .44
- ENGINE BREAK-IN RECOMMENDATIONS . . . . .52
  - Additional Requirements For Diesel Engine — If Equipped . . . . .53
- SAFETY TIPS . . . . .53
  - Transporting Passengers . . . . .53
  - Exhaust Gas . . . . .53
  - Safety Checks You Should Make Inside The Vehicle . . . . .54
  - Periodic Safety Checks You Should Make Outside  
The Vehicle . . . . .55

## A WORD ABOUT YOUR KEYS

The authorized dealer that sold you your new vehicle has the key code numbers for your vehicle locks. These numbers can be used to order duplicate keys. Ask your authorized dealer for these numbers and keep them in a safe place.

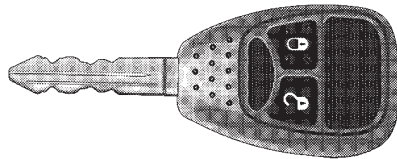

81866c27


Vehicle Key

### Ignition Key Removal

1. Place the shift lever in PARK (if equipped with an automatic transmission).
2. Turn the ignition switch to the ACC (Accessory) position.

3. Push the key and cylinder inward and rotate the key to the LOCK position.

4. Remove the key from the ignition switch lock cylinder.

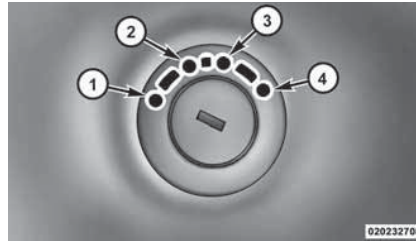

Ignition Switch Positions

- |                     |            |
|---------------------|------------|
| 1 — LOCK            | 3 — ON/RUN |
| 2 — ACC (ACCESSORY) | 4 — START  |

### NOTE:

If you try to remove the key before you place the shift lever in PARK, the key may become trapped temporarily in the ignition switch cylinder. If this occurs, place the shift lever in PARK, rotate the key to the right slightly, then remove the key as described. If a malfunction occurs, the system will trap the key in the ignition cylinder to warn you that this safety feature is inoperable. The engine can be started and stopped but the key cannot be removed until you obtain service.

### WARNING!

- Before exiting a vehicle, always apply the parking brake, shift the transmission into PARK and remove the Key Fob from the ignition. When leaving the vehicle, always lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle.

*(Continued)*



#### **WARNING! (Continued)**

- Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever.
- Do not leave the Key Fob in or near the vehicle, or in a location accessible to children. A child could operate power windows, other controls, or move the vehicle.
- Do not leave children or animals inside parked vehicles in hot weather. Interior heat build-up may cause serious injury or death.

#### **CAUTION!**

Always remove the key from the ignition and lock all doors when leaving the vehicle unattended.

#### **Locking Doors With A Key**

You can insert the key with either side up. To lock the door, turn the key to the right. To unlock the door, turn the key to the left. Refer to "Maintenance Procedures" in "Maintaining Your Vehicle" for further information.

#### **Key-In-Ignition Reminder**

Opening the driver's door when the key is in the ignition and the ignition position is LOCK or ACC, sounds a signal to remind you to remove the key.

#### **NOTE:**

**With the driver's door open and the key in the ignition, the power door locks will not lock and Remote Keyless Entry (RKE) transmitter will not function.**

#### **STEERING WHEEL LOCK — IF EQUIPPED**

Your vehicle may be equipped with a passive steering wheel lock. This lock prevents steering the vehicle without the ignition key. If the steering wheel is moved approximately a half turn in

either direction, and the key is not in the ignition, the steering wheel will lock.

#### **To Manually Lock The Steering Wheel**

With the engine running, rotate the steering wheel one-half revolution in either direction (three o'clock or nine o'clock position), turn off the engine and remove the key. Turn the steering wheel slightly in either direction until the lock engages.

#### **To Release The Steering Wheel Lock — If Equipped**

Insert the key in the ignition switch and start the engine. If the key is difficult to turn, move the wheel slightly to the right or left to disengage the lock.

#### **NOTE:**

**If you turned the wheel to the right to engage the lock, you must turn the wheel slightly to the right to disengage it. If you turned the wheel to the left to engage the lock, turn the wheel slightly to the left to disengage it.**

## SENTRY KEY®

The Sentry Key® Immobilizer System prevents unauthorized vehicle operation by disabling the engine. The system does not need to be armed or activated. Operation is automatic, regardless of whether the vehicle is locked or unlocked.

The system uses ignition keys, which have an embedded electronic chip (transponder) to prevent unauthorized vehicle operation. Only keys that are programmed to the vehicle can be used to start and operate the vehicle. The system will shut the engine off in two seconds if someone uses an invalid key to start the engine.

### NOTE:

**A key that has not been programmed is also considered an invalid key, even if it is cut to fit the ignition switch lock cylinder for that vehicle.**

During normal operation, after turning the ignition switch ON/RUN, the Vehicle Security Light will turn on for three seconds for a bulb check. If the light remains on after the bulb check, it indicates that there is a problem with the electronics. In addition, if the light begins to flash after the bulb check, it indicates that someone

used an invalid key to start the engine. Either of these conditions will result in the engine being shut off after two seconds.

If the Vehicle Security Light turns on during normal vehicle operation (vehicle running for longer than 10 seconds), it indicates that there is a fault in the electronics. Should this occur, have the vehicle serviced as soon as possible by an authorized dealer.

### CAUTION!

The Sentry Key® Immobilizer system is not compatible with some after-market remote starting systems. Use of these systems may result in vehicle starting problems and loss of security protection.

All of the keys provided with your new vehicle have been programmed to the vehicle electronics. See your authorized dealer if you require replacement or additional keys for your vehicle.

## Replacement Keys

### NOTE:

**Only keys that have been programmed to the vehicle electronics can be used to start the vehicle. Once a Sentry Key® has been programmed to a vehicle, it cannot be programmed to any other vehicle.**

### CAUTION!

Always remove the Sentry Keys® from the vehicle and lock all doors when leaving the vehicle unattended.

At the time of purchase, the original owner is provided with a four-digit Personal Identification Number (PIN). Keep the PIN in a secure location. This number is required for replacement of keys. Duplication of keys consists of programming a blank key to the vehicle electronics. A blank key is one which has never been programmed. See your authorized dealer if you require replacement or additional keys for your vehicle.

**NOTE:**

**When having the Sentry Key® Immobilizer System serviced, bring all vehicle keys with you to an authorized dealer.**

**Customer Key Programming**

See your authorized dealer if you require replacement or additional keys for your vehicle.

**General Information**

The Sentry Key® Immobilizer is a 433.92 MHz system. It will be used in the following European countries, which apply Directive 1999/5/EC: Austria, Belgium, Czech Republic, Denmark, Finland, France, Germany, Greece, Hungary, Ireland, Italy, Luxembourg, Netherlands, Norway, Poland, Portugal, Romania, Russian Federation, Slovenia, Spain, Sweden, Switzerland, Yugoslavia, and United Kingdom.

- This device may not cause harmful interference.
- This device must accept any interference that may be received, including interference that may cause undesired operation.

**PREMIUM VEHICLE SECURITY ALARM — IF EQUIPPED**

The Premium Vehicle Security Alarm system monitors the doors, hood latch, liftgate, and ignition switch for unauthorized operation.

If something triggers the security alarm the audible alert will sound for 30 seconds and flash the lights for 60 seconds. If the triggering device is not deactivated, the audible alert will sound again after a five-second delay for another 30 seconds. If the trigger remains present, this cycle will repeat for up to five minutes.

If the intrusion sensor is enabled, the security alarm will trigger the audible alert for 29 seconds. When this portion of the alarm is set, movement inside the vehicle will trigger the Vehicle Security Alarm.

**To Arm The System**

1. Remove the key from the ignition switch and get out of the vehicle.
2. Lock the door using either the power door lock switch, or the Remote Keyless Entry (RKE) transmitter and close all doors.

3. The Vehicle Security Light in the instrument cluster will flash rapidly for 16 seconds. This shows that the security alarm is arming. After 16 seconds the locks will activate and the Vehicle Security Light will continue to flash slowly. This shows that the Vehicle Security Alarm system is fully armed.

**NOTE:**

**The intrusion sensor (motion detector) actively monitors your vehicle every time you arm the security alarm. If you prefer, you can turn off the intrusion sensor when arming the security alarm.**

To disable the intrusion sensor, activate the LOCK request three times using the RKE transmitter during the arming period (lamp flashing quickly). The intrusion sensor will automatically be enabled the next time the security alarm is set.

**To Disarm The System**

Press UNLOCK on the RKE transmitter, or insert the key into the ignition switch and turn the ignition switch to the ON/RUN position.

**NOTE:**

- Battery disconnects will not disarm the security alarm system.
- Using the key in the door lock cylinder will only unlock the deadbolt locks.
- To open the doors after the security alarm is set and the locks are activated, press the unlock button on the RKE transmitter. You can also unlock the door lock plunger and door handle by inserting the ignition key into lock cylinder on the door and turning it, but the alarm will sound. In this case, insert the ignition key into the ignition switch and turn it to **ON/RUN** position.

If the security alarm has been triggered, the Vehicle Security Light will flash twice every two seconds.

**NOTE:**


The ultrasonic intrusion sensor (motion detector) actively monitors your vehicle every time you arm the security system. If you prefer, you can turn **OFF** the ultrasonic intrusion sensor when arming the security system. To do so, press the **LOCK** button on the RKE transmitter three times within 15 seconds of arming the system (while the Vehicle Security Light is flashing rapidly).

### **Vehicle Security Alarm Manual Override**

The security alarm will not arm if you lock the doors using the manual door lock plunger.

## **REMOTE KEYLESS ENTRY (RKE)**

This system allows you to lock or unlock the doors and liftgate from distances up to approximately 33 ft (10 m) using a hand-held Remote Keyless Entry (RKE) transmitter. The RKE transmitter does not need to be pointed at the vehicle to activate the system.

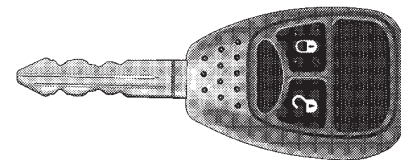

81866c27

### **RKE Transmitter With Integrated Key**

**NOTE:**

**The line of transmission must not be blocked with metal objects.**

### **To Unlock The Doors And Liftgate**

Press and release the **UNLOCK** button on the RKE transmitter once to unlock the driver's door, or twice within five seconds to unlock all doors and liftgate. The turn signal lights will flash to acknowledge the unlock signal. The illuminated entry system will also turn on.

## Remote Key Unlock, Driver Door/All First Press

This feature lets you program the system to unlock either the driver's door or all doors on the first press of the UNLOCK button on the RKE transmitter. To change the current setting, proceed as follows:

- For vehicles equipped with the Electronic Vehicle Information Center (EVIC), refer to "Electronic Vehicle Information Center (EVIC)/Personal Settings (Customer-Programmable Features)" in "Understanding Your Instrument Panel" for further information.
- For vehicles not equipped with the EVIC, perform the following steps:

1. Press and hold the LOCK button on a programmed RKE transmitter for at least 4 seconds, but no longer than 10 seconds. Then, press and hold the UNLOCK button while still holding the LOCK button.
2. Release both buttons at the same time.

3. Test the feature while outside of the vehicle by pressing the LOCK/UNLOCK buttons on the RKE transmitter with the ignition switch in the LOCK position and the key removed.

4. Repeat these steps if you want to return this feature to its previous setting.

### NOTE:

**Pressing the LOCK button on the RKE transmitter while you are inside the vehicle will activate the Vehicle Security Alarm. Opening a door with the Vehicle Security Alarm activated will cause the alarm to sound. Press the UNLOCK button to deactivate the Vehicle Security Alarm.**

### Illuminated Approach — If Equipped

This feature activates the headlights for up to 90 seconds when the doors are unlocked with the RKE transmitter. The time for this feature is programmable on vehicles equipped with the EVIC. Refer to "Electronic Vehicle Information Center (EVIC)/Personal Settings (Customer-Programmable Features)" in "Understanding Your Instrument Panel" for further information.

## To Lock The Doors And Liftgate

Press and release the LOCK button on the RKE transmitter to lock all doors and liftgate. The turn signal lights will flash to acknowledge the signal.

### Flash Lights With Remote Key Lock/Unlock

This feature will cause the turn signal lights to flash when the doors are locked or unlocked with the RKE transmitter. This feature can be turned on or turned off. To change the current setting, proceed as follows:

- For vehicles equipped with the EVIC, refer to "Electronic Vehicle Information Center (EVIC)/Personal Settings (Customer-Programmable Features)" in "Understanding Your Instrument Panel" for further information.
- For vehicles not equipped with the EVIC, perform the following steps:

1. Press and hold the UNLOCK button on a programmed RKE transmitter for at least 4 seconds, but no longer than 10 seconds. Then,

press and hold the LOCK button while still holding the UNLOCK button.

2. Release both buttons at the same time.

3. Test the feature while outside of the vehicle by pressing the LOCK/UNLOCK buttons on the RKE transmitter with the ignition switch in the LOCK position and the key removed.

4. Repeat these steps if you want to return this feature to its previous setting.

**NOTE:**

**Pressing the LOCK button on the RKE transmitter while you are in the vehicle will activate the Vehicle Security Alarm. Opening a door with the Vehicle Security Alarm activated will cause the alarm to sound. Press the UNLOCK button to deactivate the Vehicle Security Alarm.**

### Battery Replacement

The recommended replacement battery is CR2032.

**NOTE:**

**Perchlorate Material — special handling may apply.**

1. If the transmitter is equipped with a screw, remove the screw. With the transmitter buttons facing down, use a flat blade to pry the two halves of the transmitter apart. Make sure not to damage the elastomer seal during removal.



81182c72

### Separating Transmitter Halves

2. Remove and replace the battery. Avoid touching the new battery with your fingers. Skin oils may cause battery deterioration. If you touch a battery, clean it with rubbing alcohol.

3. To assemble the transmitter case, snap the two halves together.

**NOTE:**

**If the transmitter is equipped with a screw, reinstall and tighten the screw until snug.**

### General Information

The transmitter and receivers operate on a carrier frequency of 433.92 MHz as required by EEC regulations. These devices must be certified to conform to specific regulations in each individual country. Two sets of regulations are involved: ETS (European Telecommunication Standard) 300–220, which most countries use, and German BZT federal regulation 225Z125, which is based on ETC 300–220 but has additional unique requirements. Other defined requirements are noted in ANNEX VI of COMMISSION DIRECTIVE 95/56/EC. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

If your RKE transmitter fails to operate from a normal distance, check for these two conditions:

1. Weak battery in the transmitter. The expected life of the battery is a minimum of three years.
2. Closeness to a radio transmitter such as a radio station tower, airport transmitter, and some mobile or CB radios.

## DOOR LOCKS

### Manual Door Locks

Use the manual door lock knob to lock the doors from inside the vehicle. If the lock knob is down when the door is closed, the door will lock. Make sure the keys are not inside the vehicle before closing the door.



Manual Door Lock Knob

#### WARNING!

- For personal security and safety in the event of an collision, lock the vehicle doors as you drive as well as when you park and leave the vehicle.

*(Continued)*

#### WARNING! *(Continued)*

- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever.
- Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever.
- Do not leave the key fob in or near the vehicle, or in a location accessible to children, a child could operate power windows, other controls, or move the vehicle.

**CAUTION!**

An unlocked vehicle is an invitation to thieves. Always remove the key from the ignition and lock all of the doors when leaving the vehicle unattended.

**Power Door Locks**

A power door lock switch is located on the driver's and front passenger's door panel. Press this switch to lock or unlock the doors and liftgate.

**NOTE:**

**To prevent from locking the key in the vehicle, the power door lock switch will not operate when the key is in the ignition and either front door is open. A chime will sound as a reminder to remove the key.**



**Driver Power Door Lock Switch**

1 - Unlock

2 - Lock

**Auto Lock Doors — If Equipped**

When enabled, the door locks will lock automatically when the vehicle's speed exceeds 15 mph (24 km/h).

The doors will lock automatically on vehicles with power door locks if all of the following conditions are met:

- The Auto Door Lock feature is enabled.
- The transmission is in gear.
- All doors are closed.

- The throttle is pressed.
- The vehicle speed is above 15 mph (24 km/h).
- The doors were not previously locked using the power door lock switch or Remote Keyless Entry (RKE) transmitter.

**Auto Lock Doors Programming**

The Automatic Door Locks feature can be enabled or disabled as follows:

- For vehicles equipped with the Electronic Vehicle Information Center (EVIC), refer to "Electronic Vehicle Information Center (EVIC) — If Equipped/Personal Settings (Customer Programmable Features)" in "Understanding Your Instrument Panel" for further information.
- For vehicles not equipped with the EVIC, perform the following procedure:
  1. Close all doors and place the key in the ignition switch.



2. Within 15 seconds, cycle the ignition switch between LOCK and ON/RUN and then back to LOCK four times ending up in the LOCK position (do not start the engine).

3. Within 30 seconds, press the power door LOCK switch to lock the doors.

4. A single chime will indicate the completion of the programming.

5. Repeat these steps if you want to return this feature to its previous setting.

**NOTE:**

- **If you do not hear the chime it means that the system did not enter the programming mode and you will need to repeat the procedure.**
- **Use the Automatic Door Lock feature in accordance with local laws.**

**Automatic Unlock Doors On Exit**

The doors will unlock automatically if:

- The Automatic Unlock Doors On Exit feature is enabled.

- The transmission was in gear and the vehicle speed returned to 0 mph (0 km/h).

- The transmission is in NEUTRAL or PARK.

- The driver's door is opened.

- The doors were not previously unlocked.

**Automatic Unlock Doors On Exit Programming**

The Automatic Unlock Doors On Exit feature can be enabled or disabled as follows:

- For vehicles equipped with the EVIC, refer to "Electronic Vehicle Information Center (EVIC) — If Equipped/Personal Settings (Customer-Programmable Features)" in "Understanding Your Instrument Panel" for further information.

- For vehicles not equipped with the EVIC, perform the following procedure:

1. Close all doors and place the key in the ignition.

2. Within 15 seconds, cycle the ignition switch between LOCK and ON/RUN and then back to LOCK five times ending up in the ON/RUN position (do not start the engine).

3. Within 30 seconds, press the power door UNLOCK switch to unlock the doors.

4. A single chime will indicate the completion of the programming.

5. Repeat these steps if you want to return this feature to its previous setting.

**NOTE:**

- **If you do not hear the chime it means that the system did not enter the programming mode and you will need to repeat the procedure.**
- **Use the Automatic Unlock Doors On Exit feature in accordance with local laws.**


**Child-Protection Door Lock System — Rear Doors**

To provide a safer environment for small children riding in the rear seats, the rear doors are equipped with Child-Protection Door Lock system.

**To Engage Or Disengage The Child-Protection Door Lock System**

1. Open the rear door.

2. Insert the tip of the ignition key into the lock and rotate to the LOCK or UNLOCK position.
3. Repeat steps 1 and 2 for the opposite rear door.

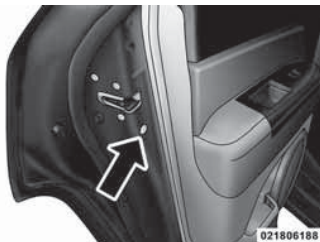

**Child-Protection Door Lock Location**



**Child-Protection Door Lock Function**

**WARNING!**

Avoid trapping anyone in a vehicle in a collision. Remember that the rear doors can only be opened from the outside when the Child-Protection locks are engaged.

**NOTE:**

For emergency exit with the system engaged, move the lock knob up (unlocked position), roll down the window and open the door with the outside door handle.

## **POWER WINDOWS — IF EQUIPPED**

### **Power Window Switches**

The window controls on the driver's door trim panel control all the door windows. There are single window controls on each passenger door trim panel, which operate the passenger door windows. The window controls will operate when the ignition switch is in the ON/RUN or ACC position.

**NOTE:**

- For vehicles not equipped with the Electronic Vehicle Information Center (EVIC), the power window switches will remain active for 45 seconds after the ignition switch is turned to the LOCK position. Opening either front door will cancel this feature.
- For vehicles equipped with the EVIC, the power window switches will remain active for up to 10 minutes after the ignition switch is turned to the LOCK position. Opening either front door will cancel this

feature. The time for this feature is programmable. Refer to “Electronic Vehicle Information Center (EVIC)/Personal Settings (Customer-Programmable Features)” in “Understanding Your Instrument Panel” for further information.

#### **WARNING!**

Never leave children in a vehicle with the key in the ignition switch. Occupants, particularly unattended children, can become entrapped by the windows while operating the power window switches. Such entrapment may result in serious injury or death.



**Power Window Switch Location**

#### **Auto-Down**

The driver's door window switch has an Auto-Down feature. Push the window switch past the first detent, release, and the window will go down automatically. To cancel the Auto-Down movement, operate the switch in either the up or down direction and release the switch.

#### **Window Lockout Switch**

The window lockout switch on the driver's door allows you to disable the window control on the other doors. To disable the window controls on the other doors, press the window LOCKOUT switch. To enable the window controls, press the window LOCKOUT switch a second time.



**Window Lockout Switch**

## LIFTGATE

### NOTE:

**The key that is used to start the vehicle is also used to lock or unlock the doors and open the liftgate.**

To unlock the liftgate, insert the key into the lock and turn it to the right (manual lock models only). The liftgate can also be unlocked using the Remote Keyless Entry (RKE) transmitter or by activating the power door lock switches located on the front doors. The central locking/unlocking feature (if equipped) can also be activated from the liftgate key cylinder.

Once unlocked, the liftgate can be opened or closed without using the key. To open the liftgate, squeeze the liftgate release and pull the liftgate open with one fluid motion.



**Liftgate Latch Location**

### NOTE:

- **In the event of a power malfunction, or the RKE transmitter is inoperative, insert the key into the liftgate lock cylinder and turn to the right (manual lock models only). Using the liftgate handle, pull the liftgate open with one fluid motion.**
- **Although the liftgate has no inside release mechanism, the liftgate trim panel includes an opening with a snap-in cap that provides access to release the latch in the event of an electrical system malfunction.**

### WARNING!

- Driving with the liftgate open can allow poisonous exhaust gases into your vehicle. You and your passengers could be injured by these fumes. Keep the liftgate closed when you are operating the vehicle.
- If you are required to drive with the liftgate open, make sure that all windows are closed, and the climate control blower switch is set at high speed. Do not use the recirculation mode.

Gas props support the liftgate in the open position. However, because the gas pressure drops with temperature, it may be necessary to assist the props when opening the liftgate in cold weather.

## OCCUPANT RESTRAINTS

Some of the most important safety features in your vehicle are the restraint systems:

- Three-point lap and shoulder belts for all seating positions
- Advanced Front Air Bags for driver and front passenger
- Supplemental Active Head Restraints (AHR) located on top of the front seats (integrated into the head restraint) — if equipped
- Supplemental Side Air Bag Inflatable Curtains (SABIC) for the driver and passengers seated next to a window
- Supplemental Seat-Mounted Side Air Bags
- An energy-absorbing steering column and steering wheel
- Knee bolsters/blockers for front seat occupants
- Front seat belts incorporate pretensioners that may enhance occupant protection by managing occupant energy during an impact event

- All seat belt systems (except the driver's) include Automatic Locking Retractors (ALRs), which lock the seat belt webbing into position by extending the belt all the way out and then adjusting the belt to the desired length to restrain a child seat or secure a large item in a seat — if equipped

Please pay close attention to the information in this section. It tells you how to use your restraint system properly, to keep you and your passengers as safe as possible.

If you will be carrying children too small for adult-sized seat belts, the seat belts or the ISOFIX feature also can be used to hold infant and child restraint systems. For more information, refer to ISOFIX — Child Seat Anchorage System.

### NOTE:

**The Advanced Front Air Bags have a multi-stage inflator design. This allows the air bag to have different rates of inflation based on several factors, including the severity and type of collision.**

Here are some simple steps you can take to minimize the risk of harm from a deploying air bag:

1. **Children 12 years old and under should always ride buckled up in a rear seat.**

### WARNING!

Infants in rear facing child restraints should never ride in the front seat of a vehicle with a passenger Advanced Front Air Bag. An air bag deployment can cause severe injury or death to infants in that position.

Children that are not big enough to wear the vehicle seat belt properly (see section on Child Restraints) should be secured in the rear seat in child restraints or belt-positioning booster seats. Older children who do not use child restraints or belt-positioning booster seats should ride properly buckled up in the rear seat. Never allow children to slide the shoulder belt behind them or under their arm.

If a child from 1 to 12 years old (not in a rear facing child seat) must ride in the front passen-

ger seat, move the seat as far back as possible and use the proper child restraint. (Refer to "Child Restraints")

You should read the instructions provided with your child restraint to make sure that you are using it properly.

**2. All occupants should always wear their lap and shoulder belts properly.**

**3. The driver and front passenger seats should be moved back as far as practical to allow the Advanced Front Air Bags room to inflate.**

**4. Do not lean against the door or window. If your vehicle has side air bags, and deployment occurs, the side air bags will inflate forcefully into the space between you and the door.**

**5. If the air bag system in this vehicle needs to be modified to accommodate a disabled person, contact the Customer Center. Phone numbers are provided under "If You Need Assistance".**

**WARNING!**

- Relying on the air bags alone could lead to more severe injuries in a collision. The air bags work with your seat belt to restrain you properly. In some collisions, the air bags won't deploy at all. Always wear your seat belts even though you have air bags.
- Being too close to the steering wheel or instrument panel during Advanced Front Air Bag deployment could cause serious injury, including death. Air Bags need room to inflate. Sit back, comfortably extending your arms to reach the steering wheel or instrument panel.
- Supplemental Side Air Bag Inflatable Curtain (SABIC) and Seat-Mounted Side Air Bags (SAB) also need room to inflate. Do not lean against the door or window. Sit upright in the center of the seat.

***(Continued)***

**WARNING! *(Continued)***

- In a collision, you and your passengers can suffer much greater injuries if you are not properly buckled up. You can strike the interior of your vehicle or other passengers, or you can be thrown out of the vehicle. Always be sure you and others in your vehicle are buckled up properly.
- Being too close to the Supplemental Side Air Bag Inflatable Curtain (SABIC) and/or Seat-Mounted Side Air Bag (SAB) during deployment could cause you to be severely injured or killed.

Buckle up even though you are an excellent driver, even on short trips. Someone on the road may be a poor driver and cause a collision that includes you. This can happen far away from home or on your own street.

Research has shown that seat belts save lives, and they can reduce the seriousness of injuries in a collision. Some of the worst injuries happen when people are thrown from the vehicle. Seat belts reduce the possibility of ejection and the

risk of injury caused by striking the inside of the vehicle. Everyone in a motor vehicle should be belted at all times.

### Lap/Shoulder Belts

All seating positions in your vehicle are equipped with lap/shoulder belts.

The belt webbing retractor is designed to lock during very sudden stops or collisions. This feature allows the shoulder part of the belt to move freely with you under normal conditions. However, in a collision the belt will lock and reduce the risk of you striking the inside of the vehicle or being thrown out.

#### WARNING!

- It is dangerous to ride in a cargo area, inside or outside of a vehicle. In a collision, people riding in these areas are more likely to be seriously injured or killed.
- Do not allow people to ride in any area of your vehicle that is not equipped with seats and seat belts.

*(Continued)*

#### WARNING! (Continued)

- Be sure everyone in your vehicle is in a seat and using a seat belt properly.
- Wearing a seat belt incorrectly is dangerous. Seat belts are designed to go around the large bones of your body. These are the strongest parts of your body and can take the forces of a collision the best.
- Wearing your belt in the wrong place could make your injuries in a collision much worse. You might suffer internal injuries, or you could even slide out of part of the belt. Follow these instructions to wear your seat belt safely and to keep your passengers safe, too.
- Two people should never be belted into a single seat belt. People belted together can crash into one another in a collision, hurting one another badly. Never use a lap/shoulder belt or lap belt for more than one person, no matter what their size.

### Lap/Shoulder Belt Operating Instructions

1. Enter the vehicle and close the door. Sit back and adjust the seat.
2. The seat belt latch plate is along side the pillar near the back of your seat. Grasp the latch plate and pull out the belt. Slide the latch plate up the webbing as far as necessary to allow the belt to go around your lap.



**Pulling Out The Latch Plate**

3. When the belt is long enough to fit, insert the latch plate into the buckle until you hear a "click."



**Inserting Latch Plate Into Buckle**

**WARNING!**

- A belt buckled into the wrong buckle will not protect you properly. The lap portion could ride too high on your body, possibly causing internal injuries. Always buckle your belt into the buckle nearest you.
- A belt that is too loose will not protect you properly. In a sudden stop you could move too far forward, increasing the possibility of injury. Wear your seat belt snugly.

**(Continued)**

**WARNING! (Continued)**

- A belt that is worn under your arm is dangerous. Your body could strike the inside surfaces of the vehicle in a collision, increasing head and neck injury. A belt worn under the arm can cause internal injuries. Ribs aren't as strong as shoulder bones. Wear the belt over your shoulder so that your strongest bones will take the force in a collision.
- A shoulder belt placed behind you will not protect you from injury during a collision. You are more likely to hit your head in a collision if you do not wear your shoulder belt. The lap and shoulder belt are meant to be used together.

4. Position the lap belt across your thighs, below your abdomen. To remove slack in the lap belt portion, pull up on the shoulder belt. To loosen the lap belt if it is too tight, tilt the latch plate and pull on the lap belt. A snug belt reduces the risk of sliding under the belt in a collision.



**Positioning Lap Belt**

**WARNING!**

- A lap belt worn too high can increase the risk of internal injury in a collision. The belt forces won't be at the strong hip and pelvic bones, but across your abdomen. Always wear the lap belt as low as possible and keep it snug.

**(Continued)**



**WARNING! (Continued)**

- A twisted belt may not protect you properly. In a collision, it could even cut into you. Be sure the belt is straight. If you can't straighten a belt in your vehicle, take it to your authorized dealer immediately and have it fixed.

5. Position the shoulder belt on your chest so that it is comfortable and not resting on your neck. The retractor will withdraw any slack in the belt.

6. To release the belt, push the red button on the buckle. The belt will automatically retract to its stowed position. If necessary, slide the latch plate down the webbing to allow the belt to retract fully.

**WARNING!**

A frayed or torn belt could rip apart in a collision and leave you with no protection. Inspect the belt system periodically, checking for cuts, frays, or loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the system. Seat belt assemblies must be replaced after a collision if they have been damaged (bent retractor, torn webbing, etc.).


**Adjustable Upper Shoulder Belt Anchorage**

In the front seat, the shoulder belt can be adjusted upward or downward to position the belt away from your neck. Push the anchorage button to release the anchorage, and move it up or down to the position that fits you best.

**NOTE:**

**The adjustable upper shoulder belt anchorage is equipped with an Easy Up feature. This feature allows the shoulder belt anchorage to be adjusted in the upward posi-**

**tion without pressing the release button. To verify the shoulder belt anchorage is latched, pull downward on the shoulder belt anchorage until it is locked into position.**

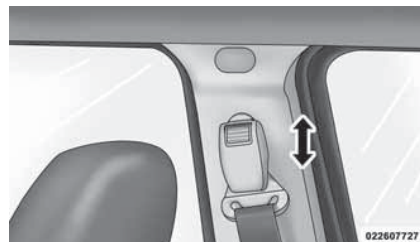

**Adjustable Anchorage**


As a guide, if you are shorter than average you will prefer a lower position, and if you are taller than average you will prefer a higher position. When you release the anchorage, try to move it down to make sure that it is locked in position.

In the rear seat, move toward the center of the seat to position the belt away from your neck.

## Second Row Center Lap/Shoulder Belt Operating Instructions

The second row center lap/shoulder belt features a three-point seat belt with a mini-latch and buckle, which allows the shoulder belt to detach from the lower anchor when the seat is folded. The mini-buckle and shoulder belt can then be stored out of the way in the right side trim panel for added convenience.

1. Remove the mini-latch and regular latch from its stowed position in the right rear side trim panel.

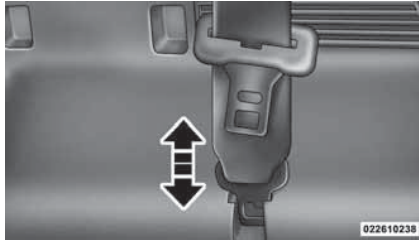

Mini-Latch Stowage

2. Grasp the mini-latch plate and pull the belt over the seat.

3. Route the shoulder belt to the inside of the right head restraint.




### Routing The Rear Center Shoulder Belt

4. When the belt is long enough to fit, insert the mini-latch plate into the mini-buckle until you hear a “click.”


5. Sit back in the seat. Slide the regular latch plate up the webbing as far as necessary to allow the belt to go around your lap.

6. When the belt is long enough to fit, insert the latch plate into the buckle until you hear a “click.”

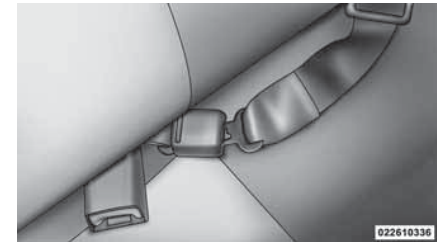

### Connecting Mini-Latch To Buckle


7. Position the lap belt across your thighs, below your abdomen. To remove slack in the lap belt portion, pull up on the shoulder belt. To loosen the lap belt if it is too tight, pull on the lap belt. A snug belt reduces the risk of sliding under the belt in a collision.

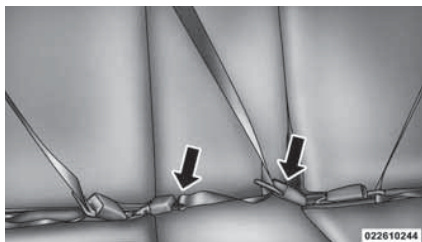

**Rear Center Seat Belt Buckled**

8. Position the shoulder belt on your chest so that it is comfortable and not resting on your neck. The retractor will withdraw any slack in the belt.

9. To release the belt, push the red button on the buckle.

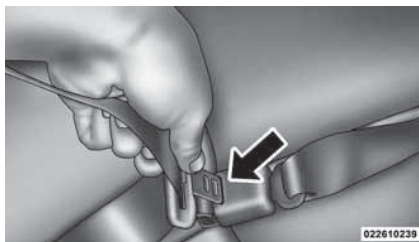

**Detaching Mini-Latch And Buckle**

10. To disengage the mini-latch from the mini-buckle for storage, insert the regular latch plate into the black button on the top of the mini-buckle. The belt will automatically retract to its stowed position. If necessary, slide the latch plate down the webbing to allow the belt to retract fully. Insert the mini-latch plate into the slot provided in the trim panel.

### **Lap/Shoulder Belt Untwisting Procedure**

Use the following procedure to untwist a twisted lap/shoulder belt.

1. Position the latch plate as close as possible to the anchor point.

2. At about 6 to 12 in (15 to 30 cm) above the latch plate, grasp and twist the belt webbing 180 degrees to create a fold that begins immediately above the latch plate.

3. Slide the latch plate upward over the folded webbing. The folded webbing must enter the slot at the top of the latch plate.

4. Continue to slide the latch plate up until it clears the folded webbing.

### **Seat Belts In Passenger Seating Positions**

The seat belts in the passenger seating positions are equipped with Automatic Locking Retractors (ALR) which are used to secure a child restraint system. For additional information, refer to "Installing Child Restraints Using The Vehicle Seat Belt" under the "Child Restraints" section. The chart below defines the type of feature for each seating position.

	Driver	Center	Passenger
First Row	N/A	N/A	ALR
Second Row	ALR	ALR	ALR

- N/A — Not Applicable
- ALR — Automatic Locking Retractor

If the passenger seating position is equipped with an ALR and is being used for normal usage:

Only pull the belt webbing out far enough to comfortably wrap around the occupant's mid-section so as to not activate the ALR. If the ALR is activated, you will hear a ratcheting sound as the belt retracts. Allow the webbing to retract completely in this case and then carefully pull out only the amount of webbing necessary to comfortably wrap around the occupant's mid-section. Slide the latch plate into the buckle until you hear a "click."

### Automatic Locking Retractor Mode (ALR) — If Equipped

In this mode, the shoulder belt is automatically pre-locked. The belt will still retract to remove any slack in the shoulder belt. The Automatic Locking Mode is available on all passenger-seating positions with a combination lap/shoulder belt. Use the Automatic Locking Mode anytime a child safety seat is installed in a seating position that has a belt with this feature. Children 12 years old and under should always be properly restrained in the rear seat.

#### How To Engage The Automatic Locking Mode

1. Buckle the combination lap and shoulder belt.
2. Grasp the shoulder portion and pull downward until the entire belt is extracted.
3. Allow the belt to retract. As the belt retracts, you will hear a clicking sound. This indicates the safety belt is now in the Automatic Locking Mode.

### How To Disengage The Automatic Locking Mode

Unbuckle the combination lap/shoulder belt and allow it to retract completely to disengage the Automatic Locking Mode and activate the vehicle sensitive (emergency) locking mode.

#### WARNING!

- The belt and retractor assembly must be replaced if the seat belt assembly Automatic Locking Retractor (ALR) feature or any other seat belt function is not working properly when checked according to the procedures in the Service Manual.
- Failure to replace the belt and retractor assembly could increase the risk of injury in collisions.

### Energy Management Feature

This vehicle has a safety belt system with an energy management feature in the front seating positions to help further reduce the risk of injury in the event of a head-on collision. This safety belt system has a retractor assembly that is

designed to release webbing in a controlled manner. This feature is designed to help reduce the belt force acting on the occupant's chest.

### Seat Belt Pretensioners

The seat belts for both front seating positions are equipped with pretensioning devices that are designed to remove slack from the seat belt in the event of a collision. These devices may improve the performance of the seat belt by assuring that the belt is tight about the occupant early in a collision. Pretensioners work for all size occupants, including those in child restraints.

#### NOTE:

**These devices are not a substitute for proper seat belt placement by the occupant. The seat belt still must be worn snugly and positioned properly.**

The pretensioners are triggered by the Occupant Restraint Controller (ORC). Like the air bags, the pretensioners are single use items. A deployed pretensioner or a deployed air bag must be replaced immediately.

### Supplemental Active Head Restraints (AHR)

These head restraints are passive, deployable components, and vehicles with this equipment cannot be readily identified by any markings, only through visual inspection of the head restraint. The head restraint will be split in two halves, with the front half being soft foam and trim, the back half being decorative plastic.


#### How The Active Head Restraints (AHR) Work

The Occupant Restraint Controller (ORC) determines whether the severity, or type of rear impact will require the Active Head Restraints (AHR) to deploy. If a rear impact requires deployment, both the driver and front passenger seat AHRs will be deployed.

When AHRs deploy during a rear impact, the front half of the head restraint extends forward to minimize the gap between the back of the occupant's head and the AHR. This system is designed to help prevent or reduce the extent of injuries to the driver and front passenger in certain types of rear impacts.

#### NOTE:

**The Active Head Restraints (AHR) may or may not deploy in the event of a front or side impact. However if during a front impact, a secondary rear impact occurs, the AHR may deploy based on the severity and type of the impact.**

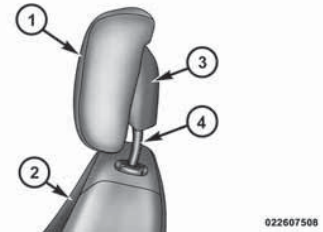

**Active Head Restraint (AHR) Components**

- |  |  |
|--|--|
| 1 — Head Restraint Front Half (Soft Foam and Trim) | 3 — Head Restraint Back Half (Decorative Plastic Rear Cover) |
| 2 — Seatback                                       | 4 — Head Restraint Guide Tubes                               |

### CAUTION!

All occupants, including the driver, should not operate a vehicle or sit in a vehicle's seat until the head restraints are placed in their proper positions in order to minimize the risk of neck injury in the event of a collision.

### NOTE:

For more information on properly adjusting and positioning the head restraint, refer to “Adjusting Active Head Restraints” in “Understanding The Features Of Your Vehicle”.

### Resetting Active Head Restraints (AHR)

If the Active Head Restraints are triggered in a collision, you must reset the head restraint on the driver's and front passenger seat. You can recognize when the Active Head Restraint has been triggered by the fact that they have moved forward (as shown in step three of the resetting procedure).


1. Grasp the deployed AHR from the rear seat.



Hand Positioning Points On AHR

2. Position the hands on the top of the deployed AHR at a comfortable position.

3. Pull **down** then **rearward** towards the rear of the vehicle then **down** to engage the locking mechanism.

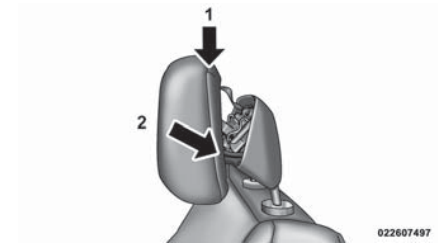

- 1 — Downward Movement  
2 — Rearward Movement



3 — Final Downward Movement To Engage Locking Mechanism

4. The AHR front soft foam and trim half should lock into the back decorative plastic half.



AHR In Reset Position

**NOTE:**

- If you have difficulties or problems resetting the Active Head Restraints, see an authorized dealer.
- For safety reasons, have the Active Head Restraints checked by a qualified specialist at an authorized dealer.

**Enhanced Seat Belt Use Reminder System (BeltAlert®)**

BeltAlert® is a feature intended to remind the driver and front passenger (if equipped with front passenger BeltAlert®) to fasten their seat

belts. The feature is active whenever the ignition is on. If the driver or front seat passenger is unbelted, the Seat Belt Reminder Light will turn on and remain on until both front seat belts are fastened.

The BeltAlert® warning sequence begins after the vehicle speed is over 5 mph (8 km/h), by blinking the Seat Belt Reminder Light and sounding an intermittent chime. Once the sequence starts, it will continue for the entire duration or until the respective seatbelts are fastened. After the sequence completes, the Seat Belt Reminder Light remains illuminated until the respective seat belts are fastened. The driver should instruct all other occupants to fasten their seat belts. If a front seat belt is unbuckled while traveling at speeds greater than 5 mph (8 km/h), BeltAlert® will provide both audio and visual notification.

The front passenger seat BeltAlert® is not active when the front passenger seat is unoccupied. BeltAlert® may be triggered when an animal or heavy object is on the front passenger seat or when the seat is folded flat (if equipped). It is recommended that pets be restrained in the

rear seat in pet harnesses or pet carriers that are secured by seat belts, and cargo is properly stowed.

BeltAlert® can be enabled or disabled by your authorized dealer. Chrysler Group LLC does not recommend deactivating BeltAlert®.

**NOTE:**

**Although BeltAlert® has been deactivated, the Seat Belt Reminder Light will continue to illuminate while the driver's or front passenger (if equipped with BeltAlert®) seat belt remains unfastened.**

### Seat Belts And Pregnant Women

We recommend that pregnant women use the seat belts throughout their pregnancy. Keeping the mother safe is the best way to keep the baby safe.

Pregnant women should wear the lap part of the belt across the thighs and as snug across the hips as possible. Keep the belt low so that it does not come across the abdomen. That way the strong bones of the hips will take the force if there is a collision.

### Supplemental Restraint System (SRS) — Air Bags

This vehicle has Advanced Front Air Bags for both the driver and front passenger as a supplement to the seat belt restraint systems. The driver's Advanced Front Air Bag is mounted in the center of the steering wheel. The passenger's Advanced Front Air Bag is mounted in the instrument panel, above the glove compartment. The words SRS AIRBAG are embossed on the air bag covers.



**Advanced Front Air Bag And Knee Bolster Locations**

1 — Driver And Passenger Advanced Front Air Bags      2 — Knee Bolster

**NOTE:**

**The Driver and Front Passenger Advanced Front Air Bags are certified to regulations for Advanced Air Bags.**

The Advanced Front Air Bags have a multistage inflator design. This allows the air bag to have different rates of inflation that are based on several factors, including the severity and type of collision.

This vehicle may be equipped with a driver and/or front passenger seat belt buckle switch that detects whether the driver or front passenger seat belt is fastened. The seat belt buckle switch may adjust the inflation rate of the Advanced Front Air Bags.

This vehicle is equipped with Supplemental Side Air Bag Inflatable Curtains (SABIC) to protect the driver, front, and rear passengers sitting next to a window. The SABIC are located above the side windows. The trim covering the side air bags is labeled SRS AIRBAG.

This vehicle is also equipped with Supplemental Seat-Mounted Side Air Bags (SAB). Supplemental Seat-Mounted Side Air Bags (SAB) may provide enhanced protection to help protect an



occupant during a side impact. If the vehicle is equipped with Supplemental Seat-Mounted Side Air Bags they are marked with an air bag label sewn into the outboard side of the front seats.

**NOTE:**

- **Air Bag covers may not be obvious in the interior trim, but they will open during air bag deployment.**
- **After any accident, the vehicle should be taken to an authorized dealer immediately.**

**Air Bag System Components**

Your vehicle may be equipped with the following air bag system components:

- Occupant Restraint Controller (ORC)
- Air Bag Warning Light
- Steering Wheel and Column
- Instrument Panel
- Knee Impact Bolster
- Driver Advanced Front Air Bag

- Passenger Advanced Front Air Bag
- Supplemental Seat-Mounted Side Air Bags (SAB)
- Supplemental Side Air Bag Inflatable Curtains (SABIC)
- Front and Side Impact Sensors
- Front Seat Belt Pretensioners and Seat Belt Buckle Switch

**Advanced Front Air Bag Features**

The Advanced Front Air Bag system has multi-stage driver and front passenger air bags. This system provides output appropriate to the severity and type of collision as determined by the Occupant Restraint Controller (ORC), which may receive information from the front impact sensors.


The first stage inflator is triggered immediately during an impact that requires air bag deployment. This low output is used in less severe collisions. A higher energy output is used for more severe collisions.

**WARNING!**

- No objects should be placed over or near the air bag on the instrument panel, because any such objects could cause harm if the vehicle is in a collision severe enough to cause the air bag to inflate.
- Do not put anything on or around the air bag covers or attempt to open them manually. You may damage the air bags and you could be injured because the air bags may no longer be functional. The protective covers for the air bag cushions are designed to open only when the air bags are inflating.
- Do not drill, cut or tamper with the knee bolster in any way.
- Do not mount any accessories to the knee bolster such as alarm lights, stereos, citizen band radios, etc.

### Supplemental Seat-Mounted Side Air Bags (SAB)

Supplemental Seat-Mounted Side Air Bags (SAB) may provide enhanced protection to help protect an occupant during a side impact. The SAB is marked with an air bag label sewn into the outboard side of the front seats.

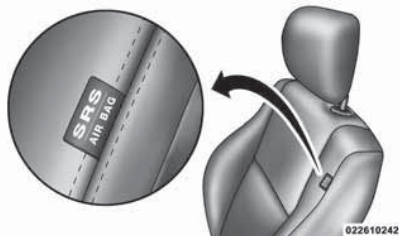

**Supplemental Seat-Mounted Side Air Bag Label**

When the air bag deploys, it opens the seam between the front and side of the seat's trim cover. Each air bag deploys independently; a left side impact deploys the left air bag only and a right-side impact deploys the right air bag only.

### Supplemental Side Air Bag Inflatable Curtain (SABIC)

SABIC air bags may offer side-impact and vehicle rollover protection to front and rear seat outboard occupants in addition to that provided by the body structure. Each air bag features inflated chambers placed adjacent to the head of each outboard occupant that reduce the potential for side-impact head injuries. The SABIC air bags deploy downward, covering both windows on the impact side.



**Side Curtain Air Bag Label Location**

### NOTE:

- Should a vehicle rollover occur, the pretensioners and/or SAB and SABIC curtains on both sides of the vehicle may deploy.
- Air Bag covers may not be obvious in the interior trim, but they will open during air bag deployment.
- Being too close to the Supplemental Side Air Bag Inflatable Curtain and/or Seat-Mounted Side Air Bag during deployment could cause you to be severely injured or killed.

The system includes side impact sensors that are calibrated to deploy the side air bags during impacts that require air bag occupant protection.

**WARNING!**

- Your vehicle is equipped with left and right SABIC, do not stack luggage or other cargo up high enough to block the location of the SABIC. The area where the side curtain air bag is located should remain free from any obstructions.
- Do not use accessory seat covers or place objects between you and the SAB; the performance could be adversely affected and/or objects could be pushed into you, causing serious injury.
- Your vehicle is equipped with SABIC air bags, do not have any accessory items installed which will alter the roof, including adding a sunroof to your vehicle. Do not add roof racks that require permanent attachments (bolts or screws) for installation on the vehicle roof. Do not drill into the roof of the vehicle for any reason.

SAB and SABIC air bags are a supplement to the seat belt restraint system. Occupants, in-

cluding children who are up against or very close to SAB or SABIC air bags can be seriously injured or killed. Occupants, especially children, should not lean on or sleep against the door, side windows, or area where the SAB or SABIC air bags inflate, even if they are in an infant or child restraint.

Always sit upright as possible with your back against the seat back, use the seat belts properly, and use the appropriate sized child restraint, infant restraint or booster seat recommended for the size and weight of the child.

**Knee Impact Bolsters**

The Knee Impact Bolster helps protect the knees of the front passenger, and position the front occupant for the best interaction with the Advanced Front Air Bag.

Along with seat belts and pretensioners, Advanced Front Air Bags work with the bolsters to provide improved protection for the driver and front passenger. Side air bags also work with seat belts to improve occupant protection.

**Air Bag Deployment Sensors And Controls****Occupant Restraint Controller (ORC)**

The ORC is part of a regulated safety system required for this vehicle.

The ORC determines if deployment of the front and/or side air bags in a frontal or side collision is required. Based on the impact sensor's signals, a central electronic ORC deploys the Advanced Front Air Bags, SABIC air bags, Supplemental Seat-Mounted Side Air Bags — if equipped, and front seat belt pretensioners as required, depending on several factors, including the severity and type of impact.

Advanced Front Air Bags are designed to provide additional protection by supplementing the seat belts in certain frontal collisions depending on several factors, including the severity and type of collision. Advanced Front Air Bags are not expected to reduce the risk of injury in rear, side, or rollover collisions.

The Advanced Front Air Bags will not deploy in all frontal collisions, including some that may produce substantial vehicle damage — for example, some pole collisions, truck underrides,

and angle offset collisions. On the other hand, depending on the type and location of impact, Advanced Front Air Bags may deploy in crashes with little vehicle front-end damage but that produce a severe initial deceleration.

The side air bags will not deploy in all side collisions. Side air bag deployment will depend on the severity and type of collision.

Because air bag sensors measure vehicle deceleration over time, vehicle speed and damage by themselves are not good indicators of whether or not an air bag should have deployed.

Seat belts are necessary for your protection in all collisions, and also are needed to help keep you in position, away from an inflating air bag.

The ORC monitors the readiness of the electronic parts of the air bag system whenever the ignition switch is in the START or ON/RUN position. If the key is in the OFF position, in the ACC position, or not in the ignition, the air bag system is not on and the air bags will not inflate.

The ORC contains a backup power supply system that may deploy the air bags even if the battery loses power or it becomes disconnected prior to deployment.



Also, the ORC turns on the Air Bag Warning Light in the instrument panel for approximately four to eight seconds for a self-check when the ignition is first turned on.

After the self-check, the Air Bag Warning Light will turn off. If the ORC detects a malfunction in any part of the system, it turns on the Air Bag Warning Light, either momentarily or continuously. A single chime will sound if the light comes on again after initial startup.

It also includes diagnostics that will illuminate the instrument cluster Air Bag Warning Light if a malfunction is noted that could affect the air bag system. The diagnostics also record the nature of the malfunction.

#### **WARNING!**

Ignoring the Air Bag Warning Light in your instrument panel could mean you won't have the air bags to protect you in a collision. If the light does not come on as a bulb check when the ignition is first turned on, stays on after you start the vehicle, or if it comes on as you drive, have an authorized dealer service the air bag system immediately.

#### **Driver And Passenger Advanced Front Air Bag Inflator Units**

The Driver and Passenger Advanced Front Air Bag Inflator Units are located in the center of the steering wheel and on the right side of the instrument panel. When the ORC detects a collision requiring the Advanced Front Air Bags, it signals the inflator units. A large quantity of non-toxic gas is generated to inflate the Advanced Front Air Bags. Different air bag inflation rates are possible, based on several factors, including the collision type and severity. The steering wheel hub trim cover and the upper right side of the instrument panel separate and fold out of the way as the air bags inflate to their

full size. The air bags fully inflate in about 50 to 70 milliseconds. This is about half of the time it takes to blink your eyes. The air bags then quickly deflate while helping to restrain the driver and front passenger.

The Advanced Front Air Bag gas is vented through the vent holes in the sides of the air bag. In this way, the air bags do not interfere with your control of the vehicle.

#### **Supplemental Seat-Mounted Side Air Bag (SAB) Inflator Units — If Equipped**

The Supplemental Seat-Mounted Side Air Bags (SAB) are designed to activate only in certain side collisions.

The ORC determines if a side collision requires the side air bags to inflate, based on the severity and type of collision.

Based on the severity and type of collision, the side air bag inflator on the crash side of the vehicle may be triggered, releasing a quantity of non-toxic gas. The inflating SAB exits through the seat seam into the space between the occupant and the door. The SAB fully inflate in about 10 milliseconds. The side air bag moves at a very high speed and with such a high force

that it could injure you if you are not seated properly, or if items are positioned in the area where the side air bag inflates. This especially applies to children.

#### **Supplemental Side Air Bag Inflatable Curtain (SABIC) Inflator Units**

During collisions where the impact is confined to a particular area of the side of the vehicle, the ORC may deploy the SABIC air bags depending on the severity and type of collision. In these events, the ORC will deploy the SABIC only on the impact side of the vehicle.

A quantity of non-toxic gas is generated to inflate the side curtain air bag. The inflating side curtain air bag pushes the outside edge of the headliner out of the way and covers the window. The air bag inflates in about 30 milliseconds (about one-quarter of the time that it takes to blink your eyes) with enough force to injure you if you are not belted and seated properly, or if items are positioned in the area where the side curtain air bag inflates. This especially applies to children. The side curtain air bag is only about 3-1/2 in (9 cm) thick when it is inflated.

Because air bag sensors estimate deceleration over time, vehicle speed and damage are not good indicators of whether or not an air bag should have deployed.

#### **NOTE:**

**In a rollover the pretensioners, and/or SAB and SABIC air bags may deploy on both sides of the vehicle.**

#### **Front And Side Impact Sensors**

In front and side impacts, impact sensors can aid the ORC in determining appropriate response to impact events.

#### **Enhanced Accident Response System**

In the event of an impact causing air bag deployment, if the communication network remains intact, and the power remains intact, depending on the nature of the event the ORC will determine whether to have the Enhanced Accident Response System perform the following functions:

- Cut off fuel to the engine.
- Flash hazard lights as long as the battery has power or until the ignition key is turned off.

- Turn on the interior lights, which remain on as long as the battery has power or until the ignition key is removed.
- Unlock the doors automatically.

In order to reset the Enhanced Accident Response System functions after an event, the ignition switch must be changed from IGN ON to IGN OFF.

#### **If A Deployment Occurs**

The Advanced Front Air Bags are designed to deflate immediately after deployment.

#### **NOTE:**

**Front and/or side air bags will not deploy in all collisions. This does not mean something is wrong with the air bag system.**

If you do have a collision, which deploys the air bags, any or all of the following may occur:

- The nylon air bag material may sometimes cause abrasions and/or skin reddening to the driver and front passenger as the air bags deploy and unfold. The abrasions are similar to friction rope burns or those you might get sliding along a carpet or gymnasium floor.

They are not caused by contact with chemicals. They are not permanent and normally heal quickly. However, if you haven't healed significantly within a few days, or if you have any blistering, see your doctor immediately.

- As the air bags deflate, you may see some smoke-like particles. The particles are a normal by-product of the process that generates the non-toxic gas used for air bag inflation. These airborne particles may irritate the skin, eyes, nose, or throat. If you have skin or eye irritation, rinse the area with cool water. For nose or throat irritation, move to fresh air. If the irritation continues, see your doctor. If these particles settle on your clothing, follow the garment manufacturer's instructions for cleaning.

Do not drive your vehicle after the air bags have deployed. If you are involved in another collision, the air bags will not be in place to protect you.

#### **WARNING!**

Deployed air bags and seat belt pretensioners cannot protect you in another collision. Have the air bags, seat belt pretensioners, and the front seat belt retractor assemblies replaced by an authorized dealer immediately. Also, have the Occupant Restraint Controller System serviced as well.

## Maintaining Your Air Bag System

### **WARNING!**

- Modifications to any part of the air bag system could cause it to fail when you need it. You could be injured if the air bag system is not there to protect you. Do not modify the components or wiring, including adding any kind of badges or stickers to the steering wheel hub trim cover or the upper right side of the instrument panel. Do not modify the front bumper, vehicle body structure, or add aftermarket side steps or running boards.
- It is dangerous to try to repair any part of the air bag system yourself. Be sure to tell anyone who works on your vehicle that it has an air bag system.

*(Continued)*

### **WARNING! (Continued)**

- Do not attempt to modify any part of your air bag system. The air bag may inflate accidentally or may not function properly if modifications are made. Take your vehicle to an authorized dealer for any air bag system service. If your seat, including your trim cover and cushion, needs to be serviced in any way (including removal or loosening/tightening of seat attachment bolts), take the vehicle to your authorized dealer. Only manufacturer approved seat accessories may be used. If it is necessary to modify the air bag system for persons with disabilities, contact your authorized dealer.

### **Air Bag Warning Light**



You will want to have the air bags ready to inflate for your protection in a collision. The Air Bag Warning Light monitors the internal circuits and interconnecting wiring associ-

ated with air bag system electrical components. While the air bag system is designed to be maintenance free, if any of the following occurs, have an authorized dealer service the air bag system immediately.

- The Air Bag Warning Light does not come on during the four to eight seconds when the ignition switch is first turned on.
- The Air Bag Warning Light remains on after the four to eight second interval.
- The Air Bag Warning Light comes on intermittently or remains on while driving.

### **NOTE:**

**If the speedometer, tachometer, or any engine related gauges are not working, the Occupant Restraint Controller (ORC) may also be disabled. The air bags may not be ready to inflate for your protection. Promptly check the fuse block for blown fuses. Refer to the label located on the inside of the fuse block cover for the proper air bag fuses. See your authorized dealer if the fuse is good.**

### Event Data Recorder (EDR)

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or near crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less. The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger safety belts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and,
- How fast the vehicle was traveling.

These data can help provide a better understanding of the circumstances in which crashes and injuries occur.

### NOTE:

**EDR data are recorded by your vehicle only if a non-trivial crash situation occurs; no data are recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, could combine the EDR data with the type of personally identifying data routinely acquired during a crash investigation.**

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have the special equipment, can read the information if they have access to the vehicle or the EDR.

### Child Restraints

Everyone in your vehicle needs to be buckled up at all times, including babies and children.

Children 12 years or younger should ride properly buckled up in a rear seat, if available. According to crash statistics, children are safer

when properly restrained in the rear seats, rather than in the front.

### WARNING!

In a collision, an unrestrained child can become a projectile inside the vehicle. The force required to hold even an infant on your lap could become so great that you could not hold the child, no matter how strong you are. The child and others could be badly injured. Any child riding in your vehicle should be in a proper restraint for the child's size.

### Infants And Child Restraints

Safety experts recommend that children ride rearward-facing in the vehicle until they are two years old or until they reach either the height or weight limit of their rear facing child safety seat. Two types of child restraints can be used rearward-facing: infant carriers and convertible child seats.

The infant carrier is only used rearward-facing in the vehicle. It is recommended for children from birth until they reach the weight or height



limit of the infant carrier. Convertible child seats can be used either rearward-facing or forward-facing in the vehicle. Convertible child seats often have a higher weight limit in the rearward-facing direction than infant carriers do, so they can be used rearward-facing by children who have outgrown their infant carrier but are still less than at least two years old. Children should remain rearward-facing until they reach the highest weight or height allowed by their convertible child seat. Both types of child restraints are held in the vehicle by the lap/shoulder belt or the ISOFIX child restraint anchor system. Refer to “ISOFIX — Child Seat Anchorage System”.

**WARNING!**

- Rearward-facing child seats must never be used in the front seat of a vehicle with a front passenger air bag. An air bag deployment could cause severe injury or death to infants in this position.

*(Continued)*

**WARNING! (Continued)**

- Improper installation can lead to failure of an infant or child restraint. It could come loose in a collision. The child could be badly injured or killed. Follow the manufacturer's directions exactly when installing an infant or child restraint.
- A rearward-facing child restraint should only be used in a rear seat.

**Older Children And Child Restraints**

Children who are two years old or who have outgrown their rear-facing convertible child seat can ride forward-facing in the vehicle. Forward-facing child seats and convertible child seats used in the forward-facing direction are for children who are over two years old or who have outgrown the rear-facing weight or height limit of their rear-facing convertible child seat. Children should remain in a forward-facing child seat with a harness for as long as possible, up to the highest weight or height allowed by the child seat. These child seats are also held in the vehicle by the lap/shoulder belt or the ISOFIX

child restraint anchorage system. Refer to “ISOFIX — Child Seat Anchorage System”.

All children whose weight or height is above the forward-facing limit for the child seat should use a belt-positioning booster seat until the vehicle's seat belts fit properly. If the child cannot sit with knees bent over the vehicle's seat cushion while the child's back is against the seatback, they should use a belt-positioning booster seat. The child and belt-positioning booster seat are held in the vehicle by the lap/shoulder belt.

**Children Too Large For Booster Seats**

Children who are large enough to wear the shoulder belt comfortably and whose legs are long enough to bend over the front of the seat when their back is against the seatback should use the lap/shoulder belt in a rear seat.

- Make sure that the child is upright in the seat.
- The lap portion should be low on the hips and as snug as possible.
- Check belt fit periodically. A child's squirming or slouching can move the belt out of position.

- If the shoulder belt contacts the face or neck, move the child closer to the center of the vehicle. Never allow a child to put the shoulder belt under an arm or behind their back.

#### **WARNING!**

- Improper installation can lead to failure of an infant or child restraint. It could come loose in a collision. The child could be badly injured or killed. Follow the manufacturer's directions exactly when installing an infant or child restraint.
- A rearward-facing child restraint should only be used in a rear seat. A rearward-facing child restraint in the front seat may be struck by a deploying passenger air bag, which may cause severe or fatal injury to the infant.

#### **Here are some tips on getting the most out of your child restraint:**

- Before buying any restraint system, make sure that it has a label certifying that it meets all applicable Safety Standards. Chrysler Group LLC also recommends that you make sure that you can install the child restraint in the vehicle where you will use it before you buy it.
- The restraint must be appropriate for your child's weight and height. Check the label on the restraint for weight and height limits.
- Carefully follow the instructions that come with the restraint. If you install the restraint improperly, it may not work when you need it.
- Buckle the child into the seat according to the child restraint manufacturer's directions.

#### **Installing Child Restraints Using The Vehicle Seat Belts**

The seat belts in the passenger seating positions are equipped with an Automatic Locking Retractor (ALR) to secure a Child Restraint System (CRS). These types of seat belts are designed to keep the lap portion of the seat belt

tight around the child restraint so that it is not necessary to use a locking clip. The ALR will make a ratcheting noise if you extract the entire belt from the retractor and then allow the belt to retract into the retractor. For additional information on ALR, refer to "Automatic Locking Mode". The chart below defines the seating positions with an Automatic Locking Retractor (ALR) or a cinching latch plate.

	Driver	Center	Passenger
	CRS Lock	CRS Lock	CRS Lock
First Row	N/A	N/A	ALR
Second Row	ALR	ALR	ALR

- N/A — Not Applicable
- ALR — Automatic Locking Retractor

#### Installing a Child Restraint with an ALR:

1. To install a child restraint with ALR, first, pull enough of the seat belt webbing from the retractor to route it through the belt path of the child restraint. Slide the latch plate into the buckle until you hear a “click.” Next, extract all the seat belt webbing out of the retractor and then allow the belt to retract into the retractor. As the belt retracts, you will hear a ratcheting sound. This indicates the safety belt is now in the Automatic Locking mode.

2. Finally, pull on any excess webbing to tighten the lap portion around the child restraint. Any seat belt system will loosen with time, so check the belt occasionally, and pull it tight if necessary.

- In the rear seat, you may have trouble tightening the lap/shoulder belt on the child restraint because the buckle or latch plate is too close to the belt path opening on the restraint. Disconnect the latch plate from the buckle and twist the short buckle end of the belt several times to shorten it. Insert the latch plate into the buckle with the release button facing out.
- If the belt still can't be tightened, or if pulling and pushing on the restraint loosens the belt, disconnect the latch plate from the buckle, turn the latch plate around, and insert the latch plate into the buckle again. If you still can't make the child restraint secure, try a different seating position.

- Buckle the child into the seat according to the child restraint manufacturer's directions.

#### **WARNING!**

When your child restraint is not in use, secure it in the vehicle with the seat belt or remove it from the vehicle. Do not leave it loose in the vehicle. In a sudden stop or collision, it could strike the occupants or seatbacks and cause serious personal injury.

### Universal Child Seat Position Chart

Age Group	Seating Position		
	Front Passenger	Rear Passenger	Rear Center
Less than 10 kg (0 to 9 months)	X	U	U
Less than 13 kg (0 to 24 months)	X	U	U
9 to 18 kg (9 to 48 months)	X	U	U
15 to 36 kg (4 to 12 years)	X	U	U

Key of letters used in the table above:

U = Suitable for “universal” category restraints approved for use in this mass group.

X = Seat position not suitable for children in this mass group.

**Vehicle ISOFIX Positions Chart**

<b>Mass Group</b>	<b>Size Class</b>	<b>Fixture</b>	<b>Front Passenger</b>	<b>Rear Outboard</b>	<b>Rear Center</b>	<b>Intermediate Outboard</b>	<b>Intermediate Center</b>	<b>Other Sites</b>
Carrycot	F	ISO/L1	X	X	X	X	X	X
	G	ISO/L2	X	X	X	X	X	X
		(1)	X	X	X	X	X	X
0 — up to 10 kg	E	ISO/R1	X	1UF	X	X	X	X
		(1)	X	X	X	X	X	X
0+ — up to 13 kg	E	ISO/R1	X	1UF	X	X	X	X
	D	ISO/R2	X	1UF	X	X	X	X
	C	ISO/R3	X	*1UF	X	X	X	X
		(1)	X	X	X	X	X	X
1 – 9 to 18 kg	D	ISO/R2	X	1UF	X	X	X	X
	C	ISO/R3	X	*1UF	X	X	X	X
	B	ISO/F2	X	1UF	X	X	X	X
	B1	ISO/F2X	X	1UF	X	X	X	X
	A	ISO/F3	X	1UF	X	X	X	X
		(1)	X	X	X	X	X	X

Vehicle ISOFIX Positions Chart								
Mass Group	Size Class	Fixture	Front Passenger	Rear Outboard	Rear Center	Intermediate Outboard	Intermediate Center	Other Sites
II – 15 to 25 kg		(1)	X	X	X	X	X	X
III – 22 to 36 kg		(1)	X	X	X	X	X	X

Key of letters used in the table above:

(1) For the CRS which do not carry the ISO/XX size class identification (A to G), for the applicable mass group, the car manufacturer shall indicate the vehicle specific ISOFIX child restraint system(s) recommended for each position.

1UF = Suitable for ISOFIX forward child restraint systems of “universal” category approved for use in the mass group.

IL = Suitable for particular ISOFIX child restraint systems (CRS) given in the attachment list. These ISOFIX CRS are those of the “specific vehicle”, “restricted” or “semi-universal” categories.


X = ISOFIX position not suitable for ISOFIX child restraint systems in this mass group and/or this size class.

\* Front seat must be placed in the mid-track travel position or forward of this position with the seat back in the vertical position.

#### **ISOFIX — Child Seat Anchorage System**

Your vehicle is equipped with the child restraint anchorage system called ISOFIX — Child Seat Anchorage System. The ISOFIX system provides for the installation of the child restraint without using the vehicle seat belt. All three rear seating positions have lower anchorages that are capable of accommodating ISOFIX-compatible child seats having flexible, webbing-mounted lower attachments. Child seats with

fixed lower attachments must be installed in the outboard positions only. Regardless of the specific type of lower attachment, never install ISOFIX-compatible child seats such that two seats share a common lower anchorage. If you are installing ISOFIX-compatible child restraints in adjacent rear seating positions, you can use the ISOFIX anchors or the vehicle’s seat belt for the outboard position, but you must use the vehicle’s seat belt at the center position. If your child restraints are not ISOFIX-compatible, you can only install the child restraints using the vehicle’s seat belts. Please refer to “Installing The Child Restraint System” for typical installation instructions.

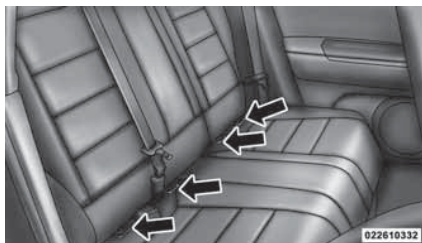

**Rear Seat ISOFIX Anchorages**

Child restraints systems having attachments designed to connect to the lower anchorages are now available. Child restraints having tether straps and hooks for connection to the top tether anchorage, have been available for some time. In fact, many child restraint manufacturers will provide add-on tether strap kits for some of their older products. Tether anchorage kits are also available for most older vehicles.

Because the lower anchorages are to be introduced to passenger carrying vehicles over a period of years, child restraint systems having attachments for those anchorages will continue to have features for installation in vehicles using

the lap or lap/shoulder belt. They will also have tether straps, and you are urged to take advantage of all of the available attachments provided with your child restraint in any vehicle.

**NOTE:**

**When using the ISOFIX attaching system to install a child restraint, please ensure that all seat belts not being used for occupant restraints are stowed and out of reach of children. It is recommended that before installing the child restraint, buckle the seat belt so the seat belt is tucked behind the child restraint and out of reach. If the buckled seat belt interferes with the child restraint installation, instead of tucking the seat belt behind the child restraint, route the seat belt through the child restraint belt path and then buckle it. This should stow the seat belt out of the reach of an inquisitive child. Remind all children in the vehicle that the seat belts are not toys and should not be played with, and never leave your child unattended in the vehicle.**

**Installing The Child Restraint System**

We urge you to carefully follow the directions of the manufacturer when installing your child restraint. Many, but not all, restraint systems will be equipped with separate straps on each side, with each having a hook or connector, and a means for adjusting the tension in the strap. Forward-facing toddler restraints and some rearward-facing infant restraints will also be equipped with a tether strap with a hook and means for adjusting the tension in the strap.

In general, you will first loosen the adjusters on the lower and tether straps so that you can more easily attach the hook or connector to the lower and tether anchorages. The tether strap should be routed under the center of the head restraint and attached to the tether anchor on the rear of the seatback. Then tighten all three straps as you push the child restraint rearward and downward into the seat.



#### Rear Seat Tether Anchors

Not all child restraint systems will be installed as we have described here. Again, carefully follow the instructions that come with the child restraint system.

#### NOTE:

**If your child restraint seat is not ISOFIX-compatible, install the restraint using the vehicle seat belts.**

#### WARNING!

An incorrectly anchored tether strap could lead to increased head motion and possible injury to the child. Use only the anchor position directly behind the child seat to secure a child restraint top tether strap.

#### Transporting Pets

Air Bags deploying in the front seat could harm your pet. An unrestrained pet will be thrown about and possibly injured, or injure a passenger during panic braking or in a collision.

Pets should be restrained in the rear seat in pet harnesses or pet carriers that are secured by seat belts.

#### ENGINE BREAK-IN RECOMMENDATIONS

A long break-in period is not required for the engine and drivetrain (transmission and axle) in your vehicle.

Drive moderately during the first 300 miles (500 km). After the initial 60 miles (100 km), speeds up to 50 or 55 mph (80 or 90 km/h) are desirable.

While cruising, brief full-throttle acceleration within the limits of local traffic laws contributes to a good break-in. Wide-open throttle acceleration in low gear can be detrimental and should be avoided.

The engine oil installed in the engine at the factory is a high-quality energy conserving type lubricant. Oil changes should be consistent with anticipated climate conditions under which vehicle operations will occur. For the recommended viscosity and quality grades, refer to "Maintenance Procedures" in "Maintaining Your Vehicle".

#### CAUTION!

Never use Non-Detergent Oil or Straight Mineral Oil in the engine or damage may result.



**NOTE:**

A new engine may consume some oil during its first few thousand miles (kilometers) of operation. This should be considered a normal part of the break-in and not interpreted as an indication of difficulty.

**Additional Requirements For Diesel Engine — If Equipped**

During the first 1500 km avoid heavy loads, e.g. driving at full throttle. Do not exceed 2/3 of the maximum permissible engine speed for each gear. Change gear in good time. Do not shift down a gear manually in order to brake.

**SAFETY TIPS****Transporting Passengers**

NEVER TRANSPORT PASSENGERS IN THE CARGO AREA.

**WARNING!**

- Do not leave children or animals inside parked vehicles in hot weather. Interior heat build-up may cause serious injury or death.
- It is extremely dangerous to ride in a cargo area, inside or outside of a vehicle. In a collision, people riding in these areas are more likely to be seriously injured or killed.
- Do not allow people to ride in any area of your vehicle that is not equipped with seats and seat belts.
- Be sure everyone in your vehicle is in a seat and using a seat belt properly.

**Exhaust Gas****WARNING!**

Exhaust gases can injure or kill. They contain carbon monoxide (CO), which is colorless and odorless. Breathing it can make you

*(Continued)*

**WARNING! (Continued)**

unconscious and can eventually poison you. To avoid breathing (CO), follow these safety tips:

- Do not run the engine in a closed garage or in confined areas any longer than needed to move your vehicle in or out of the area.
- If you are required to drive with the trunk/ liftgate open, make sure that all windows are closed and the climate control BLOWER switch is set at high speed. DO NOT use the recirculation mode.
- If it is necessary to sit in a parked vehicle with the engine running, adjust your heating or cooling controls to force outside air into the vehicle. Set the blower at high speed.

The best protection against carbon monoxide entry into the vehicle body is a properly maintained engine exhaust system.

Whenever a change is noticed in the sound of the exhaust system, when exhaust fumes can

be detected inside the vehicle, or when the underside or rear of the vehicle is damaged, have a competent mechanic inspect the complete exhaust system and adjacent body areas for broken, damaged, deteriorated, or mispositioned parts. Open seams or loose connections could permit exhaust fumes to seep into the passenger compartment. In addition, inspect the exhaust system each time the vehicle is raised for lubrication or oil change. Replace as required.

## **Safety Checks You Should Make Inside The Vehicle**

### **Seat Belts**

Inspect the belt system periodically, checking for cuts, frays, and loose parts. Damaged parts must be replaced immediately. Do not disassemble or modify the system.

Front seat belt assemblies must be replaced after a collision. Rear seat belt assemblies must be replaced after a collision if they have been damaged (i.e., bent retractor, torn webbing, etc.). If there is any question regarding belt or retractor condition, replace the belt.

### **Air Bag Warning Light**



The light should come on and remain on for four to eight seconds as a bulb check when the ignition switch is first turned ON. If the light is not lit during starting, see your authorized dealer. If the light stays on, flickers, or comes on while driving, have the system checked by an authorized dealer.

### **Defroster**

Check operation by selecting the defrost mode and place the blower control on high speed. You should be able to feel the air directed against the windshield. See your authorized dealer for service if your defroster is inoperable.

### **Floor Mat Safety Information**

Always use floor mats designed to fit the footwell of your vehicle. Use only floor mats that leave the pedal area unobstructed and that are firmly secured so that they cannot slip out of position and interfere with the pedals or impair safe operation of your vehicle in other ways.

### **WARNING!**

Pedals that cannot move freely can cause loss of vehicle control and increase the risk of serious personal injury.

- Always make sure that floor mats are properly attached to the floor mat fasteners.
- Never place or install floor mats or other floor coverings in the vehicle that cannot be properly secured to prevent them from moving and interfering with the pedals or the ability to control the vehicle.
- Never put floor mats or other floor coverings on top of already installed floor mats. Additional floor mats and other coverings will reduce the size of the pedal area and interfere with the pedals.
- Check mounting of mats on a regular basis. Always properly reinstall and secure floor mats that have been removed for cleaning.

*(Continued)*

**WARNING! (Continued)**

- Always make sure that objects cannot fall into the driver footwell while the vehicle is moving. Objects can become trapped under the brake pedal and accelerator pedal causing a loss of vehicle control.
- If required, mounting posts must be properly installed, if not equipped from the factory.

Failure to properly follow floor mat installation or mounting can cause interference with the brake pedal and accelerator pedal operation causing loss of control of the vehicle.

**Periodic Safety Checks You Should Make Outside The Vehicle****Tires**

Examine tires for excessive tread wear and uneven wear patterns. Check for stones, nails, glass, or other objects lodged in the tread or sidewall. Inspect the tread for cuts and cracks. Inspect sidewalls for cuts, cracks and bulges. Check the wheel nuts for tightness. Check the tires (including spare) for proper cold inflation pressure.

**Lights**

Have someone observe the operation of brake lights and exterior lights while you work the controls. Check turn signal and high beam indicator lights on the instrument panel.

**Door Latches**

Check for positive closing, latching, and locking.

**Fluid Leaks**

Check area under vehicle after overnight parking for fuel, engine coolant, oil, or other fluid leaks. Also, if gasoline fumes are detected or if fuel, power steering fluid, or brake fluid leaks are suspected, the cause should be located and corrected immediately.



## UNDERSTANDING THE FEATURES OF YOUR VEHICLE

• MIRRORS . . . . .	.61
• Inside Day/Night Mirror . . . . .	.61
• Automatic Dimming Mirror — If Equipped . . . . .	.61
• Outside Mirror — Driver Side . . . . .	.61
• Outside Mirror — Passenger Side . . . . .	.61
• Folding Outside Mirrors . . . . .	.62
• Power Mirrors . . . . .	.62
• Heated Mirrors — If Equipped . . . . .	.62
• Vanity Mirrors — If Equipped . . . . .	.62
• Sun Visor Sliding Feature . . . . .	.62
• Uconnect® Phone — IF EQUIPPED . . . . .	.63
• Compatible Phones . . . . .	.64
• Operation . . . . .	.64
• Phone Call Features . . . . .	.68
• Uconnect® Phone Features. . . . .	.69
• Advanced Phone Connectivity . . . . .	.72
• Things You Should Know About Your Uconnect® Phone . . . . .	.73

• VOICE COMMAND — IF EQUIPPED . . . . .	.81
• Voice Command System Operation . . . . .	.81
• Commands. . . . .	.82
• Voice Training . . . . .	.83
• SEATS . . . . .	.84
• Power Seats — If Equipped . . . . .	.84
• Heated Seats — If Equipped . . . . .	.85
• Manual Front Seat Adjustment . . . . .	.86
• Manual Seat Height Adjustment — If Equipped . . . . .	.86
• Manual Lumbar — If Equipped . . . . .	.87
• Driver's Seatback Recline . . . . .	.87
• Fold-Flat Front Passenger Seat . . . . .	.87
• Head Restraints . . . . .	.88
• Folding Rear Seat . . . . .	.89
• Reclining Rear Seat — If Equipped . . . . .	.90
• TO OPEN AND CLOSE THE HOOD . . . . .	.90
• LIGHTS . . . . .	.92
• Multifunction Lever . . . . .	.92
• Headlights And Position Lights . . . . .	.92
• Lights-On Reminder . . . . .	.92
• Front Fog Lights . . . . .	.92
• Rear Fog Lights. . . . .	.92
• Turn Signals . . . . .	.92
• Lane Change Assist . . . . .	.93
• High/Low Beam Switch . . . . .	.93
• Flash-To-Pass . . . . .	.93
• Instrument Panel Dimmer . . . . .	.93

• Headlight Leveling System — If Equipped . . . . .	.94
• Map/Reading/Lights . . . . .	.94
• WINDSHIELD WIPERS AND WASHERS . . . . .	.95
• Windshield Wiper Operation . . . . .	.95
• Intermittent Wiper System . . . . .	.95
• Windshield Washers . . . . .	.96
• Mist Feature. . . . .	.96
• TILT STEERING COLUMN . . . . .	.96
• ELECTRONIC SPEED CONTROL — IF EQUIPPED . . . . .	.97
• To Activate . . . . .	.97
• To Set A Desired Speed . . . . .	.98
• To Deactivate . . . . .	.98
• To Resume Speed . . . . .	.98
• To Vary The Speed Setting . . . . .	.98
• To Accelerate For Passing . . . . .	.98
• POWER SUNROOF — IF EQUIPPED . . . . .	.99
• Opening Sunroof — Express . . . . .	.99
• Opening Sunroof — Manual Mode . . . . .	.100
• Closing Sunroof — Express. . . . .	.100
• Closing Sunroof — Manual Mode . . . . .	.100
• Pinch Protect Feature . . . . .	.100
• Venting Sunroof — Express. . . . .	.100
• Sunshade Operation . . . . .	.100
• Wind Buffeting . . . . .	.100
• Sunroof Maintenance. . . . .	.100
• Ignition Off Operation . . . . .	.100
• ELECTRICAL POWER OUTLETS . . . . .	.101

• CUPHOLDERS . . . . .	102
• STORAGE . . . . .	103
• Glove Compartment And Storage Bin . . . . .	103
• Door Storage. . . . .	104
• CONSOLE FEATURES . . . . .	104
• CARGO AREA FEATURES . . . . .	105
• Cargo Light/Removable Self-Recharging Flashlight . . . . .	105
• Cargo Cover . . . . .	105
• Removable Load Floor . . . . .	106
• Cargo Tie-Down Loops . . . . .	107
• Fold Down Speakers — If Equipped . . . . .	107
• REAR WINDOW FEATURES . . . . .	108
• Rear Window Wiper/Washer . . . . .	108
• Rear Window Defroster . . . . .	108



## MIRRORS

### Inside Day/Night Mirror

A two-point pivot system allows for horizontal and vertical mirror adjustment. Adjust the mirror to center on the view through the rear window.

Headlight glare can be reduced by moving the small control under the mirror to the night position (toward the rear of vehicle). The mirror should be adjusted while set in the day position (toward the windshield).



030407085

Inside Day/Night Mirror



030406002

Automatic Dimming Mirror

### Automatic Dimming Mirror — If Equipped

This mirror automatically adjusts for headlight glare from vehicles behind you. You can turn the feature on or off by pressing the button at the base of the mirror. A light to the left of the button will illuminate to indicate when the dimming feature is activated. The sensor to the right of the button does not illuminate.

#### NOTE:

**This feature is disabled when the vehicle is moving in reverse.**

#### CAUTION!

To avoid damage to the mirror during cleaning, never spray any cleaning solution directly onto the mirror. Apply the solution onto a clean cloth and wipe the mirror clean.

### Outside Mirror — Driver Side

Adjust the flat outside mirror so you can just see the side of your vehicle in the part of the mirror closest to the vehicle with your head close to the door glass.

### Outside Mirror — Passenger Side

Adjust the convex outside mirror so you can just see the side of your vehicle in the part of the mirror closest to the vehicle with your head close to the center of the vehicle.

#### WARNING!

Vehicles and other objects seen in the passenger side convex mirror will look smaller and farther away than they really are. Rely-

*(Continued)*

**WARNING! (Continued)**

ing too much on your passenger side mirror could cause you to collide with another vehicle or other object. Use your inside mirror when judging the size or distance of a vehicle seen in this convex mirror.

**Folding Outside Mirrors**

The outside mirrors are hinged and may be moved, manually, either forward or rearward to resist damage. The hinges have three detent positions; full forward, full rearward and normal.

**Power Mirrors**

The power mirror control is located on the driver's door trim panel.



**Power Mirror Control**

To adjust a mirror, turn the control wand toward the left or right mirror positions indicated. Tilt the control wand in the direction you want the mirror to move.

When you are finished adjusting the mirror, turn the control to the center position to prevent accidentally moving a mirror.

**Heated Mirrors — If Equipped**



These mirrors are heated to melt frost or ice. This feature is activated whenever you turn on the rear window defroster. Refer to “Rear Window Fea-

tures” in “Understanding the Features of Your Vehicle” for further information.

**Vanity Mirrors — If Equipped**

To use the vanity mirror, rotate the sun visor down and swing the mirror cover upward.



**Vanity Mirror**

**Sun Visor Sliding Feature**

The sun visors may be extended out to provide more coverage of the side glass.

## Uconnect® Phone — IF EQUIPPED

### NOTE:

**For Uconnect® Phone with Navigation or Multimedia radio, refer to the Navigation or Multimedia radio's User's Manual (separate booklet) Uconnect® Phone section.**

Uconnect® Phone is a voice-activated, hands-free, in-vehicle communications system. Uconnect® Phone allows you to dial a phone number with your mobile phone\* using simple voice commands (e.g., "Call"... "Jim"... "Work" or "Dial"... "151-1234 -5555"). Your mobile phone's audio is transmitted through your vehicle's audio system; the system will automatically mute your radio when using the Uconnect® Phone.

Uconnect® Phone allows you to transfer calls between the Uconnect® Phone and your mobile phone as you enter or exit your vehicle and enables you to mute the Uconnect® Phone's microphone for private conversation.

The Uconnect® Phone is driven through your Bluetooth® "Hands-Free profile" mobile phone.



Uconnect® Phone features Bluetooth® technology - the global standard that enables different electronic devices to connect to each other without wires or a docking station, so Uconnect® Phone works no matter where you stow your mobile phone (be it your purse, pocket, or briefcase), as long as your phone is turned on and has been paired to the vehicle's Uconnect® Phone. The Uconnect® Phone allows up to seven mobile phones to be linked to the system. Only one linked (or paired) mobile phone can be used with the Uconnect® Phone at a time. The Uconnect® Phone is available in English, Dutch, French, German, Italian or Spanish languages (as equipped).

### WARNING!

Any voice commanded system should be used only in safe driving conditions following all applicable laws. Your attention should be focused on safely operating the vehicle. Failure to do so may result in a collision causing serious injury or death.

### Uconnect® Phone Button



The radio or steering wheel controls (if equipped) will contain the two control buttons (Uconnect® Phone  button and Voice Command  button) that will enable you to access the system. When you press the button you will hear the word Uconnect® followed by a BEEP. The beep is your signal to give a command.

### Voice Command Button



Actual button location may vary with radio. The individual buttons are described in the "Operation" section.

The Uconnect® Phone can be used with Hands-Free Profile certified Bluetooth® mobile phones. Some phones may not support all the Uconnect® Phone features. Refer to your mobile service provider or the phone manufacturer for details.

The Uconnect® Phone is fully integrated with the vehicle's audio system. The volume of the

Uconnect® Phone can be adjusted either from the radio volume control knob or from the steering wheel radio control, if so equipped.

The radio display will be used for visual prompts from the Uconnect® Phone such as CELL or caller ID on certain radios.

### Compatible Phones

**\* The Uconnect® Phone requires a mobile phone equipped with the Bluetooth® “Hands-Free Profile”, version 1.0 or higher.** See Uconnect® website for supported phones.

- [www.UconnectPhone.com](http://www.UconnectPhone.com)

To find the list of compatible phones navigate through the following menus:

- Select model year for the vehicle
- Select type of the vehicle
- In the getting started tab, select compatible phones

### Operation

Voice commands can be used to operate the Uconnect® Phone and to navigate through the Uconnect® Phone menu structure. Voice com-

mands are required after most Uconnect® Phone prompts. You will be prompted for a specific command and then guided through the available options.

- Prior to giving a voice command, one must wait for the beep, which follows the “Ready” prompt or another prompt.
- For certain operations, compound commands can be used. For example, instead of saying “Setup” and then “Pair a Device”, the following compound command can be said: “Pair a Bluetooth® Device”.
- For each feature explanation in this section, only the compound form of the voice command is given. You can also break the commands into parts and say each part of the command when you are asked for it. For example, you can use the compound form voice command “Phonebook New Entry”, or you can break the compound form command into two voice commands: “Phonebook” and “New Entry”. Please remember, the Uconnect® Phone works best when you talk



in a normal conversational tone, as if speaking to someone sitting a few feet/meters away from you.

### Voice Command Tree

Refer to “Voice Tree” in this section.

### Help Command

If you need assistance at any prompt, or if you want to know your options at any prompt, say “Help” following the beep. The Uconnect® Phone will play all the options at any prompt if you ask for help.

To activate the Uconnect® Phone from idle, simply press the  button and follow the audible prompts for directions. All Uconnect® Phone sessions begin with a press of the  button on the radio control head.

### Cancel Command


At any prompt, after the beep, you can say “Cancel” and you will be returned to the main menu. However, in a few instances the system will take you back to the previous menu.

### **Pair (Link) Uconnect® Phone To A Mobile Phone**

To begin using your Uconnect® Phone, you must pair your compatible Bluetooth® enabled mobile phone (refer to “Compatible Phones” section to learn about the phone type).


To complete the pairing process, you will need to reference your mobile phone owner’s manual. The Uconnect® website may also provide detailed instructions for pairing.

The following are general phone to Uconnect® Phone pairing instructions:

- Press the  button to begin.
- After the “Ready” prompt and the following beep, say “Setup Phone Pairing”.
- When prompted, after the beep, say “Pair a Phone” and follow the audible prompts.
- You will be asked to say a four-digit Personal Identification Number (PIN), which you will later need to enter into your mobile phone. You can enter any four-digit PIN. You will not need to remember this PIN after the initial pairing process.


- For identification purposes, you will be prompted to give the Uconnect® Phone a name for your mobile phone. Each mobile phone that is paired should be given a unique phone name.
- You will then be asked to give your mobile phone a priority level between 1 and 7, with 1 being the highest priority. You can pair up to seven mobile phones to your Uconnect® Phone. However, at any given time, only one mobile phone can be in use, connected to your Uconnect® System. The priority allows the Uconnect® Phone to know which mobile phone to use if multiple mobile phones are in the vehicle at the same time. For example, if priority 3 and priority 5 phones are present in the vehicle, the Uconnect® Phone will use the priority 3 mobile phone when you make a call. You can select to use a lower priority mobile phone at any time (refer to “Advanced Phone Connectivity”).

### **Dial By Saying A Number**

- Press the  button to begin.
- After the “Ready” prompt and the following beep, say “Dial.”

- The system will prompt you to say the number you want to call.
- For example, you can say “151-1234-5555.”
- The Uconnect® Phone will confirm the phone number and then dial. The number will appear in the display of certain radios.

### **Call By Saying A Name**

- Press the  button to begin.
- After the “Ready” prompt and the following beep, say “Call.”
- The system will prompt you to say the name of the person you want to call.
- After the “Ready” prompt and the following beep, say the name of the person you want to call. For example, you can say “John Doe”, where John Doe is a previously stored name entry in the Uconnect® Phonebook or downloaded phonebook. To learn how to store a name in the phonebook, refer to “Add Names to Your Uconnect® Phonebook”.

- The Uconnect® Phone will confirm the name and then dial the corresponding phone number, which may appear in the display of certain radios.

#### **Phonebook Download — Automatic Phonebook Transfer From Mobile Phone**

If equipped and specifically supported by your phone, Uconnect® Phone automatically downloads names (text names) and number entries from your mobile phone's phonebook. Specific Bluetooth® Phones with Phone Book Access Profile may support this feature. See Uconnect® website for supported phones.

- To call a name from downloaded (or Uconnect®) Phonebook, follow the procedure in "Call by Saying a Name" section.
- Automatic download and update, if supported, begins as soon as the phone Bluetooth® wireless connection is made to the Uconnect® Phone. For example, after you start the vehicle.
- Maximum of 1000 entries per phone will be downloaded and updated every time a phone is connected to the Uconnect® Phone.

- Depending on the maximum number of entries downloaded, there may be a short delay before the latest downloaded names can be used. Until then, if available, the previously downloaded phonebook is available for use.
- Only the phonebook of the currently connected mobile phone is accessible.
- Only the mobile phone's phonebook is downloaded. SIM card phonebook is not part of the mobile phonebook unless the phone's phonebook has less than 20 entries.
- This downloaded phonebook cannot be edited or deleted on the Uconnect® Phone. These can only be edited on the mobile phone. The changes are transferred and updated to Uconnect® Phone on the next phone connection.

#### **Add Names To Your Uconnect® Phonebook**

##### **NOTE:**

**Adding names to the Uconnect® Phonebook is recommended when the vehicle is not in motion.**

- Press the  button to begin.

- After the "Ready" prompt and the following beep, say "Phonebook New Entry".
- When prompted, say the name of the new entry. Use of long names helps the Voice Command and it is recommended. For example, say "Robert Smith" or "Robert" instead of "Bob".
- When prompted, enter the number designation (e.g., "Home", "Work", "Mobile", or "Other"). This will allow you to store multiple numbers for each phonebook entry, if desired.
- When prompted, recite the phone number for the phonebook entry that you are adding. After you are finished adding an entry into the phonebook, you will be given the opportunity to add more phone numbers to the current entry or to return to the main menu.

The Uconnect® Phone will allow you to enter up to 32 names in the phonebook with each name having up to four associated phone numbers and designations. Each language has a separate 32-name phonebook accessible only in that language. In addition, if equipped and sup-


ported by your phone, Uconnect® Phone automatically downloads your mobile phone's phonebook.

### **Edit Uconnect® Phonebook Entries**

#### **NOTE:**

**Editing phonebook entries is recommended when the vehicle is not in motion.**

Automatic downloaded phonebook entries cannot be deleted or edited.



- Press the  button to begin.
- After the "Ready" prompt and the following beep, say "Phonebook Edit".
- You will then be asked for the name of the phonebook entry that you wish to edit.
- Next, choose the number designation (home, work, mobile, or other) that you wish to edit.
- When prompted, recite the new phone number for the phonebook entry that you are editing.

After you are finished editing an entry in the phonebook, you will be given the opportunity to

edit another entry in the phonebook, call the number you just edited, or return to the main menu.


"Phonebook Edit" can be used to add another phone number to a name entry that already exists in the phonebook. For example, the entry John Doe may have a mobile and a home number, but you can add "John Doe's" work number later using the "Phonebook Edit" feature.

### **Delete Uconnect® Phonebook Entry**



- Press the  button to begin.
- After the "Ready" prompt and the following beep, say "Phonebook Delete".
- After you enter the Phonebook Delete menu, you will then be asked for the name of the entry that you wish to delete. You can either say the name of a phonebook entry that you wish to delete or you can say "List Names" to hear a list of the entries in the phonebook from which you choose. To select one of the entries from the list, press the  button while the Uconnect® Phone is playing the desired entry and say "Delete".

- After you enter the name, the Uconnect® Phone will ask you which designation you wish to delete; home, work, mobile, other, or all. Say the designation you wish to delete.
- Note that only the phonebook entry in the current language is deleted.
- Automatic downloaded phonebook entries cannot be deleted or edited.

### **Delete/Erase "All" Uconnect® Phonebook Entries**

- Press the  button to begin.
- After the "Ready" prompt and the following beep, say "Phonebook Erase All".
- The Uconnect® Phone will ask you to verify that you wish to delete all the entries from the phonebook.
- After confirmation, the phonebook entries will be deleted.
- Note that only the phonebook in the current language is deleted.
- Automatic downloaded phonebook entries cannot be deleted or edited.

### List All Names In The Uconnect® Phonebook

- Press the  button to begin.
- After the “Ready” prompt and the following beep, say “Phonebook List Names”.
- The Uconnect® Phone will play the names of all the phonebook entries, including the downloaded phonebook entries, if available.
- To call one of the names in the list, press the  button during the playing of the desired name, and say “Call”.

#### NOTE:

The user can also exercise “Edit” or “Delete” operations at this point.



- The Uconnect® Phone will then prompt you as to the number designation you wish to call.
- The selected number will be dialed.

### Phone Call Features


The following features can be accessed through the Uconnect® Phone if the feature(s) are available on your mobile service plan. For example,

if your mobile service plan provides three-way calling, this feature can be accessed through the Uconnect® Phone. Check with your mobile service provider for the features that you have.

#### Answer Or Reject An Incoming Call — No Call Currently In Progress

When you receive a call on your mobile phone, the Uconnect® Phone will interrupt the vehicle audio system, if on, and will ask if you would like to answer the call. Press the  button to accept the call. To reject the call, press and hold the  button until you hear a single beep, indicating that the incoming call was rejected.


#### Answer Or Reject An Incoming Call — Call Currently In Progress

If a call is currently in progress and you have another incoming call, you will hear the same network tones for call waiting that you normally hear when using your mobile phone. Press the  button to place the current call on hold and answer the incoming call.



#### NOTE:

The Uconnect® Phone compatible phones in the market today do not support rejecting an incoming call when another call is in progress. Therefore, the user can only answer an incoming call or ignore it.

#### Making A Second Call While Current Call In Progress

To make a second call while you are currently on a call, press the  button and say “Dial” or “Call” followed by the phone number or phonebook entry you wish to call. The first call will be on hold while the second call is in progress. To go back to the first call, refer to “Toggling Between Calls”. To combine two calls, refer to “Conference Call”.

#### Place/Retrieve A Call From Hold

To put a call on hold, press the  button until you hear a single beep. This indicates that the call is on hold. To bring the call back from hold, press and hold the  button until you hear a single beep.


#### Toggling Between Calls

If two calls are in progress (one active and one on hold), press the  button until you hear a





single beep, indicating that the active and hold status of the two calls have switched. Only one call can be placed on hold at one time.


### Conference Call


When two calls are in progress (one active and one on hold), press and hold the  button until you hear a double beep indicating that the two calls have been joined into one conference call.

### Three-Way Calling


To initiate three-way calling, press the  button while a call is in progress, and make a second phone call, as described under “Making a Second Call While Current Call in Progress”. After the second call has established, press and hold the  button until you hear a double beep, indicating that the two calls have been joined into one conference call.

### Call Termination

To end a call in progress, momentarily press the  button. Only the active call(s) will be terminated and if there is a call on hold, it will become the new active call. If the active call is terminated by the phone far end, a call on hold may not become active automatically. This is cell

phone-dependent. To bring the call back from hold, press and hold the  button until you hear a single beep.

### Redial

- Press the  button to begin.
- After the “Ready” prompt and the following beep, say “Redial”.
- The Uconnect® Phone will call the last number that was dialed from your mobile phone.

### NOTE:

**This may not be the last number dialed from the Uconnect® Phone.**

### Call Continuation

Call continuation is the progression of a phone call on the Uconnect® Phone after the vehicle ignition has been switched to OFF. Call continuation functionality available on the vehicle can be any one of three types:

- After the ignition is switched to OFF, a call can continue on the Uconnect® Phone either until the call ends, or until the vehicle battery


condition dictates cessation of the call on the Uconnect® Phone and transfer of the call to the mobile phone.

- After the ignition is cycled to OFF, a call can continue on the Uconnect® Phone for a certain duration, after which the call is automatically transferred from the Uconnect® Phone to the mobile phone.
- An active call is automatically transferred to the mobile phone after the ignition is cycled to OFF.

## Uconnect® Phone Features

### Language Selection

To change the language that the Uconnect® Phone is using:

- Press the  button to begin.
- After the “Ready” prompt and the following beep, say the name of the language you wish to switch to (English, Dutch, French, German, Italian, or Spanish, if so equipped).
- Continue to follow the system prompts to complete language selection.

After selecting one of the languages, all prompts and voice commands will be in that language.

**NOTE:**


**After every Uconnect® Phone language change operation, only the language-specific 32-name phonebook is usable. The paired phone name is not language-specific and is usable across all languages.**

**Emergency Assistance — If Equipped**


If you are in an emergency and the mobile phone is reachable:

- Pick up the phone and manually dial the emergency number for your area.

If the phone is not reachable and the Uconnect® Phone is operational, you may reach the emergency number as follows:

- Press the  button to begin.
- After the “Ready” prompt and the following beep, say “Emergency” and the Uconnect® Phone will instruct the paired mobile phone to call the emergency number.

**NOTE:**

- The default number is 112. The number dialed may not be applicable with the available mobile service and area.
- If supported, this number may be programmable on some systems. To do this, press the  button and say “Setup”, followed by “Emergency”.
- The Uconnect® Phone does slightly lower your chances of successfully making a phone call as to that for the mobile phone directly.

**WARNING!**

To use you Uconnect® Phone System in an emergency, your mobile phone must be:

- turned on,
- paired to the Uconnect® System,
- and have network coverage.


**Breakdown Service — If Equipped**

If you need Breakdown service:

- Press the  button to begin.

- After the “Ready” prompt and the following beep, say “Breakdown service”.

**NOTE:**

**The Breakdown service number has to be setup before using. To setup, press the  button and say “Setup, Breakdown Service” and follow prompts.**

**Paging**

To learn how to page, refer to “Working with Automated Systems”. Paging works properly except for pagers of certain companies, which time out a little too soon to work properly with the Uconnect® Phone.

**Voice Mail Calling**



To learn how to access your voice mail, refer to “Working with Automated Systems”.


**Working With Automated Systems**

This method is used in instances where one generally has to press numbers on the mobile phone keypad while navigating through an automated telephone system.

You can use your Uconnect® Phone to access a voice mail system or an automated service, such as a paging service or automated cus-

tomer service. Some services require immediate response selection. In some instances, that may be too quick for use of the Uconnect® Phone.

When calling a number with your Uconnect® Phone that normally requires you to enter in a touch-tone sequence on your mobile phone keypad, you can press the  button and say the sequence you wish to enter followed by the word “Send”. For example, if required to enter your PIN followed with a hash, (3 7 4 6 #), you can press the  button and say, “3 7 4 6 # Send”. Saying a number, or sequence of numbers, followed by “Send”, is also to be used for navigating through an automated customer service center menu structure, and to leave a number on a pager.


You can also send stored Uconnect® Phonebook entries as tones for fast and easy access to voice mail and pager entries. To use this feature, dial the number you wish to call and then press the  button and say “Send.” The system will prompt you to enter the name or number and say the name of the phonebook entry you wish to send. The Uconnect® Phone

will then send the corresponding phone number associated with the phonebook entry, as tones over the phone.

**NOTE:**


- **You may not hear all of the tones due to mobile phone network configurations; this is normal.**
- **Some paging and voice mail systems have system time out settings that are too short and may not allow the use of this feature.**

**Barge In — Overriding Prompts**

The “Voice Command” button can be used when you wish to skip part of a prompt and issue your voice command immediately. For example, if a prompt is asking “Would you like to pair a phone, clear a...,” you could press the  button and say, “Pair a Phone” to select that option without having to listen to the rest of the voice prompt.

**Turning Confirmation Prompts On/Off**

Turning confirmation prompts off will stop the system from confirming your choices (e.g., the Uconnect® Phone will not repeat a phone number before you dial it).

- Press the  button to begin.
- After the “Ready” prompt and the following beep, say:
  - “Setup Confirmations Prompts On”
  - “Setup Confirmations Prompts Off”

**Phone And Network Status Indicators**

If available on the radio and/or on a premium display such as the instrument panel cluster, and supported by your mobile phone, the Uconnect® Phone will provide notification to inform you of your phone and network status when you are attempting to make a phone call using Uconnect® Phone. The status is given for network signal strength, phone battery strength, etc.

**Dialing Using The Mobile Phone Keypad**

You can dial a phone number with your mobile phone keypad and still use the Uconnect® Phone (while dialing via the mobile phone key-

pad, the user must exercise caution and take precautionary safety measures). By dialing a number with your paired Bluetooth® mobile phone, the audio will be played through your vehicle's audio system. The Uconnect® Phone will work the same as if you dial the number using Voice Command.

**NOTE:**

**Certain brands of mobile phones do not send the dial ring to the Uconnect® Phone to play it on the vehicle audio system, so you will not hear it. Under this situation, after successfully dialing a number the user may feel that the call did not go through even though the call is in progress. Once your call is answered, you will hear the audio.**


**Mute/Un-Mute (Mute Off)**

When you mute the Uconnect® Phone, you will still be able to hear the conversation coming from the other party, but the other party will not be able to hear you. In order to mute the Uconnect® Phone:

- Press the  button.


- Following the beep, say "Mute".

In order to un-mute the Uconnect® Phone:

- Press the  button.
- Following the beep, say "Mute off".

## **Advanced Phone Connectivity**

### **Transfer Call To And From Mobile Phone**

The Uconnect® Phone allows ongoing calls to be transferred from your mobile phone to the Uconnect® Phone without terminating the call. To transfer an ongoing call from your Uconnect® Phone paired mobile phone to the Uconnect® Phone or vice versa, press the  button and say "Transfer Call".



### **Connect Or Disconnect Link Between The Uconnect® Phone And Mobile Phone**

Your mobile phone can be paired with many different electronic devices, but can only be actively "connected" with one electronic device at a time.

If you would like to connect or disconnect the Bluetooth® connection between your mobile

phone and the Uconnect® Phone System, follow the instructions described in your mobile phone User's Manual.


### **List Paired Mobile Phone Names**

- Press the  button to begin.
- After the "Ready" prompt and the following beep, say "Setup Phone Pairing".
- When prompted, say "List Phones".
- The Uconnect® Phone will play the phone names of all paired mobile phones in order from the highest to the lowest priority. To "select" or "delete" a paired phone being announced, press the  button and say "Select" or "Delete". Also, see the next two sections for an alternate way to "select" or "delete" a paired phone.



### **Select Another Mobile Phone**

This feature allows you to select and start using another phone paired with the Uconnect® Phone.

- Press the  button to begin.


- After the “Ready” prompt and the following beep, say “Setup Select Phone” and follow the prompts.
- You can also press the  button at any time while the list is being played, and then choose the phone that you wish to select.
- The selected phone will be used for the next phone call. If the selected phone is not available, the Uconnect® Phone will return to using the highest priority phone present in or near (approximately within 30 ft [9 m]) the vehicle.

#### **Delete Uconnect® Phone Paired Mobile Phones**

- Press the  button to begin.
- After the “Ready” prompt and the following beep, say “Setup Phone Pairing”.
- At the next prompt, say “Delete” and follow the prompts.
- You can also press the  button at any time while the list is being played, and then choose the phone you wish to delete.

## **Things You Should Know About Your Uconnect® Phone**



### **Uconnect® Phone Tutorial**

To hear a brief tutorial of the Uconnect® Phone features, press the  button and say “Uconnect® Tutorial”.

### **Voice Training**

For users experiencing difficulty with the Uconnect® Phone recognizing their voice commands or numbers, the Uconnect® Phone Voice Training feature may be used. To enter this training mode, follow one of the two following procedures:

From outside the Uconnect® Phone mode (e.g., from radio mode)


- Press and hold the  button for five seconds until the session begins, or,
- Press the  button and say the “Voice Training”, “System Training”, or “Start Voice Training” command.

You can either press the Uconnect® Phone button to restore the factory setting or repeat the words and phrases when prompted by the Uconnect® Phone. For best results, the Voice

Training session should be completed when the vehicle is parked with the engine running, all windows closed, and the blower fan switched off.

This procedure may be repeated with a new user. The system will adapt to the last trained voice only.

### **Reset**

- Press the  button.
  - After the “Ready” prompt, and the following beep, say “Setup”, then “Reset”.
- This will delete all phone pairing, phone book entries, and other settings in all language modes. The System will prompt you before resetting to factory settings.

### **Voice Command**

- For best performance, adjust the rearview mirror to provide at least ½ in (1 cm) gap between the overhead console (if equipped) and the mirror.
- Always wait for the beep before speaking.

- Speak normally, without pausing, just as you would speak to a person sitting a few feet/ meters away from you.
- Make sure that no one other than you is speaking during a voice period.
- Performance is maximized under:
  - low-to-medium blower setting,
  - low-to-medium vehicle speed,
  - low road noise,
  - smooth road surface,
  - fully closed windows,
  - dry weather conditions.
- Even though the system is designed for users speaking in European English, Dutch, French, German, Italian, or Spanish accents, the system may not always work for some.
- When navigating through an automated system such as voice mail, or when sending a page, at the end of speaking the digit string, make sure to say "Send".
- Storing names in the phonebook when the vehicle is not in motion is recommended.

- It is not recommended to store similar sounding names in the Uconnect® Phonebook.
- Phonebook (Downloaded and Uconnect® Phone Local) recognition rate is optimized when the entries are not similar.
- Numbers must be spoken in single digits. "800" must be spoken "eight-zero-zero" not "eight hundred".
- You can say "O" (letter "O") for "0" (zero).
- Even though international dialing for most number combinations is supported, some shortcut dialing number combinations may not be supported.
- In a convertible vehicle, system performance may be compromised with the convertible top down.

#### **Far End Audio Performance**

- Audio quality is maximized under:
  - low-to-medium blower setting,
  - low-to-medium vehicle speed,
  - low road noise,
  - smooth road surface,

- fully closed windows,
- dry weather conditions, and
- operation from the driver's seat.
- Performance, such as audio clarity, echo, and loudness to a large degree rely on the phone and network, and not the Uconnect® Phone.
- Echo at the phone far end can sometimes be reduced by lowering the in-vehicle audio volume.
- In a convertible vehicle, system performance may be compromised with the convertible top down.

#### **Recent Calls**


If your phone supports "Automatic Phonebook Download", Uconnect® Phone can list your Outgoing, Incoming and Missed Calls.

#### **Voice Text Reply**

If your phone supports Voice Text Reply messaging, Uconnect® Phone can read or send new messages on your phone.

### Read Messages:


If you receive a new text message while your phone is connected to Uconnect® Phone, an announcement will be made to notify you that you have a new text message. If you wish to hear the new message:


- Press the  button.
- After the “Ready” prompt and the following beep, say “SMS Read” or “Read Messages”.
- Uconnect® Phone will play the new text message for you.

After reading a message, you can “Reply” or “Forward” the message using Uconnect® Phone.

### Send Messages:

You can send messages using Uconnect® Phone. To send a new message:

- Press the  button.
- After the “Ready” prompt and the following beep, say “SMS Send” or “Send Messages”.
- You can either say the message you wish to send or say “List Messages.” There are 20 preset messages.

To send a message, press the  button while the system is listing the message and say “Send.”

Uconnect® Phone will prompt you to say the name or number of the person you wish to send the message to.


List of Preset Messages:

1. Yes
2. No
3. Where are you?
4. I need more direction.
5. L O L

6. Why
7. I love you
8. Call me
9. Call me later
10. Thanks
11. See You in 15 minutes
12. I am on my way
13. I'll be late
14. Are you there yet?
15. Where are we meeting?
16. Can this wait?
17. Bye for now
18. When can we meet
19. Send number to call
20. Start without me

### **Turn Voice Text Reply Incoming Announcement ON/OFF**

Turning the Voice Text Reply Incoming Announcement OFF will stop the system from announcing the new incoming messages.

- Press the  button.
- After the “Ready” prompt and the following beep, say “Setup, Incoming Message Announcement”, you will then be given a choice to change it.

### **Bluetooth® Communication Link**


Mobile phones have been found to lose connection to the Uconnect® Phone. When this happens, the connection can generally be reestablished by switching the phone off/on. Your mobile phone is recommended to remain in Bluetooth® ON mode.

### **Power-Up**

After switching the ignition key from OFF to either the ON or ACC position, or after a language change, you must wait at least fifteen seconds prior to using the system.




## Voice Tree

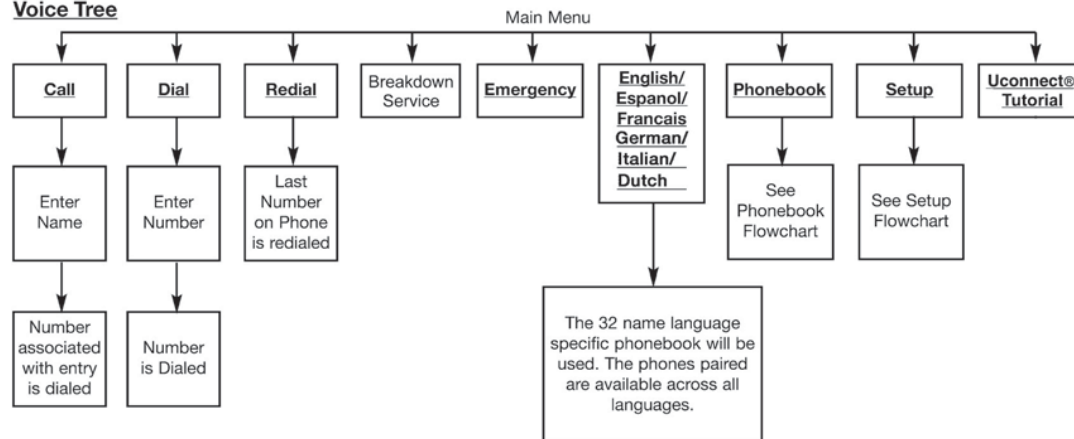

Note: Available Voice commands are shown in bold face and are underlined.

030772524


### Voice Tree – Phonebook

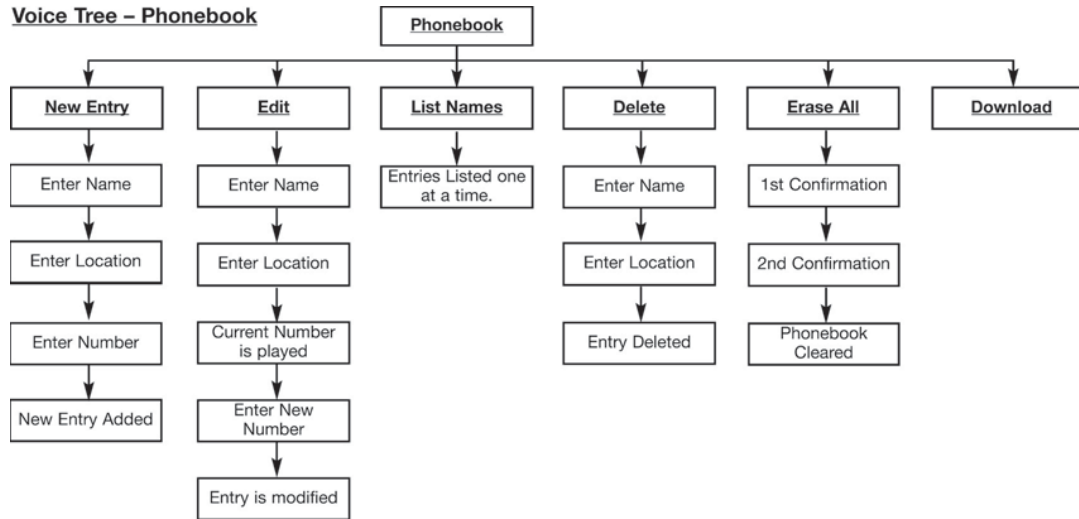

Note: Available Voice commands are shown in bold face and are underlined.

81c6bf80

## Voice Tree – Setup

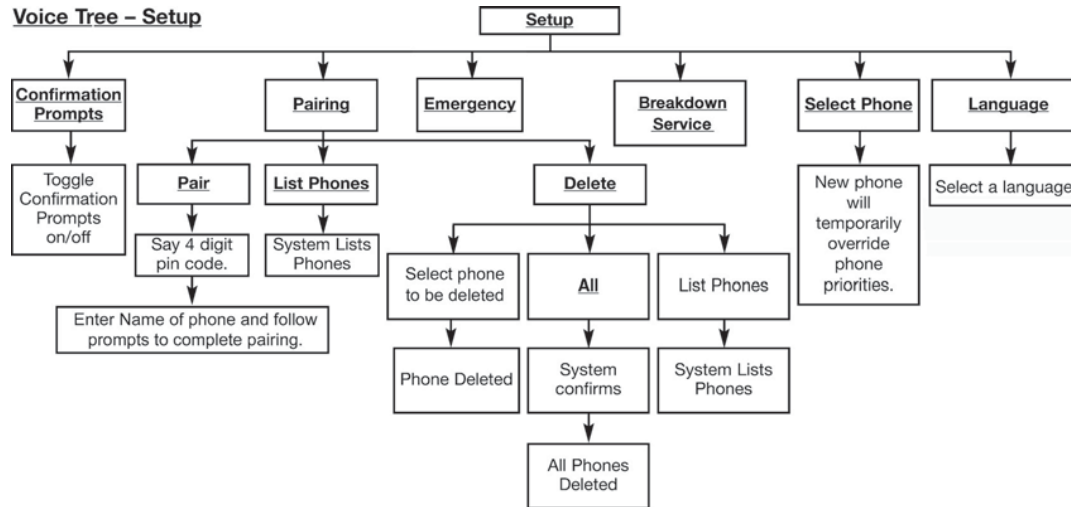

Note: Available Voice commands are shown in bold face and are underlined.

030605582

### Voice Commands

Primary	Alternate (s)
zero	
one	
two	
three	
four	
five	
six	
seven	
eight	
nine	
asterisk (*)	star
plus (+)	
hash (#)	
all	all of them
Breakdown service	
call	

Primary	Alternate (s)
cancel	
confirmation prompts	confirmation
continue	
delete	
dial	
download	
Dutch	Nederlands
edit	
emergency	
English	
delete all	erase all
Espanol	
Francais	
German	Deutsch
help	
home	

Primary	Alternate (s)
Italian	Italiano
language	
list names	
list phones	
main menu	return to main menu
mobile	
mute	
mute off	
new entry	
no	
other	other
pair a phone	
phone pairing	pairing
phonebook	phone book
previous	
redial	
select phone	select

Primary	Alternate (s)
send	
set up	phone settings or phone set up
transfer call	
Uconnect® Tutorial	
voice training	
work	
yes	

## VOICE COMMAND — IF EQUIPPED

### Voice Command System Operation




The Uconnect® Voice Command system allows you to control your AM, FM radio, disc player, USB Mass Storage Class device, iPod® family of devices, Bluetooth® Streaming Audio device, and a memo recorder.

#### NOTE:

**Take care to speak into the Voice Interface System as calmly and normally as possible. The ability of the Voice Interface System to recognize user voice commands may be negatively affected by rapid speaking or a raised voice level.**


#### WARNING!


Any voice commanded system should be used only in safe driving conditions following all applicable laws. Your attention should be focused on safely operating the vehicle. Failure to do so may result in a collision causing serious injury or death.

When you press the Voice Command  button, you will hear a beep. The beep is your signal to give a command.

#### NOTE:

**If you do not say a command within a few seconds, the system will present you with a list of options.**

If you ever wish to interrupt the system while it lists options, press the Voice Command  button, listen for the beep, and say your command.

Pressing the Voice Command  button while the system is speaking is known as “barging in.” The system will be interrupted, and after the beep, you can add or change commands. This will become helpful once you start to learn the options.

#### NOTE:


**At any time, you can say the words “Cancel”, “Help” or “Main Menu”.**

These commands are universal and can be used from any menu. All other commands can be used depending upon the active application.

When using this system, you should speak clearly and at a normal speaking volume.

The system will best recognize your speech if the windows are closed, and the heater/air conditioning fan is set to low.


At any point, if the system does not recognize one of your commands, you will be prompted to repeat it.

To hear the first available Menu, press the Voice Command  button and say “Help” or “Main Menu”.


## Commands

The Voice Command system understands two types of commands. Universal commands are available at all times. Local commands are available if the supported radio mode is active.

## Changing The Volume

1. Start a dialogue by pressing the Voice Command  button.
2. Say a command (e.g., “Help”).
3. Use the ON/OFF VOLUME rotary knob to adjust the volume to a comfortable level while the Voice Command system is speaking. Please note the volume setting for Voice Command is different than the audio system.

## Main Menu

Start a dialogue by pressing the Voice Command  button. You may say “Main Menu” to switch to the main menu.

In this mode, you can say the following commands:

- “Radio AM” (to switch to the radio AM mode)
- “Radio FM” (to switch to radio FM mode)
- “Disc” (to switch to the disc mode)
- “USB” (to switch to USB mode)
- “Bluetooth Streaming” (to switch to Bluetooth® Streaming mode)
- “Memo” (to switch to the memo recorder)
- “System Setup” (to switch to system setup)

## Radio AM (Or Radio Long Wave Or Radio Medium Wave — If Equipped)

To switch to the AM band, say “AM” or “Radio AM”. In this mode, you may say the following commands:

- “Frequency #” (to change the frequency)
- “Next Station” (to select the next station)
- “Previous Station” (to select the previous station)
- “Menu Radio” (to switch to the radio menu)
- “Main Menu” (to switch to the main menu)

## Radio FM

To switch to the FM band, say “FM” or “Radio FM”. In this mode, you may say the following commands:

- “Frequency #” (to change the frequency)
- “Next Station” (to select the next station)
- “Previous Station” (to select the previous station)
- “Menu Radio” (to switch to the radio menu)
- “Main Menu” (to switch to the main menu)

## Disc Mode

To switch to the disc mode, say “Disc”. In this mode, you may say the following commands:

- “Track” (#) (to change the track)
- “Next Track” (to play the next track)
- “Previous Track” (to play the previous track)
- “Main Menu” (to switch to the main menu)

## USB Mode

To switch to USB mode, say “USB”. In this mode, you may say the following commands:

- “Next Track” (to play the next track)

- “Previous Track” (to play the previous track)
- “Play” (to play a Artist Name, Playlist Name, Album Name, Track Name, etc.)


### Bluetooth® Streaming (BT) Mode


To switch to Bluetooth® Streaming (BT) mode, say “Bluetooth Streaming”. In this mode, you may say the following commands:

- “Next Track” (to play the next track)
- “Previous Track” (to play the previous track)
- “List” (to list an Artist, Playlist, Album, Track, etc.)

### Memo Mode

To switch to the voice recorder mode, say “Memo”. In this mode, you may say the following commands:

- “New Memo” (to record a new memo) — During the recording, you may press the Voice Command  button to stop recording. You proceed by saying one of the following commands:
  - “Save” (to save the memo)
  - “Continue” (to continue recording)
  - “Delete” (to delete the recording)

- “Play Memos” (to play previously recorded memos) — During the playback you may press the Voice Command  button to stop playing memos. You proceed by saying one of the following commands:

- “Repeat” (to repeat a memo)
- “Next” (to play the next memo)
- “Previous” (to play the previous memo)
- “Delete” (to delete a memo)
- “Delete All” (to delete all memos)

### System Setup


To switch to system setup, you may say one of the following:

- “Change to system setup”
- “Main menu system setup”
- “Switch to system setup”
- “Change to setup”
- “Main menu setup” or
- “Switch to setup”

In this mode, you may say the following commands:


- “Language English”
- “Language French”
- “Language Spanish”
- “Language Dutch”
- “Language Deutsch”
- “Language Italian”
- “Tutorial”
- “Voice Training”

### NOTE:

**Keep in mind that you have to press the Voice Command  button first and wait for the beep before speaking the “Barge In” commands.**

### Voice Training

For users experiencing difficulty with the system recognizing their voice commands or numbers the Uconnect® Voice “Voice Training” feature may be used.

1. Press the Voice Command  button, say “System Setup” and once you are in that menu then say “Voice Training.” This will train your own voice to the system and will improve recognition.

2. Repeat the words and phrases when prompted by Uconnect® Voice. For best results, the Voice Training session should be completed when the vehicle is parked, engine running, all windows closed, and the blower fan switched off. This procedure may be repeated with a new user. The system will adapt to the last trained voice only.

## SEATS

Seats are a part of the Occupant Restraint System of the vehicle.

### WARNING!

- It is dangerous to ride in a cargo area, inside or outside of a vehicle. In a collision, people riding in these areas are more likely to be seriously injured or killed.


*(Continued)*

### WARNING! (Continued)

- Do not allow people to ride in any area of your vehicle that is not equipped with seats and seat belts. In a collision, people riding in these areas are more likely to be seriously injured or killed.
- Be sure everyone in your vehicle is in a seat and using a seat belt properly.

## Power Seats — If Equipped

Some models may be equipped with a power driver's seat. The power seat switch is located on the outboard side of the seat near the floor. Use the switch to move the seat up, down, forward, rearward, or to tilt the seat.

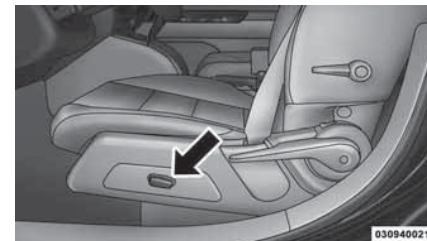

**Power Seat Switch**

### WARNING!

- Adjusting a seat while driving may be dangerous. Moving a seat while driving could result in loss of control which could cause a collision and serious injury or death.
- Seats should be adjusted before fastening the seat belts and while the vehicle is parked. Serious injury or death could result from a poorly adjusted seat belt.



### CAUTION!

Do not place any article under a power seat or impede its ability to move as it may cause damage to the seat controls. Seat travel may become limited if movement is stopped by an obstruction in the seat's path.

### Adjusting The Seat Forward Or Rearward

The seat can be adjusted both forward and rearward. Push the seat switch forward or rearward, the seat will move in the direction of the switch. Release the switch when the desired position has been reached.

### Adjusting The Seat Up Or Down

The height of the seats can be adjusted up or down. Pull upward or push downward on the seat switch, the seat will move in the direction of the switch. Release the switch when the desired position is reached.

### Tilting The Seat Up Or Down

The angle of the seat cushion can be adjusted in four directions. Pull upward or push downward on the front or rear of the seat switch, the front or rear of the seat cushion will move in the

direction of the switch. Release the switch when the desired position is reached.

### Heated Seats — If Equipped

On some models, the front driver and passenger seats may be equipped with heaters in both the seat cushions and seatbacks. The controls for the front heated seats are located on the center instrument panel area.

You can choose from HIGH, LOW or OFF heat settings. Amber indicator lights in each switch indicate the level of heat in use. Two indicator lights will illuminate for HIGH, one for LOW and none for OFF.



Press the switch once to select HIGH-level heating. Press the switch a second time to select LOW-level heating. Press the switch a third time to shut the heat-

ing elements OFF.

When the HIGH-level setting is selected, the heater will provide a boosted heat level during the initial stages of operation. Then, the heat output will drop to the normal HI-level. If the HI-level setting is selected, the system will

automatically switch to LOW-level after approximately 30 minutes of continuous operation. At that time, the display will change from HI to LO, indicating the change. When the LOW-level heating is selected, the system automatically turns the heater and the indicator light OFF after a maximum of 30 minutes of continuous operation.

### NOTE:

**Once a heat setting is selected, heat will be felt within two to five minutes.**

### WARNING!

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion or other physical condition must exercise care when using the seat heater. It may cause burns even at low temperatures, especially if used for long periods of time.


*(Continued)*

**WARNING! (Continued)**

- Do not place anything on the seat or seatback that insulates against heat, such as a blanket or cushion. This may cause the seat heater to overheat. Sitting in a seat that has been overheated could cause serious burns due to the increased surface temperature of the seat.

**Manual Front Seat Adjustment**

On models equipped with manual seats, the adjusting bar is located at the front of the seats, near the floor. While sitting in the seat, lift up on the bar and move the seat forward or rearward. Release the bar once you have reached the desired position. Then, using body pressure, move forward and rearward on the seat to be sure that the seat adjusters have latched.

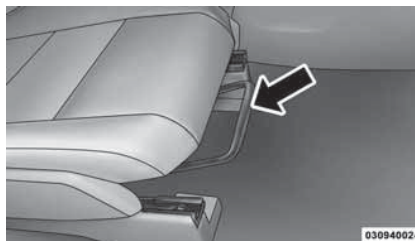

**Manual Seat Adjusting Bar**

**WARNING!**

- Adjusting a seat while driving may be dangerous. Moving a seat while driving could result in loss of control which could cause a collision and serious injury or death.
- Seats should be adjusted before fastening the seat belts and while the vehicle is parked. Serious injury or death could result from a poorly adjusted seat belt.

**Manual Seat Height Adjustment — If Equipped**

The driver's seat height can be raised or lowered by using a lever, located on the outboard side of the seat. Pull upward on the lever to raise the seat height or push downward on the lever to lower the seat height.



**Seat Height Adjustment Lever**

### Manual Lumbar — If Equipped

The lumbar adjustment handle is located on the outboard side of the driver's seatback. Rotate the lever downward to increase the lumbar support or rotate the lever upward to decrease the lumbar support.



Lumbar Adjustment Lever

### Driver's Seatback Recline

To adjust the seatback, lift the lever located on the outboard side of the seat, lean back to the desired angle and release the lever. To return the seatback, lift the lever, lean forward and release the lever.




Recline Lever

#### WARNING!


Do not ride with the seatback reclined so that the shoulder belt is no longer resting against your chest. In a collision you could slide under the seat belt, which could result in serious injury or death.

### Fold-Flat Front Passenger Seat

To fold the front passenger seat, lift the recliner handle to the full upward position and push the seatback forward until it rests on the seat cushion.

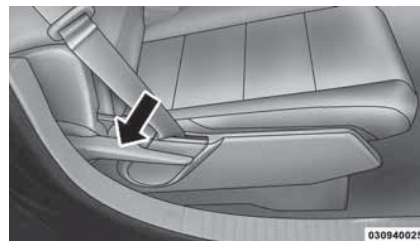

Fold-Flat Lever

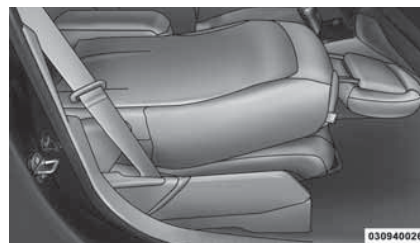

Fold-Flat Seat

## Head Restraints

Head restraints are designed to reduce the risk of injury by restricting head movement in the event of a rear impact. Head restraints should be adjusted so that the top of the head restraint is located above the top of your ear.

### **WARNING!**

The head restraints for all occupants must be properly adjusted prior to operating the vehicle or occupying a seat. Head restraints should never be adjusted while the vehicle is in motion. Driving a vehicle with the head restraints improperly adjusted or removed could cause serious injury or death in the event of a collision.


### **Active Head Restraints — Front Seats**

Active Head Restraints are passive, deployable components, and vehicles with this equipment cannot be readily identified by any markings, only through visual inspection of the head restraint. The head restraint will be split in two halves, with the front half being soft foam and trim, the back half being decorative plastic.

88

When AHRs deploy during a rear impact, the front half of the head restraint extends forward to minimize the gap between the back of the occupant's head and the AHR. This system is designed to help prevent or reduce the extent of injuries to the driver and front passenger in certain types of rear impacts. Refer to "Occupant Restraints" in "Things To Know Before Starting Your Vehicle" for further information.

To raise the head restraint, pull upward on the head restraint. To lower the head restraint, press the push button, located at the base of the head restraint, and push downward on the head restraint.

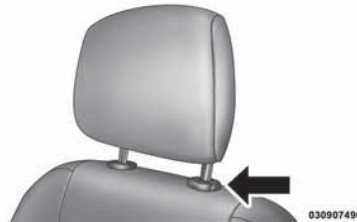

**Push Button**

For comfort the Active Head Restraints can be tilted forward and backward. To tilt the head restraint closer to the back of your head, pull forward on the bottom of the head restraint. Push rearward on the bottom of the head restraint to move the head restraint away from your head.



**Active Head Restraint (Normal Position)**



Active Head Restraint (Tilted Position)

**NOTE:**

- The head restraints should only be removed by qualified technicians, for service purposes only. If either of the head restraints require removal, see your authorized dealer.
- In the event of deployment of an Active Head Restraint, refer to “Occupant Restraints/Resetting Active Head Restraints (AHR)” in “Things To Know Before Starting Your Vehicle” for further information.

**WARNING!**


- Do not place items over the top of the Active Head Restraint, such as coats, seat covers or portable DVD players. These items may interfere with the operation of the Active Head Restraint in the event of a collision and could result in serious injury or death.
- Active Head Restraints may be deployed if they are struck by an object such as a hand, foot or loose cargo. To avoid accidental deployment of the Active Head Restraint ensure that all cargo is secured, as loose cargo could contact the Active Head Restraint during sudden stops. Failure to follow this warning could cause personal injury if the Active Head Restraint is deployed.

**Rear Head Restraints**

The head restraints in the rear are non adjustable. Refer to “Occupant Restraints” in “Things To Know Before Starting Your Vehicle” for information on Tether routing.

**Folding Rear Seat**

To provide additional storage area, each rear seatback can be folded forward. Pull the strap forward to fold the rear seatback flat.

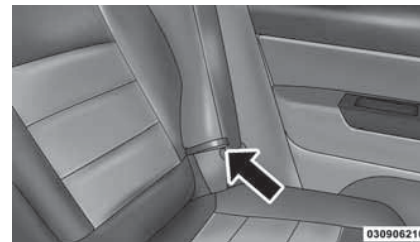

Rear Seat Release Strap



**Folded Rear Seat**

To raise the seatback, pull the strap forward and lift the seatback into its upright position.

**WARNING!**

Be certain that the seatback is securely locked into position. If the seatback is not securely locked into position the seat will not provide the proper stability for child seats and/or passengers. An improperly latched seat could cause serious injury.

**Reclining Rear Seat — If Equipped**

For additional comfort, pull the strap forward just enough to release the seatback latch. Then push the seatback to a reclined position, approximately 35 degrees maximum, and release the strap.

**WARNING!**

Do not ride with the seatback reclined so that the shoulder belt is no longer resting against your chest. In a collision you could slide under the seat belt and be seriously or even fatally injured. Use the recliner only with the vehicle is parked.

**TO OPEN AND CLOSE THE HOOD**

To open the hood, two latches must be released.

1. Pull the hood release lever located on the left kick panel.



**Hood Release Lever**

2. Move the safety latch, located outside the vehicle under the front edge of the hood, toward the center and raise the hood.



#### Hood Safety Latch Location

Lift the hood prop rod, clipped to the right side (left side facing hood) of the engine compartment to secure the hood in the open position. Place the hood prop at the location stamped into the inner hood surface.



#### Prop Rod Location

#### CAUTION!

To prevent possible damage, do not slam the hood to close it. Lower the hood until it is open 8 in (20 cm) approximately and then drop it. This should secure both latches. Never drive your vehicle unless the hood is fully closed, with both latches engaged.

#### WARNING!

Be sure the hood is fully latched before driving your vehicle. If the hood is not fully latched, it could open when the vehicle is in motion and block your vision. Failure to follow this warning could result in serious injury or death.

## LIGHTS

### Multifunction Lever

The multifunction lever controls the operation of the headlights, position lights, side marker lights, turn signals, headlight beam selection, instrument panel light dimming, interior lights, the passing lights and fog lights. The lever is located on the left side of the steering column.



Multifunction Lever

### Headlights And Position Lights

Turn the end of the multifunction lever to the first detent to activate position lights. Turn to the second detent for headlight operation.



Head Light Control

### Lights-On Reminder

If the headlights or position lights are on after the ignition is turned OFF, a chime will sound to alert the driver when the driver's door is opened.

### Front Fog Lights



The front fog light switch is on the multifunction lever. To activate the front fog lights, turn on the position lights or the high/low beam headlights and pull out the end of the multifunction lever.



Front Fog Light Control

### Rear Fog Lights




The rear fog lights may be operated as desired when visibility is poor due to fog. To activate the rear fog lights, turn on the Low beam, high beam, or front fog lamps, pull out the end of the multifunction lever and rotate the lever to the last detent.

### Turn Signals

Move the multifunction lever up or down and the arrows on each side of the instrument cluster



flash to show proper operation of the front and rear turn signal lights.

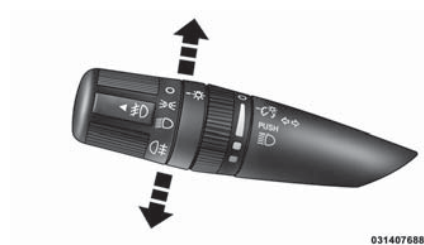

Turn Signal Control

If either light remains on and does not flash, or there is a very fast flash rate, check for a defective outside light bulb. If an indicator fails to light when the lever is moved, it would suggest that the indicator bulb is defective.

### Lane Change Assist

Tap the lever up or down once, without moving beyond the detent, and the turn signal (right or left) will flash three times then automatically turn off.

### High/Low Beam Switch

Push the multifunction lever away from you to switch the headlights to high beam. Pull the lever back toward you, to switch the headlights back to low beam.

### Flash-To-Pass

You can signal another vehicle with your headlights by lightly pulling the multifunction lever toward you. This will turn on the high beam headlights until the lever is released.

#### NOTE:

**If the multifunction lever is held in the flash-to-pass position for more than 15 seconds, the high beams will shut off. If this occurs, wait 30 seconds for the next flash-to-pass operation.**

### Instrument Panel Dimmer

Rotate the center portion of the lever to the extreme bottom position to fully dim the instrument panel lights and prevent the interior lights from illuminating when a door is opened.

Rotate the center portion of the lever up to increase the brightness of the instrument panel lights when the position lights or headlights are on.

Rotate the center portion of the lever upward to the next detent position to brighten the odometer and radio when the position lights or headlights are on.

Rotate the center portion of the lever upward to the last detent to turn on the interior lighting.



Dimmer Control

## Headlight Leveling System — If Equipped

This system allows the driver to maintain proper headlight beam position with the road surface regardless of vehicle load.

The headlight leveling switch is located on the instrument panel below the radio.



To operate: push the headlight leveling switch until the appropriate number, which corresponds to the load listed on the following chart, illuminates on the switch.

0	Driver only, or driver and front passenger.
1	All seating positions occupied.
2	All seating positions occupied, plus an evenly distributed load in the luggage compartment. The total weight of passengers and load does not exceed the maximum load capacity of the vehicle.

3	Driver, plus an evenly distributed load in the luggage compartment. The total weight of the driver and load does not exceed the maximum load capacity of the vehicle.
Calculations based on a passenger weight of 165 lbs (75 kg).	

## Map/Reading/Lights

These lights are mounted above the rear view mirror. Each light is turned on by pressing on the light itself or a button next to the light (if equipped). Press the light/button a second time to turn the light off.



### Map/Reading Lights

The lights also come on when a door is opened or the dimmer control is turned fully upward, past the second detent.

#### NOTE:

**The lights will remain on until the switch is pressed a second time, so be sure they have been turned off before leaving the vehicle. They will not turn off automatically.**

## WINDSHIELD WIPERS AND WASHERS



The windshield wiper/washer control lever is located on the right side of the steering column. The front wipers are operated by rotating a switch, located on the end of the lever. For information on the rear wiper/washer, refer to “Rear Window Features” in “Understanding The Features Of Your Vehicle”.



036407502

Wiper/Washer Control Lever

### CAUTION!

- Turn the windshield wipers off when driving through an automatic car wash. Damage to the windshield wipers may result if the wiper control is left in any position other than off.
- In cold weather, always turn off the wiper switch and allow the wipers to return to the “Park” position before turning off the engine. If the wiper switch is left on and the wipers freeze to the windshield, damage to the wiper motor may occur when the vehicle is restarted.
- Always remove any buildup of snow that prevents the windshield wiper blades from returning to the off position. If the windshield wiper control is turned off and the blades cannot return to the off position, damage to the wiper motor may occur.

### Windshield Wiper Operation

Rotate the end of the lever upward to the second detent past the intermittent settings for

low-speed wiper operation. Rotate the end of the lever upward to the third detent past the intermittent settings for high-speed wiper operation.



031507503

Windshield Wiper Operation

### Intermittent Wiper System

Use the intermittent wiper when weather conditions make a single wiping cycle, with a variable pause between cycles, desirable. Select the delay interval by turning the end of the lever. Rotate the end of the lever upward (clockwise) to decrease the delay time and downward (counterclockwise) to increase the delay time.

The delay can be regulated from a maximum of approximately 18 seconds between cycles, to a cycle every second.

**NOTE:**

**The wiper delay times depend on vehicle speed. If the vehicle is moving less than 10 mph (16 km/h), delay times will be doubled.**

### Windshield Washers

To use the washer, pull the control lever toward you and hold while spray is desired. If the lever is pulled while in the delay range, the wiper will operate in low-speed while the lever is pulled and for two wipe cycles after the lever is released, and then resume the intermittent interval previously selected.

If the lever is pulled while in the off position, the wipers will operate for two wipe cycles, then turn off.

**WARNING!**

Sudden loss of visibility through the windshield could lead to a collision. You might not see other vehicles or other obstacles. To avoid sudden icing of the windshield during freezing weather, warm the windshield with the defroster before and during windshield washer use.

### Mist Feature

Push down on the control lever to activate a single wipe to clear the windshield of road mist or spray from a passing vehicle. As long as the lever is held down, the wipers will continue to operate.

**NOTE:**

**The mist feature does not activate the washer pump; therefore, no washer fluid will be sprayed on the windshield. The wash function must be used in order to spray the windshield with washer fluid.**



031507504

### Mist Operation

## TILT STEERING COLUMN

This feature allows you to tilt the steering column upward or downward. The tilt steering column lever is located on the left side of the steering column, below the turn signal lever.

Push down on the lever to unlock the steering column. With one hand firmly on the steering wheel, move the steering column up or down, as desired. Push the lever up to lock the steering column firmly in place.



**Tilt Steering Column Lever**


**WARNING!**

Do not adjust the steering column while driving. Adjusting the steering column while driving or driving with the steering column unlocked, could cause the driver to lose control of the vehicle. Failure to follow this warning may result in serious injury or death.

## ELECTRONIC SPEED CONTROL — IF EQUIPPED

When engaged, the Electronic Speed Control takes over accelerator operations at speeds greater than 25 mph (40 km/h).

The Electronic Speed Control buttons are located on the right side of the steering wheel.

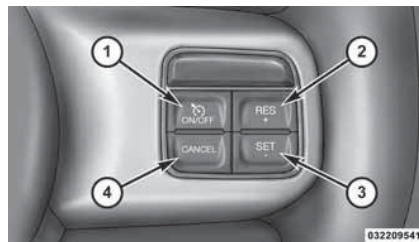

**Electronic Speed Control Buttons**

- |            |           |
|------------|-----------|
| 1 — ON/OFF | 2 — RES + |
| 4 — CANCEL | 3 — SET - |

**NOTE:**

In order to ensure proper operation, the Electronic Speed Control System has been designed to shut down if multiple Speed Control functions are operated at the same time. If this occurs, the Electronic Speed Control System can be reactivated by pushing the Electronic Speed Control ON/OFF button and resetting the desired vehicle set speed.

**To Activate**

Push the ON/OFF button. The Cruise Indicator Light in the instrument cluster will illuminate. To turn the system off, push the ON/OFF button a second time. The Cruise Indicator Light will turn off. The system should be turned off when not in use.

**WARNING!**

Leaving the Electronic Speed Control system on when not in use is dangerous. You could accidentally set the system or cause it to go faster than you want. You could lose

*(Continued)*

**WARNING! (Continued)**

control and have an accident. Always leave the system OFF when you are not using it.

**To Set A Desired Speed**

Turn the Electronic Speed Control ON. When the vehicle has reached the desired speed, press the SET (-) button and release. Release the accelerator and the vehicle will operate at the selected speed.

**NOTE:**

**The vehicle should be traveling at a steady speed and on level ground before pressing the SET (-) button.**

**To Deactivate**

A soft tap on the brake pedal, pushing the CANCEL button, or normal brake pressure while slowing the vehicle will deactivate Electronic Speed Control without erasing the set speed memory. Pressing the ON/OFF button or turning the ignition switch OFF erases the set speed memory.

**To Resume Speed**

To resume a previously set speed, push the RES (+) button and release. Resume can be used at any speed above 20 mph (32 km/h).

**To Vary The Speed Setting**

When the Electronic Speed Control is set, you can increase speed by pushing the RES (+) button. If the button is continually pressed, the set speed will continue to increase until the button is released, then the new set speed will be established.

Pressing the RES (+) button once will result in a 1 mph (1.6 km/h) increase in set speed. Each subsequent tap of the button results in an increase of 1 mph (1.6 km/h).

To decrease speed while the Electronic Speed Control is set, push the SET (-) button. If the button is continually held in the SET (-) position, the set speed will continue to decrease until the button is released. Release the button when the desired speed is reached, and the new set speed will be established.

Pressing the SET (-) button once will result in a 1 mph (1.6 km/h) decrease in set speed. Each subsequent tap of the button results in a decrease of 1 mph (1.6 km/h).

**To Accelerate For Passing**

Press the accelerator as you would normally. When the pedal is released, the vehicle will return to the set speed.

**Using Electronic Speed Control On Hills**

The transmission may downshift on hills to maintain the vehicle set speed.

**NOTE:**

**The Electronic Speed Control system maintains speed up and down hills. A slight speed change on moderate hills is normal.**

On steep hills, a greater speed loss or gain may occur so it may be preferable to drive without Electronic Speed Control.

**WARNING!**

Electronic Speed Control can be dangerous where the system cannot maintain a constant speed. Your vehicle could go too fast for the conditions, and you could lose control and have an accident. Do not use Electronic Speed Control in heavy traffic or on roads that are winding, icy, snow-covered or slippery.

**POWER SUNROOF — IF EQUIPPED**

The power sunroof switch is located on the overhead console.



**Power Sunroof Switch**

**WARNING!**

- Never leave children in a vehicle with the key in the ignition switch. Occupants, particularly unattended children, can become entrapped by the power sunroof while operating the power sunroof switch. Such entrapment may result in serious injury or death.

**(Continued)**

**WARNING! (Continued)**

- In a collision, there is a greater risk of being thrown from a vehicle with an open sunroof. You could also be seriously injured or killed. Always fasten your seat belt properly and make sure all passengers are properly secured.
- Do not allow small children to operate the sunroof. Never allow your fingers, other body parts, or any object to project through the sunroof opening. Injury may result.

**Opening Sunroof — Express**

Press the switch rearward and release it within one-half second. The sunroof and sunshade will open automatically from any position. The sunroof and sunshade will open fully and stop automatically. This is called "Express Open". During Express Open operation, any movement of the sunroof switch will stop the sunroof.

### **Opening Sunroof — Manual Mode**

To open the sunroof, press and hold the switch rearward to full open. Any release of the switch will stop the movement. The sunroof and sunshade will remain in a partially opened condition until the switch is pushed and held rearward again.

### **Closing Sunroof — Express**

Press the switch forward and release it within one-half second and the sunroof will close automatically from any position. The sunroof will close fully and stop automatically. This is called “Express Close”. During Express Close operation, any movement of the switch will stop the sunroof.

### **Closing Sunroof — Manual Mode**

To close the sunroof, press and hold the switch in the forward position. Any release of the switch will stop the movement and the sunroof will remain in a partially closed condition until the switch is pushed and held forward again.

### **Pinch Protect Feature**

This feature will detect an obstruction in the opening of the sunroof during Express Close

operation. If an obstruction in the path of the sunroof is detected, the sunroof will automatically retract. Remove the obstruction if this occurs. Next, press the switch forward and release to Express Close.

#### **NOTE:**

**If three consecutive sunroof close attempts result in Pinch Protect reversals, the fourth close attempt will be a Manual Close movement with Pinch Protect disabled.**

### **Venting Sunroof — Express**

Press and release the Vent button within one half second and the sunroof will open to the vent position. This is called “Express Vent”, and it will occur regardless of sunroof position. During Express Vent operation, any movement of the switch will stop the sunroof.

### **Sunshade Operation**

The sunshade can be opened manually. However, the sunshade will open automatically as the sunroof opens.

#### **NOTE:**

**The sunshade cannot be closed if the sunroof is open.**

### **Wind Buffeting**

Wind buffeting can be described as the perception of pressure on the ears or a helicopter-type sound in the ears. Your vehicle may exhibit wind buffeting with the windows down, or the sunroof (if equipped) in certain open or partially open positions. This is a normal occurrence and can be minimized. If the buffeting occurs with the rear windows open, open the front and rear windows together to minimize the buffeting. If the buffeting occurs with the sunroof open, adjust the sunroof opening to minimize the buffeting or open any window.

### **Sunroof Maintenance**

Use only a non-abrasive cleaner and a soft cloth to clean the glass panel.

### **Ignition Off Operation**

**For Vehicles Not Equipped With The Electronic Vehicle Information Center (EVIC)**

The power sunroof switch will remain active for 45 seconds after the ignition switch is turned to the LOCK position. Opening either front door will cancel this feature.



### For Vehicles Equipped With The EVIC

The power sunroof switch will remain active for up to approximately ten minutes after the ignition switch is turned to the LOCK position. Opening either front door will cancel this feature.

## ELECTRICAL POWER OUTLETS

There is a standard 12 Volt (13 Amp) power outlet located in the Integrated Center Stack (ICS) for added convenience. This power outlet can power mobile phones, electronics and other low power devices.



**12 Volt Power Outlet**


Power is available when the ignition switch is in the ON or ACC position. Insert the cigar lighter or accessory plug into the outlet for use. **To preserve the heating element, do not hold the lighter in the heating position.**

#### **NOTE:**

**To ensure proper operation a MOPAR® knob and element must be used.**

#### **CAUTION!**

- Do not exceed the maximum power of 160 Watts (13 Amps) at 12 Volts. If the 160 Watt (13 Amp) power rating is exceeded the fuse protecting the system will need to be replaced.
- Power outlets are designed for accessory plugs only. Do not insert any other object in the power outlets as this will damage the outlet and blow the fuse. Improper use of the power outlet can cause damage not covered by your New Vehicle Limited Warranty.

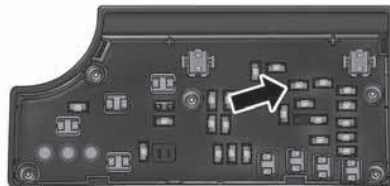

034636797

#### Power Outlet Fuse Location

#### WARNING!

To avoid serious injury or death:


- Only devices designed for use in this type of outlet should be inserted into any 12 Volt outlet.
- Do not touch with wet hands.
- Close the lid when not in use and while driving the vehicle.
- If this outlet is mishandled, it may cause an electric shock and failure.

#### CAUTION!

- Many accessories that can be plugged in draw power from the vehicle's battery, even when not in use (i.e., cellular phones, etc.). Eventually, if plugged in long enough, the vehicle's battery will discharge sufficiently to degrade battery life and/or prevent the engine from starting.
- Accessories that draw higher power (i.e., coolers, vacuum cleaners, lights, etc.) will degrade the battery even more quickly. Only use these intermittently and with great caution.
- After the use of high power draw accessories, or long periods of the vehicle not being started (with accessories still plugged in), the vehicle must be driven a sufficient length of time to allow the generator to recharge the vehicle's battery.

## CUPHOLDERS


Your vehicle is equipped with four cupholders. There are two illuminated cupholders located in the front.

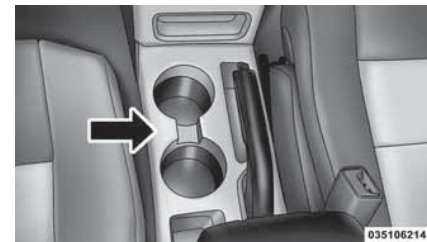

035106214

#### Front Cupholders

There are two cupholders located in the back for the rear passengers.

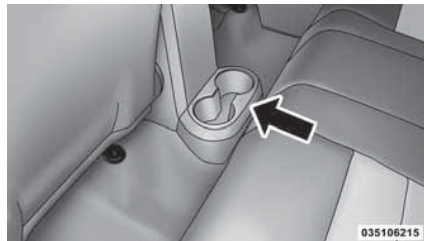


**Rear Cupholders**

## **STORAGE**

### **Glove Compartment And Storage Bin**

Located on the passenger side of the instrument panel are an upper storage bin and a lower glove compartment.

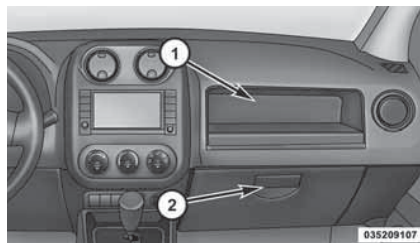


**Storage Bins**

1 — Upper Storage Bin

2 — Lower Glove Compartment

To open the lower glove compartment, pull outward on the release handle.

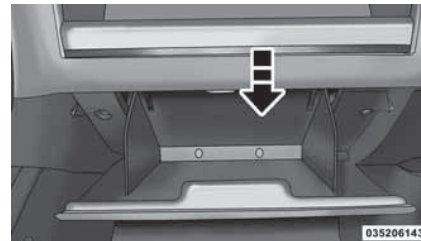


**Glove Compartment**

### Door Storage

The interior door panels are equipped with lower storage areas.



**Front Door Storage**

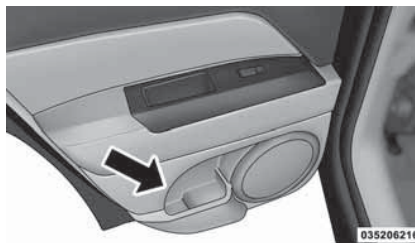


**Rear Door Storage**

### CONSOLE FEATURES


The floor console contains both an upper and lower storage compartment.

To open the upper storage compartment, push inward on the upper handle to unlatch the upper lid and lift the lid open.

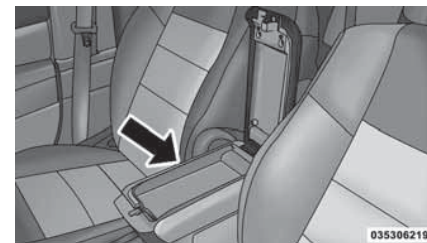

**Upper Storage Compartment**

To open the lower storage compartment, lift upward on the lower handle to unlatch the lower storage compartment and lift the lid open.

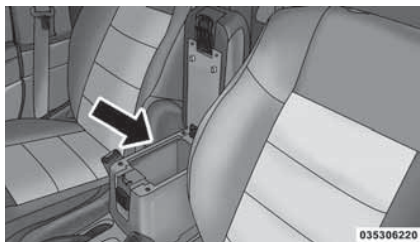

**Lower Storage Compartment**

**WARNING!**

Do not operate this vehicle with a console compartment lid in the open position. Cellular phones, music players, and other hand-held electronic devices should be stowed while driving. Use of these devices while driving can cause an accident due to distraction, resulting in death or injury.

## CARGO AREA FEATURES

### Cargo Light/Removable Self-Recharging Flashlight

The dual-function light is mounted in the headliner above the cargo area to illuminate the cargo area, and part of it snaps out of the bezel to serve as a flashlight when needed. The flashlight features two bright LED light bulbs and is powered by rechargeable lithium batteries that recharge when snapped back into place for convenience.

Press in on the flashlight to release it.



**Flashlight Location/Press To Release**

To operate the flashlight, press the switch once for high, twice for low, and a third time to return to off.




**Three Press Switch**

### Cargo Cover


The cargo area trim panels include two notches for mounting the available tonneau cover that accommodates the reclining rear seat.

To install the Cargo Cover, insert either end of the cover into one of the two notches located in the rear trim panels. With one of the cover ends installed, push inward on the opposite end and install it into the same notch location of the rear trim panel.

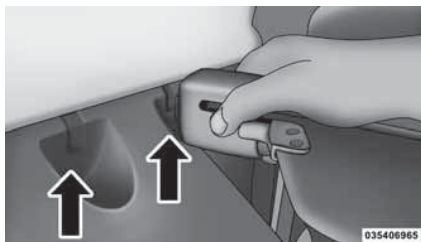

**Rear Trim Notches**

Using the handle, pull the cover toward you and guide the rear cover posts into the guides located on both sides of the rear trim panel.

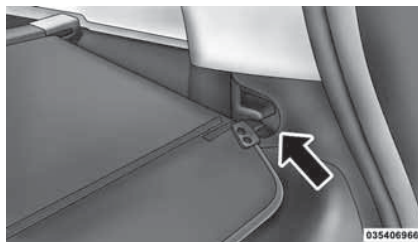

**Cargo Cover Guides**

**WARNING!**

In a collision a cargo cover loose in the vehicle could cause injury. It could fly around in a sudden stop and strike someone in the vehicle. Do not store the cargo cover on the cargo floor or in the passenger compartment. Remove the cover from the vehicle when taken from its mounting. Do not store in the vehicle.

**Removable Load Floor**

The cargo area load floor is removable and can be washed with mild soap and water.



**Removable Load Floor**

## Cargo Tie-Down Loops

There are four tie-downs (D-rings) installed in the cargo area for securing cargo.



Cargo Area Tie-Downs

### WARNING!

- Cargo tie-down loops are not safe anchors for a child seat tether strap. In a sudden stop or collision a loop could pull loose and allow the child seat to come loose. A child could be badly injured. Use only the anchors provided for child seat tethers.

*(Continued)*

### WARNING! (Continued)

- The weight and position of cargo and passengers can change the vehicle center of gravity and vehicle handling. To avoid loss of control resulting in personal injury, follow these guidelines for loading your vehicle:
- Always place cargo evenly on the cargo floor. Put heavier objects as low and as far forward as possible.
- Place as much cargo as possible in front of the rear axle. Too much weight or improperly placed weight over or behind the rear axle can cause the rear of the vehicle to sway.
- Do not pile luggage or cargo higher than the top of the seatback. This could impair visibility or become a dangerous projectile in a sudden stop or collision.


*(Continued)*

### WARNING! (Continued)

- To help protect against personal injury, passengers should not be seated in the rear cargo area. The rear cargo space is intended for load carrying purposes only, not for passengers, who should sit in seats and use seat belts.

## Fold Down Speakers — If Equipped

When the liftgate is open, the speakers can swing down off the trim panel to face rearward, for tailgating and other activities.

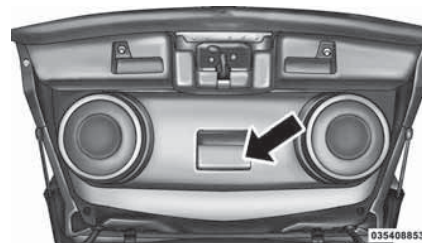

Fold Down Speakers

## REAR WINDOW FEATURES

### Rear Window Wiper/Washer

The rear wiper/washer is controlled by a rotary switch located on the center portion of the control lever. The control lever is located on the right side of the steering column.



Rear Wiper/Washer Control Lever



Rotate the center portion of the lever upward to the first detent position for rear wiper operation.

#### NOTE:

**The rear wiper operates in an intermittent mode only.**



Rotate the center portion of the lever past the first detent to activate the rear washer. The washer pump and the wiper will continue to operate as long as the switch is held (for a maximum of 10 seconds). Upon release, the wiper will continue to cycle two times before returning to the set position.

If the rear wiper is operating when the ignition is turned OFF, the wiper will automatically return to the “park” position if power accessory delay is active. Power accessory delay can be cancelled by opening the door, if this happens the rear wiper will stop at its current position and will not go to “park”.

### Rear Window Defroster



The rear window defroster button is located on the bottom right-side of the blower control knob. Press this button to turn on the rear window defroster and the heated outside mirrors (if equipped). An indicator in the button will illuminate when the rear window defroster is on. The rear window defroster automatically turns off after approxi-

mately 10 minutes. For an additional five minutes of operation, press the button a second time.

#### NOTE:

**To prevent excessive battery drain, use the rear window defroster only when the engine is operating.**

#### CAUTION!

Failure to follow these cautions can cause damage to the heating elements:

- Use care when washing the inside of the rear window. Do not use abrasive window cleaners on the interior surface of the window. Use a soft cloth and a mild washing solution, wiping parallel to the heating elements. Labels can be peeled off after soaking with warm water.
- Do not use scrapers, sharp instruments, or abrasive window cleaners on the interior surface of the window.
- Keep all objects a safe distance from the window.




## UNDERSTANDING YOUR INSTRUMENT PANEL

- INSTRUMENT PANEL FEATURES . . . . .111
- INSTRUMENT CLUSTER — GAS . . . . .112
- INSTRUMENT CLUSTER — DIESEL . . . . .113
- INSTRUMENT CLUSTER DESCRIPTIONS . . . . .114
- MINI-TRIP COMPUTER — IF EQUIPPED . . . . .121
  - Control Buttons . . . . .122
- ELECTRONIC VEHICLE INFORMATION CENTER (EVIC) — IF EQUIPPED . . . . .122
  - Engine Oil Change Indicator System — If Equipped . . . . .124
  - Compass/Temperature/Audio . . . . .124
  - Average Fuel Economy . . . . .124
  - Distance To Empty (DTE) . . . . .124
  - Tire Pressure Monitor (TPM) — If Equipped . . . . .125
  - Elapsed Time . . . . .125
  - EVIC Units Selection (UNITS IN Display) . . . . .125
  - System Status . . . . .125
  - Personal Settings (Customer-Programmable Features) . . . . .125
- SOUND SYSTEMS . . . . .129

• iPod®/USB/MP3 CONTROL — IF EQUIPPED . . . . .	129
• Connecting The iPod® Or External USB Device . . . . .	130
• Using This Feature . . . . .	130
• Controlling The iPod® Or External USB Device Using Radio Buttons . . . . .	130
• Play Mode . . . . .	130
• List Or Browse Mode . . . . .	131
• Bluetooth Streaming Audio (BTSA). . . . .	132
• NAVIGATION SYSTEM — IF EQUIPPED . . . . .	133
• STEERING WHEEL AUDIO CONTROLS . . . . .	133
• Radio Operation . . . . .	133
• CD Player . . . . .	134
• CD/DVD DISC MAINTENANCE . . . . .	134
• RADIO OPERATION AND MOBILE PHONES . . . . .	134
• CLIMATE CONTROLS . . . . .	135
• Manual Heating And Air Conditioning . . . . .	135
• Automatic Temperature Control (ATC) — If Equipped . . . . .	137
• Operating Tips . . . . .	141

## INSTRUMENT PANEL FEATURES

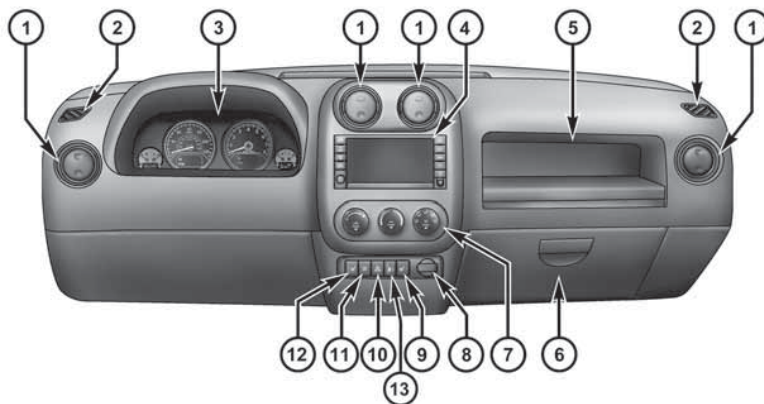

040109006

- 1 — Air Outlet
- 2 — Demisters
- 3 — Instrument Cluster
- 4 — Radio
- 5 — Storage Bin


- 6 — Glove Compartment
- 7 — Climate Controls
- 8 — Power Outlet
- 9 — Heated Seat Switch – If Equipped
- 10 — Hazard Warning Flasher

- 11 — ESC OFF Switch – If Equipped
- 12 — Heated Seat Switch – If Equipped
- 13 — Headlamp Leveling Switch

## 112



## INSTRUMENT CLUSTER — DIESEL

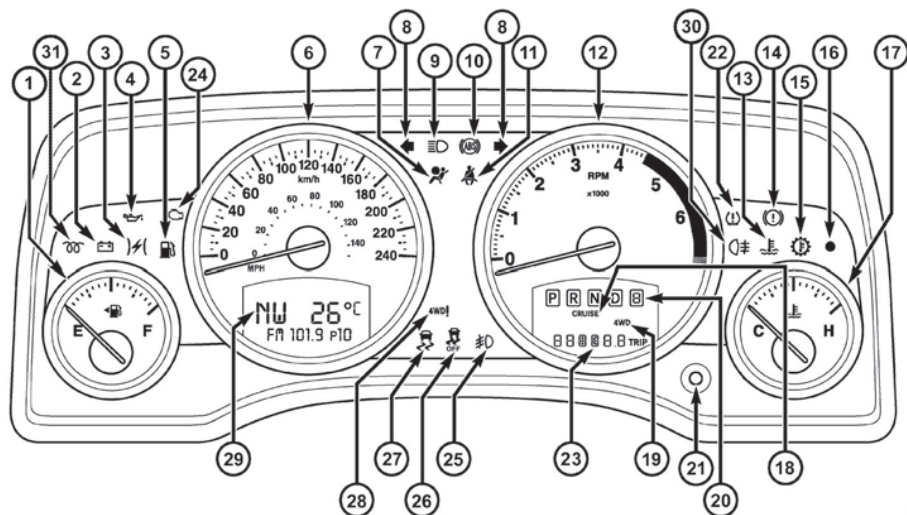

040337495

## INSTRUMENT CLUSTER DESCRIPTIONS

### 1. Fuel Gauge/Fuel Door Location



When the ignition switch is in the ON/RUN position, the pointer will show the level of fuel remaining in the fuel tank. The fuel pump symbol points to the side of the vehicle where the fuel door is located.

### 2. Charging System Light



This light shows the status of the electrical charging system. The light should come on when the ignition switch is first turned to ON/RUN and remain on briefly as a bulb check. If the Charging System light remains on, or comes on while driving, it means that the vehicle is experiencing a problem with the charging system. Obtain SERVICE IMMEDIATELY. See your authorized dealer.

If jump starting is required, refer to "Jump Starting Procedures" in "What To Do In Emergencies".

### 3. Electronic Throttle Control (ETC) Indicator Light



This light informs you of a problem with the Electronic Throttle Control (ETC) system. If a problem is detected, the light will come on while the engine is running. Cycle the ignition key when the vehicle has completely stopped and the shift lever is placed in the NEUTRAL position. The light should turn off. If the light remains lit with the engine running, your vehicle will usually be drivable; however, see an authorized dealer for service as soon as possible. If the light is flashing when the engine is running, immediate service is required and you may experience reduced performance, an elevated/rough idle or engine stall and your vehicle may require towing. The light will come on when the ignition is first turned to ON/RUN and remain on briefly as a bulb check. If the light does not come on during starting, have the system checked by an authorized dealer.

### 4. Oil Pressure Warning Light



This light indicates low engine oil pressure. The light should turn on momentarily when the engine is started. If the light turns on while driving, stop the vehicle and shut off the engine as soon as possible. A chime will sound when this light turns on.

Do not operate the vehicle until the cause is corrected. This light does not indicate how much oil is in the engine. The engine oil level must be checked under the hood.

### 5. Low Fuel Light



When the fuel level reaches approximately 2.0 gal (7.8 L) this light will turn on, and remain on until fuel is added.

### 6. Speedometer

Indicates vehicle speed.

### 7. Air Bag Warning Light



This light will turn on for four to eight seconds as a bulb check when the ignition switch is first turned to ON/RUN. If the light is

either not on during starting, stays on, or turns on while driving, have the system inspected at an authorized dealer as soon as possible. Refer to “Occupant Restraints” in “Things To Know Before Starting Your Vehicle” for further information.

### **8. Turn Signal Indicators**



The arrows will flash in unison with the exterior turn signal, when using the turn signal lever.

If the vehicle electronics sense that the vehicle is driven more than 1 mile (1.6 km) with either turn signal on, a continuous chime will sound to alert you to turn the signals off. If either indicator flashes at a rapid rate, check for a defective outside light bulb.

### **9. High Beam Indicator**



This indicator shows that the high beam headlights are on. Push the turn signal lever away from the steering wheel to switch the headlights from high or low beam.

### **10. Anti-Lock Brake Light (ABS) — If Equipped**



This light monitors the Anti-Lock Brake System (ABS). The light will turn on when the ignition switch is turned to the ON/RUN position and may stay on for as long as four seconds.

If the ABS light remains on or turns on while driving, it indicates that the Anti-Lock portion of the brake system is not functioning and that service is required. However, the conventional brake system will continue to operate normally if the BRAKE warning light is not on.

If the ABS light is on, the brake system should be serviced as soon as possible to restore the benefits of Anti-Lock brakes. If the ABS light does not turn on when the ignition switch is turned to the ON/RUN position, have the light inspected by an authorized dealer.

### **11. Seat Belt Reminder Light**



When the ignition switch is first turned to ON/RUN, this light will turn on for four to eight seconds as a bulb check.

During the bulb check, if the driver's seat belt is unbuckled, a chime will sound. After the bulb check or when driving, if the driver's seat belt remains unbuckled, the Seat Belt Reminder Light will illuminate and the chime will sound. Refer to “Occupant Restraints” in “Things To Know Before Starting Your Vehicle” for further information.

### **12. Tachometer**

This scale shows the permissible engine revolutions-per-minute (RPM x 1000) for each gear range. Before reaching the red area, ease up on the accelerator to prevent engine damage.

### **13. Engine Temperature Warning Light**



This light warns of an overheated engine condition. As engine coolant temperatures rise and the gauge approaches **H**, this indicator will illuminate and a single chime will sound after reaching a set threshold. Further overheating will cause the temperature gauge to pass **H**, a continuous chime will occur until the engine is allowed to cool.

If the light turns on while driving, safely pull over and stop the vehicle. If the A/C system is on, turn it off. Also, shift the transmission into NEUTRAL and idle the vehicle. If the temperature reading does not return to normal, turn the engine off immediately and call for service. Refer to “If Your Engine Overheats” in “What To Do In Emergencies” for further information.

#### 14. Brake Warning Light



This light monitors various brake functions, including brake fluid level and parking brake application. If the brake light turns on it may indicate that the parking brake is applied, that the brake fluid level is low, or that there is a problem with the anti-lock brake system reservoir.

If the light remains on when the parking brake has been disengaged, and the fluid level is at the full mark on the master cylinder reservoir, it indicates a possible brake hydraulic system malfunction or that a problem with the Brake Booster has been detected by the Anti-Lock Brake System (ABS) / Electronic Stability Control (ESC) system. In this case, the light will remain on until the condition has been cor-

rected. If the problem is related to the brake booster, the ABS pump will run when applying the brake and a brake pedal pulsation may be felt during each stop.

The dual brake system provides a reserve braking capacity in the event of a failure to a portion of the hydraulic system. A leak in either half of the dual brake system is indicated by the Brake Warning Light, which will turn on when the brake fluid level in the master cylinder has dropped below a specified level.

The light will remain on until the cause is corrected.

##### NOTE:

**The light may flash momentarily during sharp cornering maneuvers, which change fluid level conditions. The vehicle should have service performed, and the brake fluid level checked.**

If brake failure is indicated, immediate repair is necessary.

##### WARNING!

Driving a vehicle with the red brake light on is dangerous. Part of the brake system may have failed. It will take longer to stop the vehicle. You could have a collision. Have the vehicle checked immediately.

Vehicles equipped with the Anti-Lock Brake System (ABS), are also equipped with Electronic Brake Force Distribution (EBD). In the event of an EBD failure, the Brake Warning Light will turn on along with the ABS Light. Immediate repair to the ABS system is required.

Operation of the Brake Warning Light can be checked by turning the ignition switch from the OFF position to the ON/RUN position. The light should illuminate for approximately two seconds. The light should then turn off unless the parking brake is applied or a brake fault is detected. If the light does not illuminate, have the light inspected by an authorized dealer.

The light also will turn on when the parking brake is applied with the ignition switch in the ON/RUN position.



**NOTE:**

This light shows only that the parking brake is applied. It does not show the degree of brake application.

**15. Transmission Temperature Warning Light**

This light indicates that the transmission fluid temperature is running hot. This may occur with severe usage, such as trailer towing. If this light turns on, safely pull over and stop the vehicle. Then, shift the transmission into NEUTRAL and run the engine at idle or faster until the light turns off.

**CAUTION!**

Continuous driving with the Transmission Temperature Warning Light illuminated will eventually cause severe transmission damage or transmission failure.

**WARNING!**

If you continue operating the vehicle when the Transmission Temperature Warning Light is illuminated you could cause the fluid to boil over, come in contact with hot engine or exhaust components and cause a fire.

**16. Vehicle Security Light — If Equipped**

This light will flash at a fast rate for approximately 16 seconds, when the vehicle security alarm is arming, and then will flash slowly until the vehicle is disarmed.

**17. Temperature Gauge**

If the pointer rises to the **H** (red) mark, the instrument cluster will sound a chime. Pull over and stop the vehicle. Idle the vehicle with the air conditioner turned off until the pointer drops back into the normal range. If the pointer remains on the **H** (red) mark, turn the engine off immediately and call for service.

There are steps that you can take to slow down an impending overheating condition. If your air

conditioning is on, turn it off. The air conditioning system adds heat to the engine cooling system and turning off the A/C removes this heat. You can also turn the Temperature control to maximum heat, the Mode control to Floor and the Fan control to High. This allows the heater core to act as a supplement to the radiator and aids in removing heat from the engine cooling system.

**18. Cruise Indicator — If Equipped****CRUISE**

This indicator shows that the Electronic Speed Control System is ON.

**19. 4WD Indicator — If Equipped****4WD**

This light indicates the vehicle is in four-wheel drive (4WD) mode. Four-wheel drive allows all four wheels to receive torque from the engine simultaneously.

**20. Shift Lever Indicator**

The Shift Lever Indicator is self-contained within the instrument cluster. It displays the gear position of the automatic transmission.

## **21. Odometer/Trip Odometer Reset Button**

Press this button to change the display from odometer to either of the two trip odometer settings. Trip A or Trip B will appear when in the trip odometer mode. Push in and hold the button for two seconds to reset the trip odometer to 0 miles (0 km). The odometer must be in Trip mode to reset.

## **22. Tire Pressure Monitor Telltale Light — If Equipped**



Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pres-

sure telltale when one or more of your tires is significantly under-inflated. Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as

the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

### **CAUTION!**

The TPMS has been optimized for the original equipment tires and wheels. TPMS pressures and warning have been established for the tire size equipped on your vehicle. Undesirable system operation or sensor damage may result when using replacement equipment that is not of the same size, type, and/or style. Aftermarket wheels can cause sensor damage. Do not use tire sealant from

*(Continued)*

**CAUTION! (Continued)**

a can or balance beads if your vehicle is equipped with a TPMS, as damage to the sensors may result.

**23. Odometer Display/Trip Odometer Display**

This display indicates the total distance the vehicle has been driven.

**Vehicle Odometer Messages**

When the appropriate conditions exist, the following odometer messages will display:

**door** . . . . .Door Ajar  
**gATE** . . . . .Gate Ajar  
**gASCAP** . . . . .Fuel Cap Fault  
**CHAnGE OIL** . . . . .Oil Change Required  
**HOTOIL** . . . . .Engine Oil Temp Too Hot

**NOTE:**

If the vehicle is equipped with the optional Electronic Vehicle Information Center (EVIC) in the instrument cluster, all warnings including “Door Ajar”, and “Gate Ajar” will only be displayed in the EVIC display. For additional information, refer to “Electronic Vehicle Information Center — If Equipped”.

**gASCAP**

If the vehicle diagnostic system determines that the fuel filler cap is loose, improperly installed, or damaged, a “gASCAP” message will display in the odometer display area. Tighten the fuel filler cap properly and press the TRIP ODOMETER button to turn off the message. If the problem continues, the message will appear the next time the vehicle is started.

A loose, improperly installed, or damaged fuel filler cap may also turn on the Malfunction Indicator Light (MIL).

**HOTOIL**

When this message is displayed there is a engine over-temperature condition. When this

condition occurs, the “HOTOIL” message will be displayed in the odometer along with a chime.

Refer to “Engine Oil Overheating” under in “What To Do In Emergencies”.

**CHAnGE OIL Message**

Your vehicle is equipped with an engine oil change indicator system. The “CHAnGE OIL” message will flash in the instrument cluster odometer for approximately 12 seconds after a single chime has sounded to indicate the next scheduled oil change interval. The engine oil change indicator system is duty-cycle based, which means the engine oil change interval may fluctuate dependent upon your personal driving style. Unless reset, this message will continue to display each time you turn the Ignition switch to the ON/RUN position. To turn off the message temporarily, press and release the Trip Odometer button on the instrument cluster. To reset the oil change indicator system (after performing the scheduled maintenance), refer to the following procedure:

Turn the ignition switch to the ON/RUN position (do not start the engine).

Fully depress the accelerator pedal, slowly, three times within 10 seconds.

Turn the ignition switch to the OFF/LOCK position.

**NOTE:**

**If the indicator message illuminates when you start the engine, the oil change indicator system did not reset. If necessary, repeat this procedure.**

**24. Malfunction Indicator Light (MIL)**



The Malfunction Indicator Light (MIL) is part of an Onboard Diagnostic system called OBD II that monitors emissions, engine, and automatic transmission control systems. The light will illuminate when the key is in the ON/RUN position before engine start. If the bulb does not come on when turning the key from OFF to ON/RUN, have the condition checked promptly.

Certain conditions, such as a loose or missing gas cap, poor fuel quality, etc., may illuminate the light after engine start. The vehicle should be serviced if the light stays on through several of your typical driving cycles. In most situations,

the vehicle will drive normally and will not require towing.

**CAUTION!**

Prolonged driving with the Malfunction Indicator Light (MIL) on could cause damage to the engine control system. It also could affect fuel economy and drivability. If the MIL is flashing, severe catalytic converter damage and power loss will soon occur. Immediate service is required.

**WARNING!**

A malfunctioning catalytic converter, as referenced above, can reach higher temperatures than in normal operating conditions. This can cause a fire if you drive slowly or park over flammable substances such as dry plants, wood, cardboard, etc. This could result in death or serious injury to the driver, occupants or others.

**25. Front Fog Light Indicator — If Equipped**



This indicator will illuminate when the front fog lights are on.

**26. Electronic Stability Control (ESC) OFF Indicator Light — If Equipped**



This light indicates the Electronic Stability Control system (ESC) has been turned off by the driver.

**27. Electronic Stability Control (ESC) Malfunction Indicator Light — If Equipped**



The “ESC Malfunction Indicator Light” in the instrument cluster will come on when the ignition switch is turned to the ON/RUN position. It should go out with the engine running. If the “ESC Malfunction Indicator Light” comes on continuously with the engine running, a malfunction has been detected in the ESC system. If this light remains on after several ignition cycles, and the vehicle has been driven

several miles (kilometers) at speeds greater than 30 mph (48 km/h), see your authorized dealer as soon as possible to have the problem diagnosed and corrected.

**NOTE:**

The “ESC Off Indicator Light” and the “ESC Malfunction Indicator Light” come on momentarily each time the ignition switch is turned to ON/RUN.

Each time the ignition is turned to ON/RUN, the ESC system will be ON, even if it was turned off previously.

The ESC system will make buzzing or clicking sounds when it is active. This is normal; the sounds will stop when ESC becomes inactive following the maneuver that caused the ESC activation.

**28. 4WD! Malfunction Light — If Equipped**



This light monitors the 4-wheel drive (4WD) system. The light will come on, for a bulb check, when the ignition key is turned to the ON/RUN position and may stay on

for as long as three seconds.

**When lit solid:** There is an 4WD system fault. 4WD performance will be at a reduced level . Service the 4WD system soon.

**When blinking:** The 4WD system is temporarily disabled due to overload condition.

**29. Electronic Vehicle Information Center (EVIC) Display — If Equipped**

When the appropriate conditions exist, this display shows the EVIC messages.

For further information, refer to “Electronic Vehicle Information Center (EVIC)”.

**30. Rear Fog Light Indicator — If Equipped**



This indicator will illuminate when the rear fog lights are on. For further information, refer to “Lights” in “Understanding The Features Of Your

Vehicle”.

**31. Wait To Start Light — Diesel Only**



The glow plug light will illuminate when the ignition key is first turned to the ON position. Wait until the glow plug light turns off then start the vehicle.

**MINI-TRIP COMPUTER — IF EQUIPPED**

The Mini-Trip Computer is located in the instrument cluster and features a driver-interactive trip information and temperature display.

**NOTE:**

The system will display the last known outside temperature when starting the vehicle and may need to be driven several minutes before the updated temperature is displayed. Engine temperature can also affect the displayed temperature; therefore, temperature readings are not updated when the vehicle is not moving.

## Control Buttons



040541179

Mini-Trip Control Buttons

### STEP Button

Press the STEP button located on the steering wheel to scroll through sub menus (i.e., Temperature, Trip Functions: Odometer, Trip A, Trip B).

### RESET Button

To reset the display shown, turn the ignition switch to the ON position, then press and hold the RESET button located on the steering wheel.

The following displays can be reset or changed:

- Trip A
- Trip B

### Trip Odometer (ODO)

This display shows the distance traveled since the last reset. Press and release the STEP button on the instrument cluster to switch from odometer, to Trip A or Trip B.


### Trip A

Shows the total distance traveled for Trip A since the last reset.

### Trip B

Shows the total distance traveled for Trip B since the last reset.

## ELECTRONIC VEHICLE INFORMATION CENTER (EVIC) — IF EQUIPPED

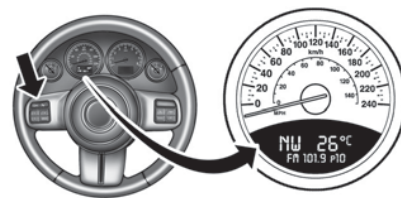

041035475

### Electronic Vehicle Information Center (EVIC)

The EVIC features a driver-interactive display. It is located in the instrument cluster. The EVIC consists of the following:

- System Status
- Vehicle Information Warning Message Displays

- Personal Settings (Customer-Programmable Features)
- Compass Heading
- Outside Temperature Display
- Trip Computer Functions
- Audio Mode Display
- Tire Pressure Monitor (TPM) — If Equipped

When the appropriate conditions exist, the EVIC displays the following messages:

- Turn Signal On (with a continuous warning chime after 1 mile (1.6 km) of distance travelled)
- Left Front Turn Signal Lamp Out (with a single chime)
- Left Rear Turn Signal Lamp Out (with a single chime)
- Right Front Turn Signal Lamp Out (with a single chime)
- Right Rear Turn Signal Lamp Out (with a single chime)
- RKE Battery Low (with a single chime)

- Personal Settings Not Available – vehicle not in park (automatic transmission) or vehicle is in motion (manual transmission).
- Left/Right Front Door Ajar (one or more doors open, with a single chime if speed is above 5 MPH/ 8 km/h)
- Left/Right Rear Door Ajar (one or more doors open, with a single chime if speed is above 5 MPH/ 8 km/h)
- Door (S) Ajar (with a single chime if vehicle is in motion)
- Gate Ajar (with a single chime)
- Headlamps On
- Key In Ignition
- Check TPM System
- Low Tire
- Oil Change Required — If Equipped

The system allows the driver to select information by pressing the following buttons mounted on the steering wheel:



041035449

#### **EVIC Steering Wheel Buttons**

##### ***MENU Button***

### **MENU**

Press and release the MENU button to scroll through the main menus (Fuel Economy, Warnings, Timer, Units, System, Personal Settings) or to exit sub-menus.

##### ***COMPASS Button***



Press and release the COMPASS button to display one of eight compass readings and the outside temperature or to exit sub-menus.

### **SELECT Button**



Press and release the SELECT button for access to main menus, sub-menus or to select a personal setting in the setup menu.

### **DOWN Button**



Press and release the DOWN button to scroll downward through the sub-menus.

## **Engine Oil Change Indicator System — If Equipped**

### **Oil Change Required**

Your vehicle is equipped with an engine oil change indicator system. The “Oil Change Required” message will flash in the EVIC display for approximately five seconds after a single chime has sounded, to indicate the next scheduled oil change interval. The engine oil change indicator system is duty-cycle based, which

means the engine oil change interval may fluctuate dependent upon your personal driving style.

Unless reset, this message will continue to display each time you turn the ignition switch to the ON/RUN position. To turn off the message temporarily, press and release the Trip Odometer button on the instrument cluster. To reset the oil change indicator system (after performing the scheduled maintenance) refer to the following procedure.

1. Turn the ignition switch to the ON position. **Do not start the engine.**
2. Fully depress the accelerator pedal, slowly, three times within 10 seconds.
3. Turn the ignition switch to the OFF/LOCK position.

### **NOTE:**

**If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary repeat this procedure.**

### **Compass/Temperature/Audio**

Press and release the COMPASS button to display one of eight compass headings to indicate the direction the vehicle is facing, the outside temperature, and the current radio station.

For additional information regarding the compass, refer to Personal Settings (Customer-Programmable Features).

### **Average Fuel Economy**

Shows the average fuel economy since the last reset. When the fuel economy is reset, the display will read “RESET” or show dashes for two seconds. Then, the history information will be erased, and the averaging will continue from the last fuel reading before the reset.

### **Distance To Empty (DTE)**

Shows the estimated distance that can be travelled with the fuel remaining in the tank. This estimated distance is determined by a weighted average of the instantaneous and average fuel economy, according to the current fuel tank level. This is not resettable.



**NOTE:**

**Significant changes in driving style or vehicle loading will greatly affect the actual drivable distance of the vehicle, regardless of the DTE displayed value.**

When the DTE value is less than 30 miles (48 km) estimated driving distance, the DTE display will change to a text display of "LOW FUEL". This display will continue until the vehicle runs out of fuel. Adding a significant amount of fuel to the vehicle will turn off the "LOW FUEL" text and a new DTE value will be displayed, based on the current values in the DTE calculation and the current fuel tank level.

**Tire Pressure Monitor (TPM) — If Equipped**

Refer to "Starting And Operating", "Tire Pressure Monitoring System (TPMS) for system operation.

**Elapsed Time**

Shows the total elapsed time of travel since the last reset. Elapsed time will increment when the ignition switch is in the RUN/START position.

Elapsed time is displayed as follows:

hours:minutes:seconds

Elapsed time can be reset by pressing and holding the SELECT button (as prompted in the EVIC display). Upon reset all digits will change to zeros and time will start incrementing again if the ignition switch is in RUN or START.

**EVIC Units Selection (UNITS IN Display)**

Displays the units used for the Outside Temperature, Average Fuel Economy, Distance to Empty and Tire Pressure features. Press and Release the SELECT button to toggle units between "U.S." and "METRIC".

**System Status**

Displays SYSTEM OK if there are no active Warning Messages stored. Pressing and releasing the DOWN button when SYSTEM OK is displayed will do nothing. Displays SYSTEM WARNINGS PRESENT if there are active Warning Messages stored. Pressing and releasing the DOWN button when SYSTEM WARNINGS PRESENT is displayed will display

each stored warning for each button press. Press and Release the MENU button to return to the Main Menu.

**Personal Settings (Customer-Programmable Features)**

This allows the driver to set and recall features when the transmission is in PARK (automatic transmission) or the vehicle is stopped (manual transmission).

Press and release the UP or DOWN buttons until "Personal Settings" is displayed in the EVIC then press the SELECT button.

Use the SELECT button to display one of the following choices:

**Language**

When in this display you may select different languages for all display nomenclature, including the trip functions. Pressing the EVIC button while in this display selects English, Español, Deutsch, Italiano, Français or NL depending on availability. As you continue the displayed information will be shown in the selected language.

### **Auto Lock Doors**

When ON is selected, all doors lock automatically when the speed of the vehicle reaches 15 mph (24 km/h). Press and hold the SELECT button when in this display until "ON" or "OFF" appears to make your selection.

### **Auto Unlock On Exit**

When ON is selected all the vehicle's doors will unlock when the driver's door is opened if the vehicle is stopped (manual transmission) or the vehicle is stopped and the transmission is in PARK or NEUTRAL position (automatic transmission). Press and hold the SELECT button when in this display until "ON" or "OFF" appears to make your selection.

### **RKE Unlock**

When Driver's Door 1st is selected only the driver's door will unlock on the first press of the Remote Keyless Entry (RKE) transmitter UNLOCK button and require a second press to unlock the remaining locked doors. When Remote Unlock All Doors is selected, all of the doors will unlock at the first press of the RKE

transmitter UNLOCK button. Press and hold the SELECT button when in this display until "Driver's Door 1st" or "All Doors" appears to make your selection.

### **Flash Lights with Lock**

When ON is selected, the front and rear turn signals will flash when the doors are locked or unlocked using the RKE transmitter. Press and hold the SELECT button when in this display until "ON" or "OFF" appears to make your selection.

### **Headlamp Off Delay**

When this feature is selected the driver can choose to have the headlamps remain on for 0, 30, 60, or 90 seconds when exiting the vehicle. Press and hold the SELECT button when in this display until 0, 30, 60, or 90 appears to make your selection.

### **Key Off Power Delay**

When this feature is selected, the power window switches, radio, Uconnect® phone, power sunroof, and power outlets will remain active for up to 10 minutes after the ignition switch has

been turned off. Opening either front vehicle door will cancel this feature. Press and hold the SELECT button when in this display until "Off", "45 sec.", "5 min.", or "10 min." appears to make your selection.

### **Turn Headlamps on with Remote Key Unlock — If Equipped**

When this feature is selected the headlamps will activate and remain on for up to 90 seconds when the doors are unlocked using the RKE transmitter. Press and hold the SELECT button when in this display until "OFF", "30 sec.", "60 sec.", or "90 sec." appears to make your selection.

### **Illuminated Approach**

When this feature is selected the headlights will activate and remain on for up to 90 seconds when the doors are unlocked using the RKE transmitter. Press and hold the SELECT button when in this display until "OFF", "30 sec.", "60 sec.", or "90 sec." appears to make your selection.

### **Hill Start Assist (HSA) — If Equipped**

When on is selected, the HSA system is active. Refer to “Electronic Brake Control System” in “Starting And Operating” for system function and operating information. To make your selection, press and release the SELECT button until “On” or “Off” appears.

### **Display Units In**

The EVIC, odometer, and Uconnect® gps system units can be changed between English and Metric.


Press and hold the SELECT button when in this display until “ENGLISH” or “METRIC” appears to make your selection.

### **Compass Variance**

Compass Variance is the difference between Magnetic North and Geographic North. To compensate for the differences, the variance should be set for the zone where the vehicle is driven, per the zone map. Once properly set, the compass will automatically compensate for the differences and provide the most accurate compass heading.

### **NOTE:**

**Magnetic and battery powered devices, (such as cell phones, iPod's, radar detectors, PDA's and laptops) should be kept away from the top of the instrument panel. This is where the compass module is located and such devices may interfere and cause false compass readings.**

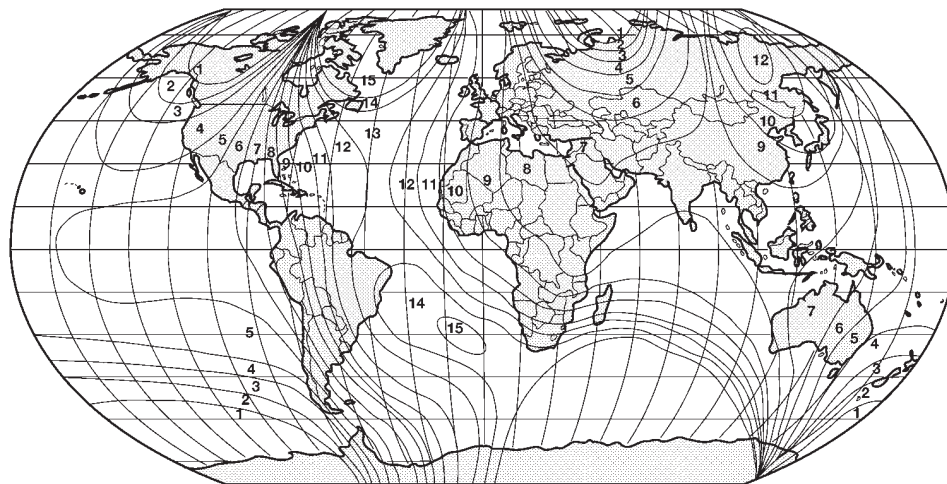

80bbc346

**Compass Variance Map**

1. Turn the ignition switch ON.
2. Press and hold the COMPASS button for approximately two seconds.
3. Press the DOWN button until “Compass Variance” message and the last variance zone number displays in the EVIC.
4. Press and release the SELECT button until the proper variance zone is selected according to the map.
5. Press and release the COMPASS button to exit.

**NOTE:**

**The factory default Zone is 8. During programming, the Zone value will wrap around from Zone 15 to Zone 1.**

**Automatic Compass Calibration**

When the vehicle is new, the compass may appear erratic and the EVIC will display “CAL” until the compass is calibrated. You may also calibrate the compass by completing one or more 360 degree turns (in an area free from large metal or metallic objects) until the “CAL” message displayed in the EVIC turns off. The compass will now function normally.

**NOTE:**

**A good calibration requires a level surface and an environment free from large metallic objects such as buildings, bridges, underground cables, railroad tracks, etc.**

**Manual Compass Calibration**

If the compass appears erratic and the “CAL” indicator does not appear in the EVIC display, you must put the compass into the Calibration Mode manually as follows:

1. Start the engine. Leave the shift lever in PARK in order to enter the EVIC Programming Menus.
2. Press the MENU button until the Personal Settings (Customer-Programmable Features) menu displays in the EVIC.
3. Press the DOWN button until “Calibrate Compass” displays in the EVIC.
4. Press and release the SELECT button to start the calibration. The “CAL” indicator will display in the EVIC.

5. Complete one or more 360–degree turns (in an area free from large metal or metallic objects) until the “CAL” indicator turns off. The compass will now function normally.

## SOUND SYSTEMS

Refer to your Sound Systems Booklet.

### iPod®/USB/MP3 CONTROL — IF EQUIPPED

This feature allows an iPod® or external USB device to be plugged into the USB port, located in the center console or glove compartment.

iPod® control supports Mini, 4G, Photo, Nano, 5G iPod® and iPhone® devices. Some iPod® software versions may not fully support the iPod® control features. Please visit Apple’s website for software updates.

**NOTE:**

- If the radio has a USB port, refer to the appropriate Uconnect® Multimedia radio User’s Manual for iPod® or external USB device support capability.

- **Connecting an iPod® or consumer electronic audio device to the AUX port located in the radio faceplate, plays media, but does not use the iPod® /MP3 control feature to control the connected device.**

### Connecting The iPod® Or External USB Device

Use the connection cable to connect an iPod® or external USB device to the vehicle's USB/AUX connector port which is located in the center console or glove compartment.



044136844

**USB/AUX Connector Port**

Once the audio device is connected and synchronized to the vehicle's iPod®/USB/MP3 con-

trol system (iPod® or external USB device may take a few minutes to connect), the audio device starts charging and is ready for use by pressing radio switches, as described below.

#### NOTE:

**If the audio device battery is completely discharged, it may not communicate with the iPod®/USB/MP3 control system until a minimum charge is attained. Leaving the audio device connected to the iPod®/USB/MP3 control system may charge it to the required level.**

### Using This Feature

By using an iPod® cable, or an external USB device to connect to the USB port:

- The audio device can be played on the vehicle's sound system, providing metadata (artist, track title, album, etc.) information on the radio display.
- The audio device can be controlled using the radio buttons to Play, Browse, and List the iPod® contents.

- The audio device battery charges when plugged into the USB/AUX connector (if supported by the specific audio device).

### Controlling The iPod® Or External USB Device Using Radio Buttons

To get into the iPod®/USB/MP3 control mode and access a connected audio device, either press the "AUX" button on the radio faceplate or press the VR button and say "USB" or "Switch to USB". Once in the iPod®/USB/MP3 control mode, audio tracks (if available from audio device) start playing over the vehicle's audio system.

### Play Mode

When switched to iPod®/USB/MP3 control mode, the iPod® or external USB device automatically starts Play mode. In Play mode, the following buttons on the radio faceplate may be used to control the iPod® or external USB device and display data:

- Use the TUNE control knob to select the next or previous track.
  - Turning it clockwise (forward) by one click,

while playing a track, skips to the next track or press the VR button and say "Next Track".

- Turning it counterclockwise (backward) by one click, will jump to the previous track in the list or press the VR button and say "Previous Track"
- Jump backward in the current track by pressing and holding the << **RW** button. Holding the << **RW** button long enough will jump to the beginning of the current track.
- Jump forward in the current track by pressing and holding the **FF**>> button.
- A single press backward << **RW** or forward **FF**>> will jump backward or forward respectively, for five seconds.
- Use the << **SEEK** and **SEEK**>> buttons to jump to the previous or next track. Pressing the **SEEK**>> button during play mode will jump to the next track in the list, or press the VR button and say "Next or Previous Track".
- While a track is playing, press the **INFO** button to see the associated metadata (artist, track title, album, etc.) for that track. Pressing

the **INFO** button again jumps to the next screen of data for that track. Once all screens have been viewed, the last **INFO** button press will go back to the play mode screen on the radio.

- Pressing the **REPEAT** button will change the audio device mode to repeat the current playing track or press the VR button and say "Repeat ON" or "Repeat Off".
- Press the **SCAN** button to use iPod®/USB/MP3 device scan mode, which will play the first 10 seconds of each track in the current list and then forward to the next song. To stop SCAN mode and start playing the desired track, when it is playing the track, press the **SCAN** button again. During Scan mode, pressing the << **SEEK** and **SEEK**>> buttons will select the previous and next tracks.
- **RND** button (available on sales code RES radio only): Pressing this button toggles between Shuffle ON and Shuffle OFF modes for the iPod® or external USB device, or press the VR button and say "Shuffle ON" or

"Shuffle Off". If the **RND** icon is showing on the radio display, then the shuffle mode is ON.

### List Or Browse Mode

During Play mode, pressing any of the buttons described below, will bring up List mode. List mode enables scrolling through the list of menus and tracks on the audio device.

- **TUNE** control knob: The **TUNE** control knob functions in a similar manner as the scroll wheel on the audio device or external USB device.
  - Turning it clockwise (forward) and counterclockwise (backward) scrolls through the lists, displaying the track detail on the radio display. Once the track to be played is highlighted on the radio display, press the **TUNE** control knob to select and start playing the track. Turning the **TUNE** control knob fast will scroll through the list faster. During fast scroll, a slight delay in updating the information on the radio display may be noticeable.
- During all List modes, the iPod® displays all lists in "wrap-around" mode. So if the

track is at the bottom of the list, just turn the wheel backward (counterclockwise) to get to the track faster.

- In List mode, the radio **PRESET** buttons are used as shortcuts to the following lists on the iPod® or external USB device.
  - Preset 1 – Playlists
  - Preset 2 – Artists
  - Preset 3 – Albums
  - Preset 4 – Genres
  - Preset 5 – Audiobooks
  - Preset 6 – Podcasts
- Pressing a PRESET button will display the current list on the top line and the first item in that list on the second line.
- To exit List mode without selecting a track, press the same **PRESET** button again to go back to **Play mode**.
- **LIST** button: The **LIST** button will display the top level menu of the iPod® or external USB device. Turn the **TUNE** control knob to list the top-menu item to be selected and press the **TUNE** control knob. This will display the next sub-menu list item on the audio device, then

follow the same steps to go to the desired track in that list. Not all iPod® or external USB device sub-menu levels are available on this system.

- **MUSIC TYPE** button: The **MUSIC TYPE** button is another shortcut button to the genre listing on your audio device.

#### CAUTION!

- Leaving the iPod® or external USB device (or any supported device) anywhere in the vehicle in extreme heat or cold can alter the operation or damage the device. Follow the device manufacturer's guidelines.
- Placing items on the iPod® or external USB device, or connections to the iPod® or external USB device in the vehicle, can cause damage to the device and/or to the connectors.

#### WARNING!

Do not plug in or remove the iPod® or external USB device while driving. Failure to follow this warning could result in an accident.

### Bluetooth Streaming Audio (BTSA)

Music can be streamed from your cellular phone to the Uconnect® phone system.

#### Controlling BTSA Using Radio Buttons

To get into the BTSA mode, press either "AUX" button on the radio or press the VR button and say "Bluetooth Streaming Audio".

#### Play Mode

When switched to BTSA mode, some audio devices can start playing music over the vehicle's audio system, but some devices require the music to be initiated on the device first, then it will get streamed to the Uconnect® phone system. Seven devices can be paired to the Uconnect® phone system, but just one can be selected and played.



### Selecting A Different Audio Device

1. Press the PHONE button to begin.
2. After the "Ready" prompt and following the beep, say "Setup", then say "Select Audio Devices".
3. Say the name of the audio device or ask the Uconnect® phone system to list the audio devices.

### Next Track

Use the SEEK UP button, or press the VR button on the radio and say "Next Track", to jump to the next music track on your cellular phone.

### Previous Track

Use the SEEK DOWN button, or press the VR button on the radio and say "Previous Track", to jump to the previous music track on your cellular phone.

### Browse

Browsing is not available on a Bluetooth Streaming Audio (BTSA) device. Only the current song that is playing will display info.

## NAVIGATION SYSTEM — IF EQUIPPED

Refer to your Navigation User's Manual.

## STEERING WHEEL AUDIO CONTROLS

The remote sound system controls are located on the rear surface of the steering wheel. Reach behind the wheel to access the switches.



045033001

### Remote Sound System Controls (Back View Of Steering Wheel)

The right-hand control is a rocker-type switch with a pushbutton in the center and controls the

volume and mode of the sound system. Pressing the top of the rocker switch will increase the volume, and pressing the bottom of the rocker switch will decrease the volume.

Pressing the center button will make the radio switch between the various modes available.

The left-hand control is a rocker-type switch with a pushbutton in the center. The function of the left-hand control is different depending on which mode you are in.

The following describes the left-hand control operation in each mode.

### Radio Operation

Pressing the top of the switch will "Seek" up for the next listenable station and pressing the bottom of the switch will "Seek" down for the next listenable station.

The button located in the center of the left-hand control will tune to the next preset station that you have programmed in the radio preset pushbutton.

## CD Player

Pressing the top of the switch once will go to the next track on the CD. Pressing the bottom of the switch once will go to the beginning of the current track, or to the beginning of the previous track if it is within one second after the current track begins to play.

If you press the switch up or down twice, it plays the second track; three times, it will play the third, etc.

The center button on the left side rocker switch has no function for a single-disc CD player. However, when a multiple-disc CD player is equipped on the vehicle, the center button will select the next available CD in the player.

## CD/DVD DISC MAINTENANCE

To keep a CD/DVD in good condition, take the following precautions:

1. Handle the disc by its edge; avoid touching the surface.
2. If the disc is stained, clean the surface with a soft cloth, wiping from center to edge.

3. Do not apply paper or tape to the disc; avoid scratching the disc.

4. Do not use solvents such as benzene, thinner, cleaners, or anti-static sprays.

5. Store the disc in its case after playing.

6. Do not expose the disc to direct sunlight.

7. Do not store the disc where temperatures may become too high.

### NOTE:

**If you experience difficulty in playing a particular disc, it may be damaged (i.e., scratched, reflective coating removed, a hair, moisture or dew on the disc) oversized, or have protection encoding. Try a known good disc before considering disc player service.**

## RADIO OPERATION AND MOBILE PHONES

Under certain conditions, the mobile phone being on in your vehicle can cause erratic or noisy performance from your radio. This condition may be lessened or eliminated by relocating the mobile phone antenna. This condition is not harmful to the radio. If your radio performance does not satisfactorily "clear" by the repositioning of the antenna, it is recommended that the radio volume be turned down or off during mobile phone operation when not using Uconnect® (if equipped).

## CLIMATE CONTROLS

The air conditioning and heating system is designed to make you comfortable in all types of weather.

### Manual Heating And Air Conditioning



045607535

#### Manual Temperature Control

The Manual Temperature Controls consist of a series of outer rotary dials and inner push knobs.

### Blower Control



045607539

Rotate this control to regulate the amount of air forced through the ventilation system in any mode. The blower speed increases as you move the control to the right from the "O" (OFF) position. There are seven blower speeds.

#### NOTE:

For vehicles equipped with Remote Start, the climate controls will not function during Remote Start operation if the blower control is left in the "O" (Off) position.

### Temperature Control



045607540

Rotate this control to regulate the temperature of the air inside the passenger compartment. Rotating the dial left into the blue area of the scale indicates cooler temperatures, while rotating right into the red area indicates warmer temperatures.

the red area indicates warmer temperatures.

#### NOTE:

If your air conditioning performance seems lower than expected, check the front of the A/C condenser located in front of the radiator for an accumulation of dirt or insects. Clean with a gentle water spray from behind the radiator and through the condenser. Fabric front fascia protectors may reduce airflow to the condenser, reducing air conditioning performance.

## Mode Control (Air Direction)



symbol, the more air distribution you receive from that mode.

### Panel



Air is directed through the outlets in the instrument panel. These outlets can be adjusted to direct airflow.

### NOTE:

The center instrument panel outlets can be aimed so that they are directed toward the rear seat passengers for maximum airflow to the rear.

### Bi-Level



Air is directed through the panel and floor outlets.

### NOTE:

For all settings, except full cold or full hot, there is a difference in temperature between the upper and lower outlets. The warmer air flows to the floor outlets. This feature gives improved comfort during sunny but cool conditions.

### Floor



Air is directed through the floor outlets with a small amount flowing through the defrost and side window demist outlets.

### Mix



Air is directed through the floor, defrost, and side window demist outlets. This setting works best in cold or snowy conditions that require extra heat to the windshield. This setting is good for maintaining comfort while reducing moisture on the windshield.

### Defrost



Air is directed through the windshield and side window demist outlets. Use this mode with maximum blower and temperature settings for best windshield and side window defrosting.

### NOTE:

The air conditioning compressor operates in Mix, Defrost, or a blend of these modes, even if the Air Conditioning (A/C) button is not pressed. This dehumidifies the air to help dry the windshield. To improve fuel economy, use these modes only when necessary.

### Recirculation Control



Pressing the Recirculation Control will put the system into to recirculation mode. This can be used when outside conditions such as smoke, odors, dust, or high humidity are present. Activating recirculation will cause the LED in the control button to illuminate.

**NOTE:**

- Continuous use of the Recirculation mode may make the inside air stuffy and window fogging may occur. Extended use of this mode is not recommended.
- The use of the Recirculation mode in cold or damp weather will cause windows to fog on the inside, because of moisture buildup inside the vehicle. Select the outside air position for maximum defogging.
- The A/C will engage automatically to prevent fogging when the recirculation button is pressed and the mode control is set to Panel or Bi-Level.
- The A/C can be deselected manually without disturbing the mode control selection.
- When the ignition switch is turned to the LOCK position, the recirculation feature will be cancelled.

**Air Conditioning Control**



area indicates warmer temperatures.

**NOTE:**

The air conditioning compressor will not engage until the engine has been running for about 10 seconds.

- **MAX A/C**

For maximum cooling use the A/C and recirculation buttons at the same time.

- **ECONOMY MODE**

If economy mode is desired, press the A/C button to turn OFF the indicator light and the

Press this button to engage the Air Conditioning. A light will illuminate when the Air Conditioning system is engaged. Rotating the dial left into the blue area of the scale indicates cooler temperatures, while rotating right into the red

A/C compressor. Then, move the temperature control to the desired temperature.

**Automatic Temperature Control (ATC) — If Equipped**

The Automatic Temperature Control system automatically maintains the climate in the cabin of the vehicle at the comfort levels desired by the driver and passenger.



**Automatic Temperature Control**

**Automatic Operation**

Operation of the system is quite simple.

1. Turn the Mode Control knob (on the right) and the Blower Control knob (on the left) to AUTO.

**NOTE:**

**The AUTO position performs best for front seat occupants only.**



045607778

2. Dial in the temperature you would like the system to maintain by rotating the Temperature Control knob. Once the comfort level is selected, the system will maintain that level automatically using the heating system.

Should the desired comfort level require air conditioning, the system will automatically make the adjustment.

You will experience the greatest efficiency by simply allowing the system to function automatically. Selecting the "O" (OFF) position on the blower control stops the system completely and closes the outside air intake.

The recommended setting for maximum comfort for the average person is 72° F (22° C); however, this may vary.

**NOTE:**

- The temperature setting can be adjusted at anytime without affecting automatic operation.
- Pressing the Air Conditioning Control button while in AUTO mode will cause the LED in the control button to flash three times and then turn off. This indicates that the system is in AUTO mode and requesting the air conditioning is not necessary.
- If your air conditioning performance seems lower than expected, check the front of the A/C condenser located in front of the radiator for an accumulation of dirt or insects. Clean with a gentle water spray from behind the radiator and through the condenser. Fabric front fascia protectors may reduce airflow to the condenser, reducing air conditioning performance.

## Blower Control



045607536

For full automatic operation or for automatic blower operation, turn the knob to the AUTO position. In manual mode there are seven blower speeds that can be individual selected. In off position the blower will shut off.

## Manual Operation

This system offers a full complement of manual override features, which consist of Blower Preferred Automatic, Mode Preferred Automatic, or Blower and Mode Preferred Automatic. This means the operator can override the blower, the mode, or both. There is a manual blower range for times when the AUTO setting is not desired. The blower can be set to any fixed blower speed by rotating the Blower Control knob (on the left).

**NOTE:**

**Please read the Automatic Temperature Control Operation Chart that follows for details.**

Automatic Temperature Control Operation		The system will...				
Operation	How	Blower Control	Mode Control	Air Temperature Control	Air Recirculation Control	A/C Operation
Full Automatic Operation	Set blower knob to Auto. Set mode knob to Auto. Set temperature knobs for comfort.	Automatic	Automatic	Automatic	Automatic but can be overridden	Automatic
Blower Preferred Automatic	Set blower knob to any desired airflow level other than Auto. Set mode knob to Auto. Set temperature knobs for comfort.	User selectable to any speed.	Automatic	Automatic	Automatic but can be overridden	Automatic
Mode Preferred Automatic	Set mode knob to any desired air delivery point other than Auto. Set blower knob to Auto. Set temperature knobs for comfort.	Automatic	User selectable to any air delivery point.	Automatic	User selectable outside or recirculated. Not allowed in Defrost Mode	User selectable A/C on or off.
Blower and Mode Preferred Automatic	Set blower knob to any desired airflow level other than Auto. Set mode knob to any desired air delivery point other than Auto. Set temperature knobs for comfort.	User selectable to any speed.	User selectable to any air delivery point.	Automatic	User selectable outside or recirculated. Not allowed in Defrost Mode	User selectable A/C on or off.

045673831

The operator can override the AUTO mode setting to change airflow distribution by rotating the Mode Control knob (on the right) to one of the following positions.

#### **Panel**



Air is directed through the outlets in the instrument panel. These outlets can be adjusted to direct airflow.

#### **NOTE:**

**The center instrument panel outlets can be aimed so that they are directed toward the rear seat passengers for maximum airflow to the rear.**

#### **Bi-Level**



Air is directed through the panel and floor outlets.

#### **NOTE:**

**For all settings, except full cold or full hot, there is a difference in temperature between the upper and lower outlets. The warmer air flows to the floor outlets. This feature gives improved comfort during sunny but cool conditions.**

#### **Floor**



Air is directed through the floor outlets with a small amount flowing through the defrost and side window demist outlets.

#### **Mix**



Air is directed through the floor, defrost, and side window demist outlets. This setting works best in cold or snowy conditions that require extra heat to the windshield. This setting is good for maintaining comfort while reducing moisture on the windshield.

#### **Defrost**



Air is directed through the windshield and side window demist outlets. Use this mode with maximum blower and temperature settings for best windshield and side window defrosting.

#### **Air Conditioner Control**



045607779

Press this button to turn on the air conditioning during manual operation only. When the air conditioning is turned on, cool dehumidified air will flow through the outlets selected with the Mode control dial. Press this button a second

time to turn OFF the air conditioning. An LED in the button illuminates when manual compressor operation is selected.

#### **Recirculation Control**



The system will automatically control recirculation. However, pressing the Recirculation Control button will put the system in recirculation mode. This can be used when outside conditions such as smoke, odors, dust, or high humidity are present. Activating recirculation will cause the LED in the control button to illuminate.



#### **NOTE:**

- When the ignition switch is turned to the LOCK position, the recirculation feature will be cancelled.
- In cold weather, use of the Recirculation mode may lead to excessive window fogging. The Recirculation mode is not allowed in defrost mode in order to improve window clearing. Recirculation will be disabled automatically if these modes are selected.
- Extended use of recirculation may cause the windows to fog. If the interior of the windows begins to fog, press the Recirculation button to return to outside air. Some temp/humidity conditions will cause captured interior air to condense on windows and hamper visibility. For this reason, the system will not allow Recirculation to be selected while in defrost mode. Attempting to use the recirculation while in these modes will cause the LED in the control button to blink and then turn off.

- Most of the time, when in Automatic Operation, you can temporarily put the system into Recirculation Mode by pressing the Recirculation button. However, under certain conditions, while in Automatic Mode, the system is blowing air out the defrost vents. When these conditions are present, and the Recirculation button is pressed, the indicator will flash and then turn off. This tells you that you are unable to go into Recirculation Mode at this time. If you would like the system to go into Recirculation Mode, you must first move the Mode knob to Panel, Bi-Level and then press the Recirculation button. This feature reduces the possibility of window fogging.

#### **Operating Tips**

##### **NOTE:**

Refer to the chart at the end of this section for suggested control settings for various weather conditions.

#### **Summer Operation**

The engine cooling system in air-conditioned vehicles must be protected with a high-quality antifreeze coolant to provide proper corrosion protection and to protect against engine overheating. A solution of 50% OAT (Organic Additive Technology) coolant that meets the requirements of Chrysler Material Standard MS-12106 and 50% water is recommended. Refer to "Maintenance Procedures" in "Maintaining Your Vehicle" for proper coolant selection.

#### **Winter Operation**

Use of the air Recirculation Mode during winter months is not recommended because it may cause window fogging.

#### **Vacation Storage**

Anytime you store your vehicle, or keep it out of service (i.e., vacation) for two weeks or more, run the air conditioning system at idle for about five minutes in the fresh air and high blower settings. This will ensure adequate system lubrication to minimize the possibility of compressor damage when the system is started again.

**Window Fogging**

Interior fogging on the windshield can be quickly removed by turning the mode selector to Defrost. The Defrost/Floor mode can be used to maintain a clear windshield and provide sufficient heating. If side window fogging becomes a problem, increase blower speed. Vehicle windows tend to fog on the inside in mild but rainy or humid weather.

**NOTE:**

**Recirculate without A/C should not be used for long periods as fogging may occur.**

**Side Window Demisters**

A side window demister outlet is located at each end of the instrument panel. These non-adjustable outlets direct air toward the side windows when the system is in the FLOOR, MIX, or DEFROST mode. The air is directed at the area of the windows through which you view the outside mirrors.



























**Outside Air Intake**

Make sure the air intake, located directly in front of the windshield, is free of obstructions such as leaves. Leaves collected in the air intake may reduce airflow, and if they enter the plenum, they could plug the water drains. In winter months, make sure the air intake is clear of ice, slush, and snow.

**A/C Air Filter — If Equipped**

The A/C Filter prevents most dust and pollen from entering the cabin. The filter acts on air coming from outside the vehicle and recirculated air within the passenger compartment. Refer to “Maintenance Procedures” in “Maintaining Your Vehicle” for A/C Air Filter service information or see your authorized dealer for service. Refer to “Maintenance Schedules” for filter service intervals.

## Control Setting Suggestions for Various Weather Conditions

WEATHER	CONTROL SETTINGS
<p>HOT WEATHER AND VEHICLE INTERIOR IS VERY HOT</p>  	<p>Open the windows, start the vehicle, press the  button to turn recirculate off. Set the Fan control to the high position (full clockwise). Press the A/C button. Set the Mode control at or between  and . Set the temperature control to full cool. After the hot air is pushed from the vehicle press the  button to turn recirculate on and roll up the windows. Once you are comfortable, press the  button to turn recirculate off and adjust the temperature control for comfort.</p>
<p>WARM WEATHER</p>  	<p>Press the  button to turn recirculate off. If it's sunny, set the Mode control at or near  and turn the air conditioning on. If it's cloudy or dark, set the Mode control at or near .</p>
<p>COOL OR COLD HUMID CONDITIONS</p>  	<p>Press the  button to turn recirculate off. If it's sunny, set the Mode control at or between  and  then turn the air conditioning on. If it's cloudy or dark, set the Mode control at or near  and turn the air conditioning on. If the windows begin to fog, set Mode control at or between  and .</p>
<p>COLD DRY CONDITIONS</p>  	<p>Set the Mode control at or near . If it is sunny, you may want more upper air. In this case, set the Mode control at or between  and . In very cold weather, if you need extra heat at the windshield, set the Mode control at or near the .</p>

045606725



## STARTING AND OPERATING

- **STARTING PROCEDURES . . . . .148**
  - Manual Transmission – If Equipped . . . . .148
  - Automatic Transmission – If Equipped . . . . .148
  - Normal Starting – Gasoline Engine . . . . .148
  - Extreme Cold Weather (below –20°F or –29°C). . . . .149
  - If Engine Fails To Start. . . . .149
  - After Starting . . . . .149
  - Normal Starting – Diesel Engine . . . . .149
- **MANUAL TRANSMISSION — IF EQUIPPED . . . . .150**
  - Downshifting . . . . .151
- **AUTOMATIC TRANSMISSION — IF EQUIPPED . . . . .151**
  - Key Ignition Park Interlock . . . . .152
  - Brake/Transmission Shift Interlock System . . . . .152
  - Continuously Variable Automatic Transmission (CVT) . . . . .152
- **AUTOSTICK® . . . . .155**
  - Operation. . . . .156
- **FOUR-WHEEL DRIVE OPERATION — IF EQUIPPED . . . . .156**
- **ON-ROAD DRIVING TIPS . . . . .157**
- **PARKING BRAKE . . . . .157**

• BRAKE SYSTEM . . . . .	158
• Anti-Lock Brake System (ABS) . . . . .	159
• POWER STEERING . . . . .	160
• Power Steering Fluid Check . . . . .	161
• ELECTRONIC BRAKE CONTROL SYSTEM . . . . .	161
• Anti-Lock Brake System (ABS) . . . . .	162
• Traction Control System (TCS) . . . . .	162
• Brake Assist System (BAS) . . . . .	162
• Electronic Roll Mitigation (ERM) . . . . .	162
• Hill Descent Control (HDC) – If Equipped . . . . .	163
• Hill Start Assist (HSA) – Manual Transmission Only . . . . .	164
• Electronic Stability Control (ESC) . . . . .	165
• ESC Activation/Malfunction Indicator Light And ESC OFF Indicator Light . . . . .	167
• TIRES — GENERAL INFORMATION . . . . .	168
• Tire Pressure . . . . .	168
• Tire Inflation Pressures . . . . .	168
• Tire Pressures For High Speed Operation . . . . .	169
• Radial Ply Tires . . . . .	169
• All Season Tires – If Equipped . . . . .	170
• Summer Or Three Season Tires – If Equipped . . . . .	170
• Snow Tires . . . . .	170
• Spare Tire Matching Original Equipped Tire And Wheel – If Equipped . . . . .	170
• Compact Spare Tire – If Equipped . . . . .	170
• Full Size Spare – If Equipped . . . . .	171
• Limited-Use Spare – If Equipped . . . . .	171

• Tire Spinning . . . . .	.171
• Tread Wear Indicators . . . . .	.172
• Life Of Tire . . . . .	.172
• Replacement Tires . . . . .	.172
• TIRE CHAINS (TRACTION DEVICES) . . . . .	.173
• TIRE ROTATION RECOMMENDATIONS . . . . .	.174
• FUEL REQUIREMENTS — GASOLINE ENGINE . . . . .	.175
• Methanol . . . . .	.175
• Ethanol . . . . .	.175
• Clean Air Gasoline . . . . .	.176
• MMT In Gasoline . . . . .	.176
• Materials Added To Fuel . . . . .	.176
• FUEL REQUIREMENTS — DIESEL ENGINE . . . . .	.177
• ADDING FUEL . . . . .	.177
• Locking Fuel Filler Cap (Gas Cap) . . . . .	.177
• Loose Fuel Filler Cap Message . . . . .	.177
• TRAILER TOWING . . . . .	.177
• Common Towing Definitions . . . . .	.178
• Breakaway Cable Attachment . . . . .	.179
• Trailer Towing Weights (Maximum Trailer Weight Ratings) . . . . .	.180
• Trailer And Tongue Weight . . . . .	.181
• Towing Requirements . . . . .	.181
• Towing Tips . . . . .	.185
• Trailer Hitch Attaching Points . . . . .	.186
• RECREATIONAL TOWING (BEHIND MOTORHOME, ETC.) . . . . .	.187

## STARTING PROCEDURES

Before starting your vehicle, adjust your seat, adjust both inside and outside mirrors, and fasten your seat belts.

### WARNING!

Never leave children alone in a vehicle, or with access to an unlocked vehicle. Leaving children in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever. Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave a vehicle equipped with Keyless Enter-N-Go™ (if equipped) in the ACC or ON/RUN mode. A child could operate power windows, other controls, or move the vehicle.

### Manual Transmission – If Equipped

Before starting the engine fully apply the parking brake, press the clutch pedal to the floor and place the shift lever in NEUTRAL.

#### NOTE:

**The engine will not start unless the clutch pedal is pressed to the floor.**

### Automatic Transmission – If Equipped

The shift lever must be in the PARK or NEUTRAL position before you can start the engine. Apply the brakes before shifting to any driving gear.

#### NOTE:

**You must press the brake pedal before shifting out of PARK.**

#### Tip Start

#### NOTE:

**Normal starting of either a cold or a warm engine is obtained without pumping or pressing the accelerator pedal.**

**Do not** press the accelerator. Turn the ignition switch to the START position and release it as

soon as the starter engages. The starter motor will continue to run, and it will disengage automatically when the engine is running. If the engine fails to start, the starter will disengage automatically in 10 seconds. If this occurs, turn the ignition switch to the LOCK position, wait 10 to 15 seconds, then repeat the “Normal Starting” procedure.

### Normal Starting – Gasoline Engine

Normal starting of either a cold or a warm engine does not require pumping or pressing the accelerator pedal. Simply turn the ignition switch to the START position and release when the engine starts. If the engine fails to start within 15 seconds, turn the ignition switch to the OFF position, wait 10 to 15 seconds, then repeat the “Normal Starting” procedure.

### WARNING!

Do not attempt to push or tow your vehicle to get it started. Vehicles equipped with an automatic transmission cannot be started this way. Unburned fuel could enter the cata-

*(Continued)*



**WARNING! (Continued)**

lytic converter and once the engine has started, ignite and damage the converter and vehicle. If the vehicle has a discharged battery, booster cables may be used to obtain a start from another vehicle. This type of start can be dangerous if done improperly, so follow the procedure carefully. Refer to "Jump Starting" in "What To Do In Emergencies" for further information.

**Extreme Cold Weather (below –20°F or –29°C)**

To ensure reliable starting at these temperatures, use of an externally powered electric engine block heater (available from your authorized dealer) is recommended.

**If Engine Fails To Start**

If the engine fails to start after you have followed the "Normal Starting" or "Extreme Cold Weather" procedures, it may be flooded. Push the accelerator pedal all the way to the floor and hold it there. Crank the engine for no more than

15 seconds. This should clear any excess fuel in case the engine is flooded. Leave the ignition key in the ON position, release the accelerator pedal and repeat the "Normal Starting" procedure.

**WARNING!**

Never pour fuel or other flammable liquid into the throttle body air inlet opening in an attempt to start the vehicle. This could result in flash fire causing serious personal injury.

**CAUTION!**

To prevent damage to the starter, do not crank the engine for more than 15 seconds at a time. Wait 10 to 15 seconds before trying again.

**After Starting**

The idle speed will automatically decrease as the engine warms up.

**Normal Starting – Diesel Engine**

1. Apply the brake, press the clutch pedal to the floor, shift the transmission into NEUTRAL and turn the ignition key to the ON position.

**NOTE:**

**The engine will not start unless the clutch pedal is pressed to the floor.**

2. Watch the "Wait To Start Light." It will glow for two to 10 seconds or more, depending on engine temperature. When the "Wait To Start Light" turns off, the engine is ready to start.

3. **Do not** press the accelerator. Turn the ignition key to the START position and hold it in this position until the engine starts.

### CAUTION!

- Under normal conditions, do not operate the starter for longer than 15 seconds at one time. At temperatures below  $-5^{\circ}\text{F}$  ( $215^{\circ}\text{C}$ ), you may operate the starter for up to 30 seconds at one time. Longer periods of operation may result in starter or battery damage. If the engine does not start at once, repeat the procedures under "Normal Starting – Diesel Engine".
- Cold engine speeds higher than necessary for driving or higher than specified for idling may damage engine components.

### Starting If Engine Has Run Out of Fuel


To restart the diesel engine after running out of fuel, turn the ignition key to the ACC (Accessory) position approximately eight seconds prior to cranking the engine. Several attempts of 10 second crank times may be required.

## MANUAL TRANSMISSION — IF EQUIPPED

### WARNING!


You or others could be injured if you leave the vehicle unattended without having the parking brake fully applied. The parking brake should always be applied when the driver is not in the vehicle, especially on an incline.

Fully press the clutch pedal to the floor before you shift gears. As you release the clutch pedal, lightly press the accelerator pedal.

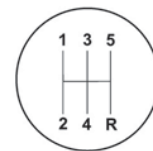

80775c4b

**Shift Pattern (Five-Speed)**

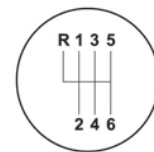

81911b86

**Shift Pattern (Six-Speed)**

Use each gear in numerical order, do not skip a gear. Be sure the transmission is in first gear,

(not third), when starting from a standing position. Damage to the clutch can result from starting in third gear.

For most city driving you will find it easier to use only the lower gears. For steady highway driving with light accelerations, fifth gear on a five-speed and sixth on a six-speed is recommended.

Never drive with your foot resting on the clutch pedal, or try to hold the vehicle on a hill with the clutch pedal partially engaged. This will cause abnormal wear on the clutch.

To shift into REVERSE with a six speed, pull up on the ring just below the gear shift knob and then move into the REVERSE (R) position.

Never shift into REVERSE until the vehicle has come to a complete stop.

**NOTE:**

**During cold weather, until the transmission lubricant is warm, you may experience slightly higher shift efforts. This is normal and not harmful to the transmission.**

### **Downshifting**

Proper downshifting will improve fuel economy and prolong engine life.

**CAUTION!**

If you skip a gear while downshifting or downshift at too high of a vehicle speed, these conditions may cause the engine to overspeed if too low of a gear is selected and the clutch pedal is released. Damage to the clutch and the transmission can result from skipping a gear while downshifting or downshifting at too high of a vehicle speed even if the clutch pedal is held pressed (i.e., not released).

To maintain a safe speed and prolong brake life, shift down to second or first gear when descending a steep grade.

When turning a corner, or driving up a steep grade, downshift early so that the engine will not be overburdened.

## **AUTOMATIC TRANSMISSION — IF EQUIPPED**

**CAUTION!**

Damage to the transmission may occur if the following precautions are not observed:

- Shift into PARK only after the vehicle has come to a complete stop.
- Shift into or out of REVERSE only after the vehicle has come to a complete stop and the engine is at idle speed.
- Do not shift between PARK, REVERSE, NEUTRAL, or DRIVE when the engine is above idle speed.
- Before shifting into any gear, make sure your foot is firmly pressing the brake pedal.

**NOTE:**

**You must press and hold the brake pedal while shifting out of PARK.**

**WARNING!**

- Unintended movement of a vehicle could injure those in or near the vehicle. As with all vehicles, you should never exit a vehicle while the engine is running.
- Before exiting a vehicle, always apply the parking brake, shift the transmission into PARK, and remove the ignition key. Once the key is removed, the shift lever is locked in PARK, securing the vehicle against unwanted movement. When leaving the vehicle, always remove the ignition key and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle.
- Allowing children to be in a vehicle unintended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever.

*(Continued)*

**WARNING! (Continued)**

- Do not leave the ignition key/fob in or near the vehicle, or in a location accessible to children. A child could operate power windows, other controls, or move the vehicle.
- It is dangerous to shift out of PARK or NEUTRAL if the engine speed is higher than idle speed. If your foot is not firmly pressing the brake pedal, the vehicle could accelerate quickly forward or in reverse. You could lose control of the vehicle and hit someone or something. Only shift into gear when the engine is idling normally and your foot is firmly pressing the brake pedal.

**Key Ignition Park Interlock**

This vehicle is equipped with a Key Ignition Park Interlock which requires the shift lever to be placed in PARK before the ignition switch can be turned to the LOCK/OFF position. The key can only be removed from the ignition when the ignition is in the LOCK/OFF position, and the

shift lever is locked in PARK whenever the ignition switch is in the LOCK/OFF position.

**Brake/Transmission Shift Interlock System**

This vehicle is equipped with a Brake Transmission Shift Interlock system (BTSI) that holds the shift lever in PARK unless the brakes are applied. To shift the transmission out of PARK, the ignition switch must be turned to the ON/RUN position (engine running or not) and the brake pedal must be pressed.

**Continuously Variable Automatic Transmission (CVT)**

The shift lever position display (located in the instrument cluster) indicates the transmission gear range. You must press the brake pedal to move the shift lever out of PARK (refer to "Brake/Transmission Shift Interlock System" in this section). To drive, move the shift lever from PARK or NEUTRAL to the DRIVE position.

**NOTE:**

The Continuously Variable Automatic Transmission (CVT) changes ratios in a continuous manner. This may sometimes “feel” as if it is slipping, but this is normal and does not harm anything.

Only shift from DRIVE to PARK or REVERSE when the accelerator pedal is released and the vehicle is stopped. Be sure to keep your foot on the brake pedal when shifting the transmission between these gears.

The transmission shift lever has PARK, REVERSE, NEUTRAL, and DRIVE shift positions. Manual shifts can be made using the AutoStick® shift control (refer to “AutoStick®” in this section). Moving the shift lever to the left or right (-/+ ) while in the DRIVE position will manually select from a set of predefined transmission gear ratios, and will display the current gear in the instrument cluster as 6, 5, 4, 3, 2, 1.

**Gear Ranges**

DO NOT race the engine when shifting from PARK or NEUTRAL into another gear range.

**NOTE:**

After selecting any gear range, wait a moment to allow the selected gear to engage before accelerating. This is especially important when the engine is cold.



Shift Lever

**PARK**

This range supplements the parking brake by locking the transmission. The engine can be started in this range. Never attempt to use PARK while the vehicle is in motion. Apply the parking brake when leaving the vehicle in this range.

When parking on a level surface, you may shift the transmission into PARK first, and then apply the parking brake.

When parking on a hill, apply the parking brake before shifting the transmission into PARK, otherwise the load on the transmission locking mechanism may make it difficult to move the shift lever out of PARK. As an added precaution, turn the front wheels toward the curb on a downhill grade and away from the curb on an uphill grade.

**WARNING!**

- Never use the PARK position as a substitute for the parking brake. Always apply the parking brake fully when parked to guard against vehicle movement and possible injury or damage.

*(Continued)*

**WARNING! (Continued)**

- Your vehicle could move and injure you and others if it is not completely in PARK. Check by trying to move the shift lever out of PARK with the brake pedal released. Make sure the transmission is in PARK before leaving the vehicle.
- It is dangerous to shift out of PARK or NEUTRAL if the engine speed is higher than idle speed. If your foot is not firmly pressing the brake pedal, the vehicle could accelerate quickly forward or in reverse. You could lose control of the vehicle and hit someone or something. Only shift into gear when the engine is idling normally and your foot is firmly pressing the brake pedal.

*(Continued)*

**WARNING! (Continued)**

- Unintended movement of a vehicle could injure those in or near the vehicle. As with all vehicles, you should never exit a vehicle while the engine is running. Before exiting a vehicle, always apply the parking brake, shift the transmission into PARK, turn the engine off, and remove the ignition key. Once the key is removed, the shift lever is locked in PARK, securing the vehicle against unwanted movement.
- When leaving the vehicle, always remove the ignition key and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle.
- Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever.

*(Continued)*

**WARNING! (Continued)**

- Do not leave the key fob in or near the vehicle, or in a location accessible to children. A child could operate power windows, other controls, or move the vehicle.

**CAUTION!**

- Before moving the shift lever out of PARK, you must turn the ignition switch from the OFF position to the ON/RUN position, and also press the brake pedal. Otherwise, damage to the shift lever could result.
- DO NOT race the engine when shifting from PARK or NEUTRAL into another gear range, as this can damage the drivetrain.

The following indicators should be used to ensure that you have engaged the transmission into the PARK position:

- When shifting into PARK, firmly move the shift lever all the way forward and to the left until it stops and is fully seated.

- Look at the transmission gear position display and verify that it indicates the PARK position.
- With brake pedal released, verify that the shift lever will not move out of PARK.

## REVERSE

This range is for moving the vehicle backward. Shift into REVERSE only after the vehicle has come to a complete stop.

## NEUTRAL

Use this range when the vehicle is standing for prolonged periods with the engine running. The engine may be started in this range. Apply the parking brake and shift the transmission into PARK if you must leave the vehicle.

### WARNING!

Do not coast in NEUTRAL and never turn off the ignition to coast down a hill. These are unsafe practices that limit your response to changing traffic or road conditions. You might lose control of the vehicle and have a collision.

### CAUTION!

Towing the vehicle, coasting, or driving for any other reason with the transmission in NEUTRAL can cause severe transmission damage. Refer to “Recreational Towing” in “Starting And Operating” and “Towing A Disabled Vehicle” in “What To Do In Emergencies” for further information.

## DRIVE

This range should be used for most city and highway driving. It provides the best fuel economy. The DRIVE position provides optimum driving characteristics under all normal operating conditions.

When frequent transmission shifting occurs (such as when operating the vehicle under heavy loading conditions, in hilly terrain, traveling into strong head winds, or while towing heavy trailers), use the AutoStick® shift control (refer to AutoStick® in this section) to select a lower gear ratio. Under these conditions, using a lower gear ratio will improve performance and

extend transmission life by reducing excessive shifting and heat buildup.

During sustained high speed driving or trailer towing up long grades on hot days, the automatic transmission oil may become too hot. If this happens, the transmission overheat indicator light will come on, and the vehicle will slow slightly until the transmission cools down enough to allow a return to the requested speed. This is done to prevent transmission damage due to overheating. If the high speed is maintained, the overheating may reoccur, as before, in a cyclic fashion.

## AUTOSTICK®

AutoStick® is a driver-interactive transmission feature providing six manually selectable gear ratios, giving you more control of the vehicle. AutoStick® allows you to maximize engine braking, eliminate undesirable upshifts and downshifts, and improve overall vehicle performance. This system can also provide you with more control during passing, city driving, cold slippery conditions, mountain driving, trailer towing, and many other situations.

## Operation

### NOTE:

**AutoStick® is not available until the CVT warms up in cold weather.**

When the shift lever is in the DRIVE position, AutoStick® is activated by moving the shift lever side-to-side. Moving the shift lever to the right (+) will activate AutoStick® and shift up to the next higher manual ratio, unless you are already operating in or near Overdrive, in which case sixth gear ratio will be selected. In like manner, moving the shift lever to the left (-) will activate AutoStick® and shift to the next lower manual ratio. The manually-selected gear will be displayed in the instrument cluster.

In AutoStick® mode, the transmission will shift up or down when the driver moves the shift lever to the right (+) or left (-), unless an engine lugging or overspeed condition would result. It will remain in the selected gear until another upshift or downshift is chosen, except as described below:

- The transmission will automatically downshift to first gear when coming to a stop. After a

stop, the driver should manually upshift (+) the transmission as the vehicle is accelerated.

- The transmission will automatically upshift when necessary to prevent engine over-speed.
- If a downshift would cause the engine to overspeed, that shift will not occur until it is safe for the engine.
- Transmission shifting will be more noticeable when AutoStick® is engaged.
- Heavy Anti-Lock Brake System (ABS) application will disengage AutoStick® mode.
- If the system detects powertrain overheating, the transmission will revert to the automatic shift mode and remain in that mode until the powertrain cools off.
- If the system detects a problem, it will disable AutoStick® mode and the transmission will return to automatic mode until the problem is corrected.
- To disengage AutoStick® mode, hold the shift lever to the right (+) until “D” is once

again displayed in the instrument cluster. You can shift in or out of the AutoStick® mode at any time without taking your foot off the accelerator pedal.


### WARNING!

Do not downshift for additional engine braking on a slippery surface. The drive wheels could lose their grip and the vehicle could skid, causing a collision or personal injury.

## FOUR-WHEEL DRIVE OPERATION — IF EQUIPPED

This feature provides full time, on-demand, four-wheel drive (4WD).



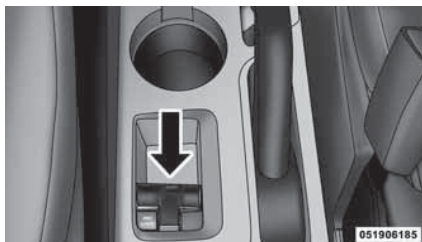

**Four-Wheel Drive Switch**

Where one or more wheels have wheel spin or if additional traction is needed in sand, deep snow, or loose traction surfaces, activate the “4WD LOCK” switch by pulling up once and releasing. This locks the center coupling allowing more torque to be sent to the rear wheels. The “4WD Indicator Light” will come on in the cluster. This can be done on the fly, at any vehicle speed. To deactivate, simply pull on the switch one more time. The “4WD Indicator Light” will then go out.

**NOTE:**

Refer to “Electronic Brake Control System/ Electronic Stability Control (ESC)” in “Starting and Operating” for further information.

## ON-ROAD DRIVING TIPS


Utility vehicles have higher ground clearance and a narrower track to make them capable of performing in a wide variety of off-road applications. Specific design characteristics give them a higher center of gravity than ordinary cars.

An advantage of the higher ground clearance is a better view of the road, allowing you to anticipate problems. They are not designed for cornering at the same speeds as conventional two-wheel drive vehicles any more than low-slung sports cars are designed to perform satisfactorily in off-road conditions. If at all possible, avoid sharp turns or abrupt maneuvers. As with other vehicles of this type, failure to operate this vehicle correctly may result in loss of control or vehicle rollover.

## PARKING BRAKE

Before leaving the vehicle, make sure that the parking brake is fully applied. Also, be certain to leave an automatic transmission in PARK, or manual transmission in REVERSE or first gear.

The parking brake lever is located in the center console. To apply the parking brake, pull the lever up as firmly as possible. To release the parking brake, pull the lever up slightly, press the center button, then lower the lever completely.

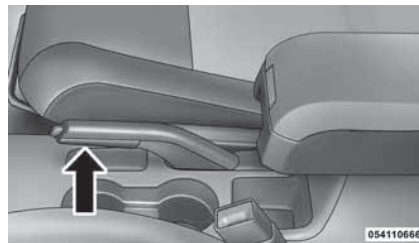

When the parking brake is applied with the ignition switch in the ON position, the “Brake Warning Light” in the instrument cluster will illuminate.

**NOTE:**

- **When the parking brake is applied and the automatic transmission is placed in gear, the “Brake Warning Light” will flash. If vehicle speed is detected, a chime will sound to alert the driver. Fully release the parking brake before attempting to move the vehicle.**
- **This light only shows that the parking brake is applied. It does not show the degree of brake application.**

When parking on a hill, it is important to turn the front wheels toward the curb on a downhill grade and away from the curb on an uphill grade. For vehicles equipped with an automatic transmission, apply the parking brake before placing the shift lever in PARK, otherwise the load on the transmission locking mechanism may make it difficult to move the shift lever out

of PARK. The parking brake should always be applied whenever the driver is not in the vehicle.

**WARNING!**

- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the shift lever.
- Do not leave the key fob in or near the vehicle, or in a location accessible to children. A child could operate power windows, other controls, or move the vehicle.
- Be sure the parking brake is fully disengaged before driving; failure to do so can lead to brake failure and a collision.

**(Continued)**

**WARNING! (Continued)**

- Always fully apply the parking brake when leaving your vehicle, or it may roll and cause damage or injury. Also, be certain to leave a manual transmission in REVERSE or first gear. Failure to do so may cause the vehicle to roll and cause damage or injury.

**CAUTION!**

If the “Brake Warning Light” remains on with the parking brake released, a brake system malfunction is indicated. Have the brake system serviced by an authorized dealer immediately.

## **BRAKE SYSTEM**

Your vehicle is equipped with power assisted brakes as standard equipment. In the event power assist is lost for any reason (for example, repeated brake applications with the engine off), the brakes will still function. However, the effort

required to brake the vehicle will be much greater than that required with the power system operating.

**WARNING!**

Riding the brakes can lead to brake failure and possibly a collision. Driving with your foot resting or riding on the brake pedal can result in abnormally high brake temperatures, excessive lining wear, and possible brake damage. You would not have your full braking capacity in an emergency.

If either of the two hydraulic systems lose normal capability, the remaining system will still function with some loss of overall braking effectiveness. This will be evident by increased pedal travel during application and greater pedal force required to slow or stop. In addition, if the malfunction is caused by an internal leak, as the brake fluid in the master cylinder drops, the “Brake Warning Light” will light.

**WARNING!**

Driving a vehicle with the “Brake Warning Light” on is dangerous. A significant decrease in braking performance or vehicle stability during braking may occur. It will take you longer to stop the vehicle or will make your vehicle harder to control. You could have a collision. Have the vehicle checked immediately.

**Anti-Lock Brake System (ABS)**

The ABS provides increased vehicle stability and brake performance under most braking conditions. The system automatically “pumps” the brakes during severe braking conditions to prevent wheel lock-up.

**WARNING!**

- Pumping of the anti-lock brakes will diminish their effectiveness and may lead to a collision. Pumping makes the stopping distance longer. Just press firmly on your brake pedal when you need to slow down or stop.
- The ABS cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase braking or steering efficiency beyond that afforded by the condition of the vehicle brakes and tires or the traction afforded.
- The ABS cannot prevent collisions, including those resulting from excessive speed in turns, following another vehicle too closely, or hydroplaning.
- The capabilities of an ABS-equipped vehicle must never be exploited in a reckless or dangerous manner which could jeopardize the user’s safety or the safety of others.



The “ABS Warning Light” monitors the ABS System. The light will come on when the ignition switch is turned to the ON position and may stay on for as long as four seconds.

If the “ABS Warning Light” remains on or comes on while driving, it indicates that the anti-lock portion of the brake system is not functioning and that service is required. However, the conventional brake system will continue to operate normally if the “Brake Warning Light” is not on.

If the “ABS Warning Light” is on, the brake system should be serviced as soon as possible to restore the benefits of anti-lock brakes. If the “ABS Warning Light” does not come on when the ignition switch is turned to the ON position, have the bulb repaired as soon as possible.

If both the “Brake Warning Light” and the “ABS Warning Light” remain on, the ABS and Electronic Brake Force Distribution (EBD) systems are not functioning. Immediate repair to the ABS is required.

When the vehicle is driven over 7 mph (11 km/h), you may also hear a slight clicking sound as well as some related motor noises. These noises are the system performing its self-check cycle to ensure that the ABS working properly. This self-check occurs each time the vehicle is started and accelerated past 7 mph (11 km/h).

ABS is activated during braking under certain road or stopping conditions. ABS-inducing conditions can include ice, snow, gravel, bumps, railroad tracks, loose debris, or panic stops.

You may also experience the following when the brake system goes into anti-lock mode:

- the ABS motor running (it may continue to run for a short time after the stop)
- the clicking sound of solenoid valves
- brake pedal pulsations
- a slight drop or fall away of the brake pedal at the end of the stop

These are all normal characteristics of ABS.

#### **WARNING!**

The Anti-Lock Brake System (ABS) contains sophisticated electronic equipment that may be susceptible to interference caused by improperly installed or high output radio transmitting equipment. This interference can cause possible loss of Anti-Lock braking capability. Installation of such equipment should be performed by qualified professionals.

All vehicle wheels and tires must be the same size and type and tires must be properly inflated to produce accurate signals for the computer.

#### **POWER STEERING**

The standard power steering system will give you good vehicle response and increased ease of maneuverability in tight spaces. The system will provide mechanical steering capability if power assist is lost.

If for some reason the power assist is interrupted, it will still be possible to steer your vehicle. Under these conditions, you will ob-

serve a substantial increase in steering effort, especially at very low vehicle speeds and during parking maneuvers.

**NOTE:**

- **Increased noise levels at the end of the steering wheel travel are considered normal and do not indicate that there is a problem with the power steering system.**
- **Upon initial start-up in cold weather, the power steering pump may make noise for a short amount of time. This is due to the cold, thick fluid in the steering system. This noise should be considered normal, and it does not in any way damage the steering system.**

**WARNING!**

Continued operation with reduced power steering assist could pose a safety risk to yourself and others. Service should be obtained as soon as possible.

**CAUTION!**

Prolonged operation of the steering system at the end of the steering wheel travel will increase the steering fluid temperature and it should be avoided when possible. Damage to the power steering pump may occur.

**Power Steering Fluid Check**

Checking the power steering fluid level at a defined service interval is not required. The fluid should only be checked if a leak is suspected, abnormal noises are apparent, and/or the system is not functioning as anticipated. Coordinate inspection efforts through an authorized dealer.

**CAUTION!**

Do not use chemical flushes in your power steering system as the chemicals can damage your power steering components. Such damage is not covered by the New Vehicle Limited Warranty.

**WARNING!**

Fluid level should be checked on a level surface and with the engine off to prevent injury from moving parts and to ensure accurate fluid level reading. Do not overfill. Use only manufacturer's recommended power steering fluid.

If necessary, add fluid to restore to the proper indicated level. With a clean cloth, wipe any spilled fluid from all surfaces. Refer to "Fluids, Lubricants, and Genuine Parts" in "Maintaining Your Vehicle" for further information.

**ELECTRONIC BRAKE CONTROL SYSTEM**

Your vehicle may be equipped with an optional advanced electronic brake control system that includes Anti-Lock Brake System (ABS), Traction Control System (TCS), Brake Assist System (BAS), Electronic Roll Mitigation (ERM), Hill Descent Control (HDC), Hill Start Assist (HSA), and Electronic Stability Control (ESC). All systems work together to enhance vehicle stability

and control in various driving conditions and are commonly referred to as ESC.

### **Anti-Lock Brake System (ABS)**

This system aids the driver in maintaining vehicle control under adverse braking conditions. The system controls hydraulic brake pressure to prevent wheel lockup and help avoid skidding on slippery surfaces during braking. Refer to “Anti-Lock Brake System” in “Starting and Operating” for further information.

### **Traction Control System (TCS)**

This system monitors the amount of wheel spin of each of the driven wheels. If wheel spin is detected, brake pressure is applied to the slipping wheel(s) and engine power is reduced to provide enhanced acceleration and stability. A feature of the TCS system functions similar to a limited slip differential and controls the wheel spin across a driven axle. If one wheel on a driven axle is spinning faster than the other, the system will apply the brake of the spinning wheel. This will allow more engine torque to be applied to the wheel that is not spinning. This feature remains active even if TCS and ESC are in either the “Partial Off” or “Full Off” modes.

Refer to “Electronic Stability Control (ESC)” in this section of this manual.

### **Brake Assist System (BAS)**

The BAS is designed to optimize the vehicle's braking capability during emergency braking maneuvers. The system detects an emergency braking situation by sensing the rate and amount of brake application and then applies optimum pressure to the brakes. This can help reduce braking distances. The BAS complements the Anti-Lock Brake System (ABS). Applying the brakes very quickly results in the best BAS assistance. To receive the benefit of the system, you must apply **continuous** braking pressure during the stopping sequence (do not “pump” the brakes). Do not reduce brake pedal pressure unless braking is no longer desired. Once the brake pedal is released, the BAS is deactivated.

### **WARNING!**

- The Brake Assist System (BAS) cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase the traction afforded by prevailing road conditions.
- The BAS cannot prevent collisions, including those resulting from excessive speed in turns, driving on very slippery surfaces, or hydroplaning.
- The capabilities of a BAS-equipped vehicle must never be exploited in a reckless or dangerous manner which could jeopardize the user's safety or the safety of others.

### **Electronic Roll Mitigation (ERM)**

This system anticipates the potential for wheel lift by monitoring the driver's steering wheel input and the speed of the vehicle. When ERM determines that the rate of change of the steering wheel angle and vehicles speed are sufficient to potentially cause wheel lift, it applies the brake of the appropriate wheel and may also

reduce engine power to lessen the chance that wheel lift will occur. ERM will only intervene during very severe or evasive driving maneuvers.

ERM can only reduce the chance of wheel lift occurring during severe or evasive driving maneuvers. It can not prevent wheel lift due to other factors such as road conditions, leaving the roadway or striking objects or other vehicles.

**NOTE:**

**Anytime the ESC system is in the “Full Off” mode, ERM is disabled. Refer to “Electronic Stability Control (ESC)” in this section for a complete explanation of the available ESC modes.**

**WARNING!**

Many factors, such as vehicle loading, road conditions and driving conditions, influence the chance that wheel lift or rollover may occur. ERM cannot prevent all wheel lift or roll overs, especially those that involve leav-

*(Continued)*

**WARNING! (Continued)**

ing the roadway or striking objects or other vehicles. The capabilities of an ERM-equipped vehicle must never be exploited in a reckless or dangerous manner which could jeopardize the user's safety or the safety of others.

**Hill Descent Control (HDC) – If Equipped**

This system maintains vehicle speed while descending hills during off-road driving situations. HDC will automatically apply the brakes to control downhill speed to between 4 mph (7 km/h) and 6 mph (9 km/h) depending on terrain. The system is activated by placing the vehicle in “Off-Road” mode and placing the shift lever in LOW or REVERSE. Refer to “Safe Off-Road Driving” in “Starting and Operating” for further information.



When HDC is properly enabled, the “Hill Decent Control Light” in the instrument cluster will be illuminated.

HDC has the capability to sense terrain and will only activate when the vehicle is descending a hill. It will not activate on level ground. If desired, HDC can be fully deactivated by putting the vehicle into ESC “Full Off” mode. This is done by pressing and holding the “ESC Off” button for five seconds. Refer to “Electronic Stability Control (ESC)” in this section of the manual.

HDC operation can be overridden with brake application to slow the vehicle down below the HDC control speed. Conversely, if more speed is desired during HDC control, the accelerator pedal will increase vehicle speed like normal. When either the brake or the accelerator is released, HDC will control the vehicle back to the original set speed.

HDC is only intended for low speed off-road driving. At vehicle speeds above 31 mph (50 km/h) HDC will no longer function. If the “HDC Indicator Light” begins to flash this indicates that the brakes are getting too hot and the vehicle should be stopped to allow the brakes to cool.

**WARNING!**

HDC is only intended to assist the driver in controlling vehicle speed when descending hills. The driver must remain attentive to the driving conditions and is responsible for maintaining a safe vehicle speed.

**Hill Start Assist (HSA) – Manual Transmission Only**

The HSA system is designed to assist the driver when starting a vehicle from a stop on a hill. HSA will maintain the level of brake pressure the driver applied for a short period of time after the driver takes their foot off of the brake pedal. If the driver does not apply the throttle during this short period of time, the system will release brake pressure and the vehicle will roll down the hill. The system will release brake pressure in proportion to amount of throttle applied as the vehicle starts to move in the intended direction of travel.

**HSA Activation Criteria**

The following criteria must be met in order for HSA to activate:

- Vehicle must be stopped.
- Vehicle must be on a 7% grade or greater hill.
- Gear selection matches vehicle uphill direction (i.e., vehicle facing uphill is in forward gear; vehicle backing uphill is in REVERSE gear).

**WARNING!**

There may be situations on minor hills (i.e., less than 8%), with a loaded vehicle, or while pulling a trailer, when the system will not activate and slight rolling may occur. This could cause a collision with another vehicle or object. Always remember the driver is responsible for braking the vehicle.

**Disabling/Enabling HSA**

If you wish to turn on or off the HSA system, it can be done using the Customer Programmable Features in the Electronic Vehicle Information Center (EVIC). Refer to “Electronic Vehicle Information Center (EVIC)” in “Understanding Your Instrument Panel” for further information.

For vehicles not equipped with the EVIC, perform the following steps:

**NOTE:**

**You must complete Steps 1 through 8 within 90 seconds.**

1. Center the steering wheel (front wheels pointing straight forward).
2. Shift the transmission into NEUTRAL.
3. Apply the parking brake.
4. Start the engine.
5. Release the clutch pedal (if equipped).
6. Rotate the steering wheel one-half turn to the left.
7. Press the “ESC Off” switch (located in the lower switch bank below the climate controls) four times within 20 seconds. The “ESC Activation/Malfunction Indicator Light” should turn on and turn off two times.
8. Rotate the steering wheel back to center and then an additional half-turn to the right.



9. Turn the ignition switch to the OFF position and then back to the ON position. If the sequence was completed properly, the “ESC Activation/Malfunction Indicator Light” will blink several times to confirm HSA is disabled.

10. Repeat these steps if you want to return this feature to it’s previous setting.

### Electronic Stability Control (ESC)

This system enhances directional control and stability of the vehicle under various driving conditions. ESC corrects for over-steering or under-steering of the vehicle by applying the brake of the appropriate wheel to assist in counteracting the over-steering or under-steering condition. Engine power may also be reduced to help the vehicle maintain the desired path. ESC uses sensors in the vehicle to determine the vehicle path intended by the driver and compares it to the actual path of the vehicle. When the actual path does not match the intended path, ESC applies the brake of the appropriate wheel to assist in counteracting the over-steer or under-steer condition

- Over-steer - when the vehicle is turning more than appropriate for the steering wheel position.
- Under-steer - when the vehicle is turning less than appropriate for the steering wheel position.

#### WARNING!

- The Electronic Stability Control (ESC) cannot prevent the natural laws of physics from acting on the vehicle, nor can it increase the traction afforded by prevailing road conditions.
- ESC cannot prevent accidents, including those resulting from excessive speed in turns, driving on very slippery surfaces, or hydroplaning. ESC also cannot prevent collisions resulting from loss of vehicle control due to inappropriate driver input for the conditions. Only a safe, attentive, and skillful driver can prevent collisions.

*(Continued)*

#### WARNING! (Continued)

- The capabilities of an ESC-equipped vehicle must never be exploited in a reckless or dangerous manner, which could jeopardize the user’s safety or the safety of others.

### ESC Operating Modes

The ESC system has three available operating modes for four-wheel drive equipped vehicles and two available operating modes for two-wheel drive equipped vehicles.

#### Full On (Four-Wheel Drive Models) Or On (Two-Wheel Drive Models)

This is the normal operating mode for ESC. Whenever the vehicle is started the ESC system will be in this “On” mode. This mode should be used for most driving situations. ESC should only be turned to “Partial Off” or “ESC Off” for specific reasons as noted below.

### **Partial Off (Four-Wheel Drive Models) Or On (Two-Wheel Drive Models)**

This mode is entered by momentarily pressing the “ESC Off” switch. When in “Partial Off” mode, the TCS portion of ESC, except for the “limited slip” feature described in the TCS section, has been disabled and the “ESC Activation/Malfunction Indicator Light” will be illuminated. All other stability features of ESC function normally. This mode is intended to be used if the vehicle is in deep snow, sand or gravel conditions and more wheel spin than ESC would normally allow is required to gain traction.

To turn ESC on again, momentarily press the “ESC Off” switch. This will restore the normal “ESC On” mode of operation.

### **NOTE:**

**To improve the vehicle’s traction when driving with snow chains, or starting off in deep snow, sand or gravel, it may be desirable to switch to the “Partial Off” mode by pressing the “ESC Off” switch. Once the situation requiring ESC to be switched to the “Partial Off” mode is overcome, turn ESC back on by momentarily pressing the “ESC Off” switch. This may be done while the vehicle is in motion.**

### **WARNING!**

When in “Partial Off” mode, the TCS functionality of ESC (except for the limited slip feature described in the TCS section) has been disabled and the “ESC Off Indicator Light” will be illuminated. When in “Partial Off” mode, the engine power reduction of TCS is disabled, and the enhanced vehicle stability offered by the ECS system is reduced.

### **Full Off (Four-Wheel Drive Models Only)**

This mode is intended for off-highway or off-road use when ESC stability features could inhibit vehicle maneuverability due to trail conditions. This mode is entered by pressing and holding the “ESC Off” switch for five seconds when the vehicle is stopped and the engine is running. After five seconds, the “ESC Activation/Malfunction Indicator Light” will illuminate and the “ESC OFF” message will appear in the odometer. Press and release the Trip Odometer button located on the instrument cluster to clear this message.

In this mode, ESC and TCS, except for the “limited slip” feature described in the TCS section, are turned off until the vehicle reaches a speed of 35 mph (56 km/h). At 35 mph (56 km/h) the system returns to “Partial Off” mode, as described above. TCS remains off. When the vehicle speed drops below 30 mph (48 km/h) the ESC system shuts off. ESC is deactivated at low vehicle speeds so that it will not interfere with off-road driving however, ESC function returns to provide the stability feature at speeds above 35 mph (56 km/h). The “ESC Activation/

Malfunction Indicator Light” will always be illuminated when ESC is off.

To turn ESC on again, momentarily press the “ESC Off” switch. This will restore the “ESC On” mode of operation.

**NOTE:**

**The “ESC OFF” message will display and an audible chime will sound when the shift lever is placed into the PARK position from any other position, and then moved out of the PARK position. This will occur even if the message was previously cleared.**

**WARNING!**

With the ESC in the “Full Off” mode, the engine torque reduction and stability features are disabled. Therefore, the enhanced vehicle stability offered by ESP is unavailable. In an emergency evasive maneuver, the ESC system will not engage to assist in maintaining stability. “ESC Off” mode is intended for off-highway or off-road use only.

## ESC Activation/Malfunction Indicator Light And ESC OFF Indicator Light



The “ESC Activation/Malfunction Indicator Light” in the instrument cluster will come on when the ignition switch is turned to the ON position. It should go out with the engine running. If the “ESC Activation/Malfunction Indicator Light” comes on continuously with the engine running, a malfunction has been detected in the ESC system. If this light remains on after several ignition cycles, and the vehicle has been driven several miles (kilometers) at speeds greater than 30 mph (48 km/h), see your authorized dealer as soon as possible to have the problem diagnosed and corrected.

The “ESC Activation/Malfunction Indicator Light” (located in the instrument cluster) starts to flash as soon as the tires lose traction and the ESC system becomes active. The “ESC Activation/Malfunction Indicator Light” also flashes when TCS is active. If the “ESC Activation/Malfunction Indicator Light” begins to flash during acceleration, ease up on the accel-

erator and apply as little throttle as possible. Be sure to adapt your speed and driving to the prevailing road conditions.

**NOTE:**

- The “ESC Activation/Malfunction Indicator Light” and the “ESC OFF Indicator Light” come on momentarily each time the ignition switch is turned ON.
- Each time the ignition is turned ON, the ESC system will be ON even if it was turned off previously.
- The ESC system will make buzzing or clicking sounds when it is active. This is normal; the sounds will stop when ESC becomes inactive following the maneuver that caused the ESC activation.



The “ESC OFF Indicator Light” indicates the Electronic Stability Control (ESC) is off.

## TIRES — GENERAL INFORMATION

### Tire Pressure

Proper tire inflation pressure is essential to the safe and satisfactory operation of your vehicle. Three primary areas are affected by improper tire pressure:

#### Safety

##### **WARNING!**

- Improperly inflated tires are dangerous and can cause collisions.
- Under-inflation increases tire flexing and can result in over-heating and tire failure.
- Over-inflation reduces a tire's ability to cushion shock. Objects on the road and chuckholes can cause damage that result in tire failure.
- Over-inflated or under-inflated tires can affect vehicle handling and can fail suddenly, resulting in loss of vehicle control.

*(Continued)*

##### **WARNING! (Continued)**

- Unequal tire pressures can cause steering problems. You could lose control of your vehicle.
- Unequal tire pressures from one side of the vehicle to the other can cause the vehicle to drift to the right or left.
- Always drive with each tire inflated to the recommended cold tire inflation pressure.

#### Economy

Improper inflation pressures can cause uneven wear patterns to develop across the tire tread. These abnormal wear patterns will reduce tread life resulting in a need for earlier tire replacement. Under-inflation also increases tire rolling resistance resulting in higher fuel consumption.

#### Ride Comfort And Vehicle Stability

Proper tire inflation contributes to a comfortable ride. Over-inflation produces a jarring and uncomfortable ride. Both under-inflation and over-inflation affect the stability of the vehicle and can produce a feeling of sluggish response or over responsiveness in the steering.

Unequal tire pressures from side to side may cause erratic and unpredictable steering response.

Unequal tire pressure from side to side may cause the vehicle to drift left or right.

### Tire Inflation Pressures

The proper cold tire inflation pressure is listed on the driver's side "B" Pillar or rear edge of the driver's side door.

At least once a month:

- Check and adjust tire pressure with a good quality pocket-type pressure gauge. Do not make a visual judgement when determining proper inflation. Tires may look properly inflated even when they are under-inflated.
- Inspect tires for signs of tire wear or visible damage.

##### **CAUTION!**

After inspecting or adjusting the tire pressure, always reinstall the valve stem cap.

*(Continued)*

**CAUTION! (Continued)**

This will prevent moisture and dirt from entering the valve stem, which could damage the valve stem.

Inflation pressures specified on the placard are always "cold tire inflation pressure." Cold tire inflation pressure is defined as the tire pressure after the vehicle has not been driven for at least three hours, or driven less than 1 mile (1.6 km) after a three hour period. The cold tire inflation pressure must not exceed the maximum inflation pressure molded into the tire sidewall.

Check tire pressures more often if subject to a wide range of outdoor temperatures, as tire pressures vary with temperature changes.

Tire pressures change by approximately 1 psi (7 kPa) per 12°F (7°C) of air temperature change. Keep this in mind when checking tire pressure inside a garage, especially in the winter.

Example: If garage temperature = 68°F (20°C) and the outside temperature = 32°F (0°C) then the cold tire inflation pressure should be in-

creased by 3 psi (21 kPa), which equals 1 psi (7 kPa) for every 12°F (7°C) for this outside temperature condition.

Tire pressure may increase from 2 to 6 psi (13 to 40 kPa) during operation. DO NOT reduce this normal pressure build up or your tire pressure will be too low.

**Tire Pressures For High Speed Operation**

The manufacturer advocates driving at safe speeds and within posted speed limits. Where speed limits or conditions are such that the vehicle can be driven at high speeds, maintaining correct tire inflation pressure is very important. Increased tire pressure and reduced vehicle loading may be required for high-speed vehicle operation. Refer to your authorized tire or original equipment vehicle dealer for recommended safe operating speeds, loading and cold tire inflation pressures.

**WARNING!**

High speed driving with your vehicle under maximum load is dangerous. The added strain on your tires could cause them to fail. You could have a serious collision. Do not drive a vehicle loaded to the maximum capacity at continuous speeds above 75 mph (120 km/h).

**Radial Ply Tires****WARNING!**

Combining radial ply tires with other types of tires on your vehicle will cause your vehicle to handle poorly. The instability could cause a collision. Always use radial ply tires in sets of four. Never combine them with other types of tires.

Cuts and punctures in radial tires are repairable only in the tread area because of sidewall flexing. Consult your authorized tire dealer for radial tire repairs.

### **All Season Tires – If Equipped**

All Season tires provide traction for all seasons (spring, summer, fall and winter). Traction levels may vary between different all season tires. All season tires can be identified by the M+S, M&S, M/S or MS designation on the tire sidewall. Use all season tires only in sets of four; failure to do so may adversely affect the safety and handling of your vehicle.

### **Summer Or Three Season Tires – If Equipped**

Summer tires provide traction in both wet and dry conditions, and are not intended to be driven in snow or on ice. Summer tires will not contain the all season designation or mountain/snowflake symbol on the tire sidewall. Use summer tires only in sets of four; failure to do so may adversely affect the safety and handling of your vehicle.

### **Snow Tires**

Some areas of the country require the use of snow tires during the winter. Snow tires can be identified by a mountain/snowflake symbol on the tire sidewall.

If you need snow tires, select tires equivalent in size and type to the original equipment tires. Use snow tires only in sets of four; failure to do so may adversely affect the safety and handling of your vehicle.

Snow tires generally have lower speed ratings than what was originally equipped with your vehicle and should not be operated at sustained speeds over 75 mph (120 km/h). For speeds above 75 mph (120 km/h) refer to original equipment or an authorized tire dealer for recommended safe operating speeds, loading and cold tire inflation pressures.

While studded tires improve performance on ice, skid and traction capability on wet or dry surfaces may be poorer than that of non-studded tires. Some states prohibit studded tires; therefore, local laws should be checked before using these tire types.

### **Spare Tire Matching Original Equipped Tire And Wheel – If Equipped**

Your vehicle may be equipped with a spare tire and wheel equivalent in look and function to the original equipment tire and wheel found on the

front or rear axle of your vehicle. This spare tire may be used in the tire rotation for your vehicle. If your vehicle has this option refer to an authorized tire dealer for the recommended tire rotation pattern.

### **Compact Spare Tire – If Equipped**

The compact spare is for temporary emergency use only. You can identify if your vehicle is equipped with a compact spare by looking at the spare tire description on the Tire and Loading Information Placard located on the driver's side door opening or on the sidewall of the tire. Compact spare tire descriptions begin with the letter "T" or "S" preceding the size designation. Example: T145/80D18 103M.

T, S = Temporary Spare Tire

Since this tire has limited tread life the original equipment tire should be repaired (or replaced) and reinstalled on your vehicle at the first opportunity.

Do not install a wheel cover or attempt to mount a conventional tire on the compact spare wheel, since the wheel is designed specifically for the compact spare tire. Do not install more than one

compact spare tire and wheel on the vehicle at any given time.

**WARNING!**

Compact spares are for temporary emergency use only. With these spares, do not drive more than 50 mph (80 km/h). Temporary use spares have limited tread life. When the tread is worn to the tread wear indicators, the temporary use spare tire needs to be replaced. Be sure to follow the warnings, which apply to your spare. Failure to do so could result in spare tire failure and loss of vehicle control.

**Full Size Spare – If Equipped**

The full size spare is for temporary emergency use only. This tire may look like the originally equipped tire on the front or rear axle of your vehicle, but it is not. This spare tire may have limited tread life. When the tread is worn to the tread wear indicators, the temporary use full size spare tire needs to be replaced. Since it is not the same as your original equipment tire,

replace (or repair) the original equipment tire and reinstall on the vehicle at the first opportunity.

**Limited-Use Spare – If Equipped**

The limited-use spare tire is for temporary emergency use only. This tire is identified by a label located on the limited-use spare wheel. This label contains the driving limitations for this spare. This tire may look like the original equipped tire on the front or rear axle of your vehicle, but it is not. Installation of this limited-use spare tire affects vehicle handling. Since it is not the same as your original equipment tire, replace (or repair) the original equipment tire and reinstall on the vehicle at the first opportunity.

**WARNING!**

Limited-use spares are for emergency use only. Installation of this limited-use spare tire affects vehicle handling. With this tire, do not drive more than the speed listed on the limit-use spare wheel. Keep inflated to the

*(Continued)*

**WARNING! (Continued)**

cold tire inflation pressures listed on your Tire and Loading Information Placard located on the driver's side B-Pillar or the rear edge of the driver's side door. Replace (or repair) the original equipment tire at the first opportunity and reinstall it on your vehicle. Failure to do so could result in loss of vehicle control.

**Tire Spinning**

When stuck in mud, sand, snow, or ice conditions, do not spin your vehicle's wheels above 30 mph (48 km/h) or for longer than 30 seconds continuously without stopping when you are stuck.


Refer to "Freeing A Stuck Vehicle" in "What To Do In Emergencies" for further information.

**WARNING!**

Fast spinning tires can be dangerous. Forces generated by excessive wheel speeds may cause tire damage or failure. A tire could explode and injure someone. Do not spin your vehicle's wheels faster than 30 mph (48 km/h) for more than 30 seconds continuously when you are stuck, and do not let anyone near a spinning wheel, no matter what the speed.

**Tread Wear Indicators**

Tread wear indicators are in the original equipment tires to help you in determining when your tires should be replaced.

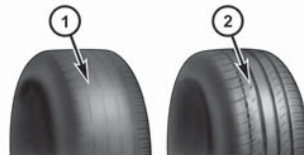

055007576

- 1 — Worn Tire  
2 — New Tire

These indicators are molded into the bottom of the tread grooves. They will appear as bands when the tread depth becomes 1/16 in (2 mm). When the tread is worn to the tread wear indicators, the tire should be replaced.

**Life Of Tire**

The service life of a tire is dependent upon varying factors including, but not limited to:

- Driving style
- Tire pressure

- Distance driven
- Performance tires, tires with a speed rating of V or higher, and summer tires typically have a reduced tread life. Rotation of these tires per the vehicle maintenance schedule is highly recommended.

**WARNING!**

Tires and the spare tire should be replaced after six years, regardless of the remaining tread. Failure to follow this warning can result in sudden tire failure. You could lose control and have a collision resulting in serious injury or death.

Keep dismantled tires in a cool, dry place with as little exposure to light as possible. Protect tires from contact with oil, grease, and gasoline.

**Replacement Tires**

The tires on your new vehicle provide a balance of many characteristics. They should be inspected regularly for wear and correct cold tire inflation pressure. The manufacturer strongly recommends that you use tires equivalent to the



originals in size, quality and performance when replacement is needed. Refer to the paragraph on “Tread Wear Indicators”. Refer to the “Tire and Loading Information” placard for the size designation of your tire. The Load Index and Speed Symbol for your tire will be found on the original equipment tire sidewall. See the Tire Sizing Chart example found in the Tire Safety Information section of this manual for more information relating to the Load Index and Speed Symbol of a tire.

It is recommended to replace the two front tires or two rear tires as a pair. Replacing just one tire can seriously affect your vehicle’s handling. If you ever replace a wheel, make sure that the wheel’s specifications match those of the original wheels.

It is recommended you contact your authorized tire or original equipment vehicle dealer with any questions you may have on tire specifications or capability. Failure to use equivalent replacement tires may adversely affect the safety, handling, and ride of your vehicle.

#### **WARNING!**

- Do not use a tire, wheel size or rating other than that specified for your vehicle. Some combinations of unapproved tires and wheels may change suspension dimensions and performance characteristics, resulting in changes to steering, handling, and braking of your vehicle. This can cause unpredictable handling and stress to steering and suspension components. You could lose control and have a collision resulting in serious injury or death. Use only the tire and wheel sizes with load ratings approved for your vehicle.
- Never use a tire with a smaller load index or capacity, other than what was originally equipped on your vehicle. Using a tire with a smaller load index could result in tire overloading and failure. You could lose control and have a collision.

*(Continued)*

#### **WARNING! (Continued)**

- Failure to equip your vehicle with tires having adequate speed capability can result in sudden tire failure and loss of vehicle control.

#### **CAUTION!**

Replacing original tires with tires of a different size may result in false speedometer and odometer readings.

## **TIRE CHAINS (TRACTION DEVICES)**

Use of traction devices require sufficient tire-to-body clearance. Follow these recommendations to guard against damage.

- Traction device must be of proper size for the tire, as recommended by the traction device manufacturer.
- Install on Front Tires.

- A 215/60R17 96H tire with the use of a traction device that meets the SAE type "Class S" specification is recommended.

**WARNING!**

Using tires of different size and type (M+S, Snow) between front and rear axles can cause unpredictable handling. You could lose control and have a collision.

**CAUTION!**

To avoid damage to your vehicle or tires, observe the following precautions:

- Because of restricted traction device clearance between tires and other suspension components, it is important that only traction devices in good condition are used. Broken devices can cause serious damage. Stop the vehicle immediately if noise occurs that could indicate device breakage. Remove the damaged parts of the device before further use.
- Install device as tightly as possible and then retighten after driving about ½ mile (0.8 km).
- Do not exceed 30 mph (48 km/h).
- Drive cautiously and avoid severe turns and large bumps, especially with a loaded vehicle.
- Do not drive for prolonged period on dry pavement.

*(Continued)*

**CAUTION! (Continued)**

- Observe the traction device manufacturer's instructions on the method of installation, operating speed, and conditions for use. Always use the suggested operating speed of the device manufacturer's if it is less than 30 mph (48 km/h).
- Do not use traction devices on a compact spare tire.


**TIRE ROTATION  
RECOMMENDATIONS**

The tires on the front and rear of your vehicle operate at different loads and perform different steering, driving, and braking functions. For these reasons, they wear at unequal rates.

These effects can be reduced by timely rotation of tires. The benefits of rotation are especially worthwhile with aggressive tread designs such as those on all season type tires. Rotation will increase tread life, help to maintain mud, snow and wet traction levels, and contribute to a smooth, quiet ride.

Refer to the “Maintenance Schedule” for the proper maintenance intervals. The reasons for any rapid or unusual wear should be corrected prior to rotation being performed.

The suggested rotation method is the “rearward cross” shown in the following diagram. This rotation pattern does not apply to some directional tires that must not be reversed.

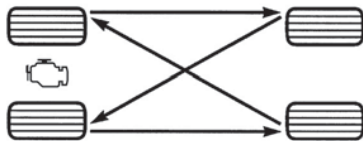

055707139

**Tire Rotation**

## **FUEL REQUIREMENTS — GASOLINE ENGINE**

All engines are designed to meet all emissions regulations and provide excellent fuel economy and performance when using high quality un-

leaded gasoline with a minimum research octane rating of 91. The use of premium gasoline is not recommended, as it will not provide any benefit over regular gasoline in these engines.

Light spark knock at low engine speeds is not harmful to your engine. However, continued heavy spark knock at high speeds can cause damage and immediate service is required.

Poor quality gasoline can cause problems such as hard starting, stalling, and hesitations. If you experience these symptoms, try another brand of gasoline before considering service for the vehicle.

Over 40 automobile manufacturer's world wide have issued and endorsed consistent gasoline specifications (the World Wide Fuel Charter, WWFC) which define fuel properties necessary to deliver enhanced emissions, performance, and durability for your vehicle. The manufacturer recommends the use of gasoline that meets the WWFC specifications if they are available.

### **Methanol**

(Methyl or Wood Alcohol) is used in a variety of concentrations when blended with unleaded gasoline. You may find fuels containing 3% or more methanol along with other alcohols called cosolvents.

Problems that result from using methanol/gasoline or E-85 Ethanol blends are not the responsibility of the manufacturer. While MTBE is an oxygenate made from Methanol, it does not have the negative effects of Methanol.

#### **CAUTION!**

Do not use gasolines containing Methanol or E-85 Ethanol. Use of these blends may result in starting and drivability problems and may damage critical fuel system components.

### **Ethanol**

The manufacturer recommends that your vehicle be operated on fuel containing no more than 10% ethanol. Purchasing your fuel from a reputable supplier may reduce the risk of ex-

ceeding this 10% limit and/or of receiving fuel with abnormal properties. It should also be noted that an increase in fuel consumption should be expected when using ethanol-blended fuels, due to the lower energy content of ethanol. Problems that result from using methanol/gasoline or E-85 ethanol blends are not the responsibility of the manufacturer. While MTBE is an oxygenate made from Methanol, it does not have the negative effects of Methanol.

**CAUTION!**

Use of fuel with Ethanol content higher than 10% may result in engine malfunction, starting and operating difficulties, and materials degradation. These adverse effects could result in permanent damage to your vehicle.

**Clean Air Gasoline**

Many gasolines are now being blended that contribute to cleaner air, especially in those areas where air pollution levels are high. These new blends provide a cleaner burning fuel and some are referred to as "reformulated gasoline."

The manufacturer supports these efforts toward cleaner air. You can help by using these blends as they become available.

**MMT In Gasoline**

MMT is a manganese containing metallic additive that is blended into some gasoline to increase octane. Gasoline blended with MMT provides no performance advantage beyond gasoline of the same octane number without MMT. Gasoline blended with MMT reduces spark plug life and reduces emission system performance in some vehicles. The manufacturer recommends that gasoline without MMT be used in your vehicle. The MMT content of gasoline may not be indicated on the gasoline pump; therefore, you should ask your gasoline retailer whether or not his/her gasoline contains MMT.

**Materials Added To Fuel**

Besides using unleaded gasoline with the proper octane rating, gasolines that contain detergents, corrosion and stability additives are recommended. Using gasolines that have these additives will help improve fuel economy, reduce emissions, and maintain vehicle performance.

Indiscriminate use of fuel system cleaning agents should be avoided. Many of these materials intended for gum and varnish removal may contain active solvents or similar ingredients. These can harm fuel system gasket and diaphragm materials.

**WARNING!**

Carbon monoxide (CO) in exhaust gases is deadly. Follow the precautions below to prevent carbon monoxide poisoning:

- Do not inhale exhaust gases. They contain carbon monoxide, a colorless and odorless gas which can kill. Never run the engine in a closed area, such as a garage, and never sit in a parked vehicle with the engine running for an extended period. If the vehicle is stopped in an open area with the engine running for more than a short period, adjust the ventilation system to force fresh, outside air into the vehicle.

*(Continued)*

### **WARNING! (Continued)**

- Guard against carbon monoxide with proper maintenance. Have the exhaust system inspected every time the vehicle is raised. Have any abnormal conditions repaired promptly. Until repaired, drive with all side windows fully open.
- Keep the liftgate closed when driving your vehicle to prevent carbon monoxide and other poisonous exhaust gases from entering the vehicle.

## **FUEL REQUIREMENTS — DIESEL ENGINE**


Use Premium Quality Diesel fuels with a Cetane rating of 50 or higher (below 15 ppm Sulphur), and meeting the EN590 standard are highly recommended. See your authorized dealer for further information regarding fuels available in your area.

## **ADDING FUEL**

### **Locking Fuel Filler Cap (Gas Cap)**

The locking gas cap is inside the fuel filler door, on the left side of the vehicle. If the gas cap is lost or damaged, be sure the replacement cap is for use with this vehicle.

1. Turn off the engine.
2. Insert the ignition key into the fuel cap and turn the key one-quarter turn to the right, then rotate the fuel cap to the left to remove.
3. After removing the gas cap, place the gas cap tether cable over a hook on the inside of the fuel door. This keeps the gas cap suspended away from and protects the vehicle's surface.

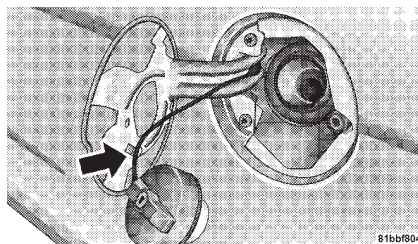

4. Rotate the ignition key back to the left to remove.

5. To replace the cap, insert it into the filler neck and tighten to the right until at least three clicks are heard.

### **Loose Fuel Filler Cap Message**

If the vehicle diagnostic system determines that the fuel filler cap is loose or improperly installed, a "gASCAP" message will be displayed in the Odometer/Trip Odometer in the instrument cluster. Refer to "Instrument Cluster Description" in "Understanding Your Instrument Panel" for further information. Tighten the fuel filler cap properly and press the odometer/trip odometer RESET button to turn the message off. If the problem continues, the message will appear the next time the vehicle is started. Refer to "On-board Diagnostic System" in "Maintaining Your Vehicle" for further information.

## **TRAILER TOWING**

In this section you will find safety tips and information on limits to the type of towing you can reasonably do with your vehicle. Before

towing a trailer, carefully review this information to tow your load as efficiently and safely as possible.

To maintain warranty coverage, follow the requirements and recommendations in this manual concerning vehicles used for trailer towing.

### **Common Towing Definitions**

The following trailer towing related definitions will assist you in understanding the following information:

#### **Gross Vehicle Weight Rating (GVWR)**

The GVWR is the total allowable weight of your vehicle. This includes driver, passengers, cargo, and tongue weight. The total load must be limited so that you do not exceed the GVWR.

#### **Gross Trailer Weight (GTW)**

The GTW is the weight of the trailer plus the weight of all cargo, consumables and equipment (permanent or temporary) loaded in or on the trailer in its "loaded and ready for operation" condition. The recommended way to measure GTW is to put your fully loaded trailer on a

vehicle scale. The entire weight of the trailer must be supported by the scale.

#### **Gross Combination Weight Rating (GCWR)**

The GCWR is the total permissible weight of your vehicle and trailer when weighed in combination.

#### **NOTE:**

**The GCWR rating includes a 150 lbs (68 kg) allowance for the presence of a driver.**

#### **Gross Axle Weight Rating (GAWR)**

The GAWR is the maximum capacity of the front and rear axles. Distribute the load over the front and rear axles evenly. Make sure that you do not exceed either front or rear GAWR.

#### **WARNING!**

It is important that you do not exceed the maximum front or rear GAWR. A dangerous driving condition can result if either rating is exceeded. You could lose control of the vehicle and have an accident.

#### **Tongue Weight (TW)**

The tongue weight is the downward force exerted on the hitch ball by the trailer. In most cases, it should not be less than 5% or more than 10% of the trailer load. Tongue weight must not exceed the lesser of either the hitch certification rating, or the trailer tongue chassis rating. It should never be less than 4% of the trailer load, and not less than 55 lbs (25 kg). You must consider tongue load as part of the load on your vehicle and its GAWR.

#### **WARNING!**

An improperly adjusted hitch system may reduce handling, stability and braking performance and could result in an accident. Consult with your hitch and trailer manufacturer or a reputable trailer/caravan dealer for additional information.

#### **Frontal Area**

The frontal area is the maximum height multiplied by the maximum width of the front of a trailer.


## Breakaway Cable Attachment

European braking regulations for braked trailers up to 7,700 lbs (3 500 kg), require trailers to be fitted with either a secondary coupling or breakaway cable.

The recommended location for attaching the normal trailer's breakaway cable is in the stamped slot located on the sidewall of the hitch receiver.


### With Attachment Point

- For detachable tow bar pass the cable through the attachment point and clip it back onto itself.

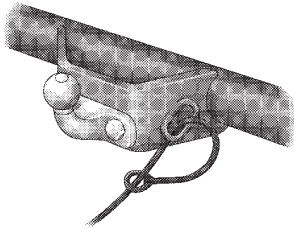

818e675b


- For fixed ball tow bar attach the clip directly to the designated point. This alternative must be specifically permitted by the trailer manufacturer since the clip may not be sufficiently strong for use in the way.

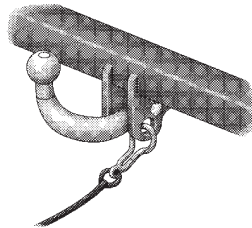

818e675d

### Without Attachment Points

- For detachable ball tow bar you must follow the recommended manufacturer or supplier procedure.
- For fixed ball tow bar loop the cable around the neck of the tow ball. If you fit the cable like this, use a single loop only.

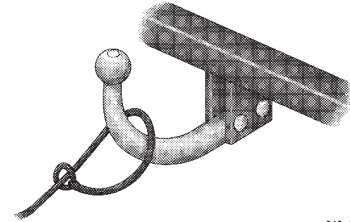

818e6760

### Trailer Towing Weights (Maximum Trailer Weight Ratings)

The following chart provides the maximum trailer weight ratings towable for your given drivetrain.

Engine/Transmission	Max. GTW (Gross Trailer Wt.) Unbraked	Max. GTW (Gross Trailer Wt.) Braked	Max. Tongue Wt. (See Note 1)
2.0L Man (FWD)	1,000 lbs (450 kg)	2,645 lbs (1 200 kg)	132 lbs (60 kg)
2.0L Auto (FWD)	1,000 lbs (450 kg)	2,645 lbs (1 200 kg)	132 lbs (60 kg)
2.2L Diesel/Man (FWD)	1,000 lbs (450 kg)	2,645 lbs (1 200 kg)	132 lbs (60 kg)
2.4L Man (4WD)	1,000 lbs (450 kg)	3,306 lbs (1 500 kg)	165 lbs (75 kg)
2.4L Auto (FWD)	1,000 lbs (450 kg)	3,306 lbs (1 500 kg)	165 lbs (75 kg)
2.2L Diesel/Man (4WD)	1,000 lbs (450 kg)	4,409 lbs (2 000 kg)	220 lbs (100 kg)
<b>Maximum trailer towing speed is limited to 62 mph (100 km/h) unless local laws require a lower speed</b>			

Note 1 – The trailer tongue weight must be considered as part of the combined weight of occupants and cargo, and should never exceed the weight referenced on the Tire and Loading Information placard.



## Trailer And Tongue Weight

Loads balanced over the wheels or heavier in the rear can cause the trailer to sway **severely** from side-to-side which will cause loss of control of the vehicle and trailer. Failure to load trailers heavier in front is the cause of many trailer accidents.

Never exceed the maximum tongue weight stamped on your trailer hitch.

Consider the following items when computing the weight on the rear axle of the vehicle:

- The tongue weight of the trailer.
- The weight of any other type of cargo or equipment put in or on your vehicle.
- The weight of the driver and all passengers.

### NOTE:

**Remember that everything put into or on the trailer adds to the load on your vehicle. Also, additional factory-installed options, or dealer-installed options, must be considered as part of the total load on your vehicle. Refer to the Tire and Loading Information placard, located on the drivers door pillar, for the maximum combined weight of occupants and cargo for your vehicle.**

### Towing Requirements

To promote proper break-in of your new vehicle drivetrain components the following guidelines are recommended:

#### CAUTION!

- Do not tow a trailer at all during the first 500 miles (805 km) the new vehicle is driven. The engine, axle or other parts could be damaged.

*(Continued)*

#### CAUTION! *(Continued)*

- Then, during the first 500 miles (805 km) that a trailer is towed, do not drive over 50 mph (80 km/h) and do not make starts at full throttle. This helps the engine and other parts of the vehicle wear in at the heavier loads.

#### WARNING!

Improper towing can lead to an injury accident. Follow these guidelines to make your trailer towing as safe as possible:

- Make certain that the load is secured in the trailer and that it will not shift during travel. When trailering cargo that is not fully secured, dynamic load shifts can occur that may be difficult for the driver to control. You could lose control of your vehicle and have an accident.
- All trailer hitches should be professionally installed on your vehicle.

*(Continued)*

**WARNING! (Continued)**

- When hauling cargo or towing a trailer, do not overload your vehicle or trailer. Overloading can cause a loss of control, poor performance, or damage to brakes, axle, engine, transmission, steering, suspension, chassis structure, or tires.
- Safety chains must always be used between your vehicle and trailer. Always connect the chains to the frame or hook retainers of the vehicle hitch. Cross the chains under the trailer tongue and allow enough slack for turning corners.
- Vehicles with trailers should not be parked on a grade. When parking, apply the parking brake on the tow vehicle. Always, block or "chock" the trailer wheels.
- GCWR must not be exceeded.

**(Continued)**

**WARNING! (Continued)**

- **Total weight must be distributed between the tow vehicle and the trailer such that the following four ratings are not exceeded:**

1. GVWR
2. GTW
3. GAWR
4. Tongue weight rating for the trailer hitch utilized.

**Towing Requirements – Tires**

- Do not attempt to tow a trailer while using a compact spare tire.
- Proper tire inflation pressures are essential for the safe and satisfactory operation of your vehicle. Refer to "Tires – General Information" in "Starting and Operating" for proper tire inflation procedures.
- Check the trailer tires for proper tire inflation pressures before trailer usage.

- Check for signs of tire wear or visible tire damage before towing a trailer. Refer to "Tires – General Information" in "Starting and Operating" for the proper inspection procedure.
- When replacing tires, refer to "Tires – General Information" in "Starting and Operating" for proper tire replacement procedures. Replacing tires with a higher load carrying capacity will not increase the vehicle's GVWR and GAWR limits.

**Towing Requirements – Trailer Brakes**

- Do **not** interconnect the hydraulic brake system or vacuum system of your vehicle with that of the trailer. This could cause inadequate braking and possible personal injury.
- When towing a trailer equipped with a hydraulic surge actuated brake system, an electronic brake controller is not required.
- Trailer brakes are recommended for trailers over 1,000 lbs (450 kg) and required for trailers in excess of 1,653 lbs (750 kg).

**CAUTION!**

If the trailer weighs more than 1,000 lbs (450 kg) loaded, it should have its own brakes and they should be of adequate capacity. Failure to do this could lead to accelerated brake lining wear, higher brake pedal effort, and longer stopping distances.

**WARNING!**

- Do not connect trailer brakes to your vehicle's hydraulic brake lines. It can overload your brake system and cause it to fail. You might not have brakes when you need them and could have an accident.
- Towing any trailer will increase your stopping distance. When towing, you should allow for additional space between your vehicle and the vehicle in front of you. Failure to do so could result in an accident.

**Towing Requirements – Trailer Lights And Wiring**


Whenever you pull a trailer, regardless of the trailer size, stop lights and turn signals on the trailer are required for motoring safety.

The Trailer Tow Package may include a 7 or a 13-pin wiring harness. Use a factory approved trailer harness and connector.

**NOTE:**

**Do not cut or splice wiring into the vehicles wiring harness.**


The electrical connections are all complete to the vehicle but you must mate the harness to a trailer connector.

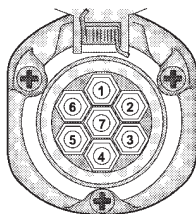

81789d4e

Pin Number	Function	Wire Color
1	Left Turn Signal	Yellow
2	Rear Fog Light	Blue
3	Ground/Common Return	White
4	Right Turn Signal	Green
5	Right Rear Position, Side Marker Lights, and Rear Registration Plate Illumination Device. <sup>b</sup>	Brown
6	Stop Lights	Red
7	Left Rear Position, Side Marker Lights, and Rear Registration Plate Illumination Device. <sup>b</sup>	Black

<sup>b</sup> The rear position registration plate illumination device shall be connected such that no light of the device has a common connection with both pins 5 and 7.

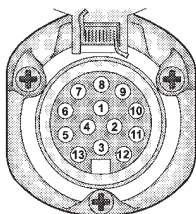

81789d61

Pin Number	Function	Wire Color
1	Left Turn Signal	Yellow
2	Rear Fog Light	Blue
3 <sup>a</sup>	Ground/Common Return for Contacts (Pins) 1 and 2 and 4 to 8	White
4	Right Turn Signal	Green

Pin Number	Function	Wire Color
5	Right Rear Position, Side Marker Lights, and Rear Registration Plate Illumination Device. <sup>b</sup>	Brown
6	Stop Lights	Red
7	Left Rear Position, Side Marker Lights, and Rear Registration Plate Illumination Device. <sup>b</sup>	Black
8	Reverse lights	Red/Black
9	Permanent Power Supply (+12V)	Brown/White
10	Power Supply Controlled by Ignition Switch (+12V)	Red
11 <sup>a</sup>	Return for Contact (Pin) 10	White

Pin Number	Function	Wire Color
12	Reserve for Future Allocation	Red/Blue
13 <sup>a</sup>	Return for Contact (Pin) 9	White
Note: The allocation pin 12 has been changed from "Coding for coupled Trailer" to "Reserve for Future Allocation."		
<sup>a</sup> The three return circuits shall not be connected electrically in the trailer.		
<sup>b</sup> The rear position registration plate illumination device shall be connected such that no light of the device has a common connection with both pins 5 and 7.		

## **Towing Tips**

Before setting out on a trip, practice turning, stopping and backing the trailer in an area away from heavy traffic.

### **Manual Transmission – If Equipped**

If using a manual transmission vehicle for trailer towing, all starts must be in first gear to avoid excessive clutch slippage.

### **Automatic Transmission — If Equipped**

The DRIVE range can be selected when towing. However, if frequent shifting or changes in engine speed occur while in this range, use the AutoStick® shift control to select a lower gear ratio.

#### **NOTE:**

**Using a lower gear ratio while operating the vehicle under heavy loading conditions, will improve performance and extend transmission life by reducing excessive shifting and heat buildup. This action will also provide better engine braking.**

If you REGULARLY tow a trailer for more than 45 minutes of continuous operation, then change the transmission fluid and filter as specified for "police, taxi, fleet, or frequent trailer towing." Refer to the "Maintenance Schedule" for the proper maintenance intervals.

### **AutoStick®**

- When using the AutoStick® shift control, select the highest gear that allows for adequate performance and avoids frequent downshifts. For example, choose "4" if the desired speed can be maintained. Choose "3" or "2" if needed to maintain the desired speed.
- To prevent excess heat generation, avoid continuous driving at high RPM. Reduce vehicle speed as necessary to avoid extended driving at high RPM. Return to a higher gear or vehicle speed when grade and road conditions allow.

### **Electronic Speed Control – If Equipped**

- Do not use in hilly terrain or with heavy loads.
- When using the speed control, if you experience speed drops greater than 10 mph (16 km/h), disengage until you can get back to cruising speed.
- Use speed control in flat terrain and with light loads to maximize fuel efficiency.

### **Cooling System**

To reduce potential for engine and transmission overheating, take the following actions:

#### **City Driving**

When stopped for short periods of time, shift the transmission into NEUTRAL and increase engine idle speed.

#### **Highway Driving**


Reduce speed.

#### **Air Conditioning**

Turn off temporarily.

**Trailer Hitch Attaching Points**

Your vehicle will require extra equipment to safely and efficiently tow a trailer. The trailer tow hitch must be attached to your vehicle using the provided attaching points on the vehicle's frame. Refer to the following chart to determine the accurate attaching points. Other equipment, such as trailer sway controls and braking equipment, trailer equalizing (leveling) equipment and low profile mirrors, may also be required or strongly recommended.

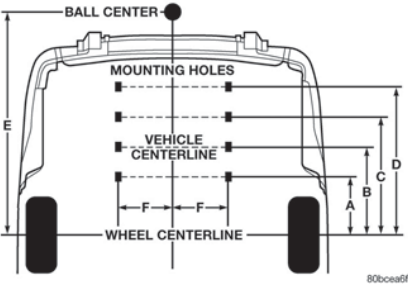

Trailer Tow Hitch Attaching Points And Overhang Dimensions	
A (Mounting holes on bottom and side of frame)	25 in (630 mm)
B (May vary with type of trailer)	21 in (525 mm)
C	39 in (983 mm)

## RECREATIONAL TOWING (BEHIND MOTORHOME, ETC.)

### Towing This Vehicle Behind Another Vehicle

Towing Condition	Wheels OFF the Ground	Manual Transmission	Automatic Transmission
Flat Tow	None	<ul style="list-style-type: none"> <li>• Transmission in NEUTRAL</li> <li>• Key in ACC</li> </ul>	<b>NOT ALLOWED</b>
Dolly Tow	Front	OK (FWD Only)	OK (FWD Only)
	Rear	<b>NOT ALLOWED</b>	<b>NOT ALLOWED</b>
On Trailer	<b>All</b>	OK	OK

NOTE: Vehicles equipped with **manual transmissions** may be recreationally towed (flat towed) at any legal highway speed, for any distance, if the **manual transmission** is in NEUTRAL and the ignition key is in the ACC position.

#### CAUTION!

- DO NOT flat tow any vehicle equipped with an automatic transmission. Damage to the drivetrain will result. If these vehicles require towing, make sure all drive wheels are OFF the ground.
- DO NOT dolly tow any 4WD vehicle. Internal damage to the transmission or transfer case will occur if a dolly is used when recreational towing.





## WHAT TO DO IN EMERGENCIES

- HAZARD WARNING FLASHERS . . . . .190
- IF YOUR ENGINE OVERHEATS . . . . .190
- AUTOMATIC TRANSMISSION OVERHEATING . . . . .191
- JACKING AND TIRE CHANGING . . . . .191
  - Jack Location . . . . .191
  - Spare Tire Stowage . . . . .192
  - Preparations For Jacking . . . . .192
  - Jacking Instructions . . . . .192
  - Road Tire Installation. . . . .196
- JUMP-STARTING PROCEDURES. . . . .197
  - Preparations For Jump-Start . . . . .197
  - Jump-Starting Procedure . . . . .198
- FREEING A STUCK VEHICLE. . . . .199
- TOW EYE . . . . .200
  - Front Tow Eye Usage. . . . .201
  - Rear Tow Eye Usage . . . . .201
- SHIFT LEVER OVERRIDE . . . . .202
- TOWING A DISABLED VEHICLE . . . . .203
  - With Ignition Key . . . . .203

## HAZARD WARNING FLASHERS

The Hazard Warning flasher switch is located on the instrument panel below the climate controls.



Press the switch to turn on the Hazard Warning flasher. When the switch is activated, all directional turn signals will flash on and off to warn oncoming traffic of an emergency. Press the switch a second time to turn off the Hazard Warning flashers.

This is an emergency warning system and it should not be used when the vehicle is in motion. Use it when your vehicle is disabled and it is creating a safety hazard for other motorists.

When you must leave the vehicle to seek assistance, the Hazard Warning flashers will continue to operate even though the ignition is placed in the OFF position.

### NOTE:

**With extended use the Hazard Warning flashers may wear down your battery.**

## IF YOUR ENGINE OVERHEATS

In any of the following situations, you can reduce the potential for overheating by taking the appropriate action.

- On the highways — slow down.
- In city traffic — while stopped, place the transmission in NEUTRAL, but do not increase engine idle speed.

### NOTE:

**There are steps that you can take to slow down an impending overhear condition:**

- **If your air conditioner (A/C) is on, turn it off. The A/C system adds heat to the engine cooling system and turning the A/C off can help remove this heat.**
- **You can also turn the temperature control to maximum heat, the mode control to floor and the blower control to high. This allows the heater core to act as a supplement to the radiator and aids in removing heat from the engine cooling system.**

### CAUTION!

Driving with a hot cooling system could damage your vehicle. If the pointer rises to the **H** (red) mark, the instrument cluster will sound a chime. When safe, pull over and stop the vehicle with the engine at idle. Turn off the air conditioning and wait until the pointer drops back into the normal range. If the pointer remains on the **H** (red) mark for more than a minute, turn the engine off immediately and call for service.

### WARNING!

You or others can be badly burned by hot engine coolant (antifreeze) or steam from your radiator. If you see or hear steam coming from under the hood, do not open the hood until the radiator has had time to cool. Never try to open a cooling system pressure cap when the radiator or coolant bottle is hot.

## AUTOMATIC TRANSMISSION OVERHEATING

During sustained high speed driving or trailer towing up long grades on hot days, the automatic transmission oil may become too hot.



If this happens, the transmission overheat indicator light will come on, and the vehicle will slow slightly until the automatic transmission cools down enough to allow a return to the requested speed. If the high speed is maintained, the overheating may reoccur, as before, in a cyclic fashion.

## JACKING AND TIRE CHANGING

### WARNING!

- Do not attempt to change a tire on the side of the vehicle close to moving traffic. Pull far enough off the road to avoid the danger of being hit when operating the jack or changing the wheel.
- Being under a jacked-up vehicle is dangerous. The vehicle could slip off the jack and fall on you. You could be crushed. Never put any part of your body under a vehicle that is on a jack. If you need to get under a raised vehicle, take it to a service center where it can be raised on a lift.
- Never start or run the engine while the vehicle is on a jack.


*(Continued)*

### WARNING! (Continued)

- The jack is designed to be used as a tool for changing tires only. The jack should not be used to lift the vehicle for service purposes. The vehicle should be jacked on a firm level surface only. Avoid ice or slippery areas.

### Jack Location

The jack and jack-handle are stowed under the load floor in the cargo area.

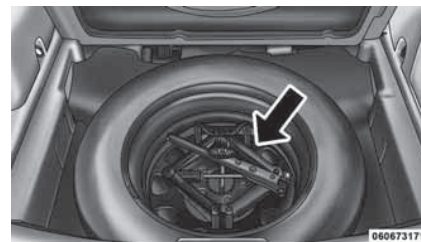

**Spare Tire And Jack Stowage**

## Spare Tire Stowage

The compact spare tire is stowed under the rear load floor in the cargo area.

## Spare Tire Removal

Lift up the load floor cover and remove the hold down.

## Preparations For Jacking

1. Park the vehicle on a firm level surface, avoiding ice or slippery areas.

### WARNING!

Do not attempt to change a tire on the side of the vehicle close to moving traffic, pull far enough off the road to avoid the danger of being hit when operating the jack or changing the wheel.

2. Turn on the Hazard Warning flasher.

3. Set the parking brake.

4. Place the shift lever in PARK (automatic transmission) or REVERSE (manual transmission).

5. Turn OFF the ignition.

6. Block both the front and rear of the wheel diagonally opposite the jacking position. For example, if changing the right front tire, block the left rear wheel.



### NOTE:

**Passengers should not remain in the vehicle while the vehicle is being jacked.**

## Jacking Instructions

### WARNING!

Carefully follow these tire changing warnings to help prevent personal injury or damage to your vehicle:

*(Continued)*

### WARNING! (Continued)

- Always park on a firm, level surface as far from the edge of the roadway as possible before raising the vehicle.
- Turn on the Hazard Warning flasher.
- Block the wheel diagonally opposite the wheel to be raised.
- Set the parking brake firmly and set an automatic transmission in PARK; a manual transmission in REVERSE.
- Never start or run the engine with the vehicle on a jack.
- Do not let anyone sit in the vehicle when it is on a jack.
- Do not get under the vehicle when it is on a jack. If you need to get under a raised vehicle, take it to a service center where it can be raised on a lift.
- Only use the jack in the positions indicated and for lifting this vehicle during a tire change.

*(Continued)*

### **WARNING! (Continued)**

- If working on or near a roadway, be extremely careful of motor traffic.
- To assure that spare tires, flat or inflated, are securely stowed, spares must be stowed with the valve stem facing out.



Jack Warning Label

### **CAUTION!**

Do not attempt to raise the vehicle by jacking on locations other than those indicated in the Jacking Instructions for this vehicle.


### **NOTE:**

Refer to “Tires — General Information” in “Starting And Operating” for further information about the spare tire, its use, and operation.

1. Remove the scissors jack and lug wrench from the spare wheel as an assembly. Turn the jack screw to the left to loosen the lug wrench and remove the wrench from the jack assembly.

### **NOTE:**

The jack handle attaches to the side of the jack with two attachment points. When the jack is partially expanded, the tension between the two attachment points holds the jack handle in place.

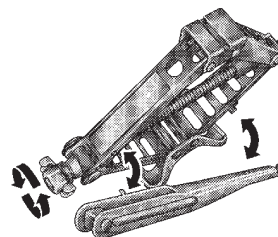


819b068d

### **Removing Jack Handle From Jack**

2. Loosen, but do not remove, the wheel nuts by turning them to the left one turn while the wheel is still on the ground.

### **NOTE:**


There are front and rear jacking locations on each side of the body. The front locations are outlined by two triangular cutouts on one of the flanges in the sill flange assembly. The rear location is the same but with two rectangular cutouts. For vehicles equipped with plastic trim, the plastic has been cut away to expose the jacking locations in the body.

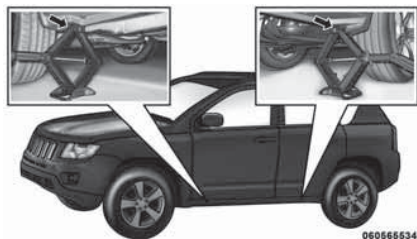


**Jacking Locations**

**CAUTION!**

Do not attempt to raise the vehicle by jacking on locations other than those indicated.

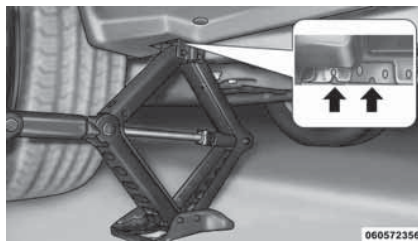

**Front Jacking Location**

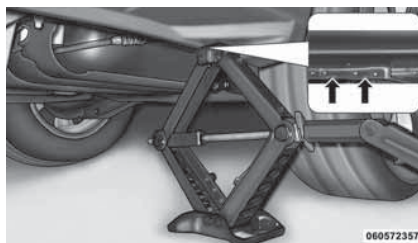

**Rear Jacking Location**

Do not raise the vehicle until you are sure the jack is securely engaged.

3. Turn the jack screw to the left until the jack can be placed under the jacking location. Once the jack is positioned, turn the jack screw to the right until the jack head is properly engaged with the lift area closest to the wheel to be changed.

**WARNING!**

Raising the vehicle higher than necessary can make the vehicle less stable. It could slip off the jack and hurt someone near it. Raise the vehicle only enough to remove the tire.

4. Using the swivel wrench raise the vehicle by turning the jack screw to the right. Raise the vehicle only until the tire just clears the surface and enough clearance is obtained to install the spare tire. Minimum tire lift provides maximum stability.

5. Remove the wheel nuts and pull the wheel and wheel covers, where applicable, off the hub. Install the spare wheel and wheel nuts with the cone shaped end of the nuts toward the wheel. Lightly tighten the nuts.

**WARNING!**

To avoid the risk of forcing the vehicle off the jack, do not tighten the wheel nuts fully until the vehicle has been lowered. Failure to follow this warning may result in personal injury.



060633619

**Mounting Spare Tire**

**CAUTION!**

Be sure to mount the spare tire with the valve stem facing outward. The vehicle could be damaged if the spare tire is mounted incorrectly.

**WARNING!**

To avoid possible personal injury, handle the wheel covers with care to avoid contact with any sharp edges.

**NOTE:**

**The wheel cover is held on the wheel by the wheel nuts. When reinstalling the original wheel, properly align the wheel cover to the valve stem, place the wheel cover onto the wheel, then install the wheel nuts.**

6. Lower the vehicle by turning the jack screw to the left.

7. Finish tightening the nuts. Push down on the wrench while at the end of the handle for increased leverage. Tighten the lug nuts in a star pattern until each nut has been tightened twice. The correct wheel nut torque is 100 ft lbs (135 N·m). If you doubt that you have tightened the nuts correctly, have them checked with a torque wrench by your authorized dealer or service station.

8. Remove the wheel blocks and lower the jack until it is free. Release the parking brake. Reassemble the lug wrench to the jack assembly and stow it in the spare tire area. Secure the assembly using the means provided.

**WARNING!**

A loose tire or jack thrown forward in a collision or hard stop could endanger the occupants of the vehicle. Always stow the jack parts and the spare tire in the places provided.

9. Place the deflated (flat) tire in the cargo area, **have the tire repaired or replaced as soon as possible.**

**WARNING!**


A loose tire thrown forward in a collision or hard stop could injure the occupants in the vehicle. Have the deflated (flat) tire repaired or replaced immediately.

10. Check the spare tire pressure as soon as possible. Correct the tire pressure as required.

## Road Tire Installation

### Vehicles Equipped With Wheel Covers

1. Mount the road tire on the axle.
2. Align the valve notch in the wheel cover with the valve stem on the wheel. Install the cover by hand. Do not use a hammer or excessive force to install the cover.

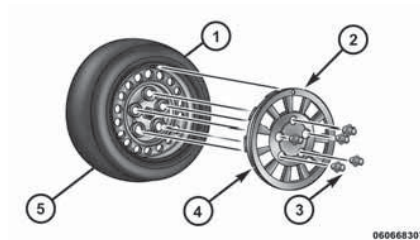

**Tire And Wheel Cover Or Center Cap**

- |                   |                 |
|-------------------|-----------------|
| 1 — Valve Stem    | 4 — Wheel Cover |
| 2 — Valve Notch   | 5 — Road Wheel  |
| 3 — Wheel Lug Nut |                 |

3. Install the five wheel lug nuts with the cone shaped end of the nut toward the wheel. Lightly tighten the lug nuts.

**WARNING!**

To avoid the risk of forcing the vehicle off the jack, do not tighten the lug nuts fully until the vehicle has been lowered. Failure to follow this warning may result in personal injury.

4. Lower the vehicle to the ground by turning the jack handle counterclockwise.
5. Finish tightening the lug nuts. Push down on the wrench while at the end of the handle for increased leverage. Tighten the lug nuts in a star pattern until each nut has been tightened twice. The correct tightness of each lug nut is 100 ft/lbs (135 N·m). If in doubt about the correct tightness, have them checked with a torque wrench by your authorized dealer or service station.
6. After 25 miles (40 km) check the lug nut torque with a torque wrench to ensure that all lug nuts are properly seated against the wheel.



### Vehicles Without Wheel Covers

1. Mount the road tire on the axle.
2. Install the remaining lug nuts with the cone shaped end of the nut toward the wheel. Lightly tighten the lug nuts.

#### WARNING!

To avoid the risk of forcing the vehicle off the jack, do not fully tighten the lug nuts until the vehicle has been lowered. Failure to follow this warning may result in personal injury.

3. Lower the vehicle to the ground by turning the jack handle counterclockwise.
4. Finish tightening the lug nuts. Push down on the wrench while at the end of the handle for increased leverage. Tighten the lug nuts in a star pattern until each nut has been tightened twice. The correct tightness of each lug nut is 100 ft/lbs (135 N·m). If in doubt about the correct tightness, have them checked with a torque wrench by your authorized dealer or service station.

5. After 25 miles (40 km) check the lug nut torque with a torque wrench to ensure that all lug nuts are properly seated against the wheel.

## JUMP-STARTING PROCEDURES

If your vehicle has a discharged battery it can be jump-started using a set of jumper cables and a battery in another vehicle or by using a portable battery booster pack. Jump-starting can be dangerous if done improperly so please follow the procedures in this section carefully.

#### NOTE:

**When using a portable battery booster pack follow the manufacturer's operating instructions and precautions.**

#### CAUTION!


Do not use a portable battery booster pack or any other booster source with a system voltage greater than 12 Volts or damage to the battery, starter motor, alternator or electrical system may occur.

#### WARNING!


Do not attempt jump-starting if the battery is frozen. It could rupture or explode and cause personal injury.

### Preparations For Jump-Start

The battery in your vehicle is located in the front of the engine compartment below the air intake duct. To access the battery remove the air intake duct by turning the two finger screws, located on the radiator support.

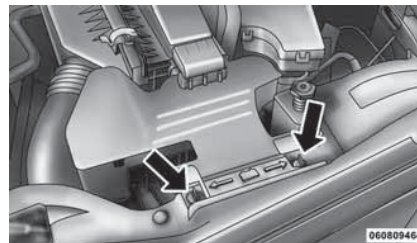

**Air Intake Finger Screws**

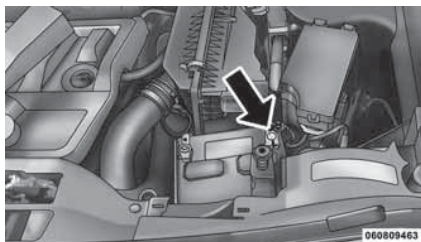

**Positive Battery Post**

**WARNING!**

- Take care to avoid the radiator cooling fan whenever the hood is raised. It can start anytime the ignition switch is ON. You can be injured by moving fan blades.
- Remove any metal jewelry such as rings, watch bands and bracelets that could make an inadvertent electrical contact. You could be seriously injured.

**(Continued)**

**WARNING! (Continued)**

- Batteries contain sulfuric acid that can burn your skin or eyes and generate hydrogen gas which is flammable and explosive. Keep open flames or sparks away from the battery.

1. Set the parking brake, shift the automatic transmission into PARK (manual transmission to NEUTRAL) and turn the ignition to LOCK.
2. Turn off the heater, radio, and all unnecessary electrical accessories.
3. If using another vehicle to jump-start the battery, park the vehicle within the jumper cables reach, set the parking brake and make sure the ignition is OFF.

**WARNING!**

Do not allow vehicles to touch each other as this could establish a ground connection and personal injury could result.

## Jump-Starting Procedure

**WARNING!**

Failure to follow this procedure could result in personal injury or property damage due to battery explosion.

**CAUTION!**

Failure to follow these procedures could result in damage to the charging system of the booster vehicle or the discharged vehicle.

**NOTE:**

**Remove Air Intake before proceeding with this Jump-Starting procedure.**

1. Connect the positive (+) end of the jumper cable to the positive (+) post of the discharged vehicle.
2. Connect the opposite end of the positive (+) jumper cable to the positive (+) post of the booster battery.

3. Connect the negative end (-) of the jumper cable to the negative (-) post of the booster battery.

4. Connect the opposite end of the negative (-) jumper cable to a good engine ground (exposed metal part of the discharged vehicle's engine) away from the battery and the fuel injection system.

#### **WARNING!**

Do not connect the cable to the negative post (-) of the discharged battery. The resulting electrical spark could cause the battery to explode and could result in personal injury.

5. Start the engine in the vehicle that has the booster battery, let the engine idle a few minutes, and then start the engine in the vehicle with the discharged battery.

Once the engine is started, remove the jumper cables in the reverse sequence:

6. Disconnect the negative (-) jumper cable from the engine ground of the vehicle with the discharged battery.

7. Disconnect the negative end (-) of the jumper cable from the negative (-) post of the booster battery.

8. Disconnect the opposite end of the positive (+) jumper cable from the positive (+) post of the booster battery.

9. Disconnect the positive (+) end of the jumper cable from the positive (+) post of the discharged vehicle.

10. Reinstall the air intake duct.  
If frequent jump-starting is required to start your vehicle you should have the battery and charging system inspected at your authorized dealer.

#### **CAUTION!**

Accessories plugged into the vehicle power outlets draw power from the vehicle's battery, even when not in use (i.e., cellular phones, etc.). Eventually, if plugged in long enough without engine operation, the vehicle's battery will discharge sufficiently to degrade battery life and/or prevent the engine from starting.

## **FREEING A STUCK VEHICLE**

If your vehicle becomes stuck in mud, sand or snow, it can often be moved using a rocking motion. Turn the steering wheel right and left to clear the area around the front wheels. Then shift back and forth between DRIVE and REVERSE (with automatic transmission) or 2nd gear and REVERSE (with manual transmission), while gently pressing the accelerator. Use the least amount of accelerator pedal pressure that will maintain the rocking motion, without spinning the wheels, or racing the engine.

#### **CAUTION!**

Racing the engine or spinning the wheels may lead to transmission overheating and failure. Allow the engine to idle with the transmission in NEUTRAL for at least one minute after every five rocking-motion cycles. This will minimize overheating and reduce the risk of transmission failure during prolonged efforts to free a stuck vehicle.

**NOTE:**

Press the "ESC Off" switch, to place the Electronic Stability Control (ESC) system in "Partial Off" mode, before rocking the vehicle. Refer to "Electronic Brake Control" in "Starting And Operating" for further information. Once the vehicle has been freed, press the "ESC Off" switch again to restore "ESC On" mode.

**CAUTION!**

- When "rocking" a stuck vehicle by shifting between DRIVE/2nd gear and REVERSE, do not spin the wheels faster than 15 mph (24 km/h), or drivetrain damage may result.
- Revving the engine or spinning the wheels too fast may lead to transmission overheating and failure. It can also damage the tires. Do not spin the wheels above 30 mph (48 km/h) while in gear (no transmission shifting occurring).

**WARNING!**

Fast spinning tires can be dangerous. Forces generated by excessive wheel speeds may cause damage, or even failure, of the axle and tires. A tire could explode and injure someone. Do not spin your vehicle's wheels faster than 30 mph (48 km/h) or for longer than 30 seconds continuously without stopping when you are stuck and do not let anyone near a spinning wheel, no matter what the speed.

**TOW EYE**

Your vehicle is equipped with a tow eye that can be used to rescue your vehicle, should it become stranded off road.



061409191

**Tow Eye****CAUTION!**

Tow eyes are for emergency use only, to rescue a vehicle stranded off road. Do not use tow eyes for tow truck hookup or highway towing. You could damage your vehicle. Tow straps are recommended when towing the vehicle; chains may cause vehicle damage.

**WARNING!**

Stand clear of vehicles when pulling with tow eyes. Tow straps and chains may break, causing serious injury.

**Front Tow Eye Usage**

The front tow eye receptacle is located on the lower right side of the front fascia.

To install the tow eye, remove the rubber plug and thread the tow eye into the receptacle.

Insert the flat end of the jack handle through the eye and tighten, refer to “Jacking and Tire Changing in Section 6 for information”. The tow hook must be fully seated to the attaching bracket through the lower front fascia as shown. If the tow hook is not fully seated to the attaching bracket, the vehicle should not be towed.



**Front Tow Eye Installed**

**Rear Tow Eye Usage**

The rear tow eye receptacle is located behind a door, located on the left rear bumper fascia.

To install the tow eye, open the door using the vehicle key or a small screwdriver, and thread the tow eye into the receptacle.

Insert the flat end of the jack handle through the eye and tighten, refer to “Jacking and Tire Changing in Section 6 for information”. The tow hook must be fully seated to the attaching bracket through the left rear bumper fascia as shown. If the tow hook is not fully seated to the attaching bracket, the vehicle should not be towed.




**Rear Tow Eye Installed**

## SHIFT LEVER OVERRIDE

If a malfunction occurs and the shift lever cannot be moved out of the PARK position, you can use the following procedure to temporarily move the shift lever:

1. Turn the engine OFF.
2. Firmly apply the parking brake.
3. Using a small screwdriver or similar tool, remove the shift lever override access cover (located on the right side of the shifter housing).

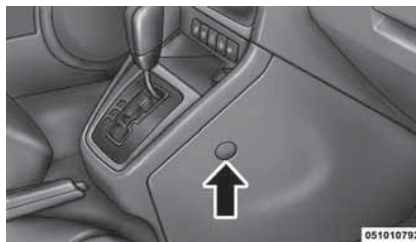

**Shift Lever Override Access Cover**

4. Turn the ignition switch to the ACC or ON/RUN position, but do not start the engine.

5. Press and maintain firm pressure on the brake pedal.

6. Insert the screwdriver or similar tool into the access port, and push and hold the override release lever forward.

7. Move the shift lever to the NEUTRAL position.

8. The vehicle may then be started in NEUTRAL.

9. Reinstall the shift lever override access cover.

## TOWING A DISABLED VEHICLE

This section describes procedures for towing a disabled vehicle using a commercial wrecker service.

Towing Condition	Wheels OFF the Ground	Manual Transmission	Automatic Transmission
Flat Tow	NONE	<ul style="list-style-type: none"><li>• Transmission in NEUTRAL</li><li>• Key in ACC or ON/RUN position</li></ul>	<b>NOT ALLOWED</b>
Wheel Lift or Dolly Tow	Front	FWD Models <b>ONLY</b>	FWD Models <b>ONLY</b>
	Rear	<b>NOT ALLOWED</b>	<b>NOT ALLOWED</b>
Flatbed	<b>ALL</b>	<b>BEST METHOD</b>	<b>BEST METHOD</b>

### With Ignition Key

#### Automatic Transmission

- Front Wheel Drive (FWD) vehicles can be towed with the front wheels elevated, or on a flatbed truck (all four wheels **OFF** the ground).
- Four-Wheel Drive (4WD) vehicles must be towed on a flatbed truck (all four wheels **OFF** the ground).

#### CAUTION!

- **DO NOT** flat tow any vehicle equipped with an automatic transmission. Damage to the drivetrain will result.
- Towing this vehicle in violation of the above requirements can cause severe transmission and/or transfer case damage. Damage from improper towing is not covered under the New Vehicle Limited Warranty.

### Manual Transmission

- Front Wheel Drive (FWD) or Four-Wheel Drive (4WD) vehicles can be flat towed (all four wheels on the ground) with the transmission in NEUTRAL.
- FWD vehicles can be towed with the front wheels elevated.
- FWD or 4WD vehicles can be towed on a flatbed truck (all wheels **OFF** the ground).

#### CAUTION!

**DO NOT** flat tow any disabled vehicle if condition is related to the clutch, transmission or driveline. Additional damage to the drivetrain could result.

### All Transmissions

If you must use the accessories (wipers, defroster, etc.) while being towed, the key must be in the ON/RUN position, not the ACC position. Make certain the transmission remains in NEUTRAL.

If the vehicle's battery is discharged, see "Shift Lever Override" in this section for instructions on shifting the automatic transmission out of PARK for towing.

#### CAUTION!

**DO NOT** use sling-type equipment when towing. When securing the vehicle to a flatbed truck, do not attach to front or rear suspension components. Damage to your vehicle may result from improper towing.

### Without The Ignition Key

Special care must be taken when the vehicle is towed with the ignition in the LOCK/OFF position. The only approved method of towing without the ignition key is with a flatbed truck. Proper towing equipment is necessary to prevent damage to the vehicle.




## MAINTAINING YOUR VEHICLE

• ENGINE COMPARTMENT — 2.0L . . . . .	.207
• ENGINE COMPARTMENT — 2.4L . . . . .	.208
• ENGINE COMPARTMENT — 2.2L DIESEL . . . . .	.209
• ONBOARD DIAGNOSTIC SYSTEM — OBD II . . . . .	.210
• Loose Fuel Filler Cap Message . . . . .	.210
• REPLACEMENT PARTS . . . . .	.210
• MAINTENANCE PROCEDURES . . . . .	.210
• Engine Oil . . . . .	.211
• Engine Oil Filter . . . . .	.212
• Engine Air Cleaner Filter . . . . .	.213
• Engine Air Cleaner Filter – Diesel Engine . . . . .	.213
• Maintenance-Free Battery . . . . .	.214
• Air Conditioner Maintenance . . . . .	.214
• Body Lubrication . . . . .	.215
• Windshield Wiper Blades . . . . .	.215
• Adding Washer Fluid . . . . .	.216
• Exhaust System . . . . .	.216
• Cooling System . . . . .	.217
• Brake System . . . . .	.223

• Automatic Transmission – If Equipped . . . . .	.225
• Manual Transmission – If Equipped . . . . .	.226
• Rear Drive Assembly (RDA) – AWD/4WD Models Only . . . . .	.226
• Power Transfer Unit (PTU) – AWD/4WD Models Only . . . . .	.226
• Appearance Care And Protection From Corrosion . . . . .	.227
• FUSES . . . . .	.230
• Integrated Power Module . . . . .	.230
• VEHICLE STORAGE . . . . .	.233
• REPLACEMENT BULBS . . . . .	.233
• BULB REPLACEMENT . . . . .	.234
• Headlamps . . . . .	.234
• Fog Lamps . . . . .	.234
• Side Repeater Lamps . . . . .	.234
• Rear Tail/Stop Lamps . . . . .	.234
• Rear Turn Signal And Backup Lamps . . . . .	.234
• License Lamps . . . . .	.234
• Center High-Mounted Stoplamp . . . . .	.234
• FLUID CAPACITIES . . . . .	.235
• FLUIDS, LUBRICANTS AND GENUINE PARTS . . . . .	.236
• Engine . . . . .	.236
• Chassis . . . . .	.237

## ENGINE COMPARTMENT — 2.0L

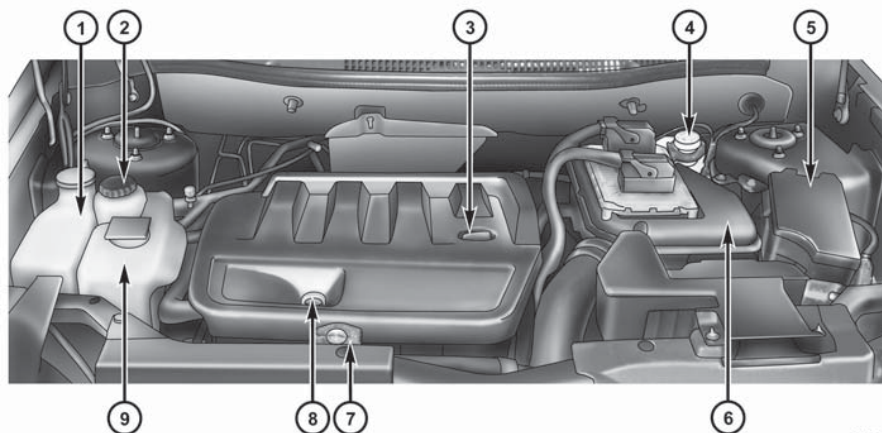


070339986

- 1 — Washer Fluid Reservoir
- 2 — Power Steering Fluid Reservoir
- 3 — Engine Oil Fill
- 4 — Brake Fluid Reservoir
- 5 — Integrated Power Module (Fuses)

- 6 — Air Cleaner Filter
- 7 — Coolant Pressure Cap
- 8 — Engine Oil Dipstick
- 9 — Engine Coolant Reservoir

## ENGINE COMPARTMENT — 2.4L

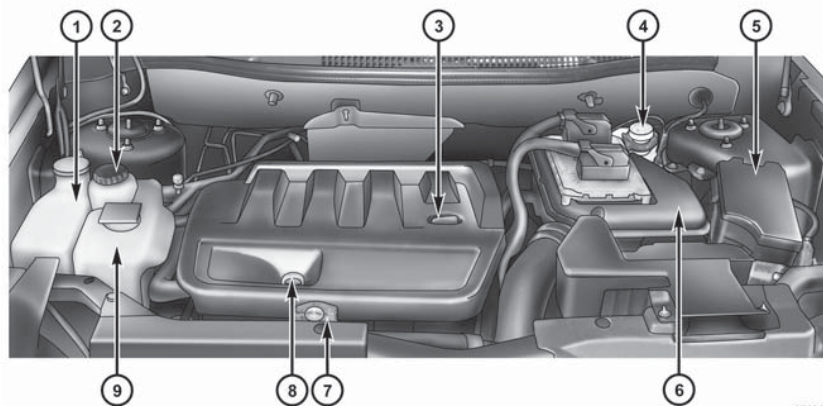


070339986

- 1 — Washer Fluid Reservoir
- 2 — Power Steering Fluid Reservoir
- 3 — Engine Oil Fill
- 4 — Brake Fluid Reservoir
- 5 — Integrated Power Module (Fuses)

- 6 — Air Cleaner Filter
- 7 — Coolant Pressure Cap
- 8 — Engine Oil Dipstick
- 9 — Engine Coolant Reservoir

## ENGINE COMPARTMENT — 2.2L DIESEL

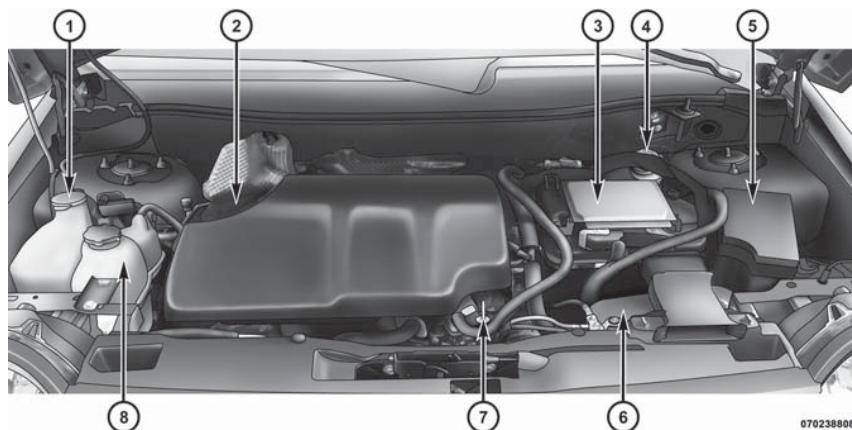

- 1 — Washer Fluid Reservoir
- 2 — Engine Oil Fill
- 3 — Air Cleaner Filter
- 4 — Brake Fluid Reservoir

- 5 — Integrated Power Module (Fuses)
- 6 — Battery
- 7 — Engine Oil Dipstick
- 8 — Engine Coolant Reservoir

## ONBOARD DIAGNOSTIC SYSTEM — OBD II

Your vehicle is equipped with a sophisticated onboard diagnostic system called OBD II. This system monitors the performance of the emissions, engine, and automatic transmission control systems. When these systems are operating properly, your vehicle will provide excellent performance and fuel economy, as well as engine emissions well within current government regulations.

If any of these systems require service, the OBD II system will turn on the "Malfunction Indicator Light" (MIL). It will also store diagnostic codes and other information to assist your service technician in making repairs. Although your vehicle will usually be drivable and not need towing, see your authorized dealer for service as soon as possible.

### CAUTION!

- Prolonged driving with the MIL on could cause further damage to the emission control system. It could also affect fuel economy and drivability. The vehicle must be serviced before any emissions tests can be performed.
- If the MIL is flashing while the engine is running, severe catalytic converter damage and power loss will soon occur. Immediate service is required.

### Loose Fuel Filler Cap Message

After fuel is added, the vehicle diagnostic system can determine if the fuel filler cap is possibly loose or improperly installed. A "gASCAP" message will be displayed in the instrument cluster. Tighten the gas cap until a "clicking" sound is heard. This is an indication that the gas cap is properly tightened. Press the trip odometer RESET button to turn off the message. If the problem persists, the message will appear the next time the vehicle is started. This might indicate a damaged cap. If the problem is

detected twice in a row, the system will turn on the MIL. Resolving the problem will turn the MIL light off.

## REPLACEMENT PARTS

Use of genuine MOPAR® parts for normal/scheduled maintenance and repairs is highly recommended to ensure the designed performance. Damage or failures caused by the use of non-MOPAR® parts for maintenance and repairs will not be covered by the manufacturer's warranty.

## MAINTENANCE PROCEDURES

The pages that follow contain the **required** maintenance services determined by the engineers who designed your vehicle.

Besides those maintenance items specified in the fixed maintenance schedule, there are other components which may require servicing or replacement in the future.

**CAUTION!**

- Failure to properly maintain your vehicle or perform repairs and service when necessary could result in more costly repairs, damage to other components or negatively impact vehicle performance. Immediately have potential malfunctions examined by an authorized dealer or qualified repair center.
- Your vehicle has been built with improved fluids that protect the performance and durability of your vehicle and also allow extended maintenance intervals. Do not use chemical flushes in these components as the chemicals can damage your engine, transmission, power steering or air conditioning. Such damage is not covered by the New Vehicle Limited Warranty. If a flush is needed because of component malfunction, use only the specified fluid for the flushing procedure.

**Engine Oil****Checking Oil Level**

To assure proper engine lubrication, the engine oil must be maintained at the correct level. Check the oil level at regular intervals, such as every fuel stop.

The best time to check the engine oil level is about five minutes after a fully warmed engine is shut off. Do not check oil level before starting the engine after it has sat overnight. Checking engine oil level when the engine is cold will give you an incorrect reading.

Checking the oil while the vehicle is on level ground and only when the engine is hot, will improve the accuracy of the oil level readings. Maintain the oil level between the range markings on the dipstick. The range markings will consist of a crosshatch zone that says SAFE or a crosshatch zone that says MIN at the low end of the range and MAX at the high end of the range. Adding one quart of oil when the reading is at the low end of the indicated range will result in the oil level at the full end of the indicator range.

**CAUTION!**

Do not overfill the engine. Overfilling the engine will cause oil aeration, which can lead to loss of oil pressure and an increase in oil temperature. This could damage your engine. Also, be sure the oil fill cap is replaced and tightened after adding oil.

**Change Engine Oil – All Engines**

Refer to the “Maintenance Schedule” for the proper maintenance intervals.

**Engine Oil Selection (Gasoline Engine) – Non ACEA Categories**

For best performance and maximum protection under all types of operating conditions, the manufacturer only recommends engine oils that are API certified and meet the requirements of Chrysler Material Standard MS-6395.

## American Petroleum Institute (API) Engine Oil Identification Symbol



This symbol means that the oil has been certified by the American Petroleum Institute (API). The manufacturer only recommends API Certified engine oils.

### CAUTION!

Do not use chemical flushes in your engine oil as the chemicals can damage your engine. Such damage is not covered by the New Vehicle Limited Warranty.

## Engine Oil Selection (Gasoline Engine) – ACEA Categories

For countries that use the ACEA European Oil Categories for Service Fill Oils, use engine oils

that meet the requirements of ACEA C3, and that are approved to Fiat 9.55535-S1 or Fiat 9.55535-S3.

## Engine Oil Viscosity (SAE Grade) – Gasoline Engines

SAE 5W-20 engine oil is recommended for all operating temperatures. This engine oil improves low temperature starting and vehicle fuel economy.

The engine oil filler cap also shows the recommended engine oil viscosity for your engine. For information on engine oil filler cap location, refer to “Engine Compartment” in “Maintaining Your Vehicle” for further information.

### NOTE:

**SAE 5W-30 engine oil approved to Fiat 9.55535-S1 or Fiat 9.55535-S3 may be used when SAE 5W-20 engine oil meeting MS-6395 is not available.**

## Engine Oil Selection – Diesel Engine

For best performance and maximum protection under all types of operating conditions, the manufacturer only recommends full synthetic engine oils that meet the requirements of Chrysler Material Standard MS-10725.

## Materials Added To Engine Oil

The manufacturer strongly recommends against the addition of any additives (other than leak detection dyes) to the engine oil. Engine oil is an engineered product and its performance may be impaired by supplemental additives.

## Disposing Of Used Engine Oil And Oil Filters

Care should be taken in disposing of used engine oil and oil filters from your vehicle. Used oil and oil filters, indiscriminately discarded, can present a problem to the environment. Contact your authorized dealer, service station or governmental agency for advice on how and where used oil and oil filters can be safely discarded in your area.

## Engine Oil Filter

The engine oil filter should be replaced with a new filter at every engine oil change.

## Engine Oil Filter Selection

This manufacturer's engines have a full-flow type oil filter. Use a filter of this type for replacement. The quality of replacement filters varies considerably. Only high quality filters should be



used to assure most efficient service. MOPAR® engine oil filters are a high quality oil filter and are recommended.

### Engine Air Cleaner Filter

Refer to the “Maintenance Schedule” for the proper maintenance intervals.

#### **WARNING!**

The air induction system (air cleaner, hoses, etc.) can provide a measure of protection in the case of engine backfire. Do not remove the air induction system (air cleaner, hoses, etc.) unless such removal is necessary for repair or maintenance. Make sure that no one is near the engine compartment before starting the vehicle with the air induction system (air cleaner, hoses, etc.) removed. Failure to do so can result in serious personal injury.


### Engine Air Cleaner Filter Selection

The quality of replacement engine air cleaner filters varies considerably. Only high quality filters should be used to assure most efficient service. MOPAR® engine air cleaner filters are a high quality filter and are recommended.

### Engine Air Cleaner Filter – Diesel Engine

#### **WARNING!**

The air cleaner can provide protection in the case of engine backfire. Do not remove the air cleaner unless it is necessary for repair or maintenance. Make sure that no one is near the engine compartment before starting the vehicle with the air cleaner removed. Failure to do so can result in serious personal injury.

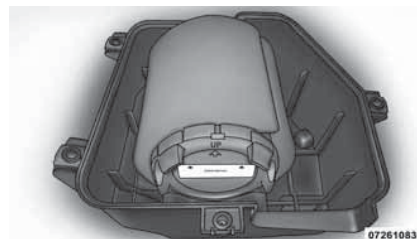

When replacing the engine air cleaner filter, care must be taken to ensure the filter is oriented properly. Make sure the arrows are pointed in the “UP” position, and that the filter is seated completely in the air cleaner before installing the cover.

### Engine Air Cleaner Filter Selection

The quality of replacement engine air cleaner filters varies considerably. Only high quality filters should be used to assure most efficient service. MOPAR® engine air cleaner filters are a high quality filter and are recommended.

### **Maintenance-Free Battery**

Your vehicle is equipped with a maintenance-free battery. You will never have to add water, nor is periodic maintenance required.

#### **WARNING!**

- Battery fluid is a corrosive acid solution and can burn or even blind you. Do not allow battery fluid to contact your eyes, skin, or clothing. Do not lean over a battery when attaching clamps. If acid splashes in eyes or on skin, flush the area immediately with large amounts of water. Refer to “Jump-Starting Procedures” in “What To Do In Emergencies” for further information.
- Battery gas is flammable and explosive. Keep flame or sparks away from the battery. Do not use a booster battery or any other booster source with an output greater than 12 Volts. Do not allow cable clamps to touch each other.

***(Continued)***

#### **WARNING! *(Continued)***

- Battery posts, terminals, and related accessories contain lead and lead compounds. Wash hands after handling.
- The battery in this vehicle has a vent hose that should not be disconnected and should only be replaced with a battery of the same type (vented).

#### **CAUTION!**

- It is essential when replacing the cables on the battery that the positive cable is attached to the positive post and the negative cable is attached to the negative post. Battery posts are marked positive (+) and negative (-) and are identified on the battery case. Cable clamps should be tight on the terminal posts and free of corrosion.

***(Continued)***

#### **CAUTION! *(Continued)***

- If a “fast charger” is used while the battery is in the vehicle, disconnect both vehicle battery cables before connecting the charger to the battery. Do not use a “fast charger” to provide starting voltage.

### **Air Conditioner Maintenance**

For best possible performance, your air conditioner should be checked and serviced by an authorized dealer at the start of each warm season. This service should include cleaning of the condenser fins and a performance test. Drive belt tension should also be checked at this time.

#### **CAUTION!**

Do not use chemical flushes in your air conditioning system as the chemicals can damage your air conditioning components. Such damage is not covered by the New Vehicle Limited Warranty.

### **WARNING!**

- Use only refrigerants and compressor lubricants approved by the manufacturer for your air conditioning system. Some unapproved refrigerants are flammable and can explode, injuring you. Other unapproved refrigerants or lubricants can cause the system to fail, requiring costly repairs. Refer to Warranty Information Book, located on the DVD, for further warranty information.
- The air conditioning system contains refrigerant under high pressure. To avoid risk of personal injury or damage to the system, adding refrigerant or any repair requiring lines to be disconnected should be done by an experienced technician.

### **Refrigerant Recovery And Recycling**

R-134a Air Conditioning Refrigerant is a hydrofluorocarbon (HFC) that is endorsed by the Environmental Protection Agency and is an ozone-saving product. However, the manufacturer recommends that air conditioning service

be performed by authorized dealer or other service facilities using recovery and recycling equipment.

### **NOTE:**

**Use only manufacturer approved A/C system sealers, stop leak products, seal conditioners, compressor oil, and refrigerants.**

### **Body Lubrication**

Locks and all body pivot points, including such items as seat tracks, door hinge pivot points and rollers, liftgate, tailgate, sliding doors and hood hinges, should be lubricated periodically with a lithium based grease, such as MOPAR® Spray White Lube to assure quiet, easy operation and to protect against rust and wear. Prior to the application of any lubricant, the parts concerned should be wiped clean to remove dust and grit; after lubricating excess oil and grease should be removed. Particular attention should also be given to hood latching components to ensure proper function. When performing other underhood services, the hood latch, release mechanism and safety catch should be cleaned and lubricated.

The external lock cylinders should be lubricated twice a year, preferably in the Fall and Spring. Apply a small amount of a high quality lubricant, such as MOPAR® Lock Cylinder Lubricant directly into the lock cylinder.

### **Windshield Wiper Blades**

Clean the rubber edges of the wiper blades and the windshield periodically with a sponge or soft cloth and a mild nonabrasive cleaner. This will remove accumulations of salt or road film.

Operation of the wipers on dry glass for long periods may cause deterioration of the wiper blades. Always use washer fluid when using the wipers to remove salt or dirt from a dry windshield.

Avoid using the wiper blades to remove frost or ice from the windshield. Keep the blade rubber out of contact with petroleum products such as engine oil, gasoline, etc.

**NOTE:**

Life expectancy of wiper blades varies depending on geographical area and frequency of use. Poor performance of blades may be present with chattering, marks, water lines or wet spots. If any of these conditions are present, clean the wiper blades or replace as necessary.

**Adding Washer Fluid**

The washer fluid reservoir is located in the engine compartment, and the fluid level should be checked at regular intervals. Fill the reservoir with windshield washer solvent only (not radiator antifreeze).

When refilling the washer fluid reservoir, take some washer fluid and apply it to a cloth or towel and wipe clean the wiper blades, this will help blade performance. To prevent freeze-up of your windshield washer system in cold weather, select a solution or mixture that meets or exceeds the temperature range of your climate. This rating information can be found on most washer fluid containers.

**WARNING!**

Commercially available windshield washer solvents are flammable. They could ignite and burn you. Care must be exercised when filling or working around the washer solution.

**Exhaust System**

The best protection against carbon monoxide entry into the vehicle body is a properly maintained engine exhaust system.

If you notice a change in the sound of the exhaust system; or if the exhaust fumes can be detected inside the vehicle; or when the underside or rear of the vehicle is damaged; have an authorized technician inspect the complete exhaust system and adjacent body areas for broken, damaged, deteriorated, or mispositioned parts. Open seams or loose connections could permit exhaust fumes to seep into the passenger compartment. In addition, have the exhaust system inspected each time the vehicle is raised for lubrication or oil change. Replace as required.

**WARNING!**

- Exhaust gases can injure or kill. They contain carbon monoxide (CO), which is colorless and odorless. Breathing it can make you unconscious and can eventually poison you. To avoid breathing CO, refer to "Safety Tips/Exhaust Gas" in "Things To Know Before Starting Your Vehicle" for further information.
- A hot exhaust system can start a fire if you park over materials that can burn. Such materials might be grass or leaves coming into contact with your exhaust system. Do not park or operate your vehicle in areas where your exhaust system can contact anything that can burn.

### CAUTION!

- The catalytic converter requires the use of unleaded fuel only. Leaded gasoline will destroy the effectiveness of the catalyst as an emissions control device and may seriously reduce engine performance and cause serious damage to the engine.
- Damage to the catalytic converter can result if your vehicle is not kept in proper operating condition. In the event of engine malfunction, particularly involving engine misfire or other apparent loss of performance, have your vehicle serviced promptly. Continued operation of your vehicle with a severe malfunction could cause the converter to overheat, resulting in possible damage to the converter and vehicle.

Under normal operating conditions, the catalytic converter will not require maintenance. However, it is important to keep the engine properly tuned to assure proper catalyst operation and prevent possible catalyst damage.

### NOTE:

**Intentional tampering with emissions control systems can result in civil penalties being assessed against you.**

In unusual situations involving grossly malfunctioning engine operation, a scorching odor may suggest severe and abnormal catalyst overheating. If this occurs, stop the vehicle, turn off the engine and allow it to cool. Service, including a tune-up to manufacturer's specifications, should be obtained immediately.

To minimize the possibility of catalytic converter damage:

- Do not shut off the engine or interrupt the ignition, when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle.
- Do not idle the engine with any spark plug wires disconnected or removed, such as when diagnostic testing, or for prolonged periods during very rough idle or malfunctioning operating conditions.

## Cooling System

### WARNING!

- When working near the radiator cooling fan, disconnect the fan motor lead or turn the ignition switch to the OFF position. The fan is temperature controlled and can start at any time the ignition switch is in the ON position.
- You or others can be badly burned by hot engine coolant (antifreeze) or steam from your radiator. If you see or hear steam coming from under the hood, do not open the hood until the radiator has had time to cool. Never try to open a cooling system pressure cap when the radiator is hot.

### Coolant Checks

Check engine coolant (antifreeze) protection every 12 months (before the onset of freezing weather, where applicable). If the engine coolant (antifreeze) is dirty or rusty in appearance, the system should be drained, flushed, and refilled with fresh engine coolant (antifreeze).

Check the front of the A/C condenser for any accumulation of bugs, leaves, etc. If dirty, clean by gently spraying water from a garden hose vertically down the face of the condenser.

Check the coolant recovery bottle tubing for brittle rubber, cracking, tears, cuts, and tightness of the connection at the bottle and radiator. Inspect the entire system for leaks.

#### **Cooling System – Drain, Flush, And Refill**

Refer to the “Maintenance Schedule” for the proper maintenance intervals.

If the engine coolant (antifreeze) is dirty or contains a considerable amount of sediment, clean and flush with a reliable cooling system cleaner. Follow with a thorough rinsing to remove all deposits and chemicals. Properly dispose of old engine coolant (antifreeze).

#### **Selection Of Coolant**

Refer to “Fluids, Lubricants, and Genuine Parts” in “Maintaining Your Vehicle” for further information.

#### **CAUTION!**

- Mixing of engine coolant (antifreeze) other than specified Organic Additive Technology (OAT) engine coolant (antifreeze), may result in engine damage and may decrease corrosion protection. Organic Additive Technology (OAT) engine coolant is different and should not be mixed with Hybrid Organic Additive Technology (HOAT) engine coolant (antifreeze) or any “globally compatible” coolant (antifreeze). If a non-OAT engine coolant (antifreeze) is introduced into the cooling system in an emergency, it should be flushed with OAT coolant and replaced with the specified OAT engine coolant (antifreeze) as soon as possible.

*(Continued)*

#### **CAUTION! (Continued)**

- Do not use water alone or alcohol-based engine coolant (antifreeze) products. Do not use additional rust inhibitors or antirust products, as they may not be compatible with the radiator engine coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based engine coolant (antifreeze). Use of propylene glycol-based engine coolant (antifreeze) is not recommended.

#### **Selection of Coolant – 2.2L Diesel**

Use only the manufacturer’s recommended coolant. Refer to “Fluids, Lubricants, and Genuine Parts” in “Maintaining Your Vehicle” for further information.

### CAUTION!

- Mixing of coolants other than specified HOAT engine coolants may result in engine damage and may decrease corrosion protection. If a non-HOAT coolant is introduced into the cooling system in an emergency, it should be replaced with the specified coolant as soon as possible.
- Do not use plain water alone or alcohol-based engine coolant (antifreeze) products. Do not use additional rust inhibitors or antirust products, as they may not be compatible with the radiator engine coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based coolants. Use of propylene glycol-based coolants is not recommended.

### Adding Coolant

Your vehicle has been built with an improved engine coolant (antifreeze) that allows extended maintenance intervals. This engine coolant (antifreeze) can be used up to 10 years or

150,000 miles (240,000 km) before replacement. To prevent reducing this extended maintenance period, it is important that you use the same engine coolant (antifreeze) throughout the life of your vehicle. Please review these recommendations for using Organic Additive Technology (OAT) engine coolant (antifreeze).

When adding engine coolant (antifreeze), a minimum solution of 50% recommended MOPAR® Antifreeze/Coolant 10 Year/150,000 Mile Formula OAT (Organic Additive Technology), or equivalent, in water should be used. Use higher concentrations (not to exceed 70%) if temperatures below -34°F (-37°C) are anticipated.

Use only high purity water such as distilled or deionized water when mixing the water/engine coolant (antifreeze) solution. The use of lower quality water will reduce the amount of corrosion protection in the engine cooling system.

Please note that it is the owner's responsibility to maintain the proper level of protection against freezing according to the temperatures occurring in the area where the vehicle is operated.

### NOTE:

**Mixing engine coolant (antifreeze) types will decrease the life of the engine coolant (antifreeze) and will require more frequent coolant changes.**

### Adding Coolant – 2.2L Diesel

Your vehicle has been built with an improved engine coolant that allows extended maintenance intervals. This coolant can be used up to five years or 105,000 miles (168 000 km) before replacement. To prevent reducing this extended maintenance period, it is important that you use the same coolant throughout the life of your vehicle. Please review these recommendations for using Hybrid Organic Additive Technology (HOAT) coolant.

When adding coolant:

- The manufacturer recommends using MOPAR® Antifreeze/Coolant 5 Year/100,000 Mile Formula HOAT (Hybrid Organic Additive Technology) or equivalent.
- Mix a minimum solution of 50% HOAT engine coolant and distilled water. Use higher concentrations (not to exceed 70%) if temperatures below -34°F (-37°C) are anticipated.

- Use only high purity water such as distilled or deionized water when mixing the water/engine coolant solution. The use of lower quality water will reduce the amount of corrosion protection in the engine cooling system.

Please note that it is the owner's responsibility to maintain the proper level of protection against freezing according to the temperatures occurring in the area where the vehicle is operated.

**NOTE:**

**Mixing coolant types will decrease the life of the engine coolant and will require more frequent coolant changes.**

**Cooling System Pressure Cap**

The cap must be fully tightened to prevent loss of engine coolant (antifreeze), and to ensure that engine coolant (antifreeze) will return to the radiator from the coolant recovery bottle.

The cap should be inspected and cleaned if there is any accumulation of foreign material on the sealing surfaces.

**WARNING!**

- The warning words "DO NOT OPEN HOT" on the cooling system pressure cap are a safety precaution. Never add engine coolant (antifreeze) when the engine is overheated. Do not loosen or remove the cap to cool an overheated engine. Heat causes pressure to build up in the cooling system. To prevent scalding or injury, do not remove the pressure cap while the system is hot or under pressure.
- Do not use a pressure cap other than the one specified for your vehicle. Personal injury or engine damage may result.

**Disposal Of Used Engine Coolant**

Used ethylene glycol-based engine coolant (antifreeze) is a regulated substance requiring proper disposal. Check with your local authorities to determine the disposal rules for your community. To prevent ingestion by animals or children, do not store ethylene glycol-based engine coolant (antifreeze) in open containers or allow it to remain in puddles on the ground. If

ingested by a child or pet, seek emergency assistance immediately. Clean up any ground spills immediately.

**Coolant Level**

The coolant bottle provides a quick visual method for determining that the coolant level is adequate. With the engine idling and warm to normal operating temperature, the level of the engine coolant (antifreeze) in the bottle should be between the "ADD" and "FULL" lines shown on the bottle.

The radiator normally remains completely full, so there is no need to remove the radiator cap unless checking for the coolant freeze point or replacing the engine coolant (antifreeze). Advise your service attendant of this. As long as the engine operating temperature is satisfactory, the coolant bottle need only be checked once a month.

When additional engine coolant (antifreeze) is needed to maintain the proper level, it should be added to the coolant bottle. Do not overfill.



## Points To Remember

### NOTE:

**When the vehicle is stopped after a few miles/kilometers of operation, you may observe vapor coming from the front of the engine compartment. This is normally a result of moisture from rain, snow, or high humidity accumulating on the radiator and being vaporized when the thermostat opens, allowing hot engine coolant (antifreeze) to enter the radiator.**

If an examination of your engine compartment shows no evidence of radiator or hose leaks, the vehicle may be safely driven. The vapor will soon dissipate.

- Do not overfill the coolant expansion bottle.
- Check the coolant freeze point in the radiator and in the coolant expansion bottle. If engine coolant (antifreeze) needs to be added, the contents of the coolant expansion bottle must also be protected against freezing.

- If frequent engine coolant (antifreeze) additions are required, the cooling system should be pressure tested for leaks.
- Maintain engine coolant (antifreeze) concentration at a minimum of 50% OAT coolant (conforming to MS-12106) and distilled water for proper corrosion protection of your engine which contains aluminum components.
- Make sure that the coolant expansion bottle overflow hoses are not kinked or obstructed.
- Keep the front of the radiator clean. If your vehicle is equipped with air conditioning, keep the front of the condenser clean.
- Do not change the thermostat for Summer or Winter operation. If replacement is ever necessary, install ONLY the correct type thermostat. Other designs may result in unsatisfactory engine coolant (antifreeze) performance, poor gas mileage, and increased emissions.

## Points To Remember – 2.2L Diesel

### NOTE:

**When the vehicle is stopped after a few miles (kilometers) of operation, you may observe vapor coming from the front of the engine compartment. This is normally a result of moisture from rain, or high humidity accumulating on the radiator and being vaporized when the thermostat opens, allowing hot coolant to enter the radiator.**

If an examination of your engine compartment shows no evidence of radiator or hose leaks, the vehicle may be safely driven. The vapor will soon dissipate.

- Do not overfill the coolant recovery bottle.
- Check the coolant freeze point in the radiator and in the coolant recovery bottle. If antifreeze needs to be added, the contents of the coolant recovery bottle must also be protected against freezing.
- If frequent coolant additions are required, or if the level in the coolant recovery bottle does not drop when the engine cools, the cooling system should be pressure tested for leaks.

- Maintain coolant concentration at 50% HOAT engine coolant (minimum) and distilled water for proper corrosion protection of your engine, which contains aluminum components.
- Make sure that the radiator and coolant recovery bottle overflow hoses are not kinked or obstructed.
- Keep the front of the radiator clean. If your vehicle is equipped with air conditioning, keep the front of the condenser clean.
- Do not change the thermostat for Summer or Winter operation. If replacement is ever necessary, install **ONLY** the correct type thermostat. Other designs may result in unsatisfactory coolant performance, poor gas mileage, and increased emissions.

### **Exhaust System**

The best protection against carbon monoxide entry into the vehicle body is a properly maintained engine exhaust system.

If you notice a change in the sound of the exhaust system; or if the exhaust fumes can be detected inside the vehicle; or when the under-side or rear of the vehicle is damaged; have an

authorized technician inspect the complete exhaust system and adjacent body areas for broken, damaged, deteriorated, or mispositioned parts. Open seams or loose connections could permit exhaust fumes to seep into the passenger compartment. In addition, have the exhaust system inspected each time the vehicle is raised for lubrication or oil change. Replace as required.

### **WARNING!**

- Exhaust gases can injure or kill. They contain carbon monoxide (CO), which is colorless and odorless. Breathing it can make you unconscious and can eventually poison you. To avoid breathing CO, refer to "Safety Tips/Exhaust Gas" in "Things To Know Before Starting Your Vehicle" for further information.

*(Continued)*

### **WARNING! (Continued)**

- A hot exhaust system can start a fire if you park over materials that can burn. Such materials might be grass or leaves coming into contact with your exhaust system. Do not park or operate your vehicle in areas where your exhaust system can contact anything that can burn.

### **CAUTION!**

- The catalytic converter requires the use of unleaded fuel only. Leaded gasoline will destroy the effectiveness of the catalyst as an emissions control device and may seriously reduce engine performance and cause serious damage to the engine.

*(Continued)*

**CAUTION! (Continued)**

- Damage to the catalytic converter can result if your vehicle is not kept in proper operating condition. In the event of engine malfunction, particularly involving engine misfire or other apparent loss of performance, have your vehicle serviced promptly. Continued operation of your vehicle with a severe malfunction could cause the converter to overheat, resulting in possible damage to the converter and vehicle.

Under normal operating conditions, the catalytic converter will not require maintenance. However, it is important to keep the engine properly tuned to assure proper catalyst operation and prevent possible catalyst damage.

**NOTE:**

**Intentional tampering with emissions control systems can result in civil penalties being assessed against you.**

In unusual situations involving grossly malfunctioning engine operation, a scorching odor may suggest severe and abnormal catalyst overheating. If this occurs, stop the vehicle, turn off the engine and allow it to cool. Service, including a tune-up to manufacturer's specifications, should be obtained immediately.

To minimize the possibility of catalytic converter damage:

- Do not shut off the engine or interrupt the ignition, when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle.
- Do not idle the engine with any spark plug wires disconnected or removed, such as when diagnostic testing, or for prolonged periods during very rough idle or malfunctioning operating conditions.

**Brake System**

In order to assure brake system performance, all brake system components should be inspected periodically. Refer to the "Maintenance Schedule" for the proper maintenance intervals.

**WARNING!**

Riding the brakes can lead to brake failure and possibly a collision. Driving with your foot resting or riding on the brake pedal can result in abnormally high brake temperatures, excessive lining wear, and possible brake damage. You would not have your full braking capacity in an emergency.

**Brake Master Cylinder**

The fluid level in the master cylinder should be checked when performing under hood services, or immediately if the brake system warning light is on.

Be sure to clean the top of the master cylinder area before removing the cap. If necessary, add fluid to bring the fluid level up to the requirements described on the brake fluid reservoir. Fluid level can be expected to fall as the brake pads wear. The brake fluid level should be checked when the pads are replaced. However, low fluid level may be caused by a leak and a checkup may be needed.

**NOTE:**

If your vehicle is equipped with a manual transmission, the brake fluid reservoir supplies fluid to both the brake system and the clutch release system. The two systems are separated in the reservoir, and a leak in one system will not affect the other system. The manual transmission clutch release system should not require fluid replacement during the life of the vehicle. If the brake fluid reservoir is low and the brake system does not indicate any leaks or other problems, it may be a result of a leak in the hydraulic clutch release system. See your local authorized dealer for service.

Use only manufacturer's recommended brake fluid. Refer to "Fluids, Lubricants, and Genuine Parts" in "Maintaining Your Vehicle" for further information.

**WARNING!**

- Use only manufacturer's recommended brake fluid. Refer to "Fluids, Lubricants, and Genuine Parts" in "Maintaining Your Vehicle" for further information. Using the wrong type of brake fluid can severely damage your brake system and/or impair its performance. The proper type of brake fluid for your vehicle is also identified on the original factory installed hydraulic master cylinder reservoir.
- To avoid contamination from foreign matter or moisture, use only new brake fluid or fluid that has been in a tightly closed container. Keep the master cylinder reservoir cap secured at all times. Brake fluid in a open container absorbs moisture from the air resulting in a lower boiling point. This may cause it to boil unexpectedly during hard or prolonged braking, resulting in sudden brake failure. This could result in a collision.

**WARNING! (Continued)**

- Overfilling the brake fluid reservoir can result in spilling brake fluid on hot engine parts, causing the brake fluid to catch fire. Brake fluid can also damage painted and vinyl surfaces, care should be taken to avoid its contact with these surfaces.
- Do not allow petroleum based fluid to contaminate the brake fluid. Brake seal components could be damaged, causing partial or complete brake failure. This could result in a collision.

**CAUTION!**

Use of improper brake fluids will affect overall clutch system performance. Improper brake fluids may damage the clutch system resulting in loss of clutch function and the ability to shift the transmission.

*(Continued)*

## Automatic Transmission – If Equipped

### Selection Of Lubricant (CVT)

It is important to use the proper transmission fluid to ensure optimum transmission performance and life. Use only the manufacturer's recommended transmission fluid which has the special friction coefficient additives necessary for proper steel belt traction on the drive and driven pulleys. Refer to "Fluids, Lubricants, and Genuine Parts" in this section for fluid specifications. It is important to maintain the transmission fluid at the correct level using the recommended fluid.

No chemical flushes should be used in any transmission; only the approved lubricant should be used.

#### CAUTION!

Using a transmission fluid other than the manufacturer's recommended fluid may cause belt slip and result in a complete transmission failure! Refer to "Fluids, Lubri-

*(Continued)*

#### CAUTION! (Continued)

cants, and Genuine Parts" in "Maintaining Your Vehicle" for fluid specifications.

#### Special Additives

The manufacturer strongly recommends against using any special additives in the transmission.

Automatic transmission fluid is an engineered product and its performance may be impaired by supplemental additives. Therefore, do not add any fluid additives to the transmission. The only exception to this policy is the use of special dyes for diagnosing fluid leaks. Avoid using transmission sealers as they may adversely affect seals.

#### CAUTION!

Do not use chemical flushes in your transmission as the chemicals can damage your transmission components. Such damage is not covered by the New Vehicle Limited Warranty.

### Fluid Level Check

The fluid level is preset at the factory and does not require adjustment under normal operating conditions.

Routine fluid level checks are not required, therefore the transmission filler tube is capped and no dipstick is provided. Your authorized dealer can check your transmission fluid level using a special service dipstick. If you notice fluid leakage or transmission malfunction, visit your authorized dealer immediately to have the transmission fluid level checked. Operating the vehicle with an improper fluid level can cause severe transmission damage.

#### CAUTION!

If a transmission fluid leak occurs, visit your authorized dealer immediately. Severe transmission damage may occur. Your authorized dealer has the proper tools to adjust the fluid level accurately.

### Fluid And Filter Changes

Refer to the "Maintenance Schedule" for the proper maintenance intervals. In addition,

change the fluid and filter if the transmission is disassembled for any reason.

## **Manual Transmission – If Equipped**

### **Lubricant Selection**

Use only the manufacturers recommended transmission fluid. Refer to “Fluids, Lubricants, and Genuine Parts” in “Maintaining Your Vehicle” for further information.

### **Fluid Level Check**

Check the fluid level by removing the fill plug. The fluid level should be between the bottom of the fill hole and a point not more than 3/16 in (4.7 mm) below the bottom of the hole.

Add fluid, if necessary, to maintain the proper level.

### **Frequency Of Fluid Change**

Under normal operating conditions, the fluid installed at the factory will give satisfactory lubrication for the life of the vehicle. Fluid changes are not necessary unless lubricant has become contaminated with water.

### **NOTE:**

**If contaminated with water, the fluid should be changed immediately.**

## **Rear Drive Assembly (RDA) – AWD/4WD Models Only**

### **Lubricant Selection**

Use only the manufacturer’s recommended fluid. Refer to “Fluids, Lubricants, and Genuine Parts” in “Maintaining Your Vehicle” for further information.

### **Fluid Level Check**

Visually inspect the unit at each oil change for leakage. If leakage is detected, check the fluid level by removing the fill plug. The fluid level should be maintained between the bottom of the fill hole to 1/8 in (4 mm) below the fill hole.

Add fluid, if necessary, to maintain the proper level.

### **Frequency Of Fluid Change**

Refer to the “Maintenance Schedule” for the proper maintenance intervals.

## **Power Transfer Unit (PTU) – AWD/4WD Models Only**

### **Lubricant Selection**

Use only the manufacturer’s recommended fluid. Refer to “Fluids, Lubricants, and Genuine Parts” in “Maintaining Your Vehicle” for further information.

### **Fluid Level Check**

Visually inspect the unit at each oil change for leakage. If leakage is detected, Check the fluid level by removing the fill plug. The fluid level should be maintained between the bottom of the fill hole to 1/8 in (4 mm) below the fill hole.

Add fluid, if necessary, to maintain the proper level.

### **Frequency Of Fluid Change**

Refer to the “Maintenance Schedule” for the proper maintenance intervals.

## Appearance Care And Protection From Corrosion

### Protection Of Body And Paint From Corrosion

Vehicle body care requirements vary according to geographic locations and usage. Chemicals that make roads passable in snow and ice and those that are sprayed on trees and road surfaces during other seasons are highly corrosive to the metal in your vehicle. Outside parking, which exposes your vehicle to airborne contaminants, road surfaces on which the vehicle is operated, extreme hot or cold weather and other extreme conditions will have an adverse effect on paint, metal trim, and underbody protection.

The following maintenance recommendations will enable you to obtain maximum benefit from the corrosion resistance built into your vehicle.

#### What Causes Corrosion?

Corrosion is the result of deterioration or removal of paint and protective coatings from your vehicle.

The most common causes are:

- Road salt, dirt and moisture accumulation.
- Stone and gravel impact.
- Insects, tree sap and tar.
- Salt in the air near seacoast localities.
- Atmospheric fallout/industrial pollutants.

#### Washing

- Wash your vehicle regularly. Always wash your vehicle in the shade using MOPAR® Car Wash, or a mild car wash soap, and rinse the panels completely with clear water.
- If insects, tar, or other similar deposits have accumulated on your vehicle, use MOPAR® Super Kleen Bug and Tar Remover to remove.
- Use a high quality cleaner wax, such as MOPAR® Cleaner Wax to remove road film, stains and to protect your paint finish. Take care never to scratch the paint.

- Avoid using abrasive compounds and power buffing that may diminish the gloss or thin out the paint finish.

#### CAUTION!

- Do not use abrasive or strong cleaning materials such as steel wool or scouring powder that will scratch metal and painted surfaces.
- Use of power washers exceeding 1,200 psi (8 274 kPa) can result in damage or removal of paint and decals.

#### Special Care

- If you drive on salted or dusty roads or if you drive near the ocean, hose off the undercarriage at least once a month.
- It is important that the drain holes in the lower edges of the doors, rocker panels, and trunk be kept clear and open.
- If you detect any stone chips or scratches in the paint, touch them up immediately. The cost of such repairs is considered the responsibility of the owner.

- If your vehicle is damaged due to a collision or similar cause that destroys the paint and protective coating, have your vehicle repaired as soon as possible. The cost of such repairs is considered the responsibility of the owner.
- If you carry special cargo such as chemicals, fertilizers, de-icer salt, etc., be sure that such materials are well packaged and sealed.
- If a lot of driving is done on gravel roads, consider mud or stone shields behind each wheel.
- Use MOPAR® Touch Up Paint on scratches as soon as possible. Your authorized dealer has touch up paint to match the color of your vehicle.

#### **Wheel And Wheel Trim Care**

- All wheels and wheel trim, especially aluminum and chrome plated wheels, should be cleaned regularly with a mild soap and water to prevent corrosion.
- To remove heavy soil and/or excessive brake dust, use MOPAR® Wheel Cleaner.

#### **CAUTION!**

Do not use scouring pads, steel wool, a bristle brush, or metal polishes. Do not use oven cleaner. These products may damage the wheel's protective finish. Avoid automatic car washes that use acidic solutions or harsh brushes that may damage the wheel's protective finish. Only MOPAR® Wheel Cleaner or equivalent is recommended.

#### **Stain Repel Fabric Cleaning Procedure – If Equipped**

Stain Repel seats may be cleaned in the following manner:

- Remove as much of the stain as possible by blotting with a clean, dry towel.
- Blot any remaining stain with a clean, damp towel.
- For tough stains, apply MOPAR® Total Clean, or a mild soap solution to a clean, damp cloth and remove stain. Use a fresh, damp towel to remove soap residue.

- For grease stains, apply MOPAR® Multi-Purpose Cleaner to a clean, damp cloth and remove stain. Use a fresh, damp towel to remove soap residue.
- Do not use any harsh solvents or any other form of protectants on Stain Repel products.

#### **Interior Care**

Use MOPAR® Total Clean to clean fabric upholstery and carpeting.

Use MOPAR® Total Clean to clean vinyl upholstery.

MOPAR® Total Clean is specifically recommended for leather upholstery.

Your leather upholstery can be best preserved by regular cleaning with a damp soft cloth. Small particles of dirt can act as an abrasive and damage the leather upholstery and should be removed promptly with a damp cloth. Stubborn soils can be removed easily with a soft cloth and MOPAR® Total Clean. Care should be taken to avoid soaking your leather upholstery with any liquid. Please do not use polishes, oils, cleaning fluids, solvents, detergents, or



ammonia-based cleaners to clean your leather upholstery. Application of a leather conditioner is not required to maintain the original condition.

**WARNING!**

Do not use volatile solvents for cleaning purposes. Many are potentially flammable, and if used in closed areas they may cause respiratory harm.

**Cleaning Headlights**

Your vehicle has plastic headlights that are lighter and less susceptible to stone breakage than glass headlights.

Plastic is not as scratch resistant as glass and therefore different lens cleaning procedures must be followed.

To minimize the possibility of scratching the lenses and reducing light output, avoid wiping with a dry cloth. To remove road dirt, wash with a mild soap solution followed by rinsing.

Do not use abrasive cleaning components, solvents, steel wool or other aggressive material to clean the lenses.

**Glass Surfaces**

All glass surfaces should be cleaned on a regular basis with MOPAR® Glass Cleaner, or any commercial household-type glass cleaner. Never use an abrasive type cleaner. Use caution when cleaning the inside rear window equipped with electric defrosters or the right rear quarter window equipped with the radio antenna. Do not use scrapers or other sharp instrument that may scratch the elements.

When cleaning the rear view mirror, spray cleaner on the towel or rag that you are using. Do not spray cleaner directly on the mirror.

**Instrument Panel Cover**

The instrument panel cover has a low glare surface which minimizes reflections on the windshield. Do not use protectants or other products which may cause undesirable reflections. Use soap and warm water to restore the low glare surface.

**Instrument Panel Bezels****CAUTION!**

When installing hanging air fresheners in your vehicle, read the installation instructions carefully. Some air fresheners will damage the finish of painted or decorated parts if allowed to directly contact any surface.

**Cleaning Plastic Instrument Cluster Lenses**

The lenses in front of the instruments in this vehicle are molded in clear plastic. When cleaning the lenses, care must be taken to avoid scratching the plastic.

1. Clean with a wet soft rag. A mild soap solution may be used, but do not use high alcohol content or abrasive cleaners. If soap is used, wipe clean with a clean damp rag.
2. Dry with a soft cloth.

**Seat Belt Maintenance**

Do not bleach, dye, or clean the belts with chemical solvents or abrasive cleaners. This will weaken the fabric. Sun damage can also weaken the fabric.


If the belts need cleaning, use MOPAR® Total Clean, a mild soap solution, or lukewarm water. Do not remove the belts from the vehicle to wash them. Dry with a soft cloth.

Replace the belts if they appear frayed or worn or if the buckles do not work properly.

## FUSES

### Integrated Power Module

The Integrated Power Module is located in the engine compartment near the air cleaner assembly. This center contains cartridge fuses and mini-fuses. A label that identifies each component may be printed on the inside of the cover. Refer to “Engine Compartment” in “Maintaining Your Vehicle” for further information.

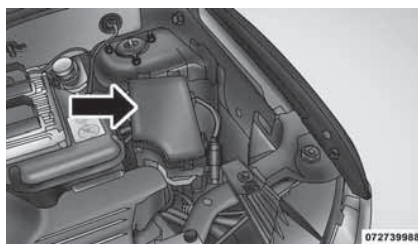

Integrated Power Module

Cavity	Cartridge Fuse	Mini-Fuse	Description
1	Empty		Empty
2		15 Amp Lt Blue	AWD/4WD Control Module – If Equipped
3		10 Amp Red	Rear Center Brake Light Switch

Cavity	Cartridge Fuse	Mini-Fuse	Description
4		10 Amp Red	Ignition Switch/ Occupant Classification Module
5		20 Amp Yellow	Trailer Tow – If Equipped
6		10 Amp Red	Power Mirror/ Steering Control Satellite Radio/Hands-Free Phone
7		30 Amp Green	Ignition Off Draw
8		30 Amp Green	Ignition Off Draw

<b>Cavity</b>	<b>Cartridge Fuse</b>	<b>Mini-Fuse</b>	<b>Description</b>
9	40 Amp Green		Power Seats
10		20 Amp Yellow	Power Locks/ Interior Lighting
11		15 Amp Lt Blue	Power Outlet
12		20 Amp Yellow	115V AC Inverter – If Equipped
13		20 Amp Yellow	Cigar Lighter
14		10 Amp Red	Instrument Cluster

<b>Cavity</b>	<b>Cartridge Fuse</b>	<b>Mini-Fuse</b>	<b>Description</b>
15	40 Amp Green		Radiator Fan
16		15 Amp Lt Blue	Dome Lamp/ Sunroof/Rear Wiper Motor
17		10 Amp Red	Wireless Control Module
18	40 Amp Green		Auto Shutdown Relay
19		20 Amp Yellow	Radio Amplifiers
20		15 Amp Lt Blue	Radio

<b>Cavity</b>	<b>Cartridge Fuse</b>	<b>Mini-Fuse</b>	<b>Description</b>
21		10 Amp Red	Intrusion Module/Siren – If Equipped
22		10 Amp Red	Heating, AC/ Compass
23		15 Amp Lt Blue	Auto Shutdown Relay
24		15 Amp Lt Blue	Power Sunroof – If Equipped
25		10 Amp Red	Heated Mirror – If Equipped

Cavity	Cartridge Fuse	Mini-Fuse	Description
26		15 Amp Lt Blue	Auto Shutdown Relay
27		10 Amp Red	Airbag Control Module
28		10 Amp Red	Airbag Control Module/ Occupant Classification Module
29			Hot Car (No Fuse Required)
30		20 Amp Yellow	Heated Seat – If Equipped
31		10 Amp Red	Headlamp Washer – If Equipped

Cavity	Cartridge Fuse	Mini-Fuse	Description
32	30 Amp Pink		Auto Shutdown Relay
33		10 Amp Red	J1962 Conn/ Powertrain Control Module
34	30 Amp Pink		Antilock Brake-Valve
35	40 Amp Green		Antilock Brake Pump
36	30 Amp Pink		Headlamp/Washer Control/Smart Glass – If Equipped

Cavity	Cartridge Fuse	Mini-Fuse	Description
37		25 Amp Natural	Diesel Fuel Heater – If Equipped

#### CAUTION!

- When installing the IPM cover, it is important to ensure the cover is properly positioned and fully latched. Failure to do so may allow water to get into the IPM, and possibly result in an electrical system failure.

### CAUTION! (Continued)

- When replacing a blown fuse, it is important to use only a fuse having the correct amperage rating. The use of a fuse with a rating other than indicated may result in a dangerous electrical system overload. If a properly rated fuse continues to blow, it indicates a problem in the circuit that must be corrected.

## VEHICLE STORAGE

If you will not be using your vehicle for more than 21 days, you may want to take steps to preserve your battery.

- Disengage the mini-fuse in the Power Distribution Center labeled IOD (Ignition Off-Draw).
- Or disconnect the negative cable from the battery.

- Anytime you store your vehicle, or keep it out of service (i.e., vacation) for two weeks or more, run the air conditioning system at idle for about five minutes in the fresh air and high blower setting. This will ensure adequate system lubrication to minimize the possibility of compressor damage when the system is started again.

## REPLACEMENT BULBS

All the inside bulbs are brass or glass wedge base. Aluminum base bulbs are not approved and should not be used for replacement.

### LIGHT BULBS – Interior

	Bulb Number
Front Header Lamp . . . . .	TS 212-2
Center Dome Lamp . . . . .	TS578
Rear Cargo/Flashlight . . . . .	.8–A35LF (C5W)

### LIGHTS BULBS – Exterior

	Bulb No.
Low Beam/High Beam Headlamp . . . . .	H9
Front Turn Signal Lamp . . . . .	.7440NA (WY21W)
Front Position Lamp . . . . .	P27/7W
Front Side Repeater Lamp . . . . .	.WY5W
Front Fog Lamp . . . . .	H11LL
Center High Mounted Stop Lamp (CHMSL) . . . . .	.LED (Serviced at Authorized Dealer)
Rear Tail/Stop Lamp . . . . .	.LED (Serviced at Authorized Dealer)
Rear Turn Signal Lamp . . . . .	.7440NA (WY21W)
Backup Lamp . . . . .	.7440 (W21W)
License Lamp . . . . .	.W5W

## BULB REPLACEMENT

### Headlamps

1. Raise the hood and locate connector behind the headlamp.
2. Reach into engine compartment and remove rubber cap from headlamp housing.
3. Twist the bulb to the left and pull outward from assembly.
4. Replace bulb and re-install rubber cap securely to housing.

#### NOTE:

**These are halogen bulbs. Take care not to touch the bulb with your fingers. Body oils from your fingers could cause excessive heat buildup which reduces bulb life.**

### Fog Lamps

1. Access lamp through the lower fascia cutout.
2. Remove electrical connector from bulb.
3. Remove bulb from housing.

### Side Repeater Lamps

1. Push side repeater to one side to release the spring tension and pull outward.
2. Twist socket one quarter turn and pull socket from lens.
3. Pull bulb straight from socket and replace.

### Rear Tail/Stop Lamps

Light is an LED assembly. See your authorized dealer for replacement.

### Rear Turn Signal And Backup Lamps

1. Remove the two push-pins from the tail lamp housing.
2. Grasp the tail lamp and pull firmly to disengage the lamp from the aperture panel.
3. Twist and remove socket from lamp.
4. Remove bulb from socket and replace.

### License Lamps

1. Remove the lens cover while holding the tab.
2. Remove the bulb and replace.
3. Install the lens cover (engage it until it snaps in).

### Center High-Mounted Stoplamp

Light is an LED assembly. See your authorized dealer for replacement.

## FLUID CAPACITIES

	U.S.	Metric
<b>Fuel (Approximate)</b>	13.6 Gallons	51.5 Liters
<b>Engine Oil with Filter</b>		
2.0L and 2.4L Engine (SAE 5W-20, API Certified)	4.5 Quarts	4.3 Liters
2.2L Diesel Engine - (SAE 5W-30 Full Synthetic, low ash)	8 Quarts	7.5 Liters
<b>Cooling System *</b>		
2.0L and 2.4L Engine (MOPAR® Antifreeze/Coolant 10 Year/150,000 Mile Formula OAT (Organic Additive Technology))	7.2 Quarts	6.8 Liters
2.2L Diesel Engine (MOPAR® Antifreeze/Coolant 5 Year/100,000 Mile Formula HOAT (Hybrid Organic Additive Technology))	10 Quarts	9.5 Liters
* Includes heater and coolant recovery bottle filled to MAX level.		

## FLUIDS, LUBRICANTS AND GENUINE PARTS

### Engine

Component	Fluid, Lubricant, or Genuine Part
Engine Coolant – 2.2L Diesel Engine	We recommend you use MOPAR® Antifreeze/Coolant 5 Year/100,000 Mile Formula HOAT (Hybrid Organic Additive Technology) that meets the requirements of Chrysler Material Standard MS-9769, or an equivalent coolant.
Engine Coolant – 2.0L and 2.4L Engine	We recommend you use MOPAR® Antifreeze/Coolant 10 Year/150,000 Mile Formula OAT (Organic Additive Technology) that meets the requirements of Chrysler Material Standard MS-12106, or an equivalent coolant.
Engine Oil (Gasoline Engine) – Non ACEA Categories	We recommend you use API Certified SAE 5W-20 engine oil, meeting the requirements of Chrysler Material Standard MS-6395.
Engine Oil (Gasoline Engine) – ACEA Categories	For countries that use the ACEA European Oil Categories for Service Fill Oils, we recommend you use 5W-20 engine oils that meet the requirements of ACEA C3. SAE 5W-30 Engine Oil Approved to ILSAC GF-5 may be used when SAE 5W-20 engine oil meeting MS-6395 is not available. If oils approved to MS-6395 are not available, oils approved to Fiat 9.55535-S1 or Fiat 9.55535-S3 are acceptable.
Engine Oil – 2.2L Diesel Engine	For best performance and maximum protection under all types of operating conditions, we recommend you use 5W-30 full synthetic, low ash oil that meets the requirements of Chrysler Material Standard MS-11106.
Engine Oil Filter	We recommend you use MOPAR® Engine Oil Filters.



<b>Component</b>	<b>Fluid, Lubricant, or Genuine Part</b>
Spark Plugs – 2.0L and 2.4L Engine	We recommend you use MOPAR® Spark Plugs.
Fuel Selection – 2.0L and 2.4L Engine	91 Octane
Fuel Selection – 2.2L Diesel Engine	50 Cetane or higher (Less than 15 ppm Sulfur)

## Chassis

<b>Component</b>	<b>Fluid, Lubricant, or Genuine Part</b>
Automatic Transmission (CVT) – If Equipped	We recommend you use MOPAR® CVTF+4® Continuously Variable Transmission Fluid.
Manual Transmission – If Equipped	We recommend you use MOPAR® Manual Transmission Lubricant meeting the requirements of Chrysler Material Standard MS-9224.
Rear Drive Assembly (RDA)	We recommend you use MOPAR® Gear & Axle Lubricants SAE 80W-90 API GL-5 meeting the requirements of Chrysler Material Standard MS-9020 or equivalent non-synthetic product.
Power Transfer Unit (PTU)	We recommend you use MOPAR® Gear & Axle Lubricants SAE 80W-90 API GL-5 meeting the requirements of Chrysler Material Standard MS-9020 or equivalent non-synthetic product.
Brake Master Cylinder	We recommend you use MOPAR® Brake & Clutch Fluid DOT 4, that meets the requirements of Chrysler Material Standard MS-9971.
Power Steering Reservoir	We recommend you use MOPAR® Power Steering Fluid +4, or MOPAR ATF+4 Automatic Transmission Fluid or equivalent licensed ATF+4 product.



## MAINTENANCE SCHEDULES

- MAINTENANCE SCHEDULE . . . . .240
  - Required Maintenance Intervals . . . . .240
  - Required Maintenance Intervals . . . . .252

## MAINTENANCE SCHEDULE

### Required Maintenance Intervals

Refer to the Maintenance Schedules on the following pages for the required maintenance intervals.

#### Maintenance Schedule – Gasoline Engine

The Scheduled Maintenance services listed in this manual must be done at the times or mileages specified to protect your vehicle warranty and ensure the best vehicle performance and reliability. More frequent maintenance may be needed for vehicles in severe operating conditions, such as dusty areas and very short trip driving. Inspection and service should also be done anytime a malfunction is suspected.

The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance.

On Electronic Vehicle Information Center (EVIC) equipped vehicles, “Oil Change Required” will be displayed in the EVIC and a single chime will sound, indicating that an oil change is necessary.

On Non-EVIC equipped vehicles, “Change Oil” will flash in the instrument cluster odometer and a single chime will sound, indicating that an oil change is necessary.

The oil change indicator message will illuminate approximately 7,000 miles (11 200 km) after the most recent oil change was performed. Have your vehicle serviced as soon as possible, within 500 miles (800 km). However, an earlier oil change at 4,500 miles (7,500 km) may be required if the vehicle is operated under “Severe Duty Conditions” later in this section.

#### NOTE:

- **The oil change indicator message will not monitor the time since the last oil change. Change your vehicle’s oil if it has been 12 months since your last oil change and even if the oil change indicator message is NOT illuminated.**
- **Change your engine oil more often if you drive your vehicle off-road for an extended period of time.**

- **Under no circumstances should oil change intervals exceed 7,500 miles (12 000 km) or 12 months, whichever comes first.**

Your authorized dealer will reset the oil change indicator message after completing the scheduled oil change. If this scheduled oil change is performed by someone other than your authorized dealer, the message can be reset by referring to the steps described under “Electronic Vehicle Information Center/Engine Oil Indicator System/Oil Change Required” in “Understanding Your Instrument Panel” or under “Instrument Cluster Description/Odometer/Trip Odometer” in “Understanding Your Instrument Panel” for further information.

#### At Each Stop for Fuel

- Check the engine oil level about five minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
- Check the windshield washer solvent and add if required.

#### Once a Month

- Check the tire pressure and look for unusual wear or damage.
- Inspect the battery and clean and tighten the terminals as required.
- Check the fluid levels of coolant reservoir, brake master cylinder, and power steering and add as needed.
- Check all lights and other electrical items for correct operation.

#### At Each Oil Change

- Change the engine oil filter.
- Inspect the brake hoses and lines.

#### CAUTION!

Failure to perform the required maintenance items may result in damage to the vehicle.

#### 7,500 Miles (12,000 km) or 12 Months Maintenance Service Schedule

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.

Odometer Reading \_\_\_\_\_ Date \_\_\_\_\_

Repair Order # \_\_\_\_\_ Dealer Code \_\_\_\_\_

Signature, Authorized Service Center \_\_\_\_\_

**15,000 Miles (24,000 km) or 24 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.
- ☐ Inspect the brake linings; replace if necessary.
- ☐ Replace the air conditioning filter.
- ☐ Inspect exhaust system. Perform the first inspection at 15,000 miles (24 000 km) or 24 months.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**22,500 Miles (36,000 km) or 36 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ Inspect the CV joints.
- ☐ Replace the spark plugs. \*

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**30,000 Miles (48,000 km) or 48 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ Replace the engine air cleaner filter.
- ☐ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.
- ☐ Inspect the brake linings; replace if necessary.
- ☐ Replace the air conditioning filter.
- ☐ Inspect exhaust system.
- ☐ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**37,500 Miles (60,000 km) or 60 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**45,000 Miles (72,000 km) or 72 Months  
Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
  - ☐ Rotate tires.
  - ☐ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.
  - ☐ Inspect the CV joints.
  - ☐ Inspect the brake linings; replace if necessary.
  - ☐ Replace the air conditioning filter.
  - ☐ Replace the spark plugs. \*
- \* The spark plug change interval is mileage based only, monthly intervals do not apply.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**52,500 Miles (84,000 km) or 84 Months  
Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ Change the manual transmission fluid if using your vehicle for any of the following: trailer towing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained speeds during hot weather, above 90°F (32°C).

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center



**60,000 Miles (96,000 km) or 96 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ Replace the engine air cleaner filter.
- ☐ Inspect the brake linings; replace if necessary.
- ☐ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.
- ☐ Replace the air conditioning filter.
- ☐ Inspect exhaust system.
- ☐ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.
- ☐ Inspect rear drive assembly (RDA) fluid, add as needed. Drain and replace fluid if vehicle is used for any of the following: frequent trailer towing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained speeds during hot weather, above 90°F (32°C).
- ☐ Inspect power transfer unit (PTU) fluid, add as needed. Drain and replace fluid if vehicle is used for any of the following: frequent trailer towing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained speeds during hot weather, above 90°F (32°C).
- ☐ Change the automatic transmission fluid and filter if using your vehicle for any of the following: police, taxi, fleet, or frequent trailer towing.

---

Odometer Reading \_\_\_\_\_ Date \_\_\_\_\_

---

Repair Order # \_\_\_\_\_ Dealer Code \_\_\_\_\_

---

Signature, Authorized Service Center \_\_\_\_\_

**67,500 Miles (108,000 km) or 108 Months  
Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ Inspect the CV joints.
- ☐ Replace the spark plugs. \*  
\* The spark plug change interval is mileage based only, monthly intervals do not apply.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**75,000 Miles (120,000 km) or 120 Months  
Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.
- ☐ Inspect the brake linings; replace if necessary.
- ☐ Replace the air conditioning filter.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**82,500 Miles (132,000 km) or 132 Months  
Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**90,000 Miles (144,000 km) or 144 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ Replace the engine air cleaner filter.
- ☐ Replace the spark plugs. \*  
\* The spark plug change interval is mileage based only, monthly intervals do not apply.
- ☐ Inspect and replace PCV valve if necessary. †
- ☐ Inspect the brake linings; replace if necessary.
- ☐ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.
- ☐ Replace the air conditioning filter.
- ☐ Inspect exhaust system.
- ☐ Inspect the CV joints.
- ☐ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**97,500 Miles (156,000 km) or 156 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**105,000 Miles (168,000 km) or 168 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.
- ☐ Inspect the brake linings; replace if necessary.
- ☐ Replace the air conditioning filter.
- ☐ Change the manual transmission fluid.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**112,500 Miles (180,000 km) or 180 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ Inspect the CV joints.
- ☐ Replace the spark plugs. \*
- \* The spark plug change interval is mileage based only, monthly intervals do not apply.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**120,000 Miles (192,000 km) or 192 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ Replace the engine air cleaner filter.
- ☐ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.
- ☐ Inspect the brake linings; replace if necessary.
- ☐ Replace the air conditioning filter.
- ☐ Inspect exhaust system.
- ☐ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.
- ☐ Inspect rear drive assembly (RDA) fluid, add as needed. Drain and replace fluid if vehicle is used for any of the following: frequent trailer towing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained speeds during hot weather, above 90°F (32°C).
- ☐ Inspect power transfer unit (PTU) fluid, add as needed. Drain and replace fluid if vehicle is used for any of the following: frequent trailer towing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained speeds during hot weather, above 90°F (32°C).
- ☐ Change the automatic transmission fluid and filter.
- ☐ Replace the accessory drive belt(s).

---

Odometer Reading \_\_\_\_\_ Date \_\_\_\_\_

---

Repair Order # \_\_\_\_\_ Dealer Code \_\_\_\_\_

---

Signature, Authorized Service Center \_\_\_\_\_

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.

---

Signature, Authorized Service Center

- ❑ Change the engine oil and engine oil filter.††
- ❑ Rotate tires.
- ❑ If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary.
- ❑ Inspect the CV joints.
- ❑ Inspect the brake linings; replace if necessary.
- ❑ Replace the air conditioning filter.
- ❑ Replace the spark plugs. \*

\* The spark plug change interval is mileage based only, monthly intervals do not apply.

Signature, Authorized Service Center

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.

---

Signature, Authorized Service Center

**150,000 Miles (240,000 km) or 240 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.††
- ☐ Rotate tires.
- ☐ Replace the engine air cleaner filter.
- ☐ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.
- ☐ Inspect the brake linings; replace if necessary.
- ☐ Replace the air conditioning filter.
- ☐ Inspect the CV joints.
- ☐ Inspect exhaust system.
- ☐ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.
- ☐ Flush and replace the engine coolant.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

† This maintenance is recommended by the manufacturer to the owner, but is not required to maintain emissions warranty.

**WARNING!**

You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.

**Severe Duty Conditions**

†† Change the engine oil and engine oil filter at every 4500 miles (7,500 km) or 12 months if using your vehicle under any of the following severe duty conditions:

- Stop and go driving.
- Driving in dusty conditions.
- Short trips of less than 10 miles (16 km).
- Trailer towing.

- Taxi, police, or delivery service (commercial service).
- Off-road or desert operation.

### Required Maintenance Intervals

Refer to the Maintenance Schedules on the following pages for the required maintenance intervals.

#### Maintenance Schedule – Diesel Engine

##### NOTE:

**Under no circumstances should oil change intervals exceed 15,000 miles (25 000 km) or one year, whichever comes first.**

##### At Each Stop for Fuel

- Check the engine oil level and add as required.
- Check the windshield washer solvent and add if required.

##### Once a Month

- Check the tire pressure and look for unusual wear or damage.
- Inspect the battery and clean and tighten the terminals as required.

- Check the fluid levels of the coolant reservoir, brake master cylinder, and power steering and add as needed.
- Check all lights and other electrical items for correct operation.

##### At Each Oil Change

- Change the engine oil filter.
- Replace the engine air cleaner filter.
- Inspect the exhaust system.
- Inspect the brake linings, hoses, and calipers.
- Inspect the CV joints and suspension components.
- Check the coolant level, hoses, and clamps.
- Inspect the accessory drive belt(s).

##### CAUTION!

Failure to perform the required maintenance items may result in damage to the vehicle.

#### 15,000 Miles (25,000 km) or 12 Months Maintenance Service Schedule

- ☐ Change the engine oil and engine oil filter.
- ☐ Rotate tires.
- ☐ Replace the engine air cleaner filter.
- ☐ Inspect the brake linings.
- ☐ Replace the air conditioning filter (if equipped).
- ☐ Inspect the CV joints.

Odometer Reading \_\_\_\_\_ Date \_\_\_\_\_

Repair Order # \_\_\_\_\_ Dealer Code \_\_\_\_\_

Signature, Authorized Service Center \_\_\_\_\_



**30,000 Miles (50,000 km) or 24 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.
- ☐ Rotate tires.
- ☐ Replace engine air cleaner filter.
- ☐ Replace fuel filter.
- ☐ Inspect the brake linings.
- ☐ Replace the air conditioning filter (if equipped).
- ☐ Inspect the CV joints.
- ☐ Inspect the exhaust system.
- ☐ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.
- ☐ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**45,000 Miles (75,000 km) or 36 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.
- ☐ Rotate tires.
- ☐ Replace the engine air cleaner filter.
- ☐ Change manual transmission fluid if using your vehicle for any of the following: trailer towing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained speeds during hot weather, above 90°F (32°C).
- ☐ Inspect the brake linings.
- ☐ Replace the air conditioning filter (if equipped).
- ☐ Inspect the CV joints.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**60,000 Miles (100,000 km) or 48 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.
- ☐ Rotate tires.
- ☐ Replace engine air cleaner filter.
- ☐ Replace fuel filter.
- ☐ Inspect the brake linings.
- ☐ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.
- ☐ Replace the air conditioning filter (if equipped).
- ☐ Inspect the CV joints.
- ☐ Inspect rear drive assembly (RDA) fluid, add as needed. Drain and replace fluid if vehicle is used for any of the following: frequent trailer towing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained speeds during hot weather, above 90°F (32°C).
- ☐ Inspect power transfer unit (PTU) fluid, add as needed. Drain and replace fluid if vehicle is used for any of the following: frequent trailer towing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained speeds during hot weather, above 90°F (32°C).

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**75,000 Miles (125,000 km) or 60 Months  
Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.
- ☐ Rotate tires.
- ☐ Replace the engine air cleaner filter.
- ☐ Inspect the brake linings.
- ☐ Replace the air conditioning filter (if equipped).
- ☐ Inspect the CV joints.
- ☐ Inspect the exhaust system.
- ☐ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**90,000 Miles (150,000 km) or 72 Months  
Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.
- ☐ Rotate tires.
- ☐ Replace engine air cleaner filter.
- ☐ Replace fuel filter.
- ☐ Inspect the brake linings.
- ☐ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.
- ☐ Replace the air conditioning filter (if equipped).
- ☐ Inspect the CV joints.

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**105,000 Miles (175,000 km) or 84 Months  
Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.
- ☐ Rotate tires.
- ☐ Replace the engine air cleaner filter.
- ☐ Flush and replace engine coolant.
- ☐ Inspect the brake linings.
- ☐ Replace the air conditioning filter (if equipped).
- ☐ Inspect the CV joints.
- ☐ Change the manual transmission fluid if using your vehicle for any of the following: trailer towing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained speeds during hot weather, above 90°F (32°C).

\_\_\_\_\_  
Odometer Reading Date

\_\_\_\_\_  
Repair Order # Dealer Code

\_\_\_\_\_  
Signature, Authorized Service Center

**120,000 Miles (200,000 km) or 96 Months Maintenance Service Schedule**

- ☐ Change the engine oil and engine oil filter.
- ☐ Rotate tires.
- ☐ Replace engine air cleaner filter.
- ☐ Replace fuel filter.
- ☐ Inspect the brake linings.
- ☐ Replace the air conditioning filter (if equipped).
- ☐ Change manual transmission fluid.
- ☐ Inspect the CV joints.
- ☐ Inspect the exhaust system.
- ☐ Inspect the front suspension, tie rod ends and boot seals; replace if necessary.
- ☐ Adjust the parking brake on vehicles equipped with four-wheel disc brakes.
- ☐ Inspect rear drive assembly (RDA) fluid, add as needed. Drain and replace fluid if vehicle is used for any of the following: frequent trailer towing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained speeds during hot weather, above 90°F (32°C).
- ☐ Inspect power transfer unit (PTU) fluid, add as needed. Drain and replace fluid if vehicle is used for any of the following: frequent trailer towing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained speeds during hot weather, above 90°F (32°C).

---

Odometer Reading \_\_\_\_\_ Date \_\_\_\_\_

---

Repair Order # \_\_\_\_\_ Dealer Code \_\_\_\_\_

---

Signature, Authorized Service Center \_\_\_\_\_



## IF YOU NEED CONSUMER ASSISTANCE

• IF YOU NEED ASSISTANCE . . . . .	.262
• ARGENTINA . . . . .	.263
• AUSTRALIA . . . . .	.263
• AUSTRIA . . . . .	.263
• BALANCE OF THE CARIBBEAN . . . . .	.264
• BELGIUM . . . . .	.264
• BOLIVIA . . . . .	.264
• BRAZIL . . . . .	.265
• BULGARIA . . . . .	.265
• CHILE . . . . .	.265
• CHINA . . . . .	.266
• COLOMBIA . . . . .	.266
• COSTA RICA . . . . .	.266
• CROATIA . . . . .	.267
• CZECH REPUBLIC . . . . .	.267
• DENMARK . . . . .	.267
• DOMINICAN REPUBLIC . . . . .	.268
• ECUADOR . . . . .	.268
• EL SALVADOR . . . . .	.268

• ESTONIA . . . . .	.269
• FINLAND . . . . .	.269
• FRANCE . . . . .	.269
• GERMANY . . . . .	.270
• GREECE . . . . .	.270
• GUATEMALA . . . . .	.270
• HONDURAS . . . . .	.271
• HUNGARY . . . . .	.271
• IRELAND . . . . .	.271
• ITALY . . . . .	.272
• LATVIA . . . . .	.272
• LITHUANIA . . . . .	.272
• LUXEMBURG . . . . .	.273
• NETHERLANDS . . . . .	.273
• NEW ZEALAND . . . . .	.273
• NORWAY . . . . .	.274
• PANAMA . . . . .	.274
• PARAGUAY . . . . .	.274
• PERU . . . . .	.275
• POLAND . . . . .	.275
• PORTUGAL . . . . .	.275
• PUERTO RICO AND U.S. VIRGIN ISLANDS . . . . .	.276
• REUNION . . . . .	.276
• ROMANIA . . . . .	.276
• RUSSIA . . . . .	.277
• SLOVAKIA . . . . .	.277
• SLOVENIA . . . . .	.277



• SPAIN . . . . .	.278
• SWEDEN . . . . .	.278
• SWITZERLAND . . . . .	.278
• TAIWAN . . . . .	.279
• TURKEY . . . . .	.279
• UKRAINE . . . . .	.279
• UNITED KINGDOM . . . . .	.280
• URUGUAY . . . . .	.280
• VENEZUELA . . . . .	.280

## IF YOU NEED ASSISTANCE

The manufacturer distributors are vitally interested in your satisfaction with their products and services. If a servicing problem or other difficulty should occur, we recommend that you take the following steps:

Discuss the problem at the authorized dealer with the dealer principal or the service manager. Management personnel at the authorized dealer are in the best position to resolve the problem.

When you contact the distributor please provide all of the following information:

- Your name, address and phone number.
- Vehicle Identification Number (this 17 digit number is found on an etched plate or label, located on the left front corner of the instrument panel, visible through the windshield. It is also available from your vehicle registration or title).

- Selling and servicing authorized dealer.
- Vehicle's delivery date and current odometer distance.
- Service history of your vehicle.
- An accurate description of the problem and the conditions under which it occurs.

## **ARGENTINA**

Chrysler Argentina S.A

Boulevard Azucena Villaflor 435

C1107CII

Buenos Aires, Argentina

Tel.: +54-11-4891 7900

Fax: +54-11-4891 7901

## **AUSTRALIA**

Chrysler Australia Pty. Ltd.

ACN 124 956 505

PO Box 23267, Docklands Victoria 3008

Ph. (03) 8698-0200

## **AUSTRIA**

### **Jeep Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 0 426 5337

#### ***Local Toll Free Number***

Tel: 0800 20 1741

#### ***International Toll Number***

Tel: + 39 02 444 12 045

### **Chrysler Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 1692 1692

#### ***Local Toll Free Number***

Tel: 0800 201745

#### ***International Toll Number***

Tel: +39 02 444 12046

### **Dodge Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 36343 000

#### ***Local Toll Free Number***

Tel: 0800 201747

#### ***International Toll Number***

Tel: Not Available

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

## **BALANCE OF THE CARIBBEAN**

Interamericana Trading Corporation

Warrens, St. Michael

Barbados, West Indies

BB22026, P0 Box 98

Tel.: 246-417-8000

Fax: 246-425-2888

## **BELGIUM**

### **Jeep Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 0 426 5337

***Local Toll Free Number***

Tel: 0800 55 888

***International Toll Number***

Tel: +39 02 444 12 045

### **Chrysler Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 1692 1692

***Local Toll Free Number***

Tel: 0800 18 142

***International Toll Number***

Tel: +39 02 444 12046

### **Dodge Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 36343 000

***Local Toll Free Number***

Tel: 0800 16 166

***International Toll Number***

Tel: Not Available

## **BOLIVIA**

Ovando & Cia S.A.

Av. Cristobal de Mendoza (2do Anillo) y Canal  
Isuto

Santa Cruz, Bolivia

PO Box 6852

Tel.: (591-3) 336 3100

Fax: (591-3) 334 0229

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

**BRAZIL**

Chrysler do Brasil

Rua Funchal, 418 - 16º andar CJ 1601/1602,  
Vila Olímpia

04551-060 Sao Paulo – S.P., Brazil

Tel: +5511 4949 3900

Fax: +5511 4949 3905

**BULGARIA**

BALKAN STAR

Resbarska Str. 5

1510 Sofia

Tel.: 359 2 91988

Fax: 359 2 945 40 14

**CHILE**

Comercial Chrysler S.A.

Av. Americo Vespucio 1601, Quilicura

Santiago, Chile

Zip Code 101931-7, 367-V

Tel.: +562 837 1300

Fax: +562 6039196

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

**CHINA**

Chrysler Group (China) Sales Limited

16F, Gemdale Plaza Tower A

No.91 Jian Guo Road

Chaoyang District

Beijing 100022, P.R. China

Chrysler Brand Tel: 400-650-1195

Dodge Brand Tel: 400-650-0118

**COLOMBIA**

Chrysler Colombia S.A.

Avenida Calle 26 # 70A-25

Zip Code 110931

Bogotá Colombia

Tel: +57 1 745 5777

Fax: +57 1 410 5667

**COSTA RICA**

AutoStar

La Uruca, frente al Banco Nacional

San José, Costa Rica

PO Box 705-1150

Tel.: (506) 295 - 0000

Fax: (506) 295 - 0052

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

## **CROATIA**

Autocommerce Hrvatska d.o.o.

Jablanska 80

10 000 Zagreb

Tel: 00 385 1 3869 001

Fax: 00 385 1 3869 069

## **CZECH REPUBLIC**

Fiat CR s.r.o.

Karolinska 650/1

186 00 Praha 8 – Karlín

Czech Republic

Tel: +420 2 24806 111

Fax: +420 2 24806 312

## **DENMARK**

### **Jeep Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 0 426 5337

***Local Toll Free Number***

Tel: 80 20 5337

***International Toll Number***

Tel: +39 02 444 12 045

### **Chrysler Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 1692 1692

***Local Toll Free Number***

Tel: 80 20 30 35

***International Toll Number***

Tel: +39 02 444 12046

### **Dodge Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 36343 000

***Local Toll Free Number***

Tel: 80 20 30 36

***International Toll Number***

Tel: Not Available

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

**DOMINICAN REPUBLIC**

Reid y Compañía

John F. Kennedy Casi Esq. Lope de Vega

Santo Domingo, Dominican Republic

Tel.: (809) 562-7211

Fax: (809) 565-8774

**ECUADOR**

Chrysler Jeep Automotriz del Ecuador

Av. Juan Tanca Marengo km. 4.5

Guayaquil, Ecuador

Tel.: +593 4 2244101

Fax: +593 4 2244273

**EL SALVADOR**

Grupo Q del Salvador

Ave. Las Amapolas (Autopista Sur)

Blvd. Los Próceres y Avenida No. 1, Lomas de San Francisco,

San Salvador, El Salvador

Zip Code 152

Tel.: +503 2248 6400

Fax: +503 278 5731

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.



## **ESTONIA**

Silberauto AS

Järvevana tee 11

11314 Tallinn

Tel.: +372 53337946

Tel.: 06 266 072

Fax: 06 266 066

service@silberauto.ee

## **FINLAND**

AutoFennica

Ristipellontie 5

00390 HELSINKI

Tel: 020 54771

Fax: 020 5477 485

## **FRANCE**

### **Jeep Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 0 426 5337

***Local Toll Free Number***

Tel: 0800 0 42653

***International Toll Number***

Tel: +39 02 444 12 045

### **Chrysler Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 1692 1692

***Local Toll Free Number***

Tel: 0800 169216

***International Toll Number***

Tel: +39 02 444 12046

### **Dodge Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 36343 000

***Local Toll Free Number***

Tel: 0800 363430

***International Toll Number***

Tel: Not Available

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

## **GERMANY**

### **Jeep Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 0 426 5337

#### ***Local Toll Free Number***

Tel: 0800 0426533

#### ***International Toll Number***

Tel: +39 02 444 12 045

### **Chrysler Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 1692 1692

#### ***Local Toll Free Number***

Tel: 0800 1692 169

#### ***International Toll Number***

Tel: +39 02 444 12046

### **Dodge Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 36343 000

#### ***Local Toll Free Number***

Tel: 0800 3634 300

#### ***International Toll Number***

Tel: Not Available

## **GREECE**

Chrysler Jeep Dodge Hellas

240-242 Kifisias Avenue

15231 Halandri Athens, Greece

Tel.: +30 210 6700800

Fax: +30 210 6700820

## **GUATEMALA**

Grupo Q del Guatemala

Km 16 carretera a El Salvador, condado concepción

Ciudad de Guatemala, Guatemala

Zip Code 1004

Tel.: +502 6685 9500

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

## **HONDURAS**

Grupo Q de Honduras

Blvd.. Centro América frente a Plaza Miraflores,

Tegucigalpa, Honduras

Tel.: +504 2290 3700

Fax: +504 2232 6564

## **HUNGARY**

Fiat Hungary Co. Ltd.

H-1123 Budapest

Alkotás u. 53.

Tel.: +36-1-458-3100

Fax: +36-1-458-3148

## **IRELAND**

### **Jeep Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 0 426 5337

***Local Toll Free Number***

Tel: 1800 505337

***International Toll Number***

Tel: +39 02 444 12 045

### **Chrysler Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 1692 1692

***Local Toll Free Number***

Tel: 1800 363463

***International Toll Number***

Tel: +39 02 444 12046

### **Dodge Customer Service\***

***Universal Toll Free Number***

Tel: 00 800 36343 000

***Local Toll Free Number***

Tel: 1800 363430

***International Toll Number***

Tel: Not Available

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

## ITALY

### Jeep Customer Service\*

#### ***Universal Toll Free Number***

Tel: 00 800 0 426 5337

#### ***Local Toll Free Number***

Tel: 800 0 42653

#### ***International Toll Number***

Tel: +39 02 444 12 045

### Chrysler Customer Service\*

#### ***Universal Toll Free Number***

Tel: 00 800 1692 1692

#### ***Local Toll Free Number***

Tel: 800 1692 16

#### ***International Toll Number***

Tel: +39 02 444 12046

### Dodge Customer Service\*

#### ***Universal Toll Free Number***

Tel: 00 800 36343 000

#### ***Local Toll Free Number***

Tel: 800 363430

#### ***International Toll Number***

Tel: Not Available

## LATVIA

### TC MOTORS LTD.

41 Krasta Str.

LV-1003 Riga

Tel.: +37167812 313

Mob.: +371 29498662

Fax: +371 67812313

### SIA "Autobrava"

G.Astras street 5,

LV-1084 Riga

Tel.: +371 67812312

Mob.: +371 29498662

Fax +371 671 462 56

## LITHUANIA

### Silberauto AS

Pirklių g. 9

LT-02300 Vilnius

Tel +370 52 665956, GSM +370 698 24950

Fax +370 52 665951

service24h@silberauto.lt

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

## LUXEMBURG

### Jeep Customer Service\*

#### ***Universal Toll Free Number***

Tel: 00 800 0 426 5337

#### ***Local Toll Free Number***

Tel: 8002 5888

#### ***International Toll Number***

Tel: +39 02 444 12 045

### Chrysler Customer Service\*

#### ***Universal Toll Free Number***

Tel: 00 800 1692 1692

#### ***Local Toll Free Number***

Tel: 8002 8216

#### ***International Toll Number***

Tel: +39 02 444 12046

### Dodge Customer Service\*

#### ***Universal Toll Free Number***

Tel: 00 800 36343 000

#### ***Local Toll Free Number***

Tel: 8002 8217

#### ***International Toll Number***

Tel: Not Available

## NETHERLANDS

### Jeep Customer Service\*

#### ***Universal Toll Free Number***

Tel: 00 800 0 426 5337

#### ***Local Toll Free Number***

Tel: 0031 203421760

#### ***International Toll Number***

Tel: +39 02 444 12 045

### Chrysler Customer Service\*

#### ***Universal Toll Free Number***

Tel: 00 800 1692 1692

#### ***Local Toll Free Number***

Tel: 0031 203421758

#### ***International Toll Number***

Tel: +39 02 444 12046

### Dodge Customer Service\*

#### ***Universal Toll Free Number***

Tel: 00 800 36343 000

#### ***Local Toll Free Number***

Tel: 0031 203421754

#### ***International Toll Number***

Tel: Not Available

## NEW ZEALAND

Chrysler New Zealand

Private Bag 14907

Panmure New Zealand

Tel: 09573 7800

Fax: 09573 7808

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

**NORWAY**

RSA BIL

Øvre Eikervei 77

N-3048 Drammen

Tel.: +47 32 21 88 00

Fax: +47 32 82 60 99

**PANAMA**

Automotora Autostar S. A.

Avenida Domingo Díaz, Via Tocumen, Frente a  
la Urbanizacion El Crisol

Panamá, Panamá

Tel.: +507 233 7222

Fax: +507 233 2843

**PARAGUAY**

Garden Autolider S.A

Av. República de Argentina esq. Facundo  
Machain

Asuncion, Paraguay

Tel.: +595 21 664 580

Fax: +595 21 664 579

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

**PERU**

Divemotor S.A.

Av. Canada 1160, Urb. Sta. Catalina

Lima, Peru

Zip Code Lima 13

Tel.: (51-1) 712 2000

Fax: (51-1) 712 2002

**POLAND**

Fiat Auto Poland S.A.

ul. M. Grażyńskiego 141,

43-300 Bielsko-Biała

Tel: +48 (033) 813-21-00, 813-51-00

**PORTUGAL**

Chrysler Portugal S.A.

Qta. da Fonte – Edif. D<sup>a</sup> Amélia

Rua Victor Câmara, 2 1<sup>a</sup>A

2770-229 Paço de Arcos

Portugal

Tel : +351 (0)21 323 91 00

Fax: +351 (0)21 323 91 99

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

**PUERTO RICO AND U.S. VIRGIN ISLANDS**

Chrysler International Services, S.A.  
Calle 1 lote 1 Suite 205, Metro Office Park  
Guaynabo, Puerto Rico  
P.O. Box 191857  
San Juan 009191857  
Tel.: 7877825757  
Fax: 7877823345

**REUNION**

COTRANS AUTOMOBILES  
17 Bd du Chaudron, 97490 Sainte Clotilde  
Tel: 0262920000  
Fax: 0262488443

**ROMANIA**

AUTO ITALIA IMPEX SRL  
Bd. Timisoara nr. 60/D  
Bucuresti, ROMANIA  
Tel: +40 (0)21.444.333.4  
Fax: +40 (0)21.444.2779  
[www.autoitalia.ro](http://www.autoitalia.ro)

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.



**RUSSIA**

Chrysler Russia SAO

Testovskaya street, 10

123317 Moscow,

Tel +7(495)-745-26-36

Fax +7(495)-745-26-37

**SLOVAKIA**

Fiat SR s.r.o

Dubravská cesta 2

841 05 Bratislava 45

Slovakia

Tel: +421 2 593099 901

Fax: +421 2 593099 911

**SLOVENIA**

Avto Triglav d.o.o.

Dunajska 122

1000 Ljubljana

Tel: 01 5883 400

Fax: 01 5883 487

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

## **SPAIN**

### **Jeep Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 0 426 5337

#### ***Local Toll Free Number***

Tel: 900 10 5337

#### ***International Toll Number***

Tel: +39 02 444 12 045

### **Chrysler Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 1692 1692

#### ***Local Toll Free Number***

Tel: 900 1692 00

#### ***International Toll Number***

Tel: +39 02 444 12046

### **Dodge Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 36343 000

#### ***Local Toll Free Number***

Tel: 900 363430

#### ***International Toll Number***

Tel: Not Available

## **SWEDEN**

### **Jeep Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 0 426 5337

#### ***Local Toll Free Number***

Tel: 020 5337 00

#### ***International Toll Number***

Tel: +39 02 444 12 045

### **Chrysler Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 1692 1692

#### ***Local Toll Free Number***

Tel: 020 303035

#### ***International Toll Number***

Tel: +39 02 444 12046

### **Dodge Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 36343 000

#### ***Local Toll Free Number***

Tel: 020 303036

#### ***International Toll Number***

Tel: Not Available

## **SWITZERLAND**

### **Jeep Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 0 426 5337

#### ***Local Toll Free Number***

Tel: 0800 0426 53

#### ***International Toll Number***

Tel: +39 02 444 12 045

### **Chrysler Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 1692 1692

#### ***Local Toll Free Number***

Tel: 0800 1692 16

#### ***International Toll Number***

Tel: +39 02 444 12046

### **Dodge Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 36343 000

#### ***Local Toll Free Number***

Tel: 0800 3634 30

#### ***International Toll Number***

Tel: Not Available

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

**TAIWAN**

Chrysler Taiwan Co. , LTD.

13th Floor Union Enterprise Plaza  
1109 Min Sheng East Road, Section 3  
Taipei Taiwan R.O.C.  
Tel.: 080081581  
Fax: 886225471871

**TURKEY**

Tofaş Türk Otomobil Fabrikası A.S.  
Büyükdere Cad, No:145 Tofaş Han Zincirlikuyu  
ISTAMBUL  
Tel: (0212) 444 5337  
Tel: (0212) 275 2960  
Telefax: (0212) 275 0357

**UKRAINE**

PJSC "AUTOCAPITAL"  
Chervonoarmiyska Str. 15/2  
01004 Kyiv  
Tel : +380 44 206 8888  
+380 44 201 6060  
Fax: +380 44 206 8889

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

## **UNITED KINGDOM**

### **Jeep Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 0 426 5337

#### ***Local Toll Free Number***

Tel: 0800 1692966

#### ***International Toll Number***

Tel: +39 02 444 12 045

### **Chrysler Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 1692 1692

#### ***Local Toll Free Number***

Tel: 0800 1692169

#### ***International Toll Number***

Tel: +39 02 444 12046

### **Dodge Customer Service\***

#### ***Universal Toll Free Number***

Tel: 00 800 36343 000

#### ***Local Toll Free Number***

Tel: 0800 1692956

#### ***International Toll Number***

Tel: Not Available

## **URUGUAY**

SEVEL Uruguay S. A.

Convenio 820

Montevideo, Uruguay

Zip Code 11700

Tel: +598 220 02980

Fax: +598 2209-0116

## **VENEZUELA**

Chrysler de Venezuela LLC

Avenida Pancho Pepe Croquer. Zona Industrial Norte

Valencia, Estado Carabobo

Tel: +(58) 241-613 2400

Fax: +(58) 241-613 2538

Fax: (58) 241-6132602

(58) 241-6132438

PO BOX: 1960

Services And Parts

Zona Industrial II, Av. Norte-Sur 5 C/C Calle Este-Oeste

C.C LD Center Local B-2

Valencia, Estado Carabobo

Tel: (58) 241-6132757

(58) 241-6132773

Fax: (58) 241-6132743

(\*) The Customer Service offers information and assistance on products, services, dealerships and 24H Roadside Assistance. It can be contacted from the main European countries by calling the Universal Toll Free Number. In case of problems, please use the Local Toll Free Number or the International Toll Number.

## CHANGE OF OWNERSHIP NOTIFICATION

MODEL \_\_\_\_\_  
REGISTRATION OR  
LICENSE NUMBER \_\_\_\_\_

VIN | | | | | | | | | | | | | | | | | | | |

NEW OWNER'S NAME \_\_\_\_\_

NEW OWNER'S ADDRESS \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

TELEPHONE NO. \_\_\_\_\_

IF RESOLD BY CHRYSLER JEEP DEALERSHIP,  
ENTER DEALER STAMP IN BOX ABOVE.

FIRST OWNER

80140712

## CHANGE OF OWNERSHIP NOTIFICATION

MODEL \_\_\_\_\_  
REGISTRATION OR  
LICENSE NUMBER \_\_\_\_\_

VIN | | | | | | | | | | | | | | | | | | | |

NEW OWNER'S NAME \_\_\_\_\_

NEW OWNER'S ADDRESS \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

TELEPHONE NO. \_\_\_\_\_

IF RESOLD BY CHRYSLER JEEP DEALERSHIP,  
ENTER DEALER STAMP IN BOX ABOVE.

SECOND OWNER

80140753

## INDEX

ABS (Anti-Lock Brake System) . . . . .	159
Adding Engine Coolant (Antifreeze) . . . . .	219
Adding Fuel . . . . .	177
Adding Washer Fluid . . . . .	216
Additives, Fuel . . . . .	176
Airbag . . . . .	36, 41
Airbag Deployment . . . . .	42
Airbag Light . . . . .	40, 43, 54, 114
Airbag Maintenance . . . . .	43
Airbag, Side . . . . .	38, 39, 41
Airbag, Window (Side Curtain) . . . . .	38, 39, 41
Air Cleaner, Engine (Engine Air Cleaner Filter) . . . . .	213
Air Conditioner Maintenance . . . . .	214
Air Conditioning . . . . .	135
Air Conditioning Controls . . . . .	135
Air Conditioning Filter . . . . .	142
Air Conditioning, Operating Tips . . . . .	143
Air Conditioning Refrigerant . . . . .	214, 215
Air Conditioning System . . . . .	135, 137, 214
Air Pressure, Tires . . . . .	168
Alarm Light . . . . .	117
Alarm System (Security Alarm) . . . . .	15
Alterations/Modifications, Vehicle . . . . .	8
Antifreeze (Engine Coolant) . . . . .	218, 219, 235
Capacities . . . . .	235
Disposal . . . . .	220

Anti-Lock Brake System (ABS) . . . . .	159
Anti-Theft Security Alarm (Theft Alarm) . . . . .	15
Appearance Care . . . . .	227
Automatic Dimming Mirror . . . . .	61
Automatic Door Locks . . . . .	20, 21
Automatic Temperature Control (ATC) . . . . .	137
Automatic Transaxle . . . . .	12, 191
Fluid Level Check . . . . .	225
Overheating . . . . .	191
Automatic Transmission . . . . .	151, 225
Fluid and Filter Changes . . . . .	225
Fluid Type . . . . .	225
Gear Ranges . . . . .	153
Special Additives . . . . .	225
Autostick . . . . .	155
Battery . . . . .	214
Keyless Transmitter Replacement (RKE) . . . . .	18
Belts, Seat . . . . .	54
Body Mechanism Lubrication . . . . .	215
Brake Assist System . . . . .	162
Brake Fluid . . . . .	237
Brake, Parking . . . . .	157
Brakes . . . . .	158
Brake System . . . . .	158, 223
Anti-Lock (ABS) . . . . .	159, 162

Master Cylinder . . . . .	223
Parking . . . . .	157
Warning Light . . . . .	116
Brake/Transmission Interlock . . . . .	152
Bulb Replacement . . . . .	233, 234
Bulbs, Light . . . . .	55, 233
Calibration, Compass . . . . .	129
Capacities, Antifreeze (Engine Coolant) . . . . .	235
Capacities, Fluid . . . . .	235
Caps, Filler . . . . .	
Fuel . . . . .	177
Oil (Engine) . . . . .	207, 208, 209, 212
Power Steering . . . . .	161
Radiator (Coolant Pressure) . . . . .	220
Carbon Monoxide Warning . . . . .	53
Cargo Area Cover . . . . .	105
Cargo Area Features . . . . .	105
Cargo Compartment . . . . .	105
Light . . . . .	105
Cargo Light . . . . .	105
Cargo Load Floor . . . . .	106
Cargo Tie-Downs . . . . .	107
Car Washes . . . . .	227
Cellular Phone . . . . .	63, 134
Center High Mounted Stop Light . . . . .	234
Chains, Tire . . . . .	173



Changing A Flat Tire . . . . .	191	Coolant Level . . . . .	217, 220	Downshifting . . . . .	151
Checking Your Vehicle For Safety . . . . .	53	Disposal of Used Coolant . . . . .	220	Driver's Seat Back Tilt. . . . .	87
Checks, Safety. . . . .	53	Drain, Flush, and Refill . . . . .	218	Driving. . . . .	157
Child Restraint. . . . .	44, 45, 46	Inspection . . . . .	220		
Child Restraint Tether Anchors . . . . .	50	Points to Remember . . . . .	221	Electrical Power Outlets . . . . .	101
Child Safety Locks. . . . .	21	Pressure Cap . . . . .	220	Electric Remote Mirrors . . . . .	62
Child Seat . . . . .	48, 51	Radiator Cap . . . . .	220	Electronic Brake Control System . . . . .	161
Clean Air Gasoline . . . . .	176	Selection of Coolant (Antifreeze) . . . . .	218	Anti-Lock Brake System . . . . .	162
Cleaning . . . . .		Corrosion Protection . . . . .	227	Brake Assist System . . . . .	162
Wheels . . . . .	228	Cruise Light . . . . .	117	Electronic Roll Mitigation . . . . .	162
Climate Control. . . . .	135	Cupholders . . . . .	104	Traction Control System . . . . .	162
Clutch . . . . .	223	Customer Assistance. . . . .	262	Electronic Speed Control (Cruise Control). .97	
Clutch Fluid . . . . .	223			Electronic Stability Control (ESC). . . . .	165
Coin Holder. . . . .	104	Data Recorder, Event . . . . .	44	Electronic Vehicle Information Center	
Compact Disc (CD) Maintenance. . . . .	134	Defroster, Rear Window . . . . .	108	(EVIC) . . . . .	122
Compact Spare Tire . . . . .	170	Defroster, Windshield . . . . .	54, 136, 140	Emergency, In Case of	
Compass . . . . .	121	Delay (Intermittent) Wipers . . . . .	95	Jacking . . . . .	191
Compass Calibration. . . . .	129	Diagnostic System, Onboard . . . . .	210	Jump Starting . . . . .	197
Compass Variance . . . . .	127	Diesel Fuel . . . . .	177	Towing . . . . .	203
Connector . . . . .		Diesel Fuel Requirements . . . . .	177	Engine . . . . .	207, 208, 209
UCI . . . . .	129	Dimmer Switch, Headlight. . . . .	93	Air Cleaner . . . . .	213
Universal Consumer Interface (UCI) . . . . .	129	Dipsticks . . . . .		Break-In Recommendations . . . . .	52
Console . . . . .	104	Power Steering . . . . .	161	Checking Oil Level . . . . .	211
Coolant (Antifreeze) . . . . .	235	Disposal . . . . .		Coolant (Antifreeze) . . . . .	217
Coolant Pressure Cap (Radiator Cap) . . . . .	220	Antifreeze (Engine Coolant) . . . . .	220	Cooling . . . . .	217
Cooling System. . . . .	217	Door Locks . . . . .	19	Exhaust Gas Caution . . . . .	53
Adding Coolant (Antifreeze) . . . . .	219	Door Locks, Automatic . . . . .	20	Jump Starting . . . . .	197

Oil . . . . .	.211, 235
Oil Change Interval . . . . .	.211
Oil Filler Cap . . . . .	.207, 208, 209, 212
Oil Selection . . . . .	.211, 212
Overheating . . . . .	.190
Temperature Gauge . . . . .	.117
Enhanced Accident Response Feature . . . . .	.41
Event Data Recorder . . . . .	.44
Exhaust Gas Caution . . . . .	.24, 53
Exhaust System . . . . .	.53, 216, 222
Exterior Lights . . . . .	.55
Filters	
Air Cleaner . . . . .	.213
Air Conditioning . . . . .	.142
Engine Oil . . . . .	.212
Engine Oil Disposal . . . . .	.212
Flashers	
Hazard Warning . . . . .	.190
Turn Signal . . . . .	.55, 234
Flash-To-Pass . . . . .	.93
Flooded Engine Starting . . . . .	.149
Fluid, Brake . . . . .	.237
Fluid Capacities . . . . .	.235
Fluid Leaks . . . . .	.55
Fluid Level Checks	
Automatic Transaxle . . . . .	.225

Cooling System . . . . .	.217
Power Steering . . . . .	.161
Fluids, Lubricants and Genuine Parts . . . . .	.236
Fog Lights . . . . .	.92, 120, 234
Fog Lights, Rear . . . . .	.121
Folding Rear Seat . . . . .	.89
Folding Rear Seat (Sedan) . . . . .	.89
Four-Way Hazard Flasher . . . . .	.190
Four Wheel Drive . . . . .	.156
Systems . . . . .	.156
Four Wheel Drive Operation . . . . .	.156
Freeing A Stuck Vehicle . . . . .	.199
Fuel . . . . .	.175, 177
Adding . . . . .	.177
Additives . . . . .	.176
Capacity . . . . .	.235
Diesel . . . . .	.177
Filler Cap (Gas Cap) . . . . .	.177
Gasoline . . . . .	.175
Gauge . . . . .	.114
Light . . . . .	.114
Octane Rating . . . . .	.175
Tank Capacity . . . . .	.235
Fueling . . . . .	.177
Fuses . . . . .	.230
Gas Cap (Fuel Filler Cap) . . . . .	.177, 210

Gasoline, Clean Air . . . . .	.176
Gasoline (Fuel) . . . . .	.175, 235
Gauges	
Coolant Temperature . . . . .	.117
Fuel . . . . .	.114
Odometer . . . . .	.119
Tachometer . . . . .	.115
Gear Ranges . . . . .	.153
Gear Select Lever Override . . . . .	.202
General Information . . . . .	.15, 18
Glass Cleaning . . . . .	.229
Gross Axle Weight Rating . . . . .	.178
Gross Vehicle Weight Rating . . . . .	.178
Hands-Free Phone (Uconnect®) . . . . .	.63
Hazard Warning Flasher . . . . .	.190
Headlights . . . . .	.234
Cleaning . . . . .	.229
High Beam . . . . .	.93, 115
High Beam/Low Beam Select Switch . . . . .	.93
Leveling . . . . .	.94
Passing . . . . .	.93
Replacing . . . . .	.234
Switch . . . . .	.92
Head Restraints . . . . .	.88
Heated Mirrors . . . . .	.62
Heated Seats . . . . .	.85

Heater . . . . .	.135
Hill Descent Control . . . . .	.163
Hill Start Assist . . . . .	.164
Hood Release . . . . .	.90
Ignition . . . . .	.12
Key . . . . .	.12
Ignition Key Removal . . . . .	.12
Immobilizer (Sentry Key) . . . . .	.14
Infant Restraint. . . . .	.44
Information Center, Vehicle . . . . .	.122
Inside Rearview Mirror . . . . .	.61
Instrument Cluster . . . . .	.114
Instrument Panel and Controls . . . . .	.111
Instrument Panel Cover . . . . .	.229
Instrument Panel Lens Cleaning . . . . .	.229
Integrated Power Module (Fuses). . . . .	.230
Interior Appearance Care . . . . .	.228
Intermittent Wipers (Delay Wipers). . . . .	.95
Introduction . . . . .	.4
Jacking Instructions . . . . .	.192
Jack Location. . . . .	.191
Jack Operation . . . . .	.191, 192
Jump Starting. . . . .	.197
Key-In Reminder. . . . .	.13

Keyless Entry System (Sedan) . . . . .	.16
Key, Programming . . . . .	.15
Key, Replacement . . . . .	.14
Keys . . . . .	.12
Key, Sentry (Immobilizer) . . . . .	.14
Knee Bolster . . . . .	.36
Lane Change and Turn Signals . . . . .	.115, 234
Lane Change Assist . . . . .	.93
Lap/Shoulder Belts . . . . .	.27
Latches . . . . .	.55
Hood . . . . .	.90
Leaks, Fluid . . . . .	.55
Leveling, Headlight . . . . .	.94
Life of Tires . . . . .	.172
Liftgate (Sedan) . . . . .	.24
Liftgate Window Wiper/Washer . . . . .	.108
Light Bulbs . . . . .	.55, 233
Lights. . . . .	.55, 92
Airbag . . . . .	.40, 43, 54, 114
Alarm . . . . .	.117
Back-Up . . . . .	.234
Brake Assist Warning . . . . .	.167
Brake Warning . . . . .	.116
Bulb Replacement . . . . .	.234
Cargo . . . . .	.105
Center Mounted Stop . . . . .	.234

Dimmer Switch, Headlight . . . . .	.92
Electronic Stability Program (ESP) Indicator . . . . .	.167
Engine Temperature Warning . . . . .	.115
Exterior . . . . .	.55
Fog . . . . .	.92, 120, 234
Hazard Warning Flasher . . . . .	.190
Headlight Leveling . . . . .	.94
Headlights . . . . .	.92
Headlight Switch . . . . .	.92
High Beam Indicator . . . . .	.115
Instrument Cluster . . . . .	.92
License . . . . .	.234
Lights On Reminder . . . . .	.92
Low Fuel . . . . .	.114
Malfunction Indicator (Check Engine) . . . . .	.120
Map Reading . . . . .	.94
Oil Pressure . . . . .	.114
Passing . . . . .	.93
Rear Fog . . . . .	.121
Seat Belt Reminder . . . . .	.115
Security Alarm (Theft Alarm) . . . . .	.15, 117
Service . . . . .	.234
Side Repeater . . . . .	.234
Theft Alarm (Security Alarm) . . . . .	.117
Traction Control . . . . .	.167

Turn Signal . . . . .	.55, 92, 115, 234
Voltage . . . . .	.114
Warning (Instrument Cluster Description) . . . . .	.114
Locks . . . . .	.19
Automatic Door . . . . .	.20
Child Protection . . . . .	.21
Door . . . . .	.19
Power Door . . . . .	.20
Steering Wheel . . . . .	.13
Lubrication, Body . . . . .	.215
Lumbar Support . . . . .	.87
Maintenance Free Battery . . . . .	.214
Maintenance Procedures . . . . .	.210
Maintenance Schedule . . . . .	.240, 252
Malfunction Indicator Light (Check Engine). . . . .	.120
Manual Transaxle. . . . .	.148, 150
Downshifting . . . . .	.151
Fluid Level Check . . . . .	.226
Lubricant Selection . . . . .	.226
Manual Transmission. . . . .	.226
Fluid Level Check . . . . .	.226
Frequency of Fluid Change . . . . .	.226
Lubricant Selection . . . . .	.226
Map/Reading Lights . . . . .	.94

Master Cylinder (Brakes) . . . . .	.223
Methanol . . . . .	.175
Methanol Fuel . . . . .	.175
Mini-Trip Computer . . . . .	.121
Mirrors . . . . .	.61
Automatic Dimming . . . . .	.61
Electric Powered . . . . .	.62
Exterior Folding . . . . .	.62
Heated . . . . .	.62
Outside . . . . .	.61
Rearview . . . . .	.61
Vanity . . . . .	.62
Modifications/Alterations, Vehicle . . . . .	.8
Mopar Parts. . . . .	.210
Multi-Function Control Lever . . . . .	.92
Navigation System (Uconnect® gps) . . . . .	.133
New Vehicle Break-In Period . . . . .	.52
Occupant Restraints. . . . .	.39, 42
Occupant Restraints (Sedan) . . . . .	.25, 38, 39, 41
Octane Rating, Gasoline (Fuel) . . . . .	.175
Odometer . . . . .	.119
Trip . . . . .	.118, 119
Oil Change Indicator . . . . .	.124
Oil Change Indicator, Reset . . . . .	.124
Oil, Engine . . . . .	.211, 235

Capacity . . . . .	.235
Change Interval . . . . .	.211
Checking . . . . .	.211
Disposal . . . . .	.212
Filter . . . . .	.212
Filter Disposal . . . . .	.212
Identification Logo . . . . .	.212
Materials Added to . . . . .	.212
Recommendation . . . . .	.211, 212, 235
Viscosity . . . . .	.212
Oil Filter, Selection . . . . .	.212
Oil Pressure Light . . . . .	.114
Onboard Diagnostic System. . . . .	.210
Operating Precautions . . . . .	.210
Operator Manual (Owner's Manual) . . . . .	.6
Overheating, Engine . . . . .	.190
Owner's Manual (Operator Manual) . . . . .	.6
Paint Care . . . . .	.227
Parking Brake. . . . .	.157
Passing Light. . . . .	.93
Personal Settings. . . . .	.125
Pets . . . . .	.52
Phone, Cellular. . . . .	.63
Phone, Hands-Free (Uconnect®). . . . .	.63
Power . . . . .	
Door Locks . . . . .	.20

Mirrors . . . . .	.62	Recorder, Event Data . . . . .	.44	Seat Belts . . . . .	.54
Outlet (Auxiliary Electrical Outlet) . . . . .	.101	Recreational Towing . . . . .	.187	Adjustable Shoulder Belt . . . . .	.29
Steering . . . . .	.160, 161	Refrigerant . . . . .	.215	Adjustable Upper Shoulder Anchorage . . . . .	.29
Sunroof . . . . .	.99	Reminder, Seat Belt . . . . .	.35	And Pregnant Women . . . . .	.36
Transfer Unit . . . . .	.226	Remote Control . . . . .		Child Restraint . . . . .	.44, 45, 46
Windows . . . . .	.22	Door Locks . . . . .	.16	Front Seat . . . . .	.27
Power Steering Fluid . . . . .	.237	Remote Keyless Entry (Sedan) . . . . .	.16	Inspection . . . . .	.54
Power Transfer Unit . . . . .	.226	Remote Sound System (Radio) Controls . . . . .	.133	Pretensioners . . . . .	.33
Pregnant Women and Seat Belts . . . . .	.36	Repeater Lights, Side . . . . .	.234	Rear Seat . . . . .	.27
Preparation for Jacking . . . . .	.192	Replacement Bulbs . . . . .	.233	Reminder . . . . .	.115
Pretensioners . . . . .		Replacement Keys . . . . .	.14	Untwisting Procedure . . . . .	.31
Seat Belts . . . . .	.33	Replacement Parts . . . . .	.210	Seat Belts (Sedan) . . . . .	.25
Programmable Electronic Features . . . . .	.125	Replacement Tires . . . . .	.172	Seats . . . . .	.84
Radial Ply Tires . . . . .	.169	Restraint, Head . . . . .	.88	Adjustment . . . . .	.84, 86
Radiator Cap (Coolant Pressure Cap) . . . . .	.220	Restraints, Child . . . . .	.44, 51	Heated . . . . .	.85
Radio Operation . . . . .	.134	Restraints, Infant . . . . .	.44	Lumbar Support . . . . .	.87
Radio (Sound Systems) . . . . .	.129	Retractable Cargo Area Cover . . . . .	.105	Rear Folding . . . . .	.89
Rear Axle (Differential) . . . . .	.226	Roll Over Warning . . . . .	.4	Rear Folding (Sedan) . . . . .	.89
Rear Drive Assembly . . . . .	.226	Rotation, Tires . . . . .	.174	Seatback Release . . . . .	.87
Rear Fog Lights . . . . .	.121	Safety Checks Inside Vehicle . . . . .	.54	Tilting . . . . .	.87
Rear Liftgate (Sedan) . . . . .	.24	Safety Checks Outside Vehicle . . . . .	.55	Security Alarm (Theft Alarm) . . . . .	.15
Rear Seat, Folding . . . . .	.89	Safety, Exhaust Gas . . . . .	.53	Selection of Coolant (Antifreeze) . . . . .	.218
Rearview Mirrors . . . . .	.61	Safety Tips . . . . .	.53	Sentry Key (Immobilizer) . . . . .	.14
Rear Window Defroster . . . . .	.108	Schedule, Maintenance . . . . .	.240, 252	Sentry Key Programming . . . . .	.15
Rear Window Features . . . . .	.108	Seat Belt Maintenance . . . . .	.229	Service Assistance . . . . .	.262
Rear Wiper/Washer . . . . .	.108	Seat Belt Reminder . . . . .	.35	Settings, Personal . . . . .	.125

Shift Lever Override . . . . .	.202
Shoulder Belts . . . . .	.27
Side Airbag . . . . .	.41
Side Repeater Lights . . . . .	.234
Side Window Demisters (Defrosters) . . . . .	.142
Signals, Turn . . . . .	.55, 234
Snow Chains (Tire Chains) . . . . .	.173
Snow Tires . . . . .	.170
Sound Systems . . . . .	.129
Sound Systems (Radio) . . . . .	.129
Spare Tire . . . . .	.170, 171, 192
Speed Control (Cruise Control) . . . . .	.97, 117
Speedometer . . . . .	.114
Starting . . . . .	.148, 149
Automatic Transmission . . . . .	.148
Engine Fails to Start . . . . .	.149
Manual Transmission . . . . .	.148
Starting and Operating . . . . .	.149
Starting Procedures . . . . .	.148
Steering . . . . .	
Power . . . . .	.160, 161
Tilt Column . . . . .	.96
Wheel Lock . . . . .	.13
Steering Wheel Audio Controls . . . . .	.133
Steering Wheel Mounted Sound System Controls . . . . .	.133
Storage . . . . .	.233

Storage Bin . . . . .	.103
Storage, Vehicle . . . . .	.141
Stuck, Freeing . . . . .	.199
Sun Roof . . . . .	.99
Sun Visor Extension . . . . .	.62
Supplemental Restraint System - Airbag . . . . .	.36
System, Navigation (Uconnect® gps) . . . . .	.133
Tachometer . . . . .	.115
Taillights . . . . .	.234
Temperature Control, Automatic (ATC) . . . . .	.137
Temperature Gauge, Engine Coolant . . . . .	.117, 190
Tether Anchor, Child Restraint . . . . .	.50
Theft Alarm (Security Alarm) . . . . .	.15
Theft System (Security Alarm) . . . . .	.15
Tie Down Hooks, Cargo . . . . .	.107
Tilt Steering Column . . . . .	.96
Tires . . . . .	.55, 168
Aging (Life of Tires) . . . . .	.172
Air Pressure . . . . .	.168
Chains . . . . .	.173
Changing . . . . .	.191
Compact Spare . . . . .	.170
General Information . . . . .	.168
High Speed . . . . .	.169
Inflation Pressures . . . . .	.168
Jacking . . . . .	.191


Life of Tires . . . . .	.172
Radial . . . . .	.169
Replacement . . . . .	.172
Rotation . . . . .	.174
Safety . . . . .	.168
Snow Tires . . . . .	.170
Spare Tire . . . . .	.192
Spinning . . . . .	.171
Tread Wear Indicators . . . . .	.172
Tongue Weight/Trailer Weight . . . . .	.181
Towing . . . . .	.177
Disabled Vehicle . . . . .	.203
Guide . . . . .	.180
Recreational . . . . .	.187
Weight . . . . .	.180
Towing Eyes . . . . .	.200
Trailer Towing . . . . .	.177
Cooling System Tips . . . . .	.185
Hitches . . . . .	.186
Minimum Requirements . . . . .	.181
Trailer and Tongue Weight . . . . .	.181
Wiring . . . . .	.183
Trailer Towing Guide . . . . .	.180
Trailer Weight . . . . .	.180
Transaxle . . . . .	
Automatic . . . . .	.12
Manual . . . . .	.148, 150

Transmission		Vanity Mirrors	.62	Windows	.22
Automatic	.151, 225	Variance, Compass.	.127	Power	.22
Fluid	.225	Vehicle Identification Number (VIN)	.8	Windshield Defroster	.54, 136, 140
Range Indicator	.117	Vehicle Modifications/Alterations	.8	Windshield Washers	.95, 96
Transmitter Battery Service (Remote		Vehicle Storage	.141, 233	Windshield Wiper Blades	.215
Keyless Entry)	.18	Vehicle Theft Alarm (Security Alarm)	.15	Windshield Wipers	.95
Transporting Pets	.52	Voice Recognition System (VR)	.81	Wiper Blade Replacement	.215
Tread Wear Indicators	.172			Wipers, Intermittent	.95
Trip Computer	.121	Warning Lights (Instrument Cluster			
Trip Odometer	.119	Description)	.114		
Trip Odometer Reset Button	.118	Warning, Roll Over	.4		
Turn Signals	.92, 115, 234	Warnings and Cautions	.8		
		Washer			
UCI Connector	.129	Adding Fluid	.216		
Uconnect® (Hands-Free Phone)	.63	Washers, Windshield	.96		
Understanding Your Instrument Panel	.111	Washing Vehicle	.227		
Universal Child Seat Position Chart	.48	Wheel and Wheel Trim	.228		
Universal Consumer Interface (UCI)		Wheel and Wheel Trim Care	.228		
Connector	.129	Wind Buffeting	.100		
Untwisting Procedure, Seat Belt	.31	Window Fogging	.142		









Chrysler Group LLC



13MK49-126-ENG-AB

Printed in Europe

13